


SB1006

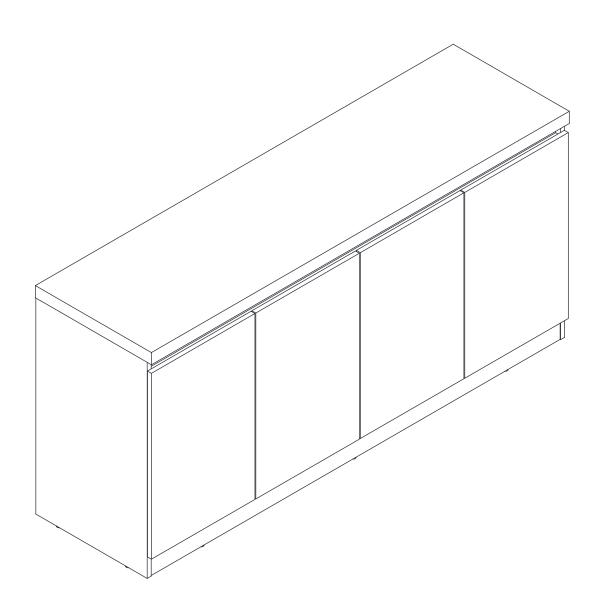





STOP!

Before beginning the assembly process, ensure all boxes and parts have been delivered.

FOR BEST RESULTS:

- Do not throw away packaging materials until assembly is complete.
- Assemble item on a soft surface, such as cardboard or carpet, to protect finish.
- Proper assembly requires two people.

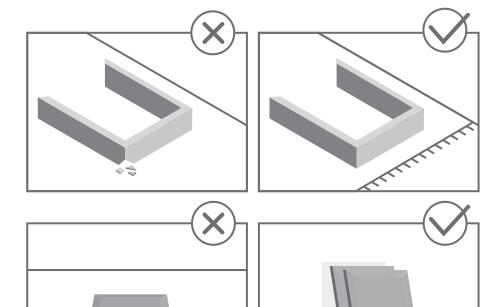

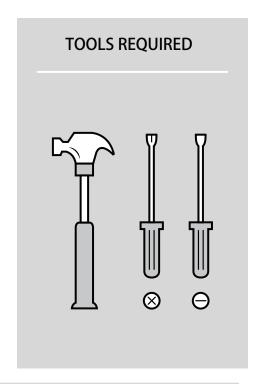



View our assembly video online: WWW.MANHATTANCOMFORT.COM



Stuck? Question? We are here to help. tel: 908-888-0818


e-mail: help@manhattancomfort.com

Support Site



Page 2

Included in this package:

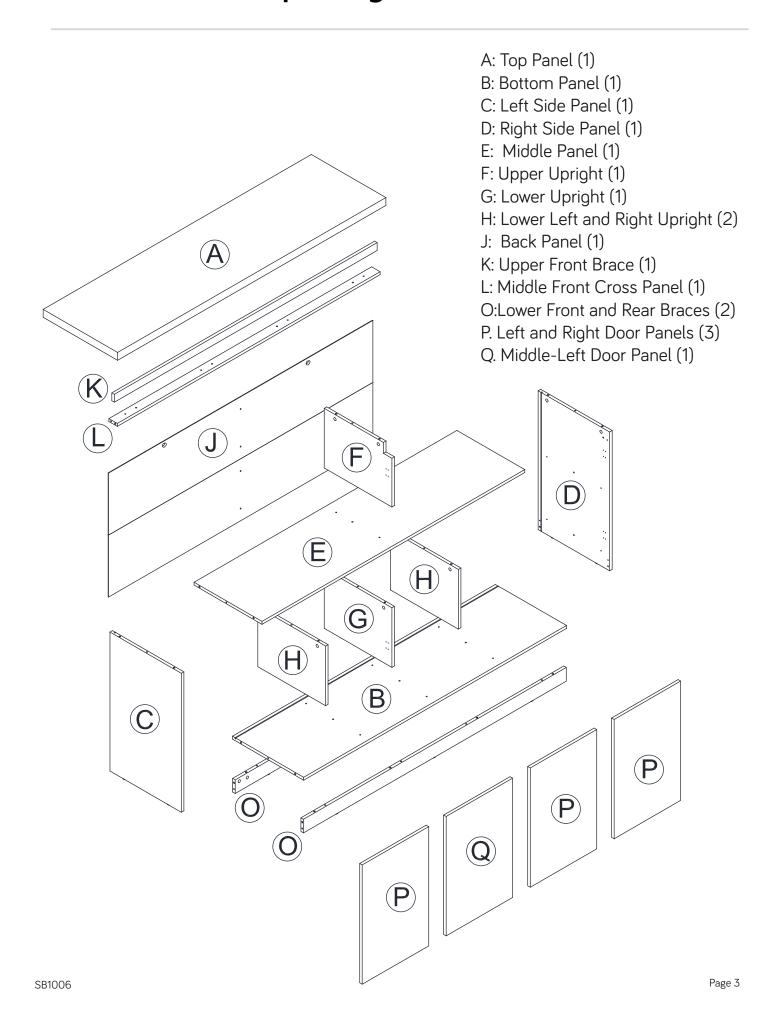

Hardware Identification

- (1) CAM SCREW 34pcs
- 2 HIDDEN CAM 34pcs
- 3 APPLIQUE CARD 6pcs







- WOOD DOWEL 32pcs
- 5 HINGE 4pcs
- 6 HINGE 4pcs







- (7) CLIP 12pcs
- PAN HEAD SCREW M5*35mm - 12PCS
- 9 PAN HEAD SCREW M4*12mm 4PCS







 



- 10 FLAT HEAD SCREW M4*12mm 48pcs
- 11 FLAT HEAD SCREW M3*16mm 12pcs
- 96 FURNITURE TIPPING RESTRAINI KIT 2pcs









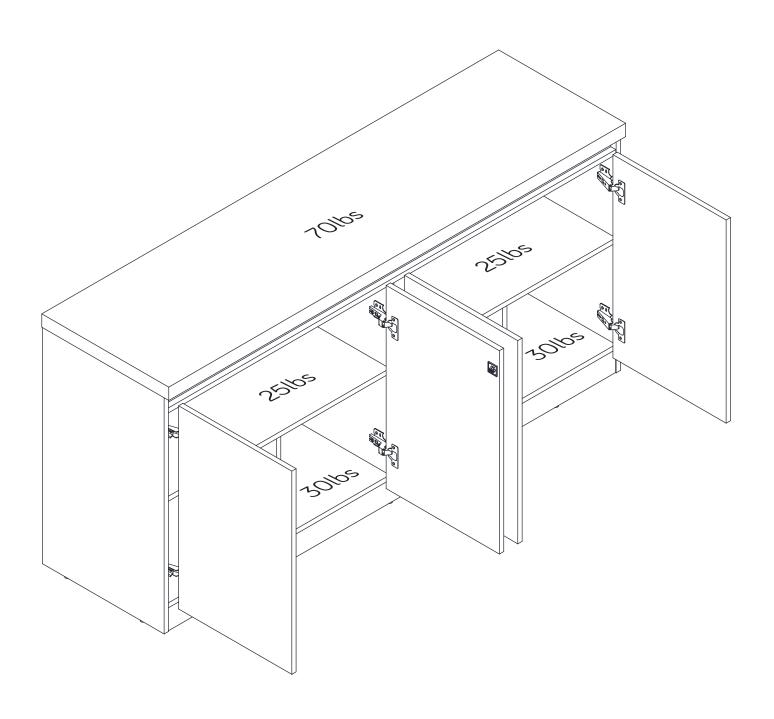


- Screw thirty-four pieces CAM SCREW (1) into the Top Panel (A), the Bottom Panel (B), the Middle Panel (E), and the Left and Right Side Panels (C and D).
- Open the FURNITURE TIPPING RESTRAINT KIT (96) and fasten the SAFETY STRAP to the Top Panel (A). Use the provided short screw from the KIT.









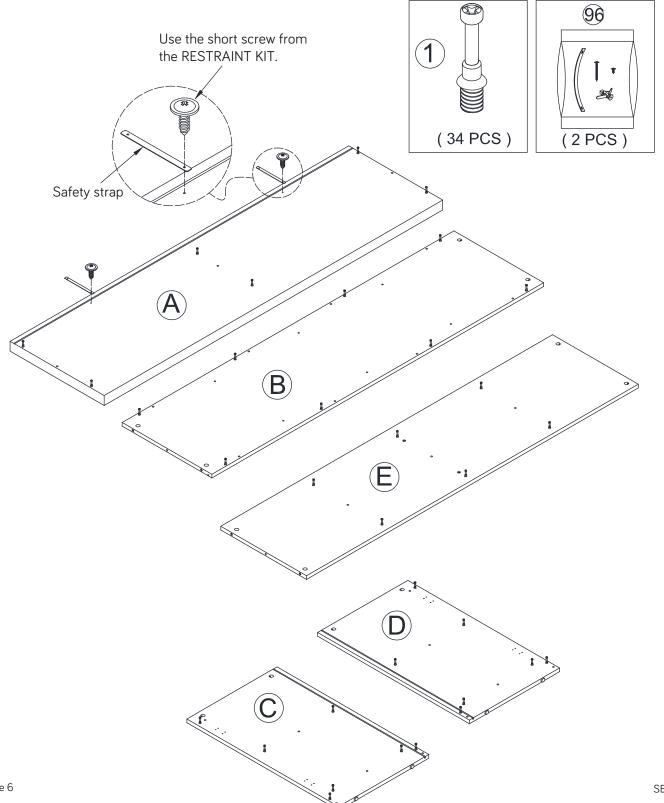



Attach twenty-two pieces HIDDEN CAM (2) to the Bottom Panel (B), the Middle Panel (E), the Middle Front Cross Panel (L), and the Lower Front and Rear Braces (O).

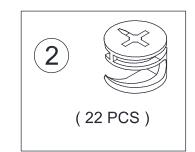

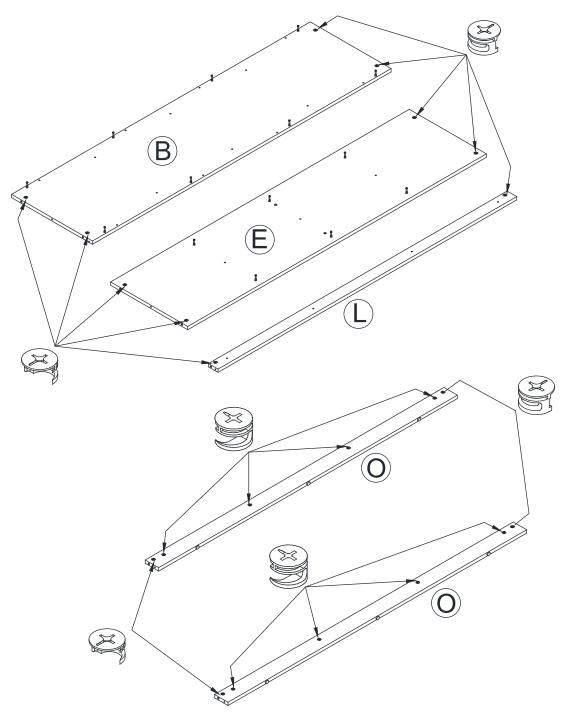


Attach twelve pieces HIDDEN CAM (2) into the Left and Right Side Panels (C, D), as well as the Upper and Lower Middle Upright Panels (F, G, H).

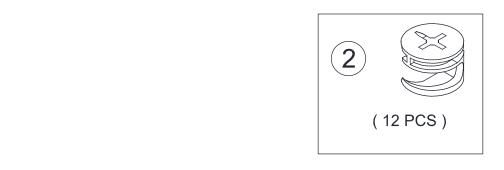

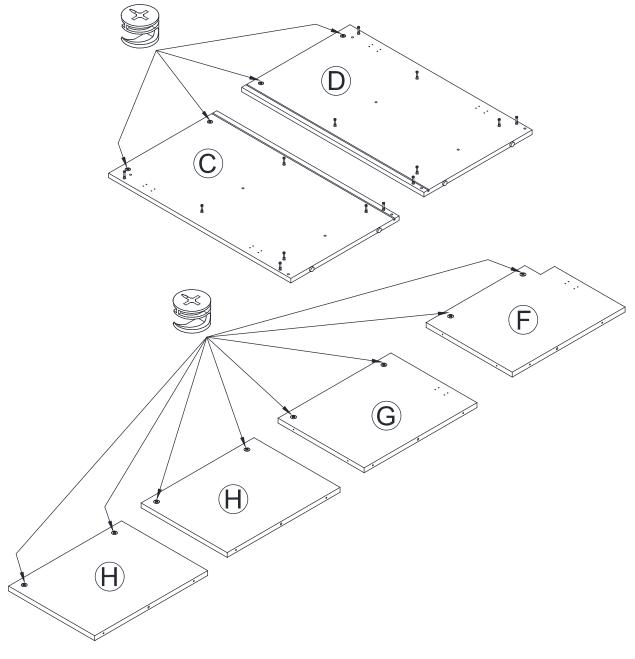



Page 8 SB1006


◆ Use two pieces PAN HEAD SCREW (8) and one WOOD DOWEL (4) to fix the Upper Upright (F) onto the Middle Panel (E).

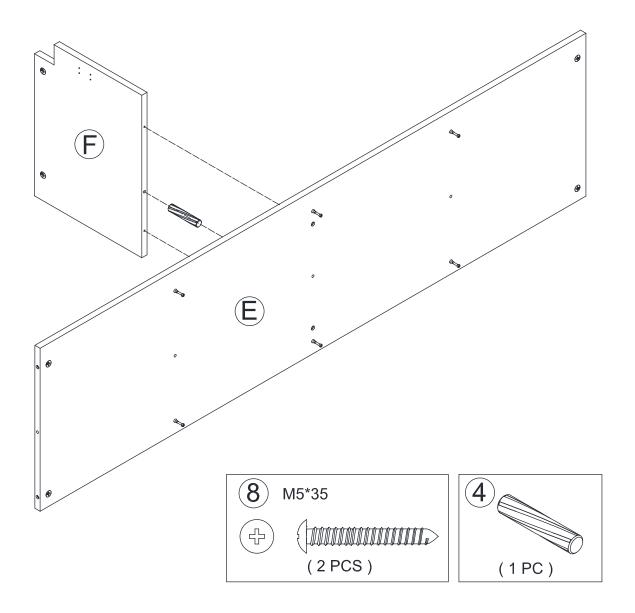


   • Insert three pieces WOOD DOWEL (4) to the Lower Upright Panels (G, H) onto the Middle Panel (E) and fasten the HIDDEN CAM (2).









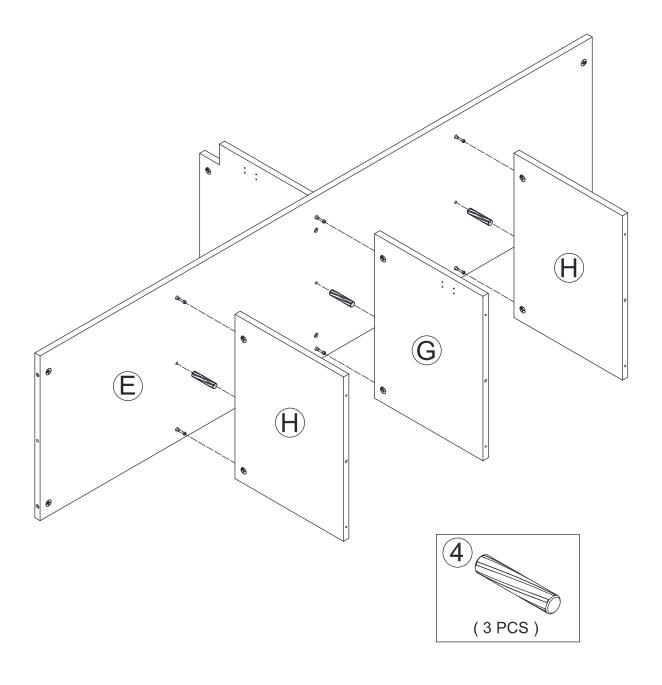



Page 10 SB1006

   • Insert eight pieces WOOD DOWEL (4) to fix the Lower Front and Rear Braces (O) onto the Bottom Panel (B) and fasten the HIDDEN CAM (2).








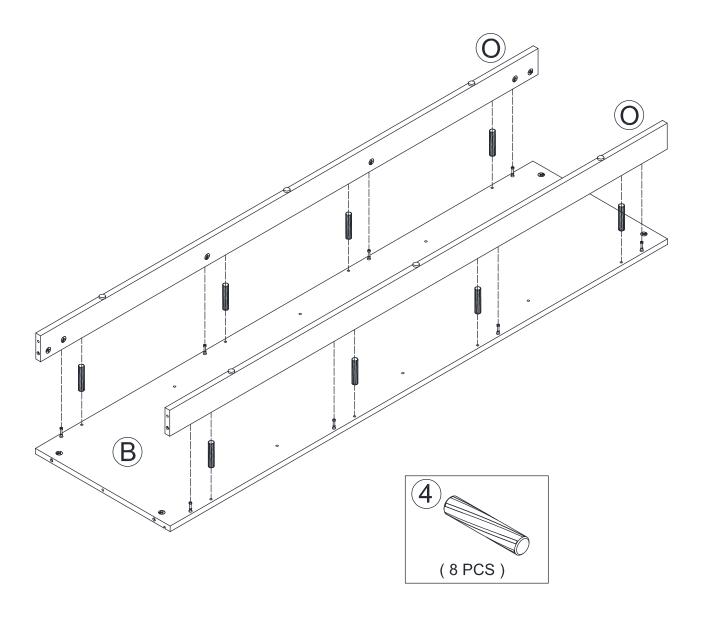


Attach the Lower Upright Panels (G, H) to the Bottom Panel (B) by using three pieces WOOD DOWEL (4) and six pieces PAN HEAD SCREW (8).

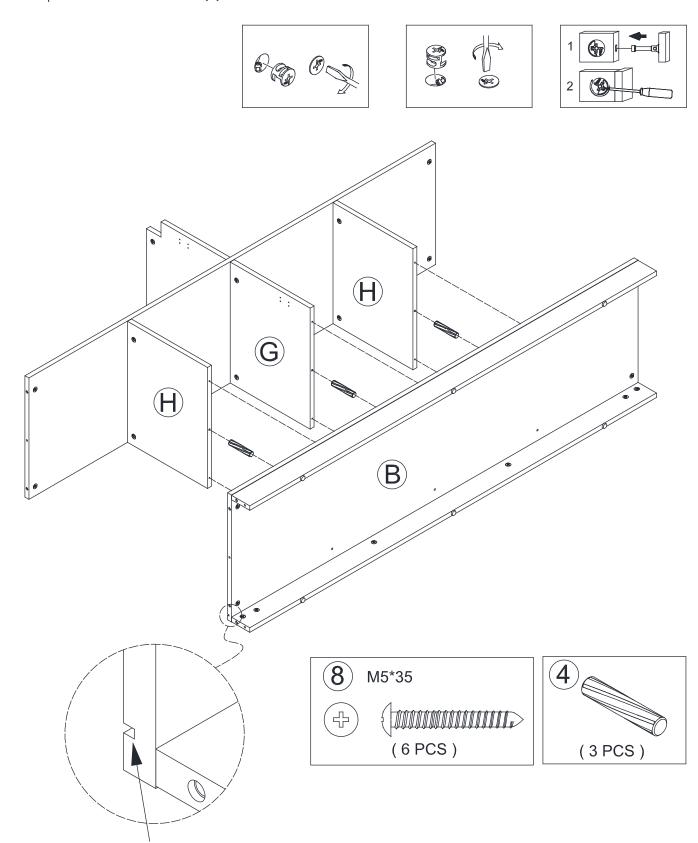



Note: Pay attention to the orientation of the grooves on the Bottom Panel.


Page 12 SB1006

   • Use 4 pieces WOOD DOWEL (4) to attach the Right Side Panel (D) to the Bottom Panel (B) and Middle Panel (E), then fasten the HIDDEN CAM (2).









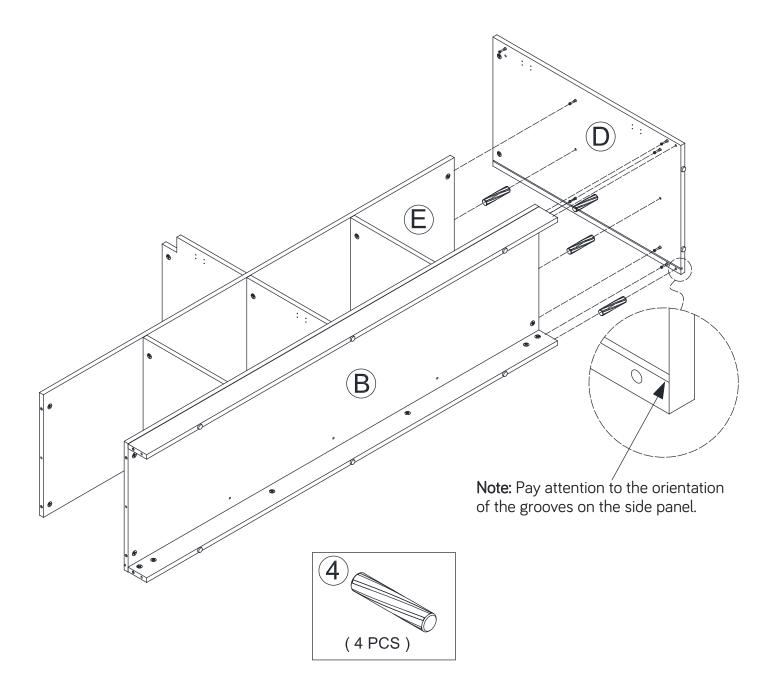



- 1.Attach the Upper Front Brace (K) to the Middle Front Cross Panel (L) by using five pieces WOOD DOWEL (4) and four pieces PAN HEAD SCREW (8).
- 2.Attach the Upper Front Brace (K) and the Middle Front Cross Panel (L) to the Right Side Panel (D) by using one piece WOOD DOWEL (4) and fasten the HIDDEN CAM (2).

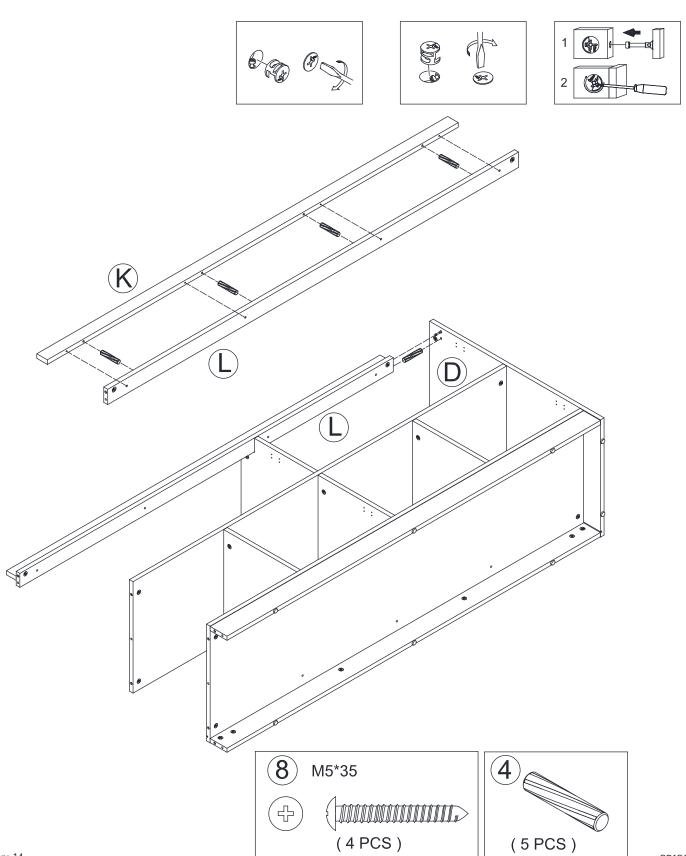


   Attach the Left Side Panel (C) to the Bottom Panel (B), the Middle Panel (E), and the Middle Front Cross Panel (L) by using five pieces WOOD DOWEL (4) and fasten the HIDDEN CAM (2).








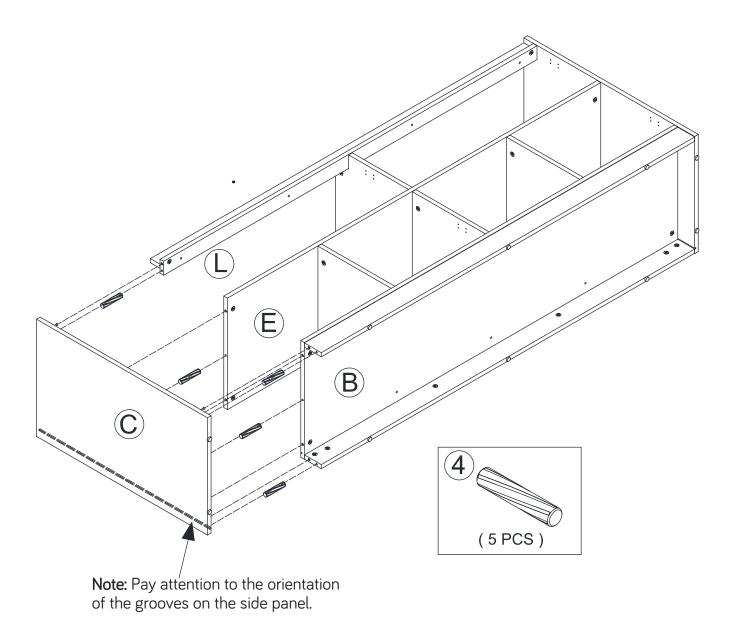



• Insert the Back Panel (J) into the grooves of the Left and Right Side Panels (C, D) and the Bottom Panel (B).

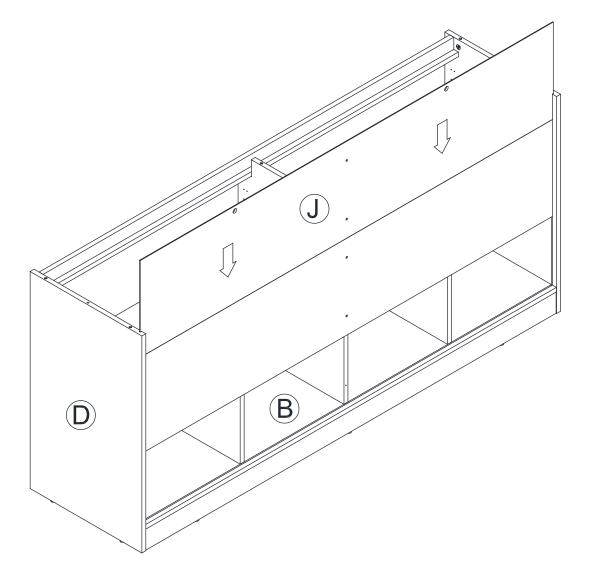


Page 16 SB1006

Insert three pieces WOOD DOWEL (4) to secure the Top Panel (A) onto the Left and Right Side Panels (C, D) and the Upper Upright (F), then fasten the HIDDEN CAM (2).

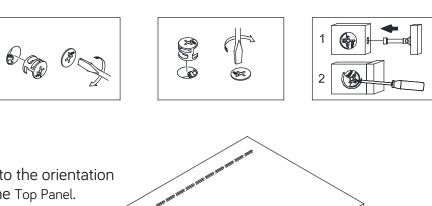

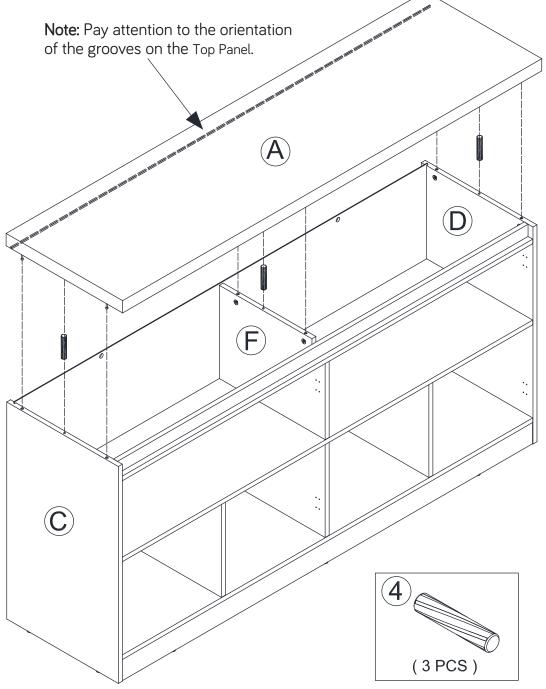


• Use four pieces of the PAN HEAD SCREW (9) to fix the Back Panel (J) to the Upper and Lower Uprights (F, G).

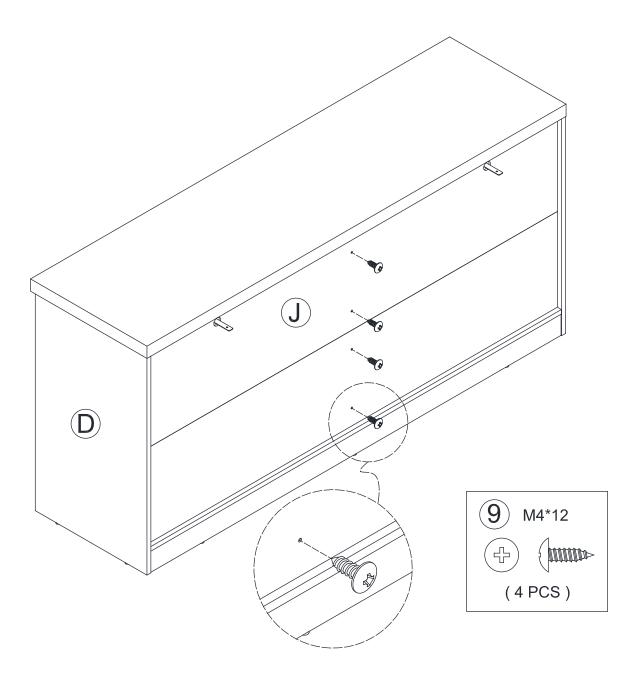


Page 18 SB1006

Use twelve pieces of the FLAT HEAD SCREW (11) and twelves pieces of CLIP (7) to secure the Back Panel (J) to the Left and Right Side Panels (C, D) and the Top and Bottom Panels (A, B).

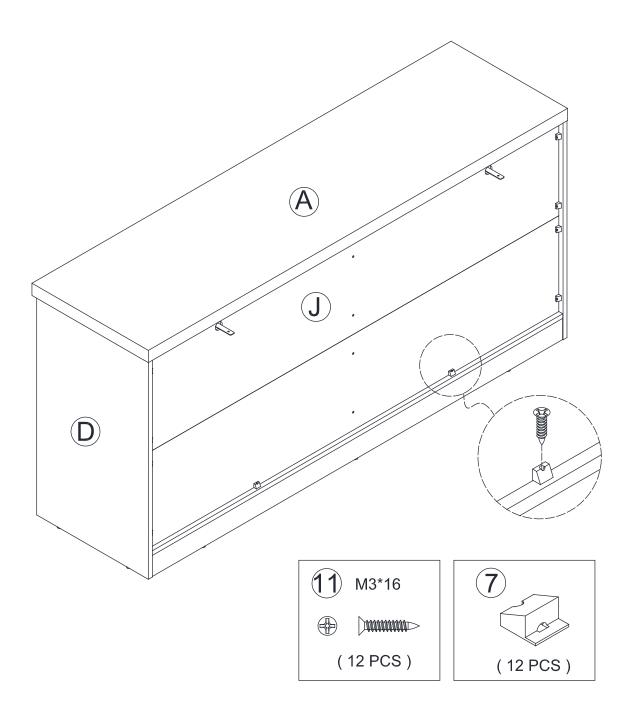


• Fasten eight pieces of the FLAT HEAD SCREW (10) to fix the HINGE (5) to the Left and Right Door Panels (P).

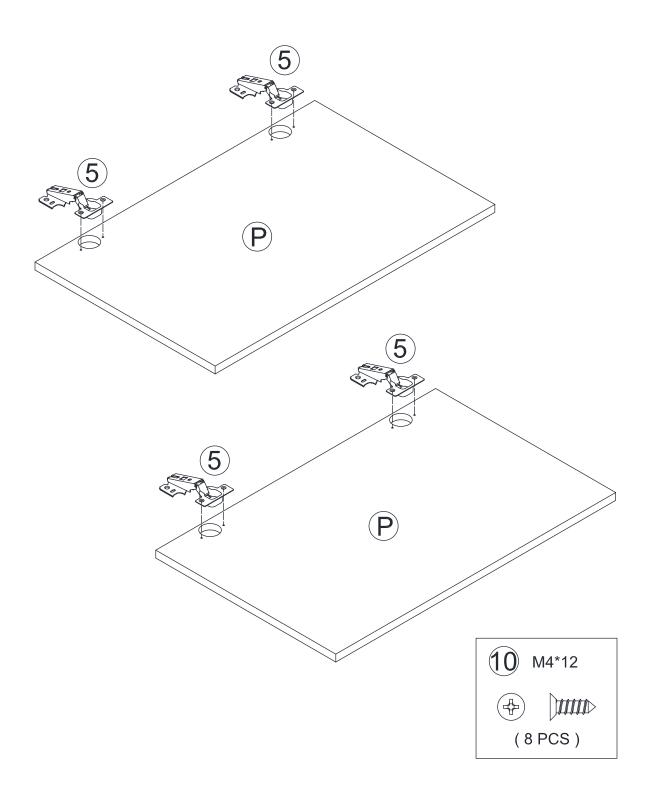


Page 20

◆ Fasten sixteen pieces of the FLAT HEAD SCREW (10) to fix the Left and Right Door Panels (P) to the Side Panels (C, D).

Note: The Left and Right Door Panels (P) must use the HINGE (5).

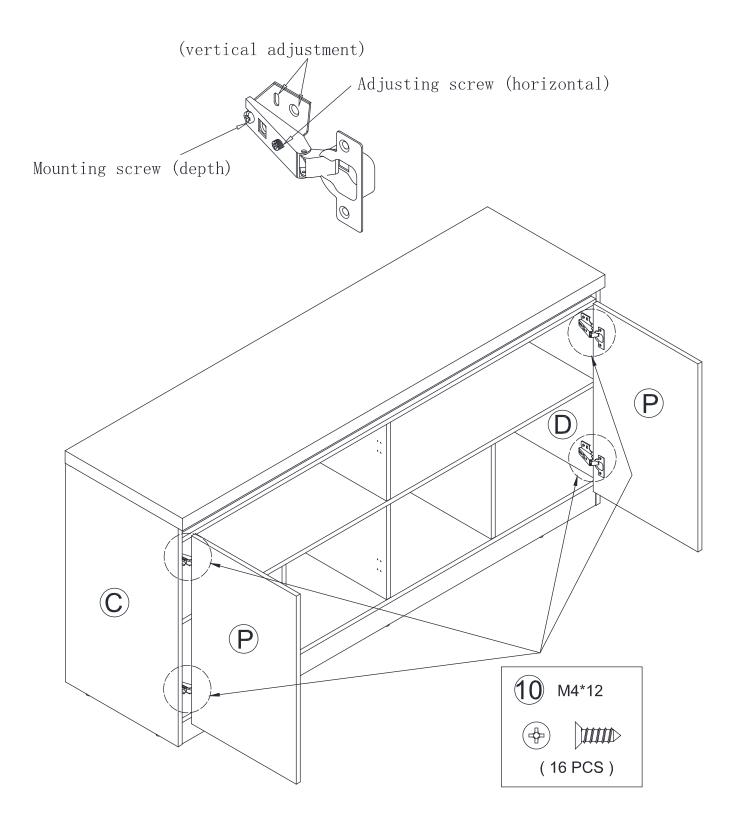


Fasten eight pieces of the FLAT HEAD SCREW (10) to fix the HINGE (6) to the Middle-Left Door Panel (Q) and Middle-Right Door Panels (P).

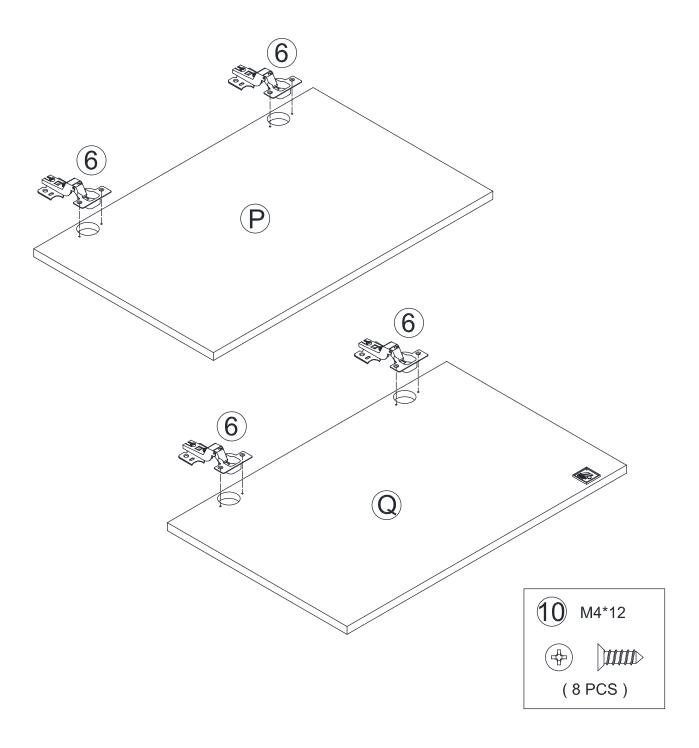


Page 22 SB1006

Fasten sixteen pieces of the FLAT HEAD SCREW (10) to fix the Middle-Left Door Panels (Q) and Middle-Right Door Panels (P) to the Upper and Lower Uprights (F, G).

Note: The Middle-Left Door Panel (Q) and Middle-Right Door Panel (P) in this step must use the HINGE (6).

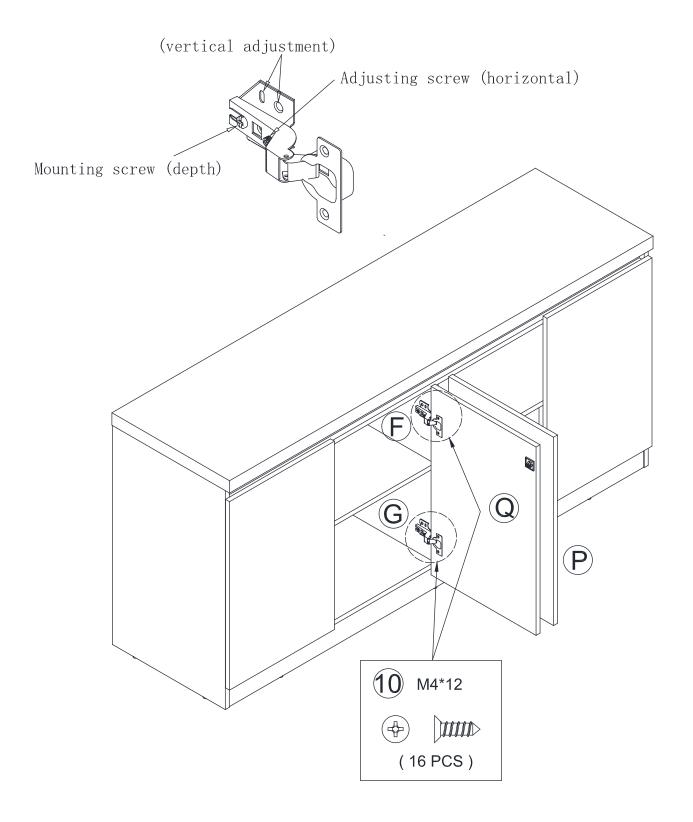

• Peel APPLIQUES from the APPLIQUE CARDS (3) and stick them onto each visible HIDDEN CAM.

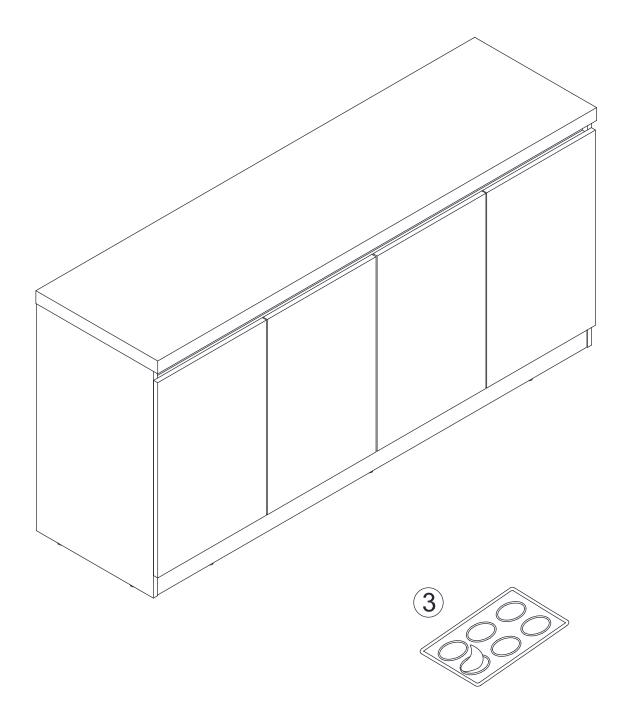


Page 24 SB1006

Open the FURNITURE TIPPING RESTRAINT KIT (96) and fasten the SAFETY STRAP to the TOP (A). Use the SHORT SCREW through the hole in the strap and into the top surface of the TOP (A). Place your unit in its final location.

NOTE: The following instructions show your unit being fastened to a wall stud. If you are not fastening your unit wall stud, go to the next step now.


1st- Locate the center of a stud in your wall near your unit and mark it with a pencil.
2nd- Drill a 3/8" hole on the mark and into the stud in your wall.
3rd- Fasten the unit to the wall. Use the LONG SCREW through the other end of the SAFETY STRAP and into the 3/8" hole.

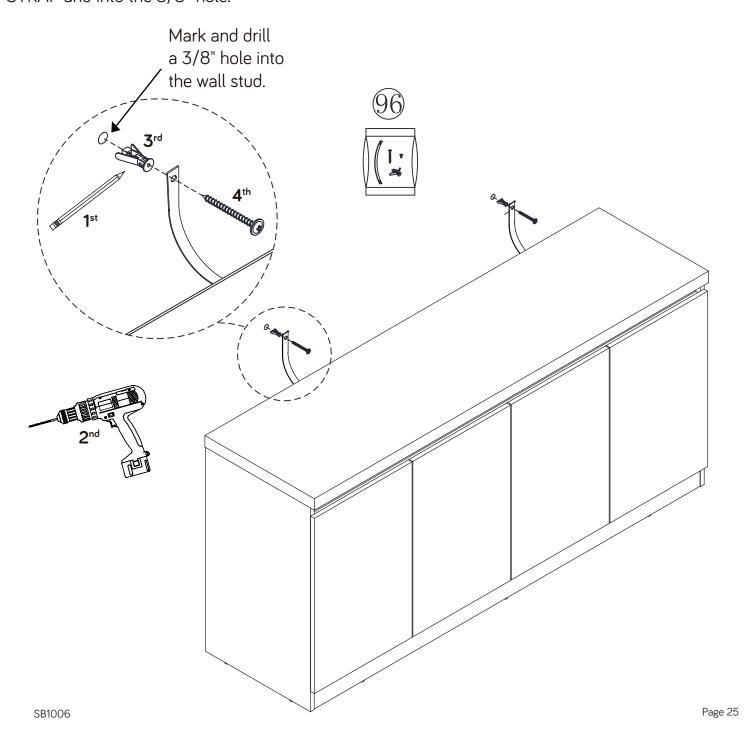

1st- With your pencil, strike a mark through the center of the hole in the SAFETY STRAP. 2nd- Drill a 1/8" hole on the mark.

3rd- While you squeeze the wings together, gently tap the WALL ANCHOR from the FURNITURE TIPPING RESTRAINT KIT (96) into the hole until it is even with the surface of the wall. 4th- Turn the LONG SCREW through the hole in the SAFETY STRAP and into the WALL ANCHOR.

NOTE: You will need to turn the LONG SCREW multiple turns to completely tighten and secure your unit.

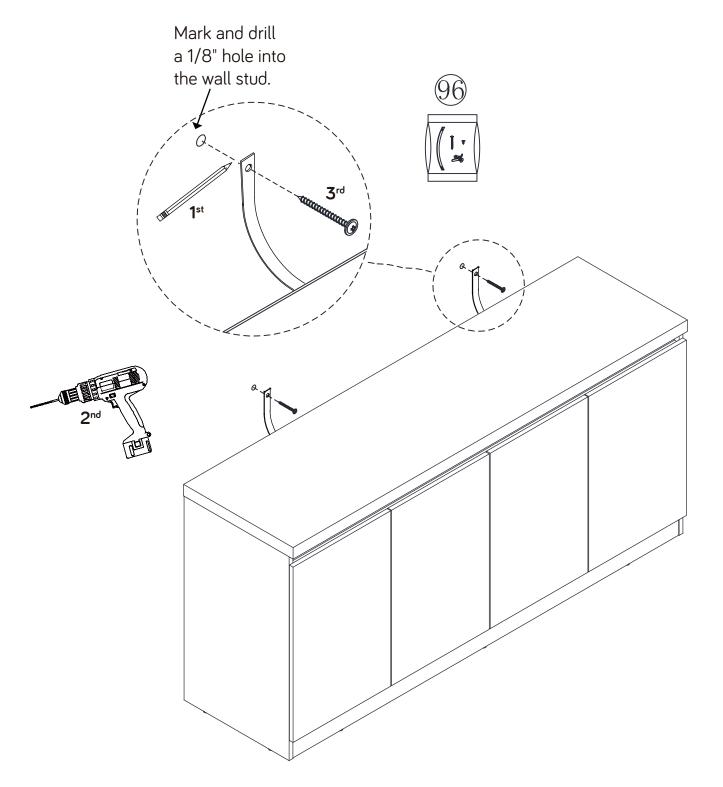



WARRANTY POLICY

All Manhattan Comfort furniture products are warranted, to the original purchaser at the time of purchase and for a period of 30 days thereafter.

Our warranty is limited to new products purchased in factory sealed cartons. This warranty is valid in the United States of America and Canada.

In order to provide you with timely assistance, please thoroughly inspect your furniture for missing or defective parts immediately after opening the carton.

Manhattan Comfort offers a 30-day parts replacement warranty on all items.

Our furniture products are not intended for outdoor use.

THE WARRANTY DOES NOT COVER:

- Defects/damages by improper assembly or disassembly.
- Defects/damages caused by shipping. Claims for damage during transit should be placed immediately to the transportation company.
- Defects/damages caused by inappropriate use of the furniture.

