Assembly Instructions

Caution: You must read this Assembly Instructions before you proceed

Care & Maintenance



• Not for commercial use. For residential use only.



• Do not put hot items directly on furniture surface.



• Do not clean furniture with harsh cleansers or polish.



• To obtain the longest lifespan of your outdoor product minimizing exposure to direct sunlight is recommended.



• Children should not climb or jump on the furniture.



• Do not write on furniture without a padded barrier to protect the surface.



To obtain the longest lifespan of your outdoor products, avoid extended and lengthy
exposure to rain, snow, and direct sunshine. Whenever possible cover the product and /or
place under patio or awnings.



Stains may be removed with mild soap solution and damp cloth.



• Dust and pick-up spills using a clean, non-colored, lint- free cloth.

Please look in the Leg Frame for hardware packs

CHAIR



Caution: This Chair is NOT a TOY.

Keep your child/children at bay during the assembly process.


Whenever moving/lifting the Chair and to prevent damage to the Chair, two adult partners may be needed to execute these actions.

Parts List:			
Label	Picture	Description	QTY
Α		Left Leg Frame	1
В		Right Leg Frame	1
С		Seat Panel	1
D		Backrest	1
E		Cushion	1

Hardware:			
No	Picture Descr	iption QTY	
		16x80mm) 6	
2		15x50mm) 6	
3	◆ (Allen V	Vrench]	


Assembly Preparation:

Before Beginning Assembly:

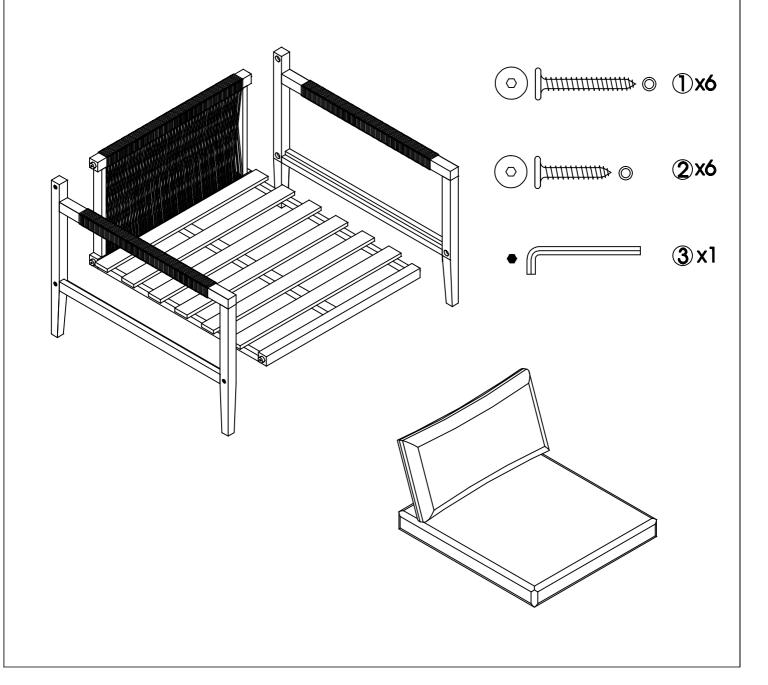


Assembly Steps:


Overview:

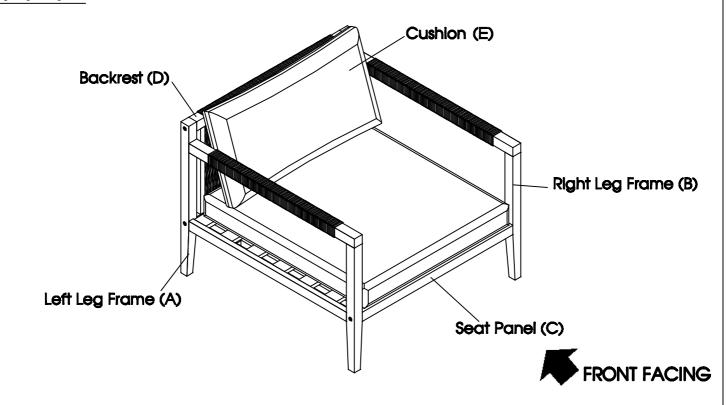


This Chair has multiple parts and may require up to 15 minutes to assemble. To give you an overview of the Chair parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

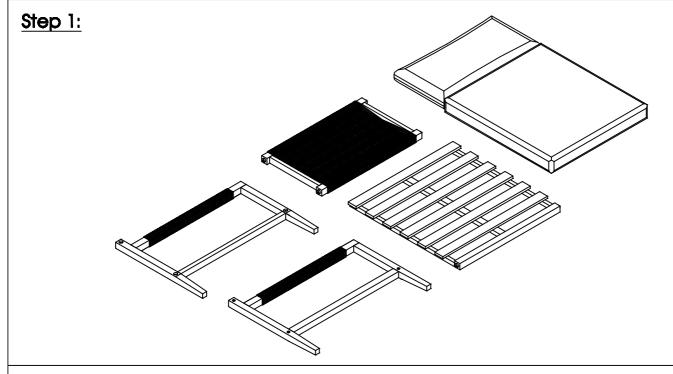


Unpack and place all parts on a clean, non-marring surface.

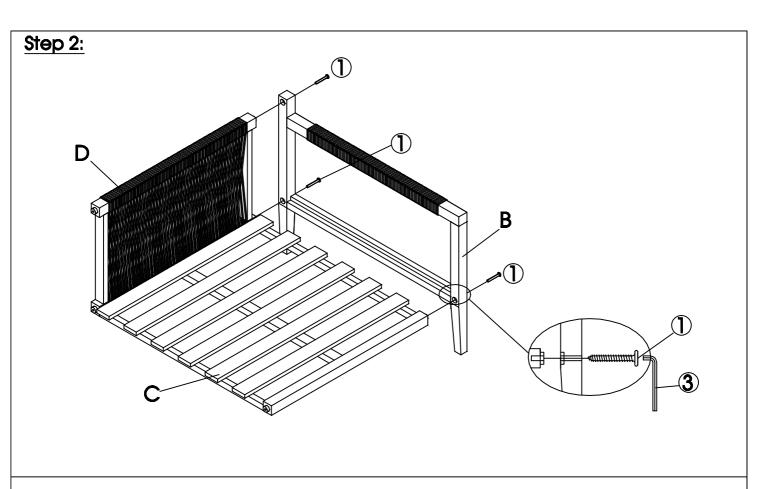


With the help of your adult partner, fix the Backrest (D), Seat Panel (C) with the Right Leg Frame (B) by using 03 screws (1) by Allen Wrench (3). Do not fully tighten the screws.

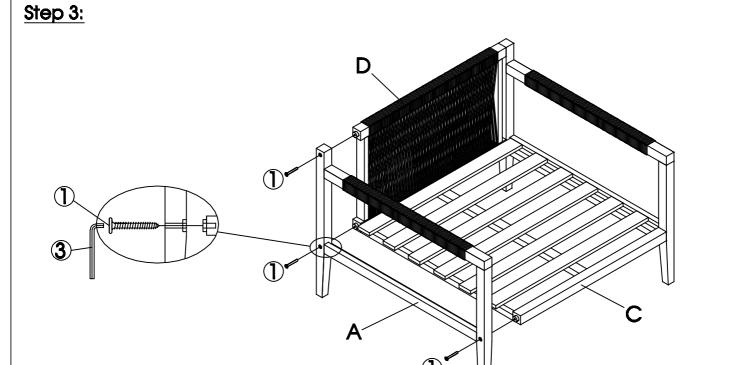


Fix the Left Leg Frame (A) to the Seat Panel (C) and Backrest (D) secure by using 03 screws (1) and Allen Wrench (3). Do not fully tighten the screws.

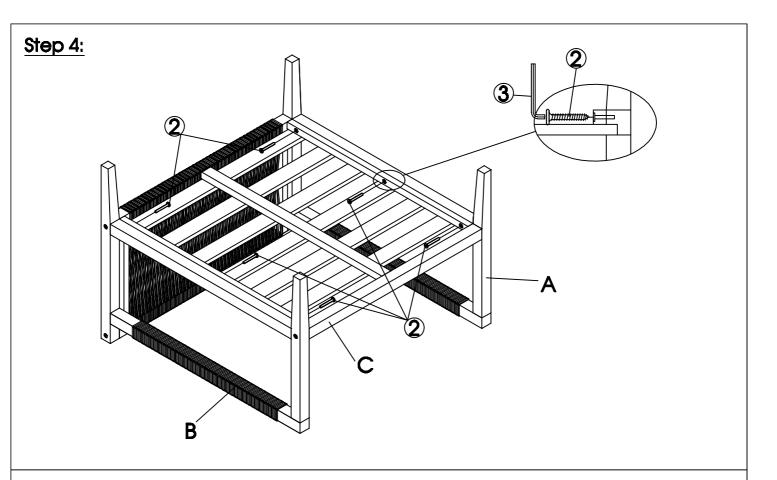

Fix the Seat Panel (C) with Leg Frame by using 06 Screws (2) by Allen Wrench (3). Do not fully tighten the screws.

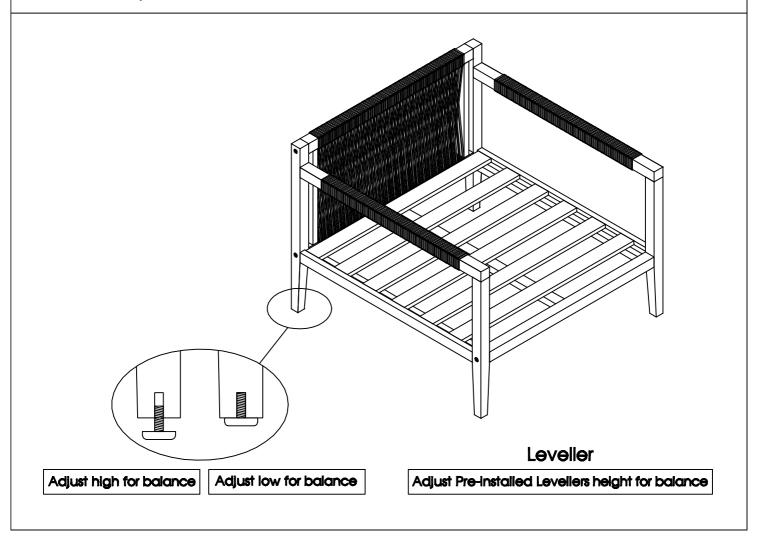

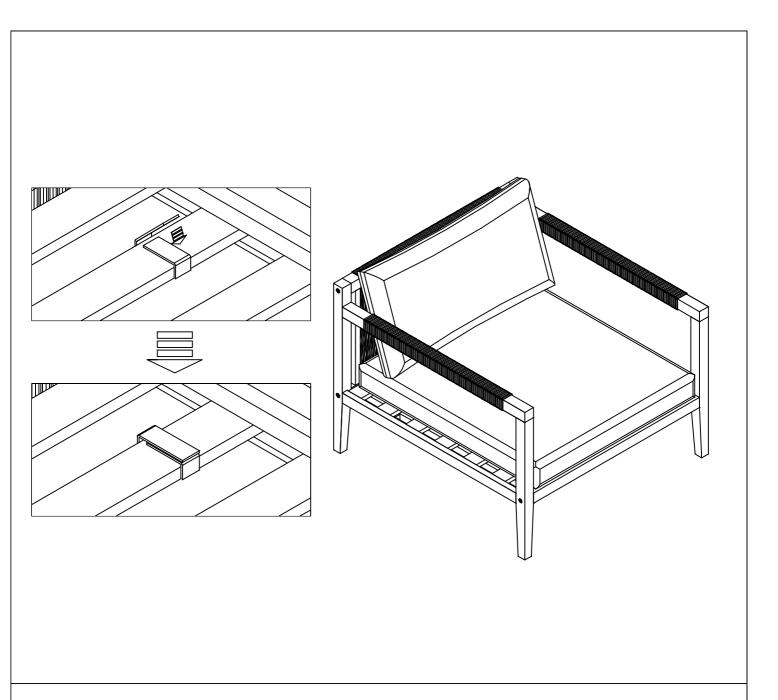

With the help of your adult partner, stand the Chair up.

Exert pressure floorwards, onto the Chair with both your hands.

This pressure will help the Legs and Chair Top reach full alignment status.

Check for wobbles on a LEVEL surface.

If no wobbles are found proceed to tighten the Bolts in a sequential manner, until evenly secured.

When tightening the Bolts tighten sequentially.

If there are still wobbles please loosen or tighten the 01 or both leveler under legs and do the same above process when move the Chair to another place. WARNING!! IF THE CHAIR IS NOT STABLE, IT COULD LEAD TO DAMAGING

THE PRODUCT.

INSERT THE CUSHION AND TIGHT BY VELCRO TO THE SEAT FLATS

Your Chair is ready for use.

This Chair can only be used on a flat, level surface