INSTRUCTION MANUAL




Outdoor Poly 3-Piece Set Adirondack Chair with Side Table

TABLE OF CONTENTS

ASSEMBLY INSTRUCTIONS

Outdoor Poly Side Table3	3
Outdoor Poly Adirondack Chair with Cup Holder	3

INSTRUCTION MANUAL

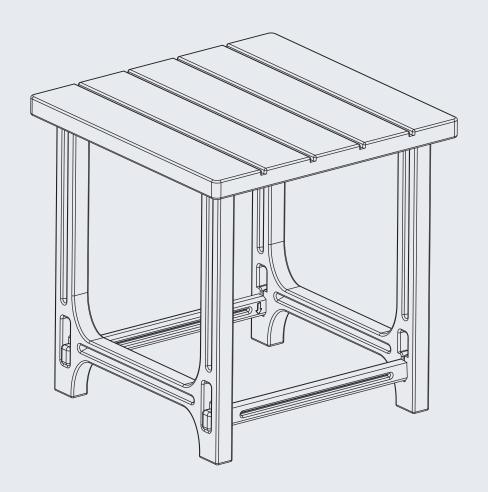

Outdoor Poly Side Table

① CARE & MAINTENANCE


Please keep this instruction for your future reference.


- Be careful when assembling, avoid damaging the painted surface.
- Clean the table with lukewarm water, mild detergent & soft cloth.
- Firmly secure all connections before use. Do not use any part of this item as a step ladder.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- Please do not exceed the weight limitations of this item.


NO TOOLS REQUIRED



PARTS

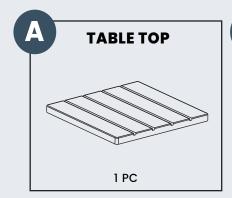


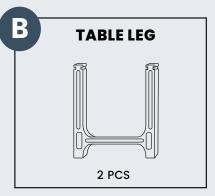

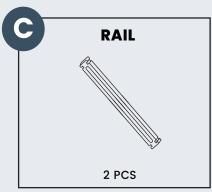

PRODUCT ASSEMBLY - OVERALL VIEW

Look at following overall view of this table and learn the exact position of each part to be assembled.

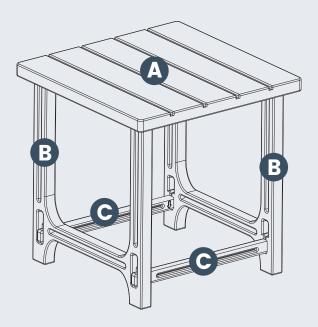


PRODUCT ASSEMBLY




Pick out **Part A Table Top** and **Part B Table Leg** from package and assemble as follows.

- 1. Check the mortise in the leg and make sure the open end is facing outside (Figure 1).
- 2. Plug the top tenon of **Part B Table Leg** into the groove in the bottom of **Part A Table Top**. Push the leg towards the edge of table top until the tenon is locked firmly in the groove (Figure 2).

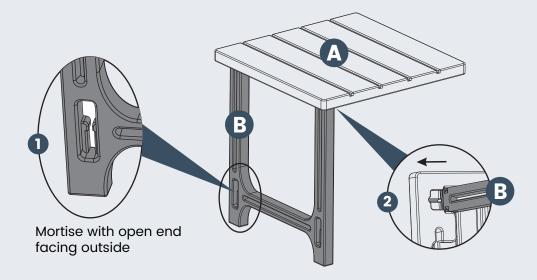

2


Do the same to attach another Part B Table Leg to Part A Table Top.

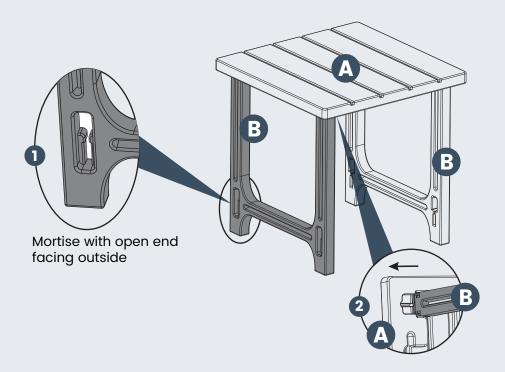

3


Place **Part C Rail** between 2 pcs of **Part B Table Legs**. Make sure the arrows are inside and pointing downward (Figure 1).

Press hard on **Part C Rail** to make the tenons lock firmly into the mortise in the legs (Figure 2).

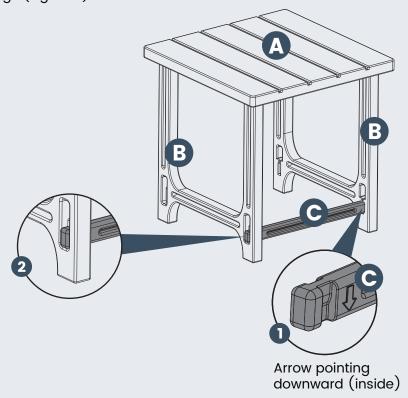




Do the same to attach another **Part C Rail** between 2 pcs of **Part B Table Legs**.

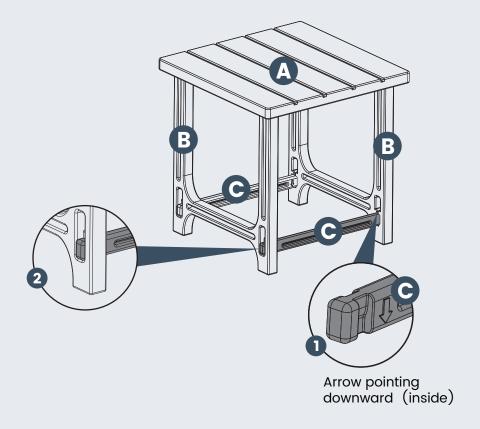

5

Check and tighten all the connections again to ensure the table is steady enough.

Enjoy the table now.

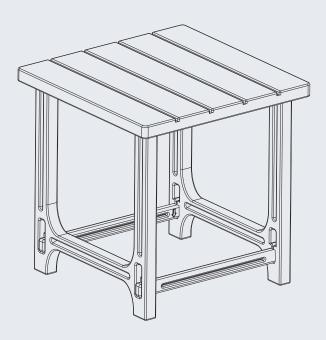

INSTRUCTION MANUAL



Outdoor Poly Adirondack Chair with Cup Holder

() CARE & MAINTENANCE


Please keep this instruction for your future reference.


- Be careful when assembling, avoid damaging the painted surface.
- Clean the chair with lukewarm water, mild detergent & soft cloth.
- Firmly secure all connections before use. Do not use any part of this item as a step ladder.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- Please do not exceed the weight limitations of this item.


NO TOOLS REQUIRED





PARTS

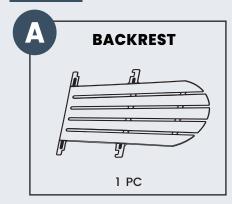


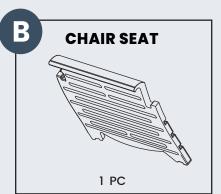

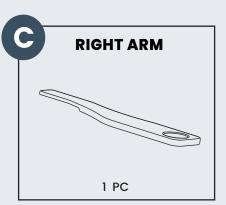


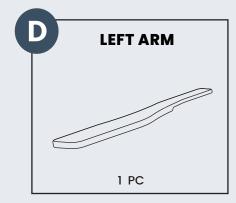


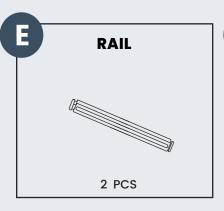

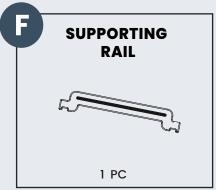


PARTS

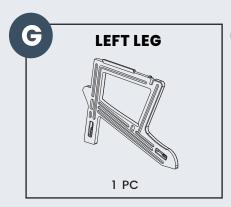

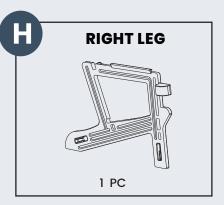

PRODUCT ASSEMBLY - OVERALL VIEW


Look at following overall view of this chair and learn the exact position of each part to be assembled.

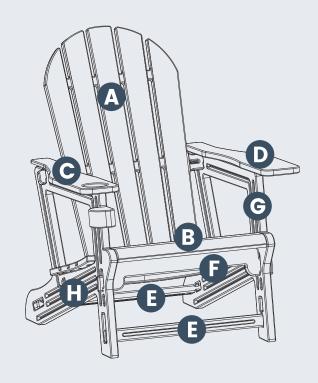




Attach Part H Right Leg to Part A Backrest by following the steps below:

- 1. Place **Part H Right Leg** on flat surface. Make sure the seat holder is facing forward (Figure 1).
- 2. Press the upper bar of the backrest into the positioning slot of the leg (Figure 2).
- 3. Insert the lower bar into the holding position of the leg (Figure 3).

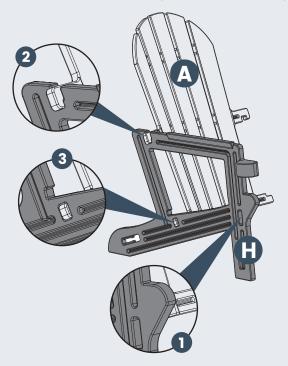

2


Do the same to attach **Part G Left Leg** to **Part A Backrest**.

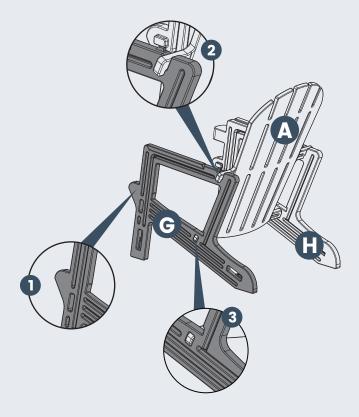

3

Insert **Part B Chair Seat** to the assembled frame until the groove sits in the slot in the legs (Figure 1). Keep the seat angled upwards as below.


Pay attention not to press down the seat at this stage.

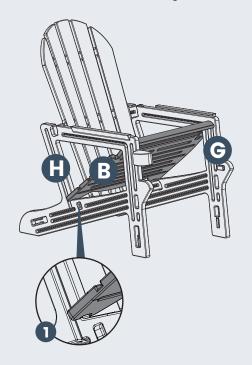

4

Place **Part F Supporting Rail** between 2 pcs of legs as below. Make sure the tenons with grooves are facing downward (Figure 1).

Press hard on **Part F Supporting Rail** to lock the tenons firmly into the mortise in the legs (Figure 2).

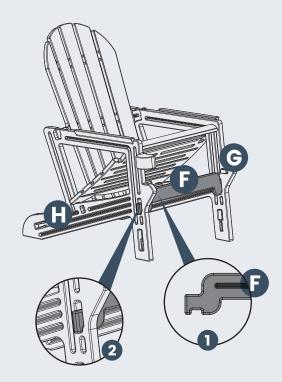




Press the seat down until it is locked on the supporting rail firmly.

Place **Part E Rail** between **Part G Left Leg** and **Part H Right Leg** as below. Make sure the arrows are inside and pointing downward (Figure 1).


Press hard on **Part E Rail** to lock the tenons firmly into the mortise in the legs (Figure 2).

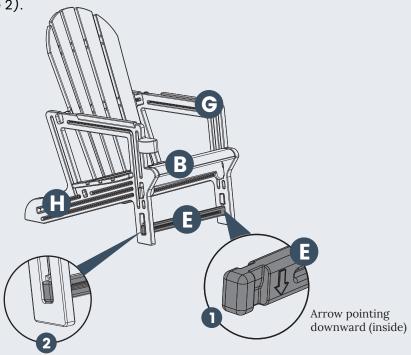

6

Place another **Part E Rail** between **Part G Left Leg** and **Part H Right Leg** as below. Make sure the arrows are inside and pointing downward (Figure 1).


Press hard on **Part E Rail** to lock the tenons firmly into the mortise in the legs (Figure 2).

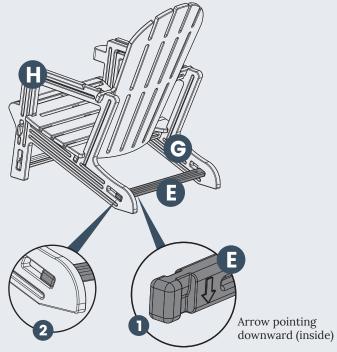




Attach Part C Right Arm to Part H Right Leg by following the steps below.

- 1. Match the groove in **Part C Right Arm** with the tenon on top of **Part H Right Leg** and slide the arm horizontally backwards (Figure 1).
- 2. Pull the arm upwards when it moves to the lock. Slide again until the lock is trapped in the groove (Figure 2).

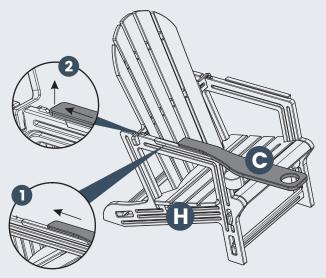

8

Do the same to attach Part D Left Arm to Part G Left Leg.

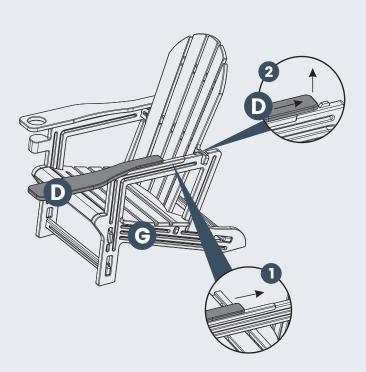



Check and tighten all the connections again to ensure the chair is steady enough.

Enjoy the chair now.



CLEANING TIPS

REGULAR CLEAN: Use a mixture of warm water and mild soap. Gently scrub the surface with a soft bristle brush to remove any dirt or stains.

QUICK CLEAN: You can simply wipe down the furniture with a damp cloth.

Regular cleaning not only preserves the aesthetic appeal of your furniture, but also helps extend its lifespan.