

WARNING!!

Children have died from furniture tipover. Tip restraints have been included with this product; you must install the tip restraints according to these instructions in order to minimize the risk of furniture tipping.

NEVER allow children to climb or hang on furniture, including drawers or cabinet doors.

In addition to installing the restrains , to help prevent tip-over

1. Do not stand on the product.



WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install anti-tip device provided
- For use with televisions weighing 88.18lb(40kg) or less. Use with heavier televisions may result in instability causing tip-over resulting in death or serious injury.
- NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label. Do not remove!

Assembly Instructions

Caution : You must read this before you proceed

Care & Maintenance



- Not for commercial use. For residential use only.



- Furniture may scratch floors. We recommend using furniture pads to protect your floors.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside . For indoor use only.



- Stains may be removed with mild soap solution and damp cloth.



 
- Children should not climb or jump on the furniture.



 
 
- Dust and pick-up spills using a clean, non-colored, lint-free cloth.




 

 
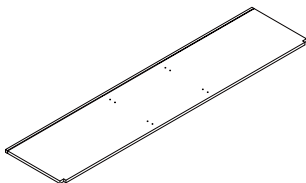 


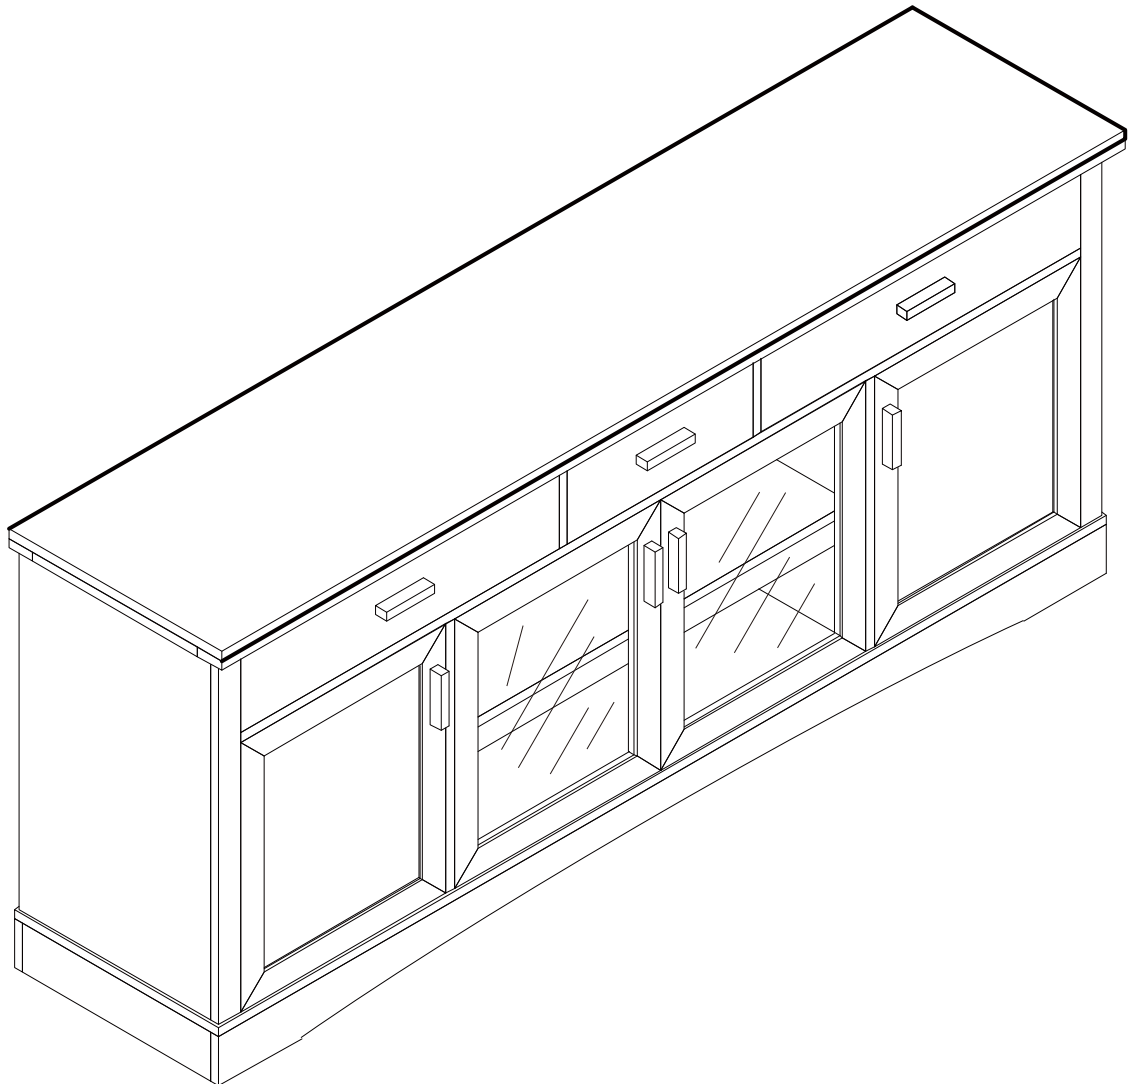Please look in carton for hardware packs and legs.

 
 
 

 
 

 
 
TV stand

 
 
 
 
 
 
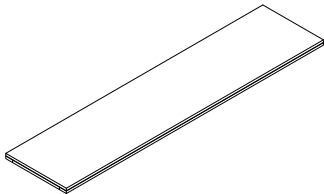 
 



 
 
 
 
 

 
 
Parts List

Label	Picture	Description	QTY
1		Top Panel	1
2		Left Side Board	1




 

 


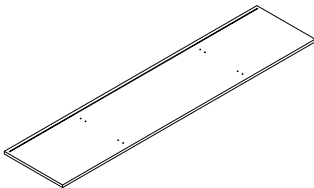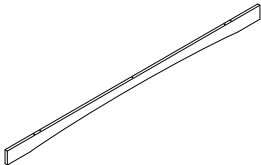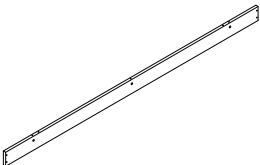








3		Side panel trim	2
4		Right Side Board	1
5		backplane	2
6		backplane	1
7		backplane	4
8		backplane	1
9		middle plate	1
10		block	4
11		batten	2

12		Drawer panels	2
13		Drawer left side panel	3
14		Drawer right side panel	3
15		Drawer back panel	2
16		Drawer back panel	1
17		Drawer base plate	2
18		Drawer Tray	2
19		Drawer base plate	1
20		Drawer panels	1

 21		laminated board	2
22		laminated board	1
23		lamine trim	1
24		base plate	1
25		vertical partition	1
26		vertical partition	1
27		base plate long trim plate	1
28		base plate long trim plate	1
29		base plate short trim plate	2


30		base plate support	2
31		Left door	1
32		Middle door1	1
33		Middle door2	1
34		Right door	1
35		backslab	3
36		bulkhead	2
37		backplane	1

Hardware

Label			QTY
Ⓐ		biasing wheel	65+2
Ⓑ		two-in-one screw	65+2
Ⓒ		dowel	38+2
Ⓓ		4x35mm	40+2
Ⓔ		3x14mm	38+2
Ⓕ		slide	6
Ⓖ		4x12mm	2
Ⓗ		anti dumping iron	2
Ⓘ		staple	14
Ⓙ		retainer	1
Ⓚ		handle	7
Ⓛ		4x14mm	48+2
Ⓜ		hinge	8
Ⓝ		expansion tube	2
Ⓞ		4x10mm	6
Ⓟ		backplane buckle	24
Ⓠ		4x25mm	14

Assembly Preparation

 Before
Beginnin
g
Assembly
:

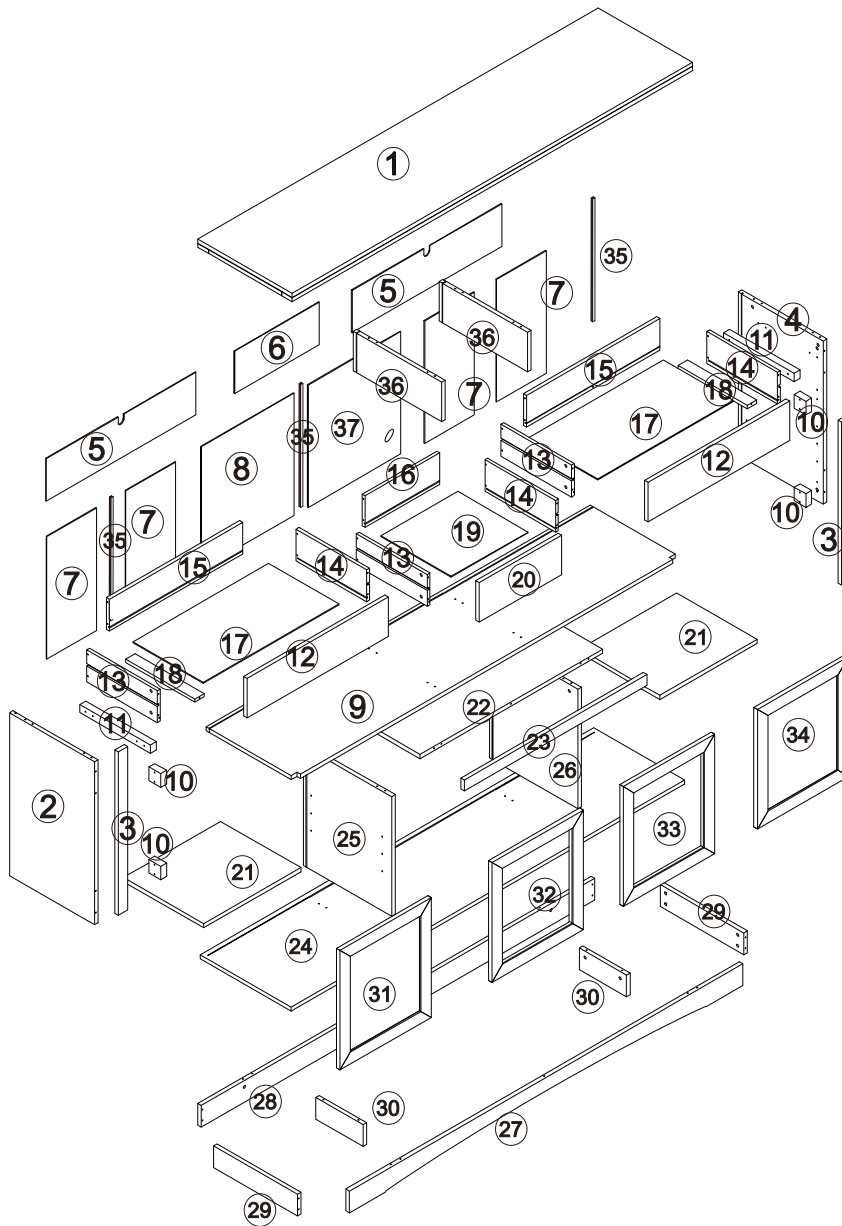

A		x65
B		x65
C		x38
D		x40
E		x38
F		x6
G		x2
H		x2
I		x14
J		x1
K		x7
L		x48
M		x8
N		x2
O		x6
P		x24
Q		x14



- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-



 
- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-

Assembly Steps


Overview

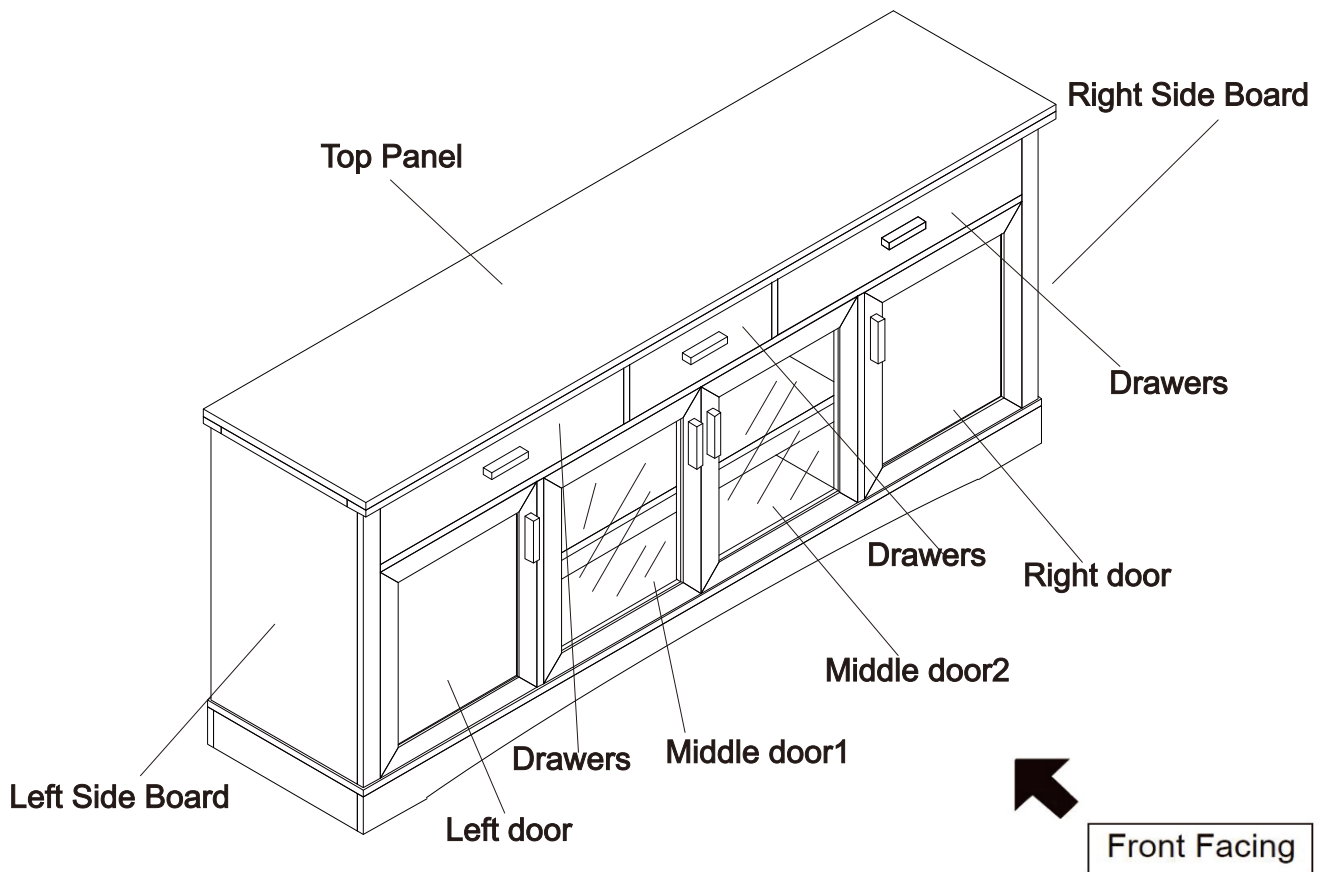

This Cabinet has multiple parts and may require up to 50 minutes to assemble. To give you an overview of the cabinet parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.


Step 1

 Ax3
Bx3
Cx2

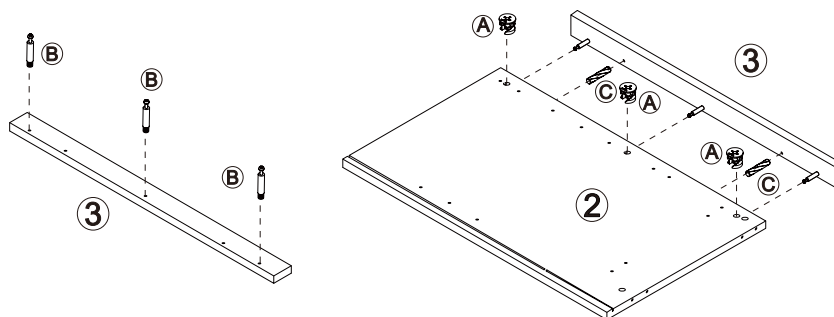

Install hardware B onto panel 3. Connect panel 3 and Panel 2 with hardware A and C.

 
Step 2

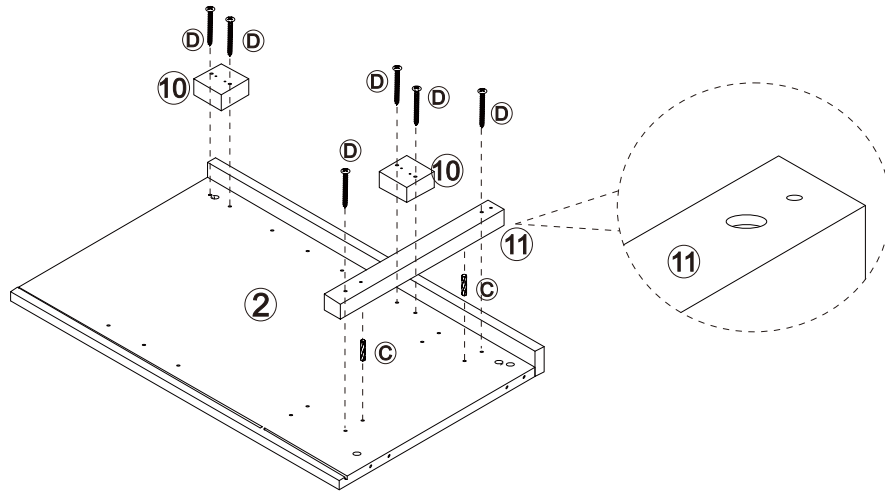

Cx2
Dx6

Attach plate 11 to plate 2 with screws D and dowels C, paying attention to the orientation. Attach the plate 10 to the plate 2 with screws D

 
Step 3

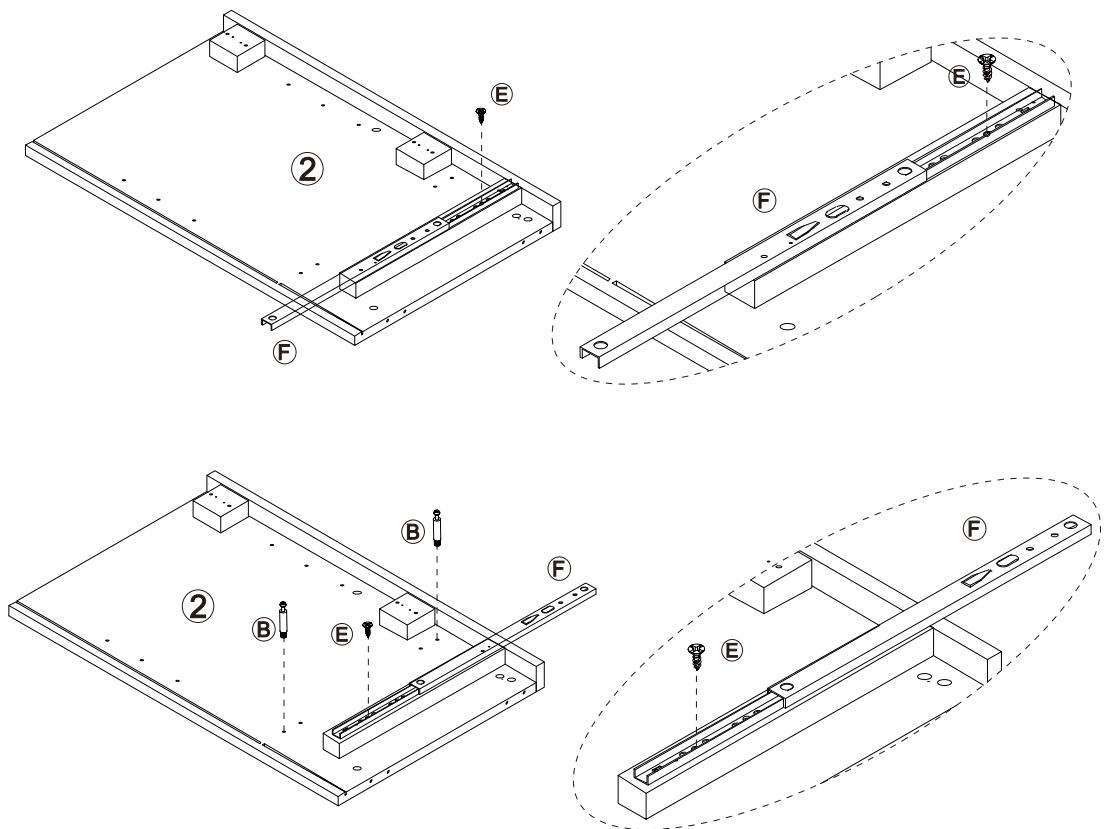

Bx2
Ex2
Fx1

Secure the slide F to the plate 11 with screws E. Attach to plate 2 with hardware B

 
Step 4

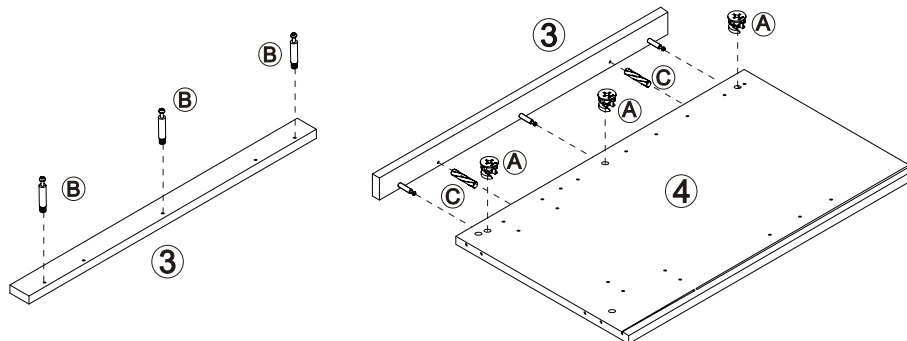

Ax3
Bx3
Cx2

Install hardware B onto panel 3. Connect panel 3 and Panel 4 with hardware A and C.

 
Step 5

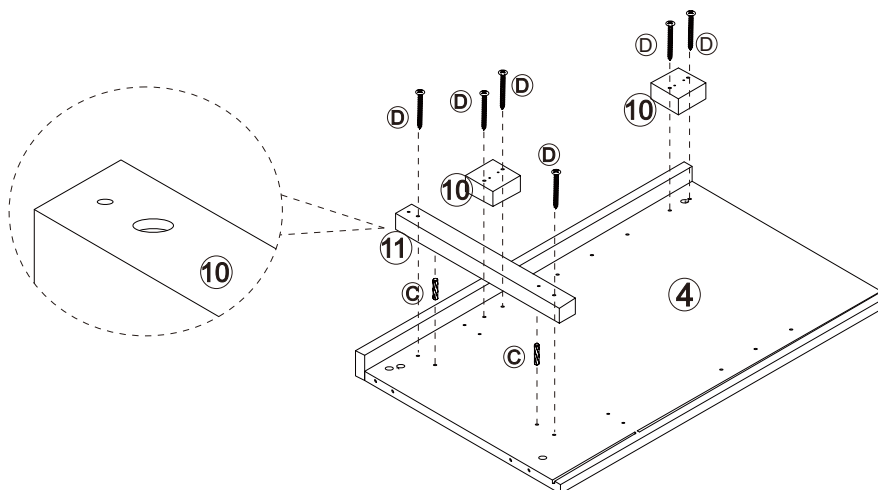

Cx2
Dx6

Attach plate 11 to plate 4 with screws D and dowels C, paying attention to the orientation. Attach the plate 10 to the plate 4 with screws D.

 Step 6

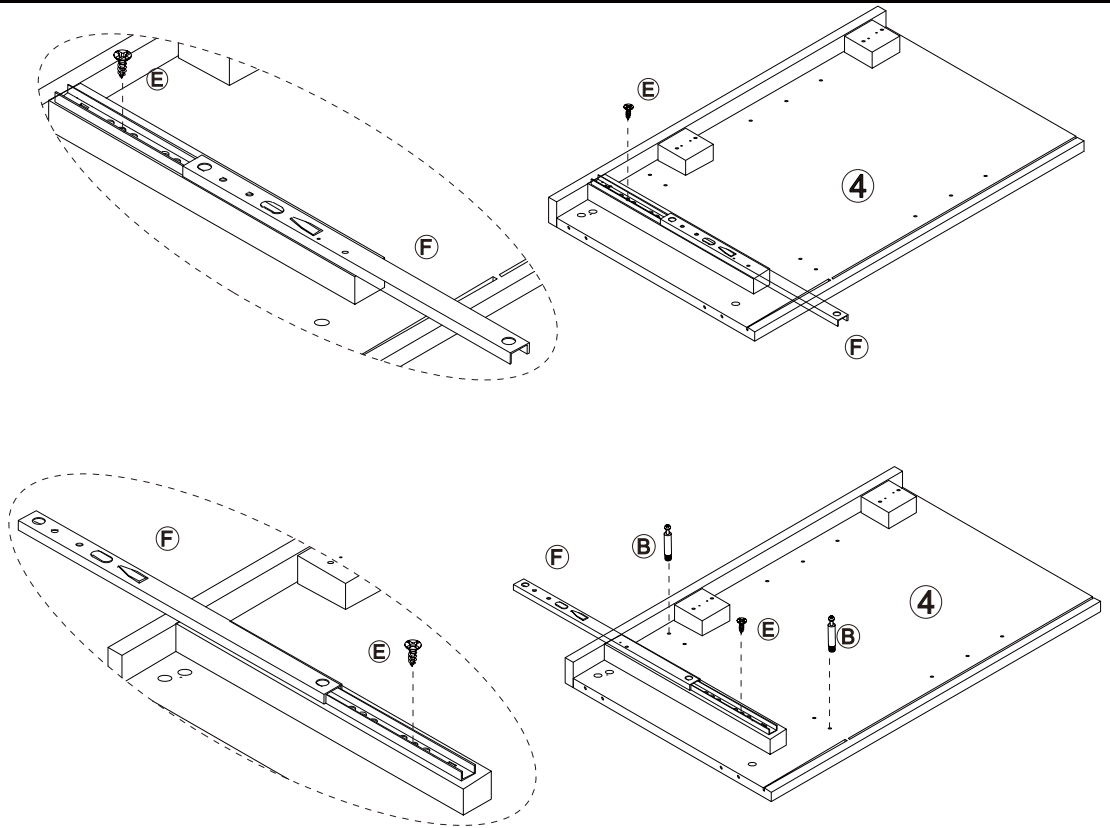


Bx2
Ex2
Fx1

Secure the slide F to the plate 11 with screws E. Attach to plate 4 with hardware B

Step 7

 x2

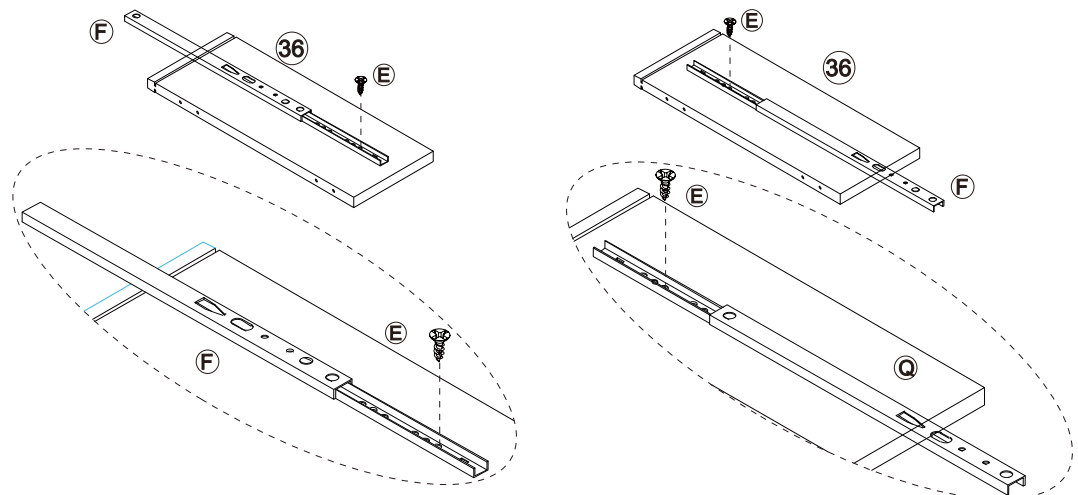


Ex4
Fx2

Secure the slide F to the plate 36 with screws E.

Step 8

x2

 
Ex4
Fx2

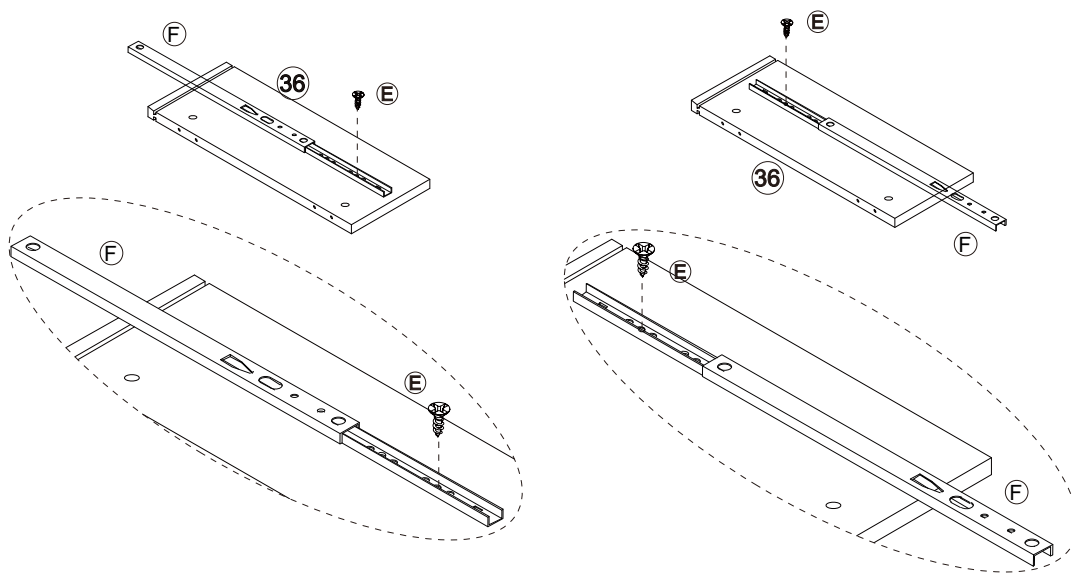

This is the other side of Panel 36.
Secure the slide F to the plate 36 with screws E.


Step 9

 Cx4
Dx4

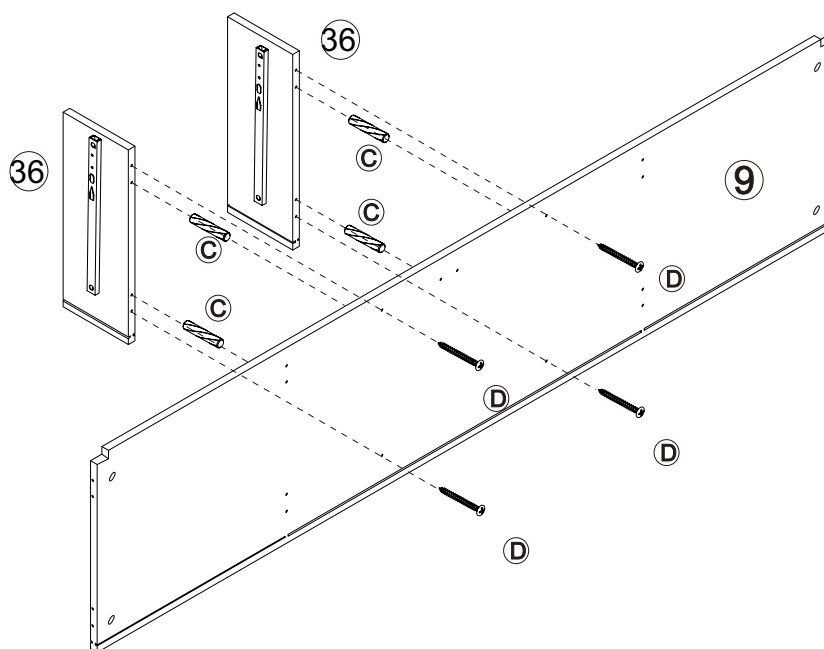

Attach plate 36 to plate 9 with screws D and dowels C

 
Step 10

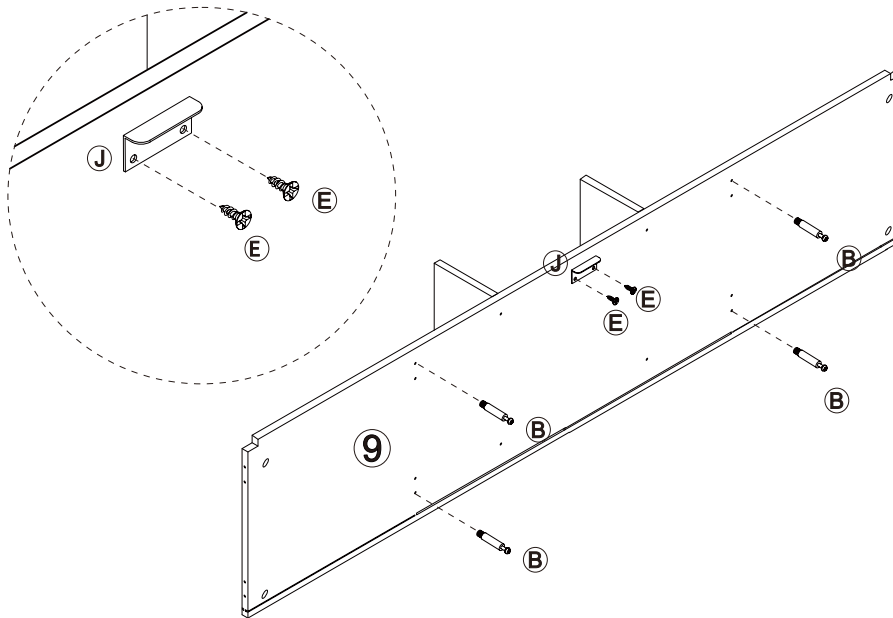

Bx4
Ex2
Jx1

Fasten Hardware B to Plate 9 and Fasten Hardware J to Plate 9 with Screw E.

 
Step 11

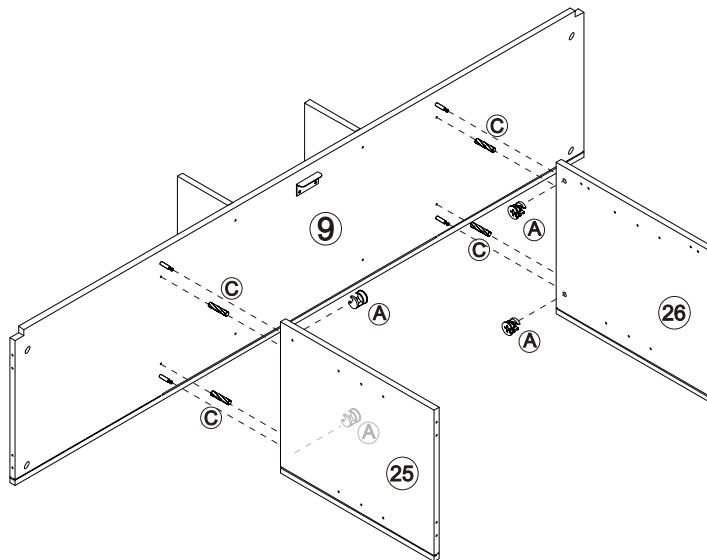

Ax4
Cx4

Secure plate 25 and plate 26 to plate 9 with hardware A and dowels C.

 
Step 12

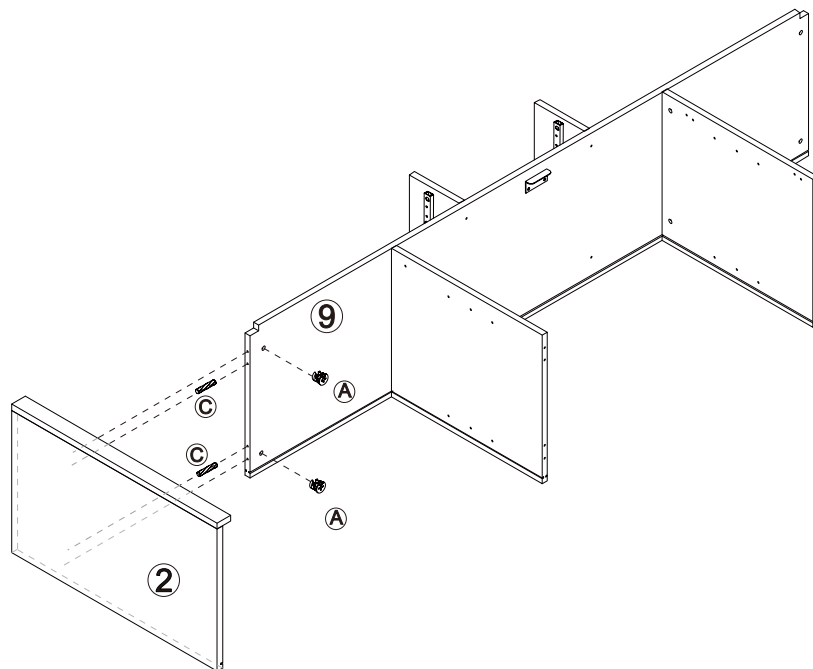

Ax2
Cx2

Secure plate 2 to plate 9 with hardware A and dowels C.

 
Step 13

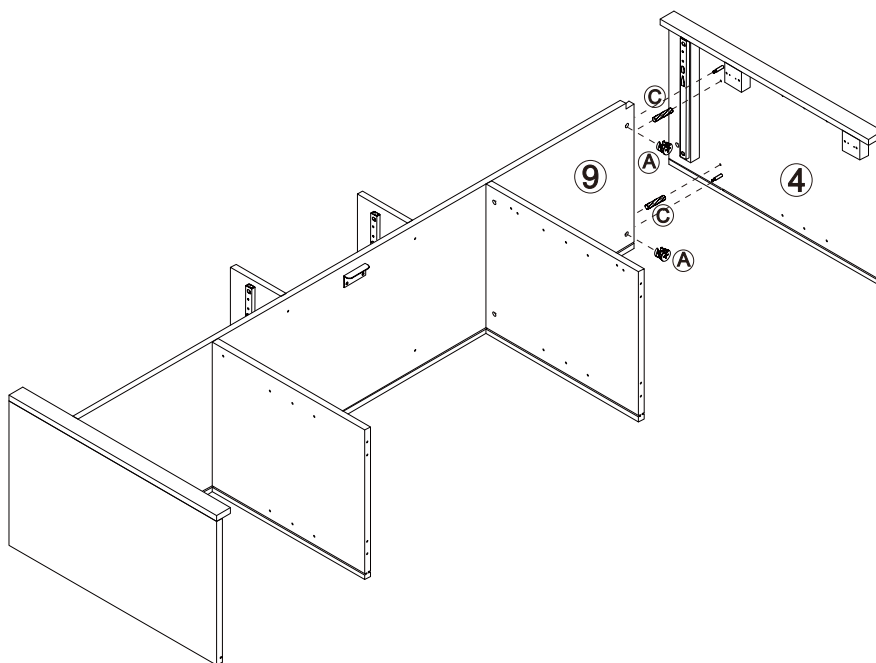

Ax2
Cx2


Secure plate 4 to plate 9 with hardware A and dowels C.

 Step 14

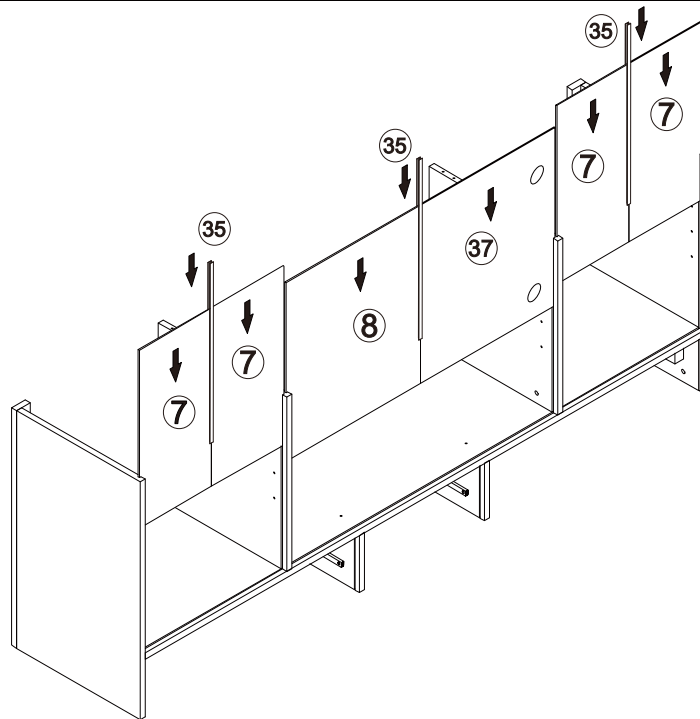

Flip the product from step 13 to the left as shown.
Insert the backplate 7 and backplate 8/37 into the slots and the
backplate strip 35 into the center of the two backplates.

 
Step 15

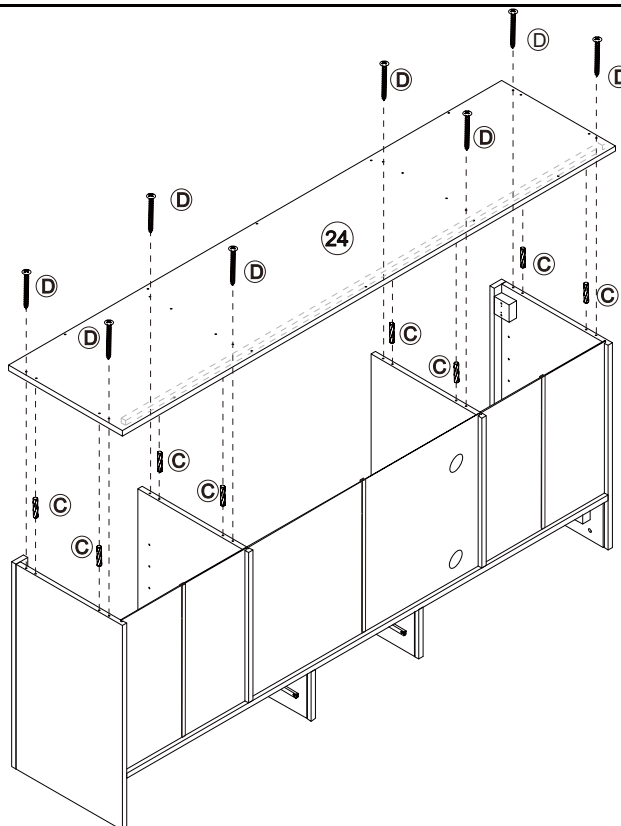

Cx8
Dx8

Attach base plate 24 to frame with screws D and dowels C.

 
Step 16

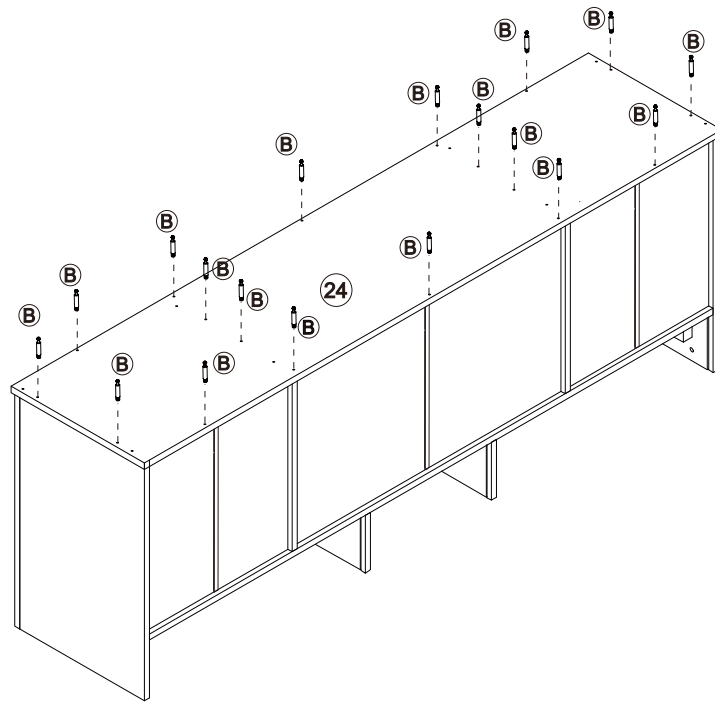

Bx18

Attach hardware B to base plate 24.

 Step 17

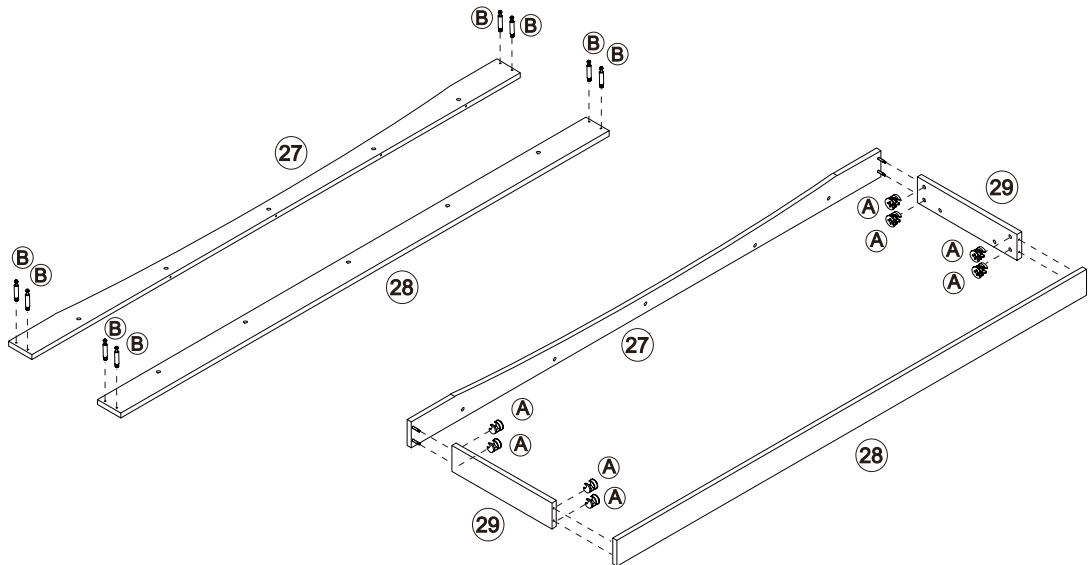


Ax8
Bx8

Hardware B mounts to plate member 27 and plate member 28.
Connect plate member 27 and plate member 28 to plate member 29 with hardware A.

Step 18

 
Ax14

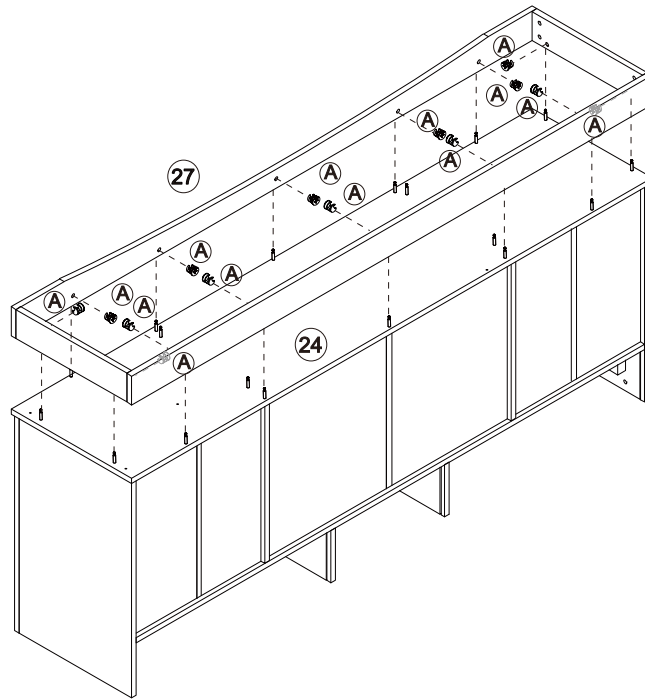

Attach the grouped frame to the baseboard 24 with hardware A .


Step 19

 Ax4

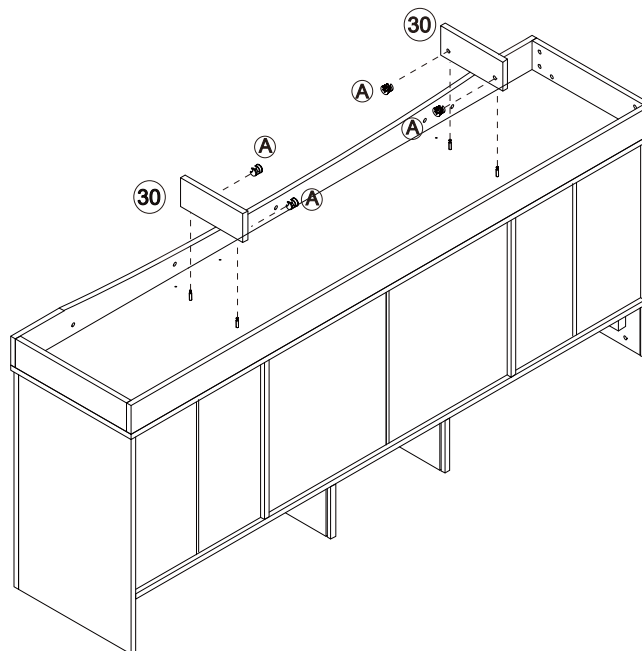


Attach the support plate 30 to the base plate 24 with hardware A.

 Step 20

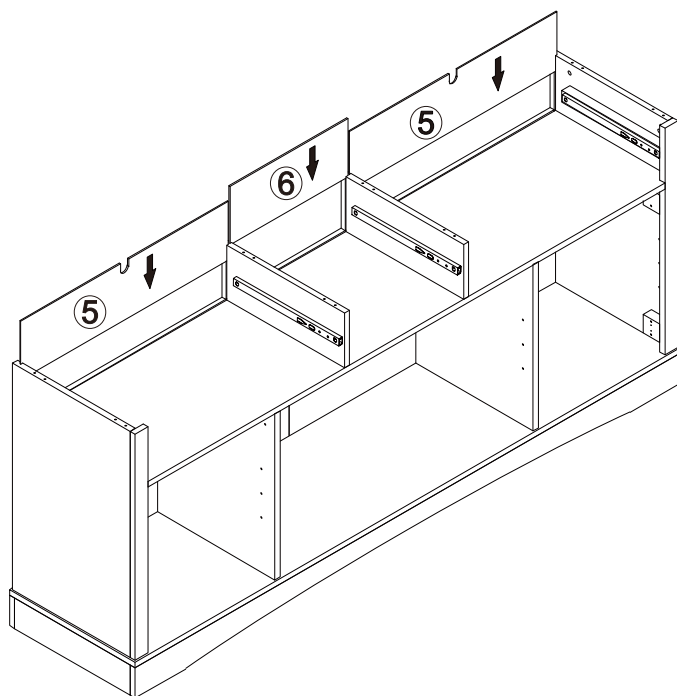

Flip the product from step 19 as shown.
Insert the backplate 5 and backplate 6 into the slots.

 Step 21

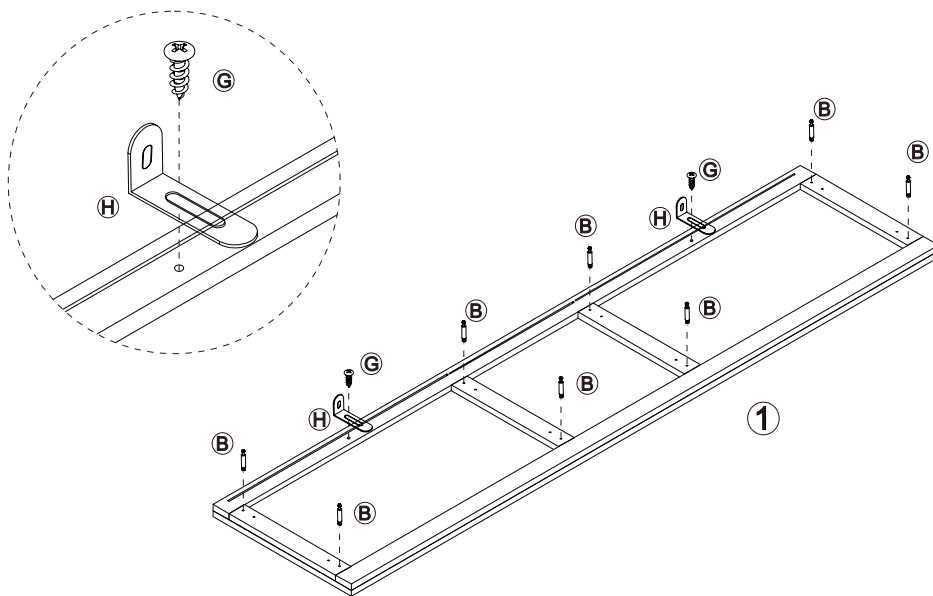


Bx8
Hx2
Gx2

Installation of anti-tipping ,Attach the hardware H to the top of the top plate 1 with screws G. Install the hardware B on top of the top plate 1.

Step 22

 
Ax8
Cx8

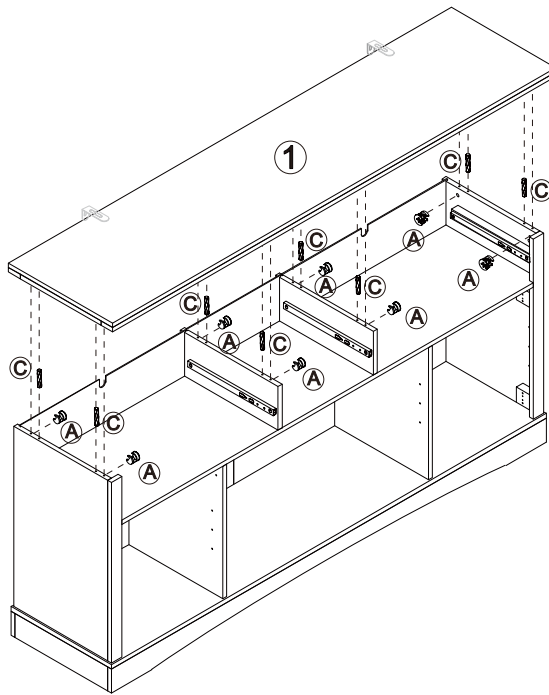

Secure the top plate to the frame with hardware A and dowel C.


Step 23

 Ax3
Bx3
Cx2

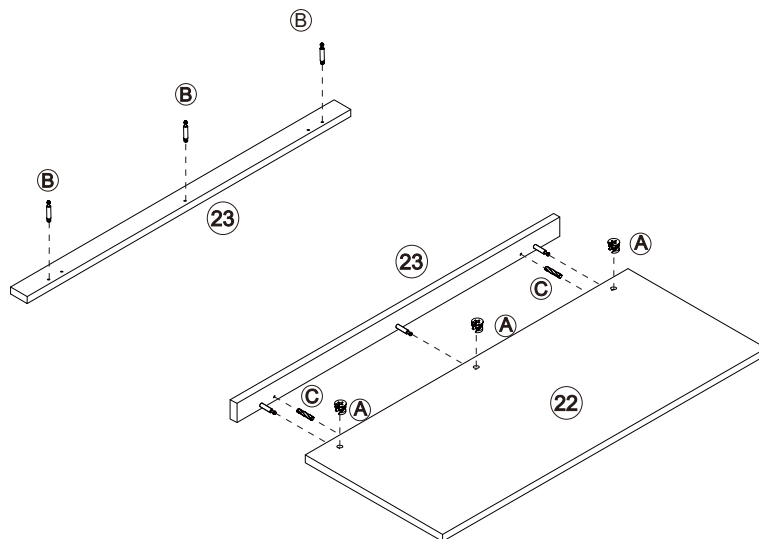

Attach hardware B to plate 23. Use hardware A and dowels C to join plate member 23 to plate member 22.

 
Step 24

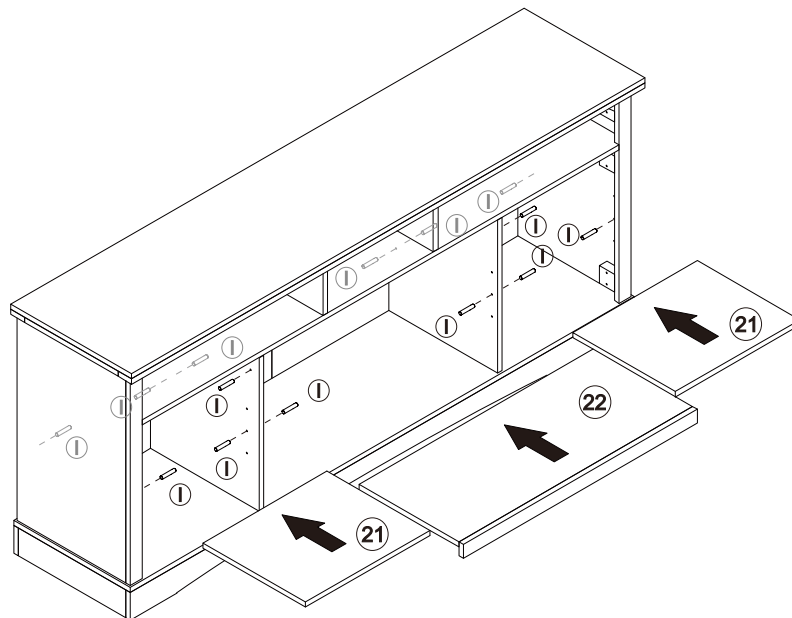

Ix14

Place laminate pegs I into the holes.
Boards 21 and 22 should be placed along the diagonal of the cabinet.

 Step 25

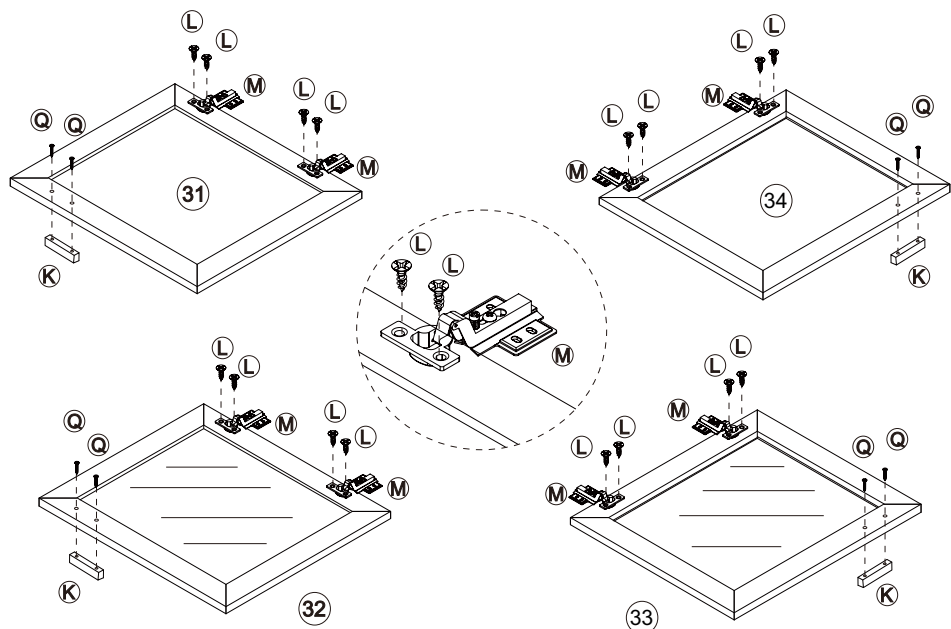


Qx8
Lx16
Mx8
Kx4

Attach the pull handle K to the door with screw Q and the hinge M to the door with screw L.

Step 26

 
Lx8

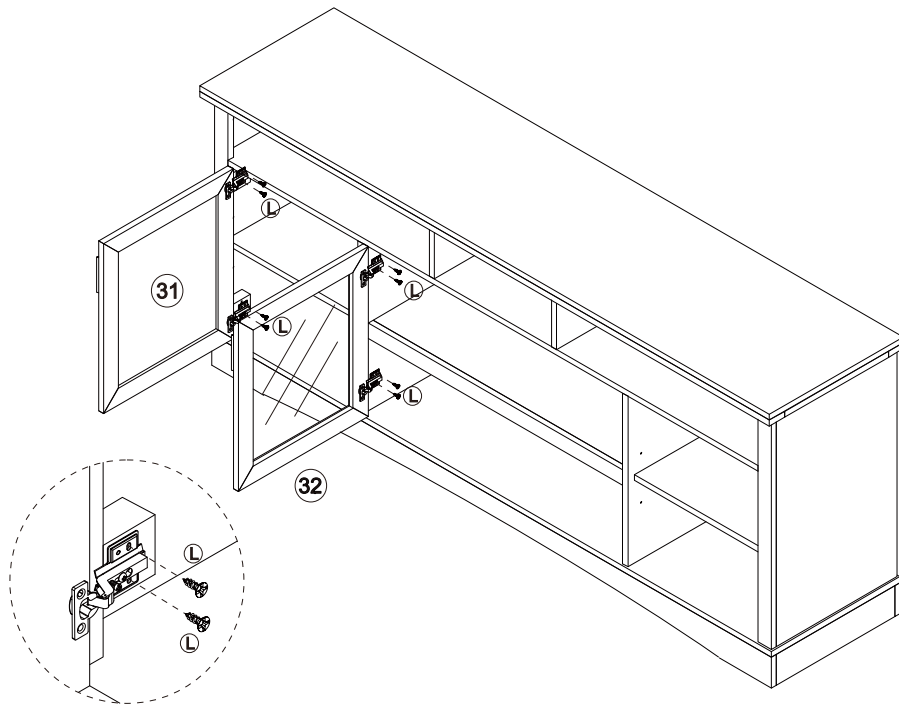

Attach the fitted door to the frame.


Step 27

 Lx8

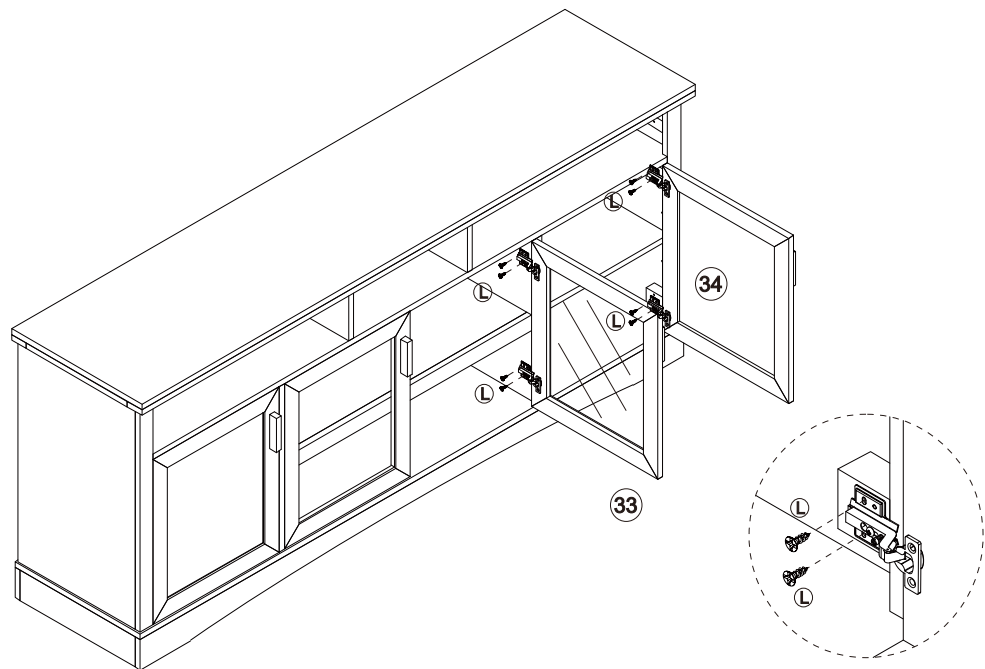

Attach the fitted door to the frame.

 Step 28

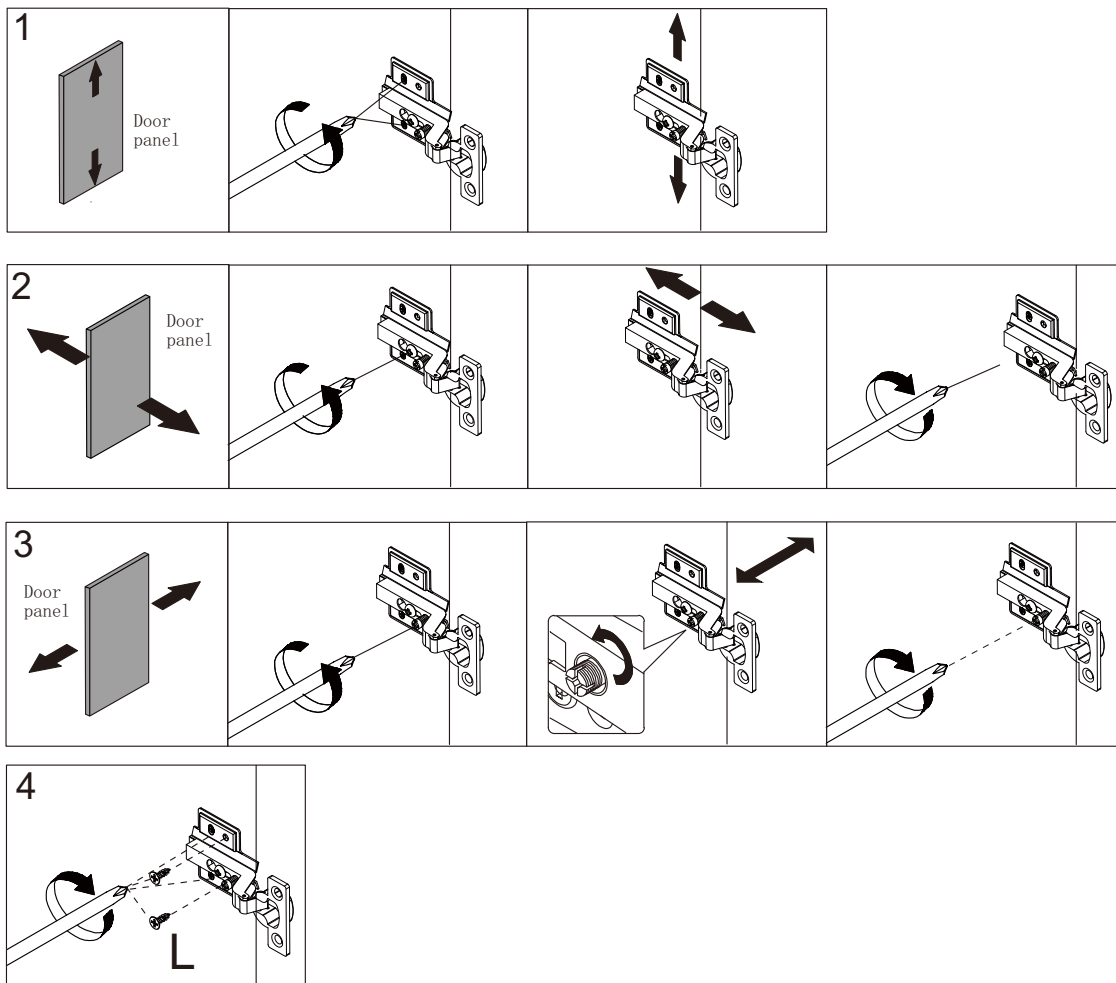


Lx16

If the door panel is not sitting at a right position or angle, follow the steps below to improve.

- (1) Loose the hinge, adjust the door panel position (up and down), then fasten the screws to secure the hinge (Step 1).
- (2) Loose the middle screw of the hinge and adjust the door panel in and out, to desired position, then fasten the screws to sucre the hinge (Step 2).
- (3) Adjust the nut at the centre of the hinge to fine tune the tilting angle of the door panel (left or right) to make the door panel to be vertical.
- (4) After all adjustments are completed, tighten the remaining screws.

Step 29

 
Ex24
Px24

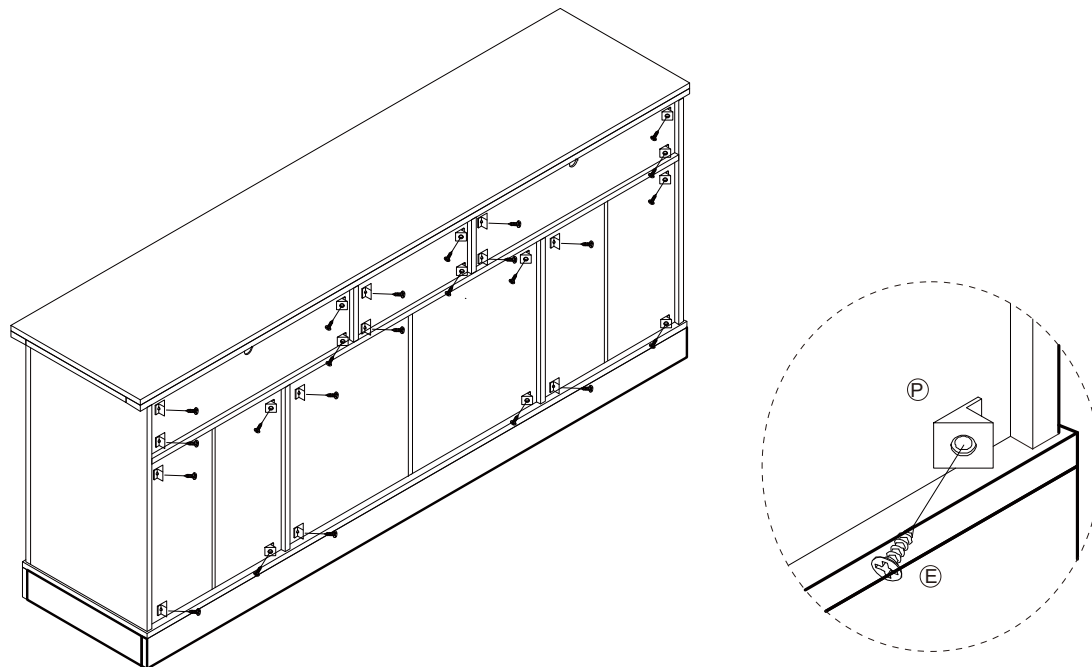

Insert the back panel buckle P into the gap and secure it with screw E.


Step 30

 Dx2
Nx2

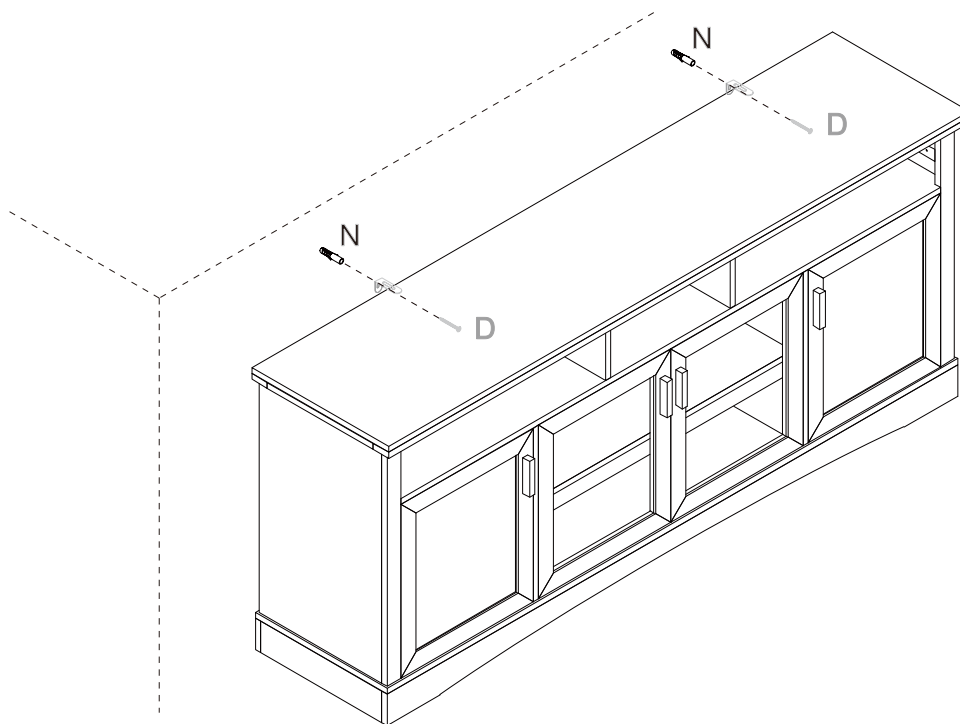

Cabinet must permanently fixed to the wall with included anti-tipping device to prevent the cabinet from tipping over. Mark the drill position on the wall with a pencil. Drill holes on the marked position using a bit. Gently insert the wall anchor (N) into the drilled hole with the help of a hammer. Fixed the cabinet to the wall with provided screws (D).

 
Step 31

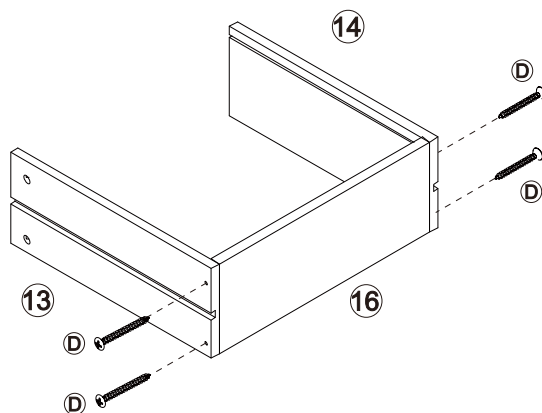

Dx4

Attach plate 13 and plate 16 to plate 14 with screws D.

 
Step 32

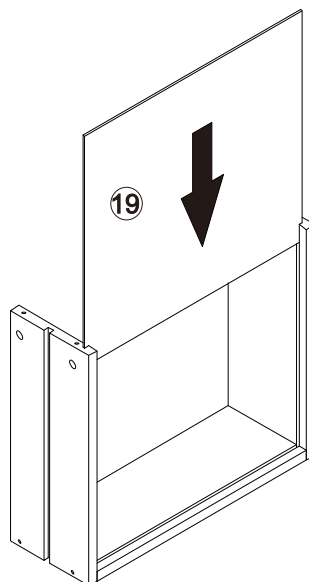

Insert the drawer base 19 into the slot.

Step 33

 Ax4
Bx4
Qx2
Kx1

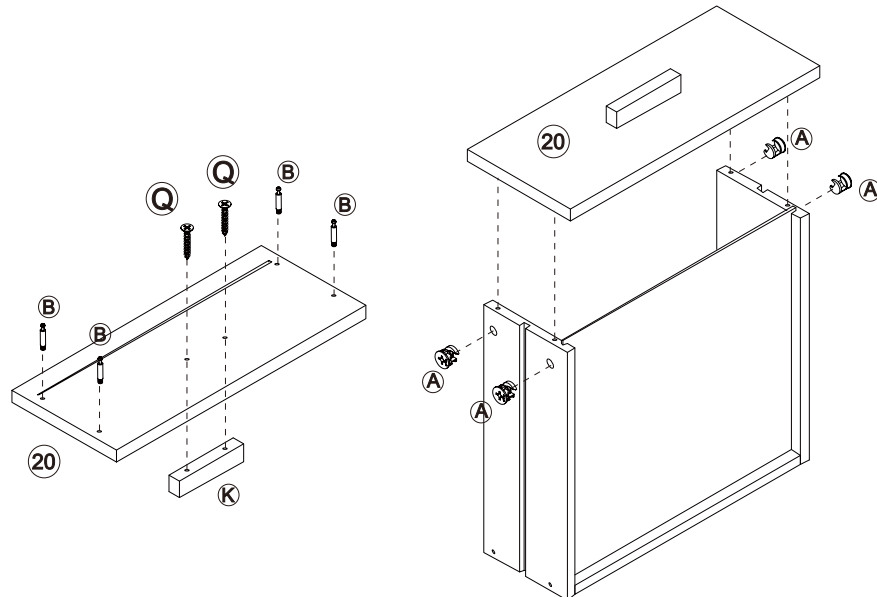


Attach pulls K to the drawer panel 20 with screws Q and hardware B to the drawer panel 20. Attach the drawer panel 20 to the assembled frame (Completed in step 32) with hardware A.

Step 34

x2

 
Dx10

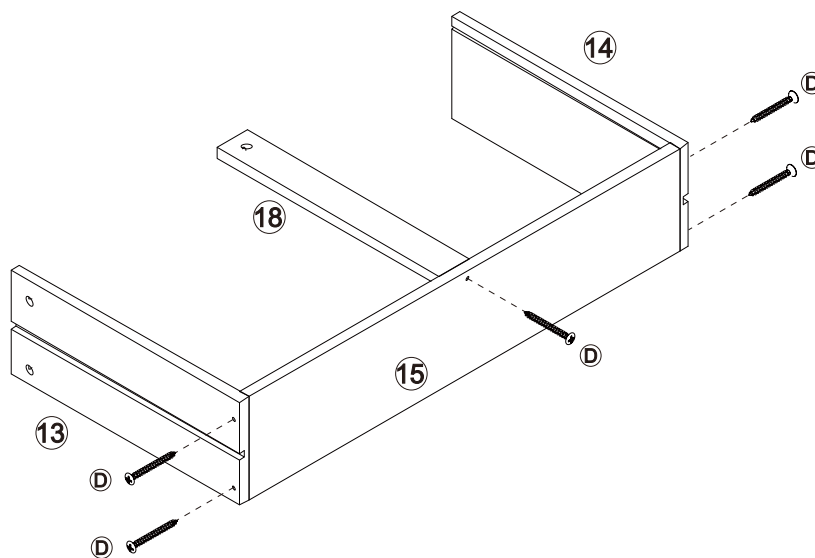

Attach plate 13 and plate 15 and plate 18 to plate 14 with screws D. Repeat this step 2 times.

Step 35

 x2


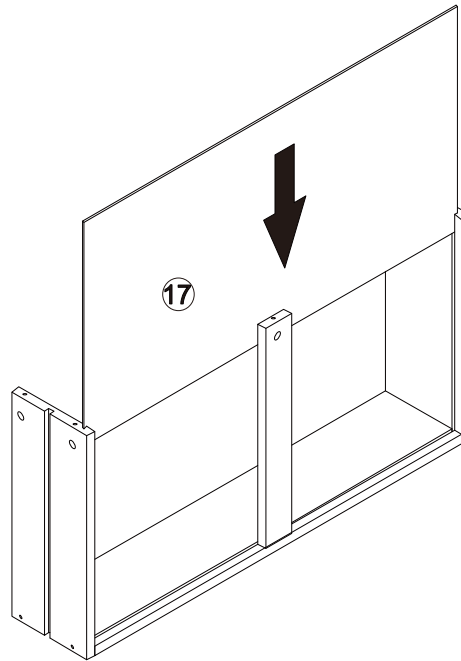


Insert the drawer base 17 into the slot. Repeat this step 2 times.

Step 36

x2

 
 
Ax10
Bx10
Qx4
Kx2

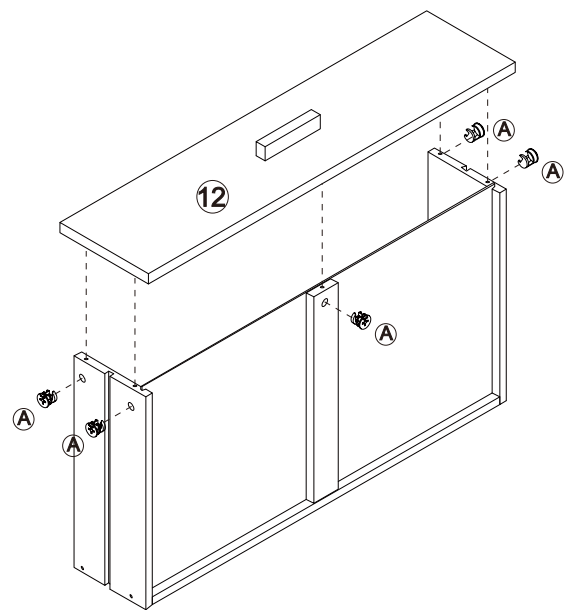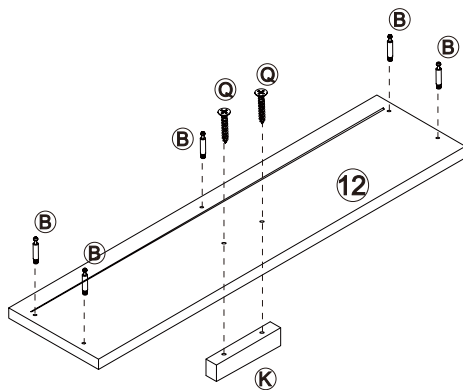

Attach pulls K to the drawer panel 12 with screws Q and hardware B to the drawer panel 12. Attach the drawer panel 12 to the assembled frame (completed in step 35) with hardware A. Repeat this step 2 times.


Step 37

  Ox6

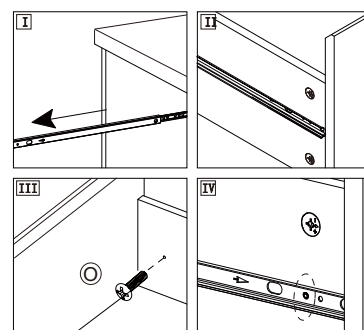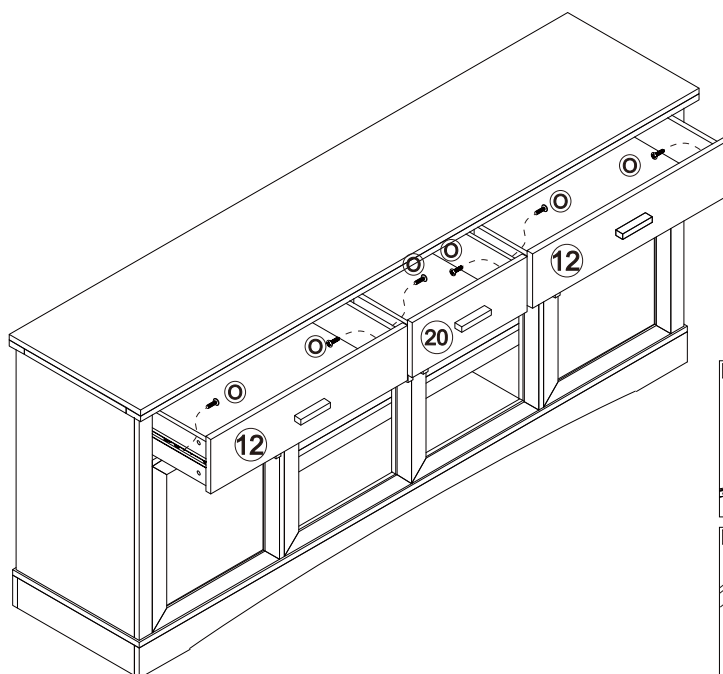

Pull the rails out and put the drawers in, taking care to align the holes. Lock with screw O. Attention : Be careful when pulling the slide, it's best to wear gloves.

 Step 38

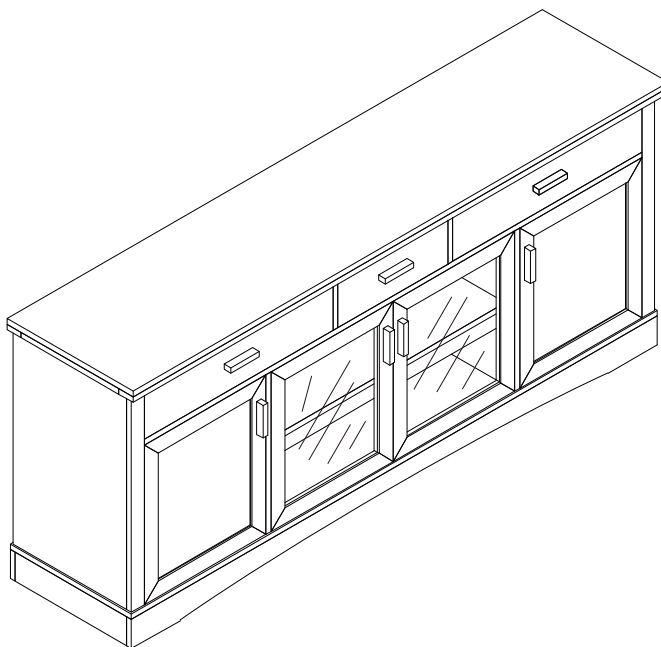

This TV stand cabinet is already installed.
This TV stand cabinet only be used on a flat and level surface.