Assembly Instructions

Caution: You must read this before you proceed

Care & Maintenance



Not for commercial use. For residential use only.



 Furniture may scratch floors. We recommend using furniture pads to protect your floors.



• Do not put hot items directly on furniture surface.



Do not clean furniture with harsh cleansers or polish.



Do not place furniture under direct sunlight.



Do not place furniture near heating or cooling vents.



 Do not write on furniture without a padded barrier to protect the surface.



Do not place furniture outside. For indoor use only.



 Stains may be removed with mild soap solution and damp cloth.




Children should not climb or jump on the furniture.



 Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in chair seat for hardware packs and legs.


CLUB CHAIR

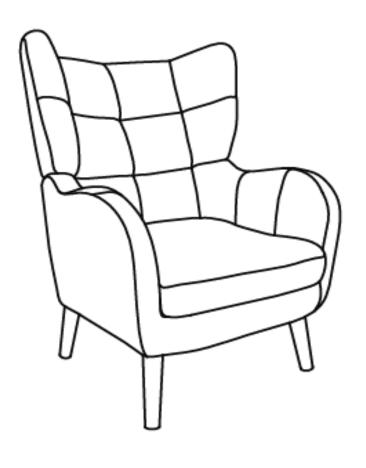

Parts List			
Label	Picture	Description	QTY
Α		Chair Seat	1
В		Backrest	1
С		Leg	4
Hardware List			
Label	Picture	Description	QTY
1	<u> </u>	Bolt(M8*70 MM)	1
2		Washer	1
3		Gasket	5
4		Allen Wrench	1
(5)	Q	Spring Washer	1

Assembly Preparation

Before Beginning Assembly:

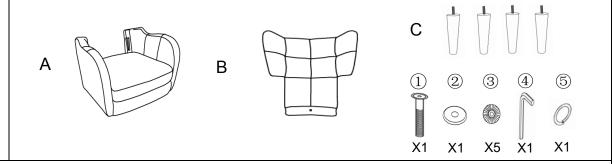



Read instructions, cover to cover-



Have 2 adults on hand for assembly-



Do not assemble on flooring or carpet-




Assemble on a clean non-marring surface (packing foam)-



Save all packaging until finished-

Assembly Steps


Overview

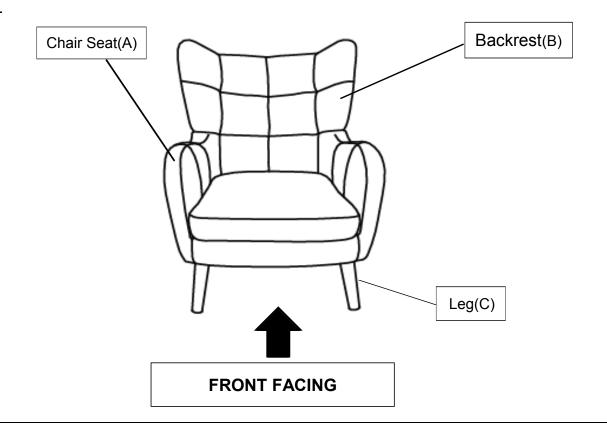

This Chair has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Chair, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Note: It is recommended that you have an adult partner to assist during the entire assembly process.

Step 1

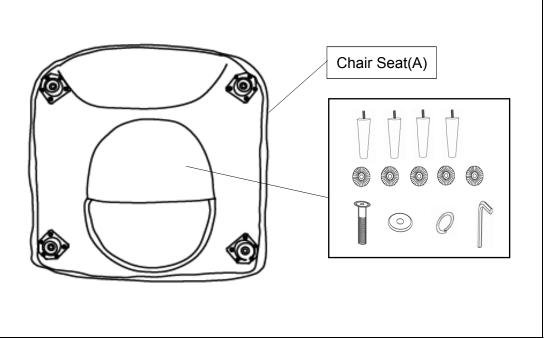


Position the Chair Seat(A) on a clean, non-marring surface as shown.

Carefully unzip the pouch at the bottom of the Chair Seat(A) and remove the Legs(C) and Hardware.

Close the pouch before assembling.

Step 2

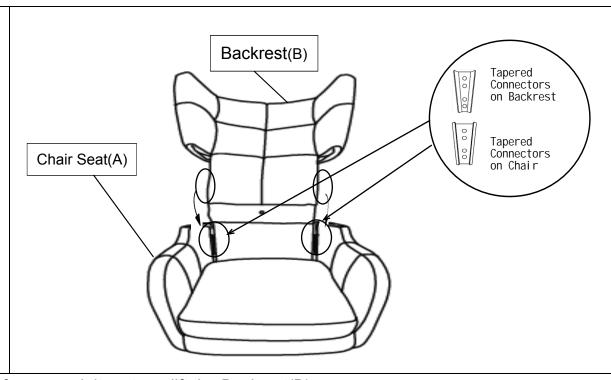

With assistance from an adult partner, lift the Backrest(B) up.


Align the Tapered Connectors on the Chair Seat(A) and the Backrest(B).

Push down on the Backrest (B) until it is fully locked into the Tapered Connectors.

Note: If you encounter some difficulty while inserting the Tapered Connectors on the Backrest (B) into the Tapered Connectors on the Chair Seat (A), please ask your adult assistant to slightly push the armside of the Chair Seat (A) as you insert the Tapered Connectors.

Note: If the bottom of the Backrest (B) completely touches the Chair Seat (A) edge, and it feels s ecure, not loose, when pushing the Backrest(B) backwards, then the Backrest(B) is fully locked in position.


If not, then you need repeat the above actions.

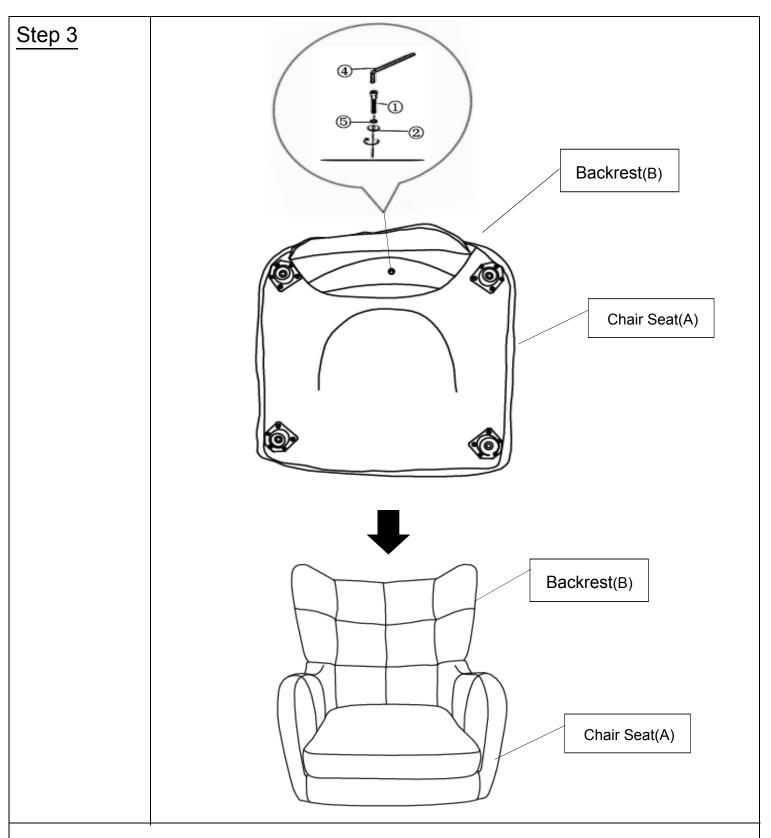

Lie down the Chair as pictured above.

Lock Chair Seat(A) to Backrest(B) using a Bolts(), Spring Washers(), and Washers()with the Allen Wrench () as pictured above.

Tighten the Bolt fully.

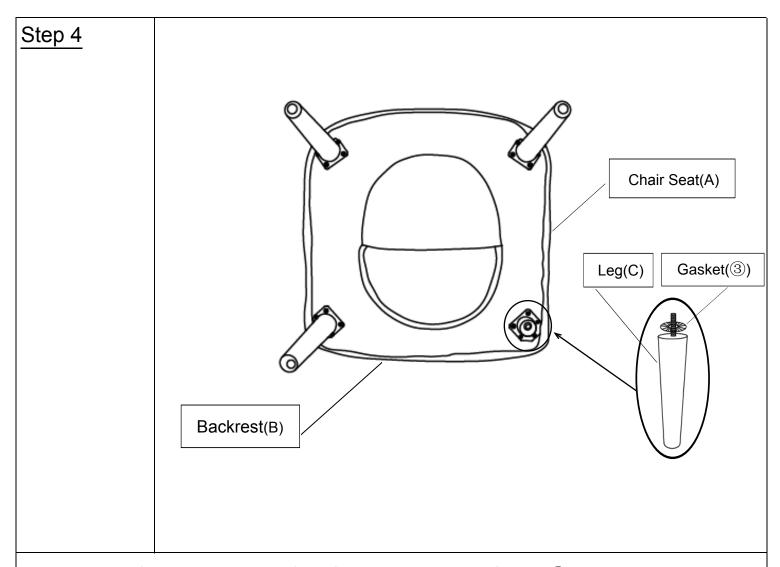

Install the Leg(C) onto the bottom of the Chair by placing one Gasket(③) on the threaded stem. Then insert the threaded stem into the threaded mounting postion at the corner of the Chair. Tighten by turning the Leg clockwise.

Repeat the same step to install the remaining Legs.

Note: The use of Gaskets are OPTIONAL and are especially useful to help alleviate slight wobble. Some Legs may need more than one whilst some legs may not need any.

