

**WARNING**

- 1. Use this product only one person at a time.
- 2. Do not use unless all bolts, screws, and knobs are securely tightened.
- 3. Check that all bolts, screws, and knobs are tight every three months or as needed.
- 4. Dispose of packing material properly. Do not use plastic cover as head covering as it may cause suffocation.
- 5. Do not use this product as a stepladder.
- 6. Use this product for its intended purpose only.
- 7. Use only mild detergent for cleaning.

**OSP FURNITURE LIMITED PRODUCT WARRANTY**

Design Lab Products
















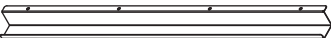

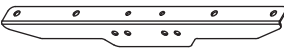
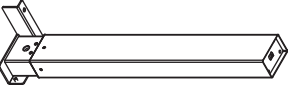
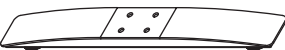

- 3 years on gaming desks and chairs
- Upholstery is not warranted against routine scratching and scuffing

\*All warranties are limited to the original purchaser for normal commercial usage defined as a standard forty hour work week by persons weighing 250 lbs. or less. This warranty will not cover labor, freight or damage from misuse, abuse, negligence, alteration, accident, vandalism, rusting, acts of nature or any other event beyond the control of Office Star Products. The warranty does not cover cosmetic damage that may result from normal use. Liability for incidental or consequential damages is excluded. The user assumes all risk of injury resulting from use of this product. When usage is more than 40 hours per week, a two year warranty on all parts applies. Fabric and foam is warranted for one year. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

It is the customer’s responsibility to prepay freight on any components returned to the factory. Return freight on components covered by warranty will be paid by Office Star Products.

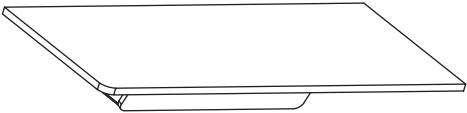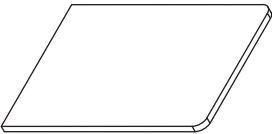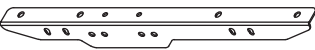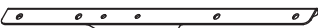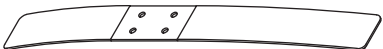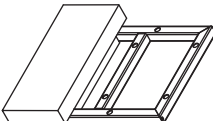Our quality standards are among the highest in the industry. Sometimes, no matter how hard we try, there are times when parts are damaged or missing. Our Parts Department will do everything possible to promptly remedy the problem. Contact us via e-mail [parts.department@officestar.net](mailto:parts.department@officestar.net) by Fax 1-909-930-5629, or toll free parts number 1-800-950-7262, Monday through Friday 8:00 a.m. - 3:30 p.m. Pacific Time.

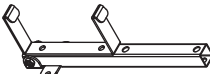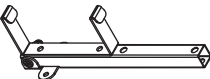**PARTS**

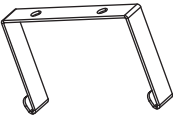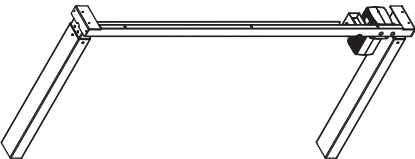 (1) Left Desktop (1 Pc)	 (2) Right Desktop (1 Pc)	 (3) Bracket for Left Legs (1 Pc)
 (4) Bracket for Left Legs (1 Pc)	 (5) Left Foot (1 Pc)	 (6) Center Rear Panel (1 Pc)
 (7) Left Rear Panel (1 Pc)	 (8) Right Rear Panel (1 Pc)	 (9) Left Bracket (2 Pcs)
 (10) Right Bracket (2 Pcs)	 (11) Left Cable Organizer (1 Pc)	 (12) Right Cable Organizer (1 Pc)
 (13) U-Bracket (3 Pcs)	 (14) Left Legs (1 Pc)	 (15) Leg Support (1 Pc)
 (16) Shaft Cover (1 Pc)	 (17) Hexagonal Shaft (1 Pc)	 (18) Bracket for Right Leg (1 Pc)
 (19) Right Leg (1 Pc)	 (20) Right Foot (1 Pc)	 (21) Bar with Cables (1 Pc)

**FCC INSTRUCTIONS**

- CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.
- NOTE:** This equipment has been tested and found to comply with the limits for the Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interferences in a residential installation. This equipment generates, uses and can radiate frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- Instructions shall caution users that modifications not approved by part responsible for compliance could void user’s authority to operate the equipment.

ATTENTION






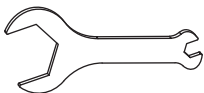

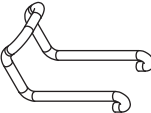
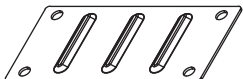
- Power supply: AC120V ± 10%, frequency 60Hz.
- Working environment: 32° – 104° F.
- Before cleaning, please unplug the power supply cable. Clean with a slightly damp cloth to wipe away surface dust. Keep all electrical components away from liquids. Do not damage the connection line and keep the plug in a safe position.
- Inside the control box, there are electronic components, metal parts, plastic parts, wires and so on. They should be disposed in accordance with the local laws and regulations. They cannot be disposed as household waste.
- Before using the product, please make sure the product has been installed correctly.
- Before starting use of the product, please read the instructions to fully understand all the product’s functions and settings.
- Keep children away from electric height-adjustable desks, control units, and handsets. Manufacturer is not responsible for any damages that result from children’s unpredictable behavior.
- Slight noise caused by the multi-wedge belt or brake system will not impact the use of this product.
- Do not use corrosive or abrasive materials to clean this product and please dispose of cleaning solutions in an environmentally friendly manner.
- Understand the risks associated with using this product. Children or those with cognitive impairment should not use this product without supervision.
- If the power supply cord is damaged or broken, it must be replaced by the manufacturer or a relevant specialist to avoid any injuries.
- Please operate in a clean and safe environment. For example, do not leave tools around product, and always dispose of packaging materials in order to avoid any kinds of possible danger. Potential risk from choking exists when children play with plastic bags!
- If necessary, retain the original package for future transportation.

RECYCLING AND DISPOSAL:



This product cannot be disposed of as household waste. To prevent damage to the environment, this product should be recycled. Please use the relevant recycling systems available to you or contact the distributor or manufacturer for recycling assistance.

HARDWARE				
NO	DRAWING	DESCRIPTION	SIZE	QUANTITY
A		Allen Bolt	3/4"	8 Pcs + 1 extra
B		Allen Bolt	1/2"	38 Pcs + 3 extra
C		Allen Key	M4	1 Pc
D		Allen Bolt	2"	6 Pc
E		Handset	N/A	1 Pc
F		Phillips Screw	1"	3 Pcs
G		Phillips Screw	1/2"	9 Pcs
H		Cable Strap	N/A	5 Pcs
I		USB Power Adapter	N/A	1 Pc
J		Magnetic USB Panel	N/A	1 Pc
K		LED Power Adapter	N/A	1 Pc
L		Phillips Screw	5/8"	24 Pcs + 4 extra
M		Allen Bolt	1"	6 Pcs

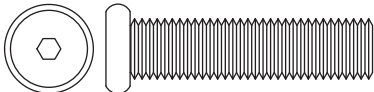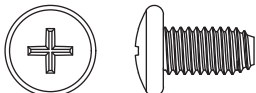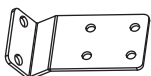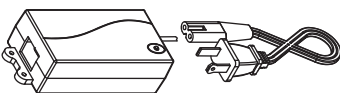HARDWARE				
NO	DRAWING	DESCRIPTION	SIZE	QUANTITY
N		Allen Bolt	1-1/4"	8 Pcs
O		Phillips Bolt	5/16"	4 Pcs
P		LED Strip Connector Plate	N/A	2 Pcs
Q		Power Adapter	N/A	1 Pc
R		Magnetic Plate	N/A	1 Pc
S		Hex Wrench	N/A	1 Pc
T		Allen Key	2.5mm	1 Pc
U		Hook	N/A	1 Pc
V		Connector Plate	N/A	2 Pcs

Phillips screwdriver needed for assembly (not provided).

SPECIFICATIONS			
Max. Weight Capacity:	110 lbs. / 50 kg.	Maximum Height:	47.2" / 1,200mm
Speed:	25mm/s	Certification:	FCC
Input Voltage:	120 V	Duty Cycle:	10% (Works for 2 minutes, rests for 18 minutes)
Minimum Height:	29" / 730mm		

STEP 1

Scan QR Code or go to your app store and download the duoCo Strip app.


STEP 2

Start the app and select the menu at the top left of the app.


STEP 3

Select “My Devices” and your device name will show below. Make sure the link icon is not broken next to the device name. If it is, then just select the device name and refresh until the link icon shows a solid link.

Device linked to Bluetooth



Broken link: Device NOT linked to Bluetooth



STEP 4


Select the menu again to return to the “Adjust” screen and toggle the ON/OFF switch to turn on the LED lights.

STEP 5

Select the settings icon in the top right and select “Guide” for more detailed instructions.

Click to show “My Devices”

Change Color Wheel




Settings


ON/OFF

Brightness

Preset Color Options

Function Options



 duoCo Strip App

Product Specifications:

Bluetooth:

BLE V4.2

Input Voltage:

4.5–26V

Working Temp:

-25C to 75C

Size:

43 x 22 x 11 mm

Weight:

30g



Max Power:

144W (24V)

This list is used for checking and solving common faults and errors. The LED displays an error code with warning sound when a problem occurs. In most cases, the problem should be resolved by reconnecting cables and running a factory reset. If the problem you encounter is not on the list below, please contact the manufacturer for assistance.



TROUBLESHOOTING		
ERROR	PROBLEM	SOLUTION
E1	Excessive Operation	Automatic recovery after 18 minutes of not using the handset.
E2	Overloading	Reduce the weight on desktop.
E3	Connection Cable Failure	Check all cables (power cord, handset cable, motor cable) and power plug are connected properly.
E4	Power Voltage Unmatched	Check voltage of power supply or contact manufacturer.
RES	Factory Reset Request	Run a factory reset (see Step 21).
E11	Handset Fault	Reconnect handset cable, or contact manufacturer if problem persists.
E12	Control Box Fault	Run a factory reset, or contact manufacturer if problem persists.

  STEP 1

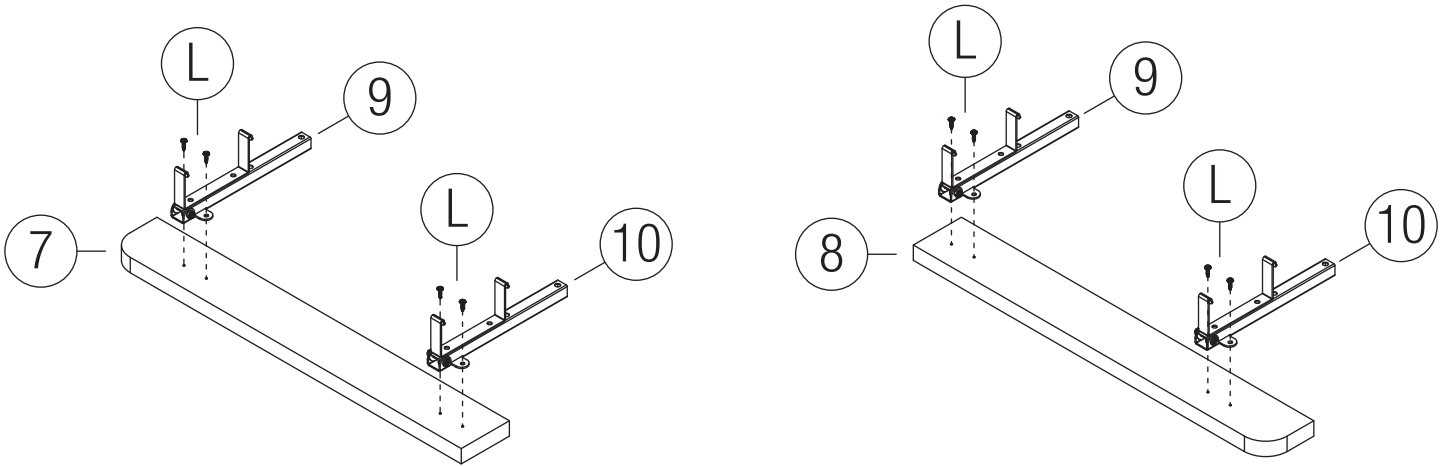

Remove all parts from carton, separate by part numbers indicated on parts list, and verify part quantities.  
**IMPORTANT: ASSEMBLE DESK ON A SOFT, NON MARRING SURFACE.**  
Attach Left and Right Brackets (9 & 10) to Left and Right Rear Panels (7 & 8) using Phillips Screws (L). **FULLY TIGHTEN ALL SCREWS.**

  
STEP 2

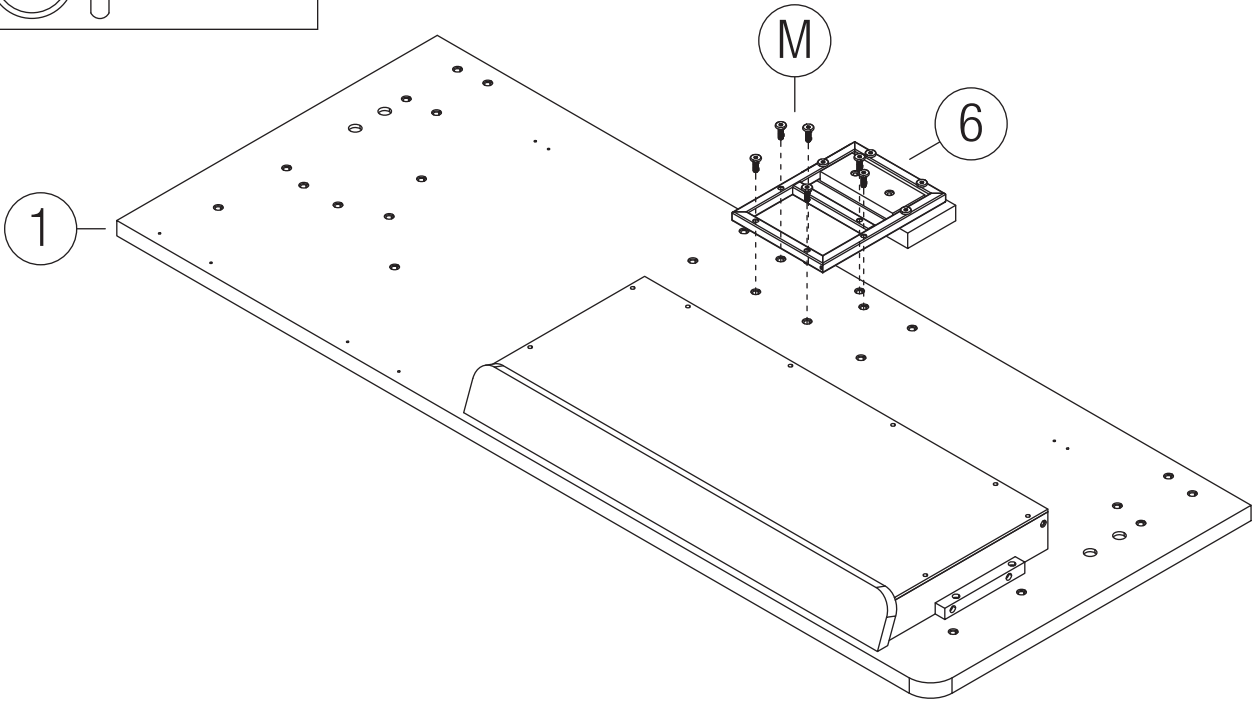


Attach Center Rear Panel (6) to Left Desktop (1) using Allen Bolts (M). **FULLY TIGHTEN ALL BOLTS.**



 
STEP 3

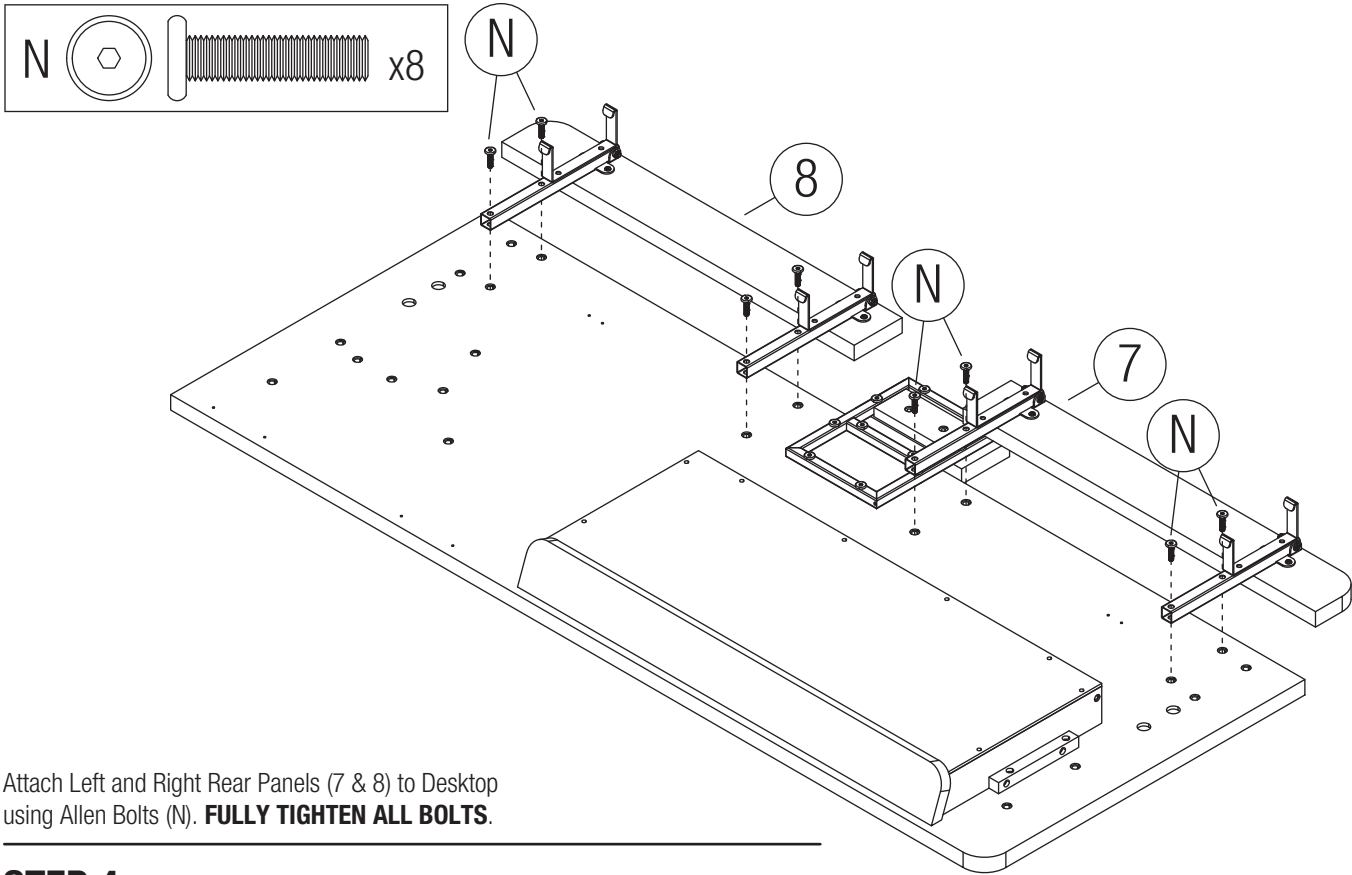

 STEP 4

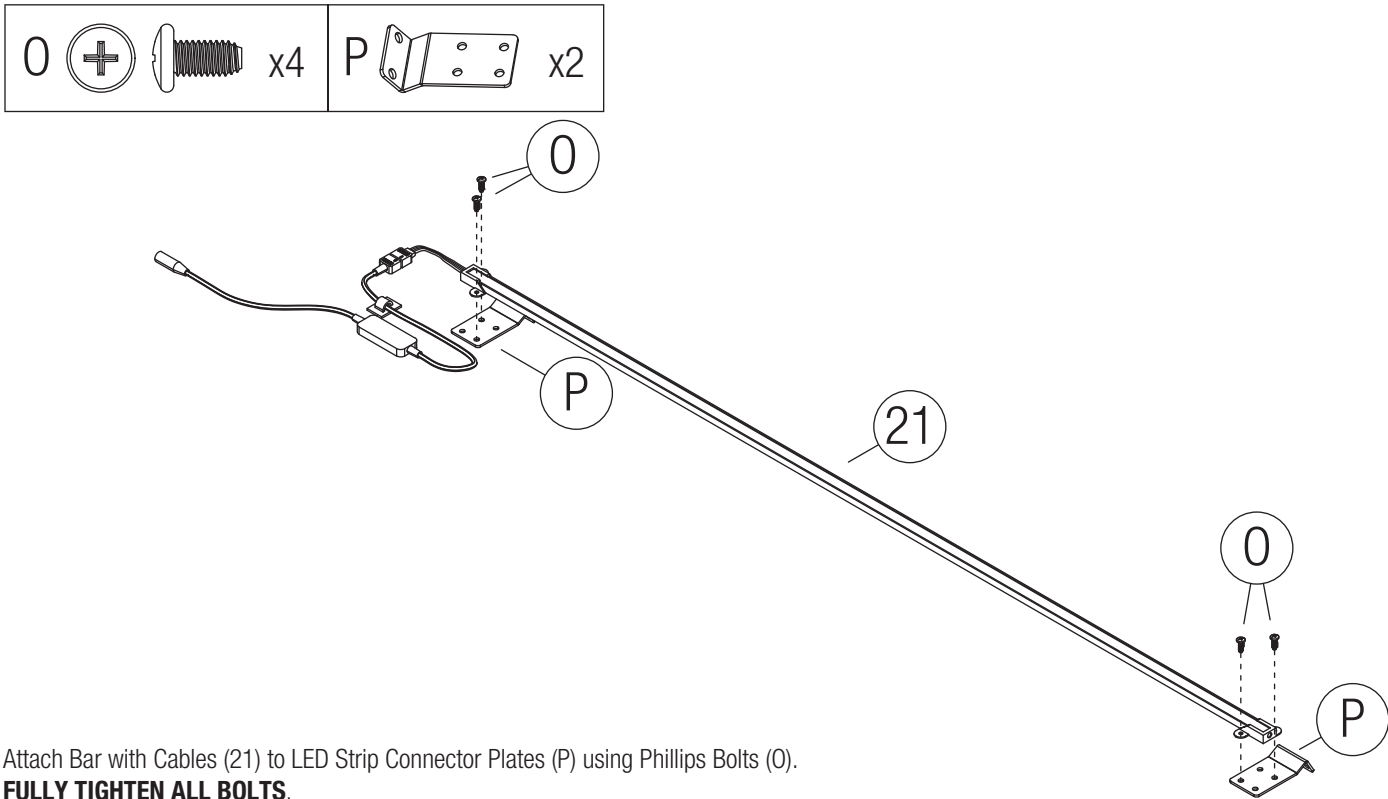

 STEP 21




HANDSET IINSTRUCTION	
BUTTON	FUNCTION
△	UP Button: To raise desk surface
▽	DOWN Button: To lower desk surface
88.8	LED Display
1	Position 1: User saves 1st height position
2	Position 2: User saves 2nd height position
3	Position 3: User saves 3rd height position
4	Position 4: User saves 4th height position
M	Child Lock Lock/unlock height position

Operation Guide



- Reset Process
  - A. Factory reset is required for first time initialization or when power cut off due to electrical problems.
  - B. Make sure all cables are connected properly before initialization.
  - C. Press and hold the “^” and “3” for 5 seconds after connecting to power until the RES shows on screen.  
The table automatically goes down until it reaches the bottom and bounce back slightly with a “beeping” sound.  
The “bot” message will then display on the screen. The reset process is completed.
  - D. You will hear two chimes and “bot” will be displayed on the readout, this means the reset is complete.
- After the reset process, press the UP or DOWN button to lift or lower the height of desktop. The LED display shows the real time numerical value. The range of numerical value is 28” to 47”.
- Memory setting for height position
  - A. Press the UP or DOWN button to lift or lower height of desktop.
  - B. Adjust to desired height, for example press the up arrow until the readout says 35 then press the button labeled 1 for 5 seconds. The display will flash and preset button 1 is now set to 35”.
  - C. Repeat the same process to save 2nd and 3rd height position accordingly.
  - D. Press button 1, 2 and 3, 4 to reach the saved height position.
- Set the key lock function M
  - A. To Lock the height position, press the “M” button for 3 seconds until you hear a chime. The position is now locked and the other control buttons will not function.
  - B. To unlock the height position, press the “M” button for 3 seconds until you hear a chime. The position is now unlocked and the other control buttons will function.
  - C. The product is unlocked by default.

   STEP 20

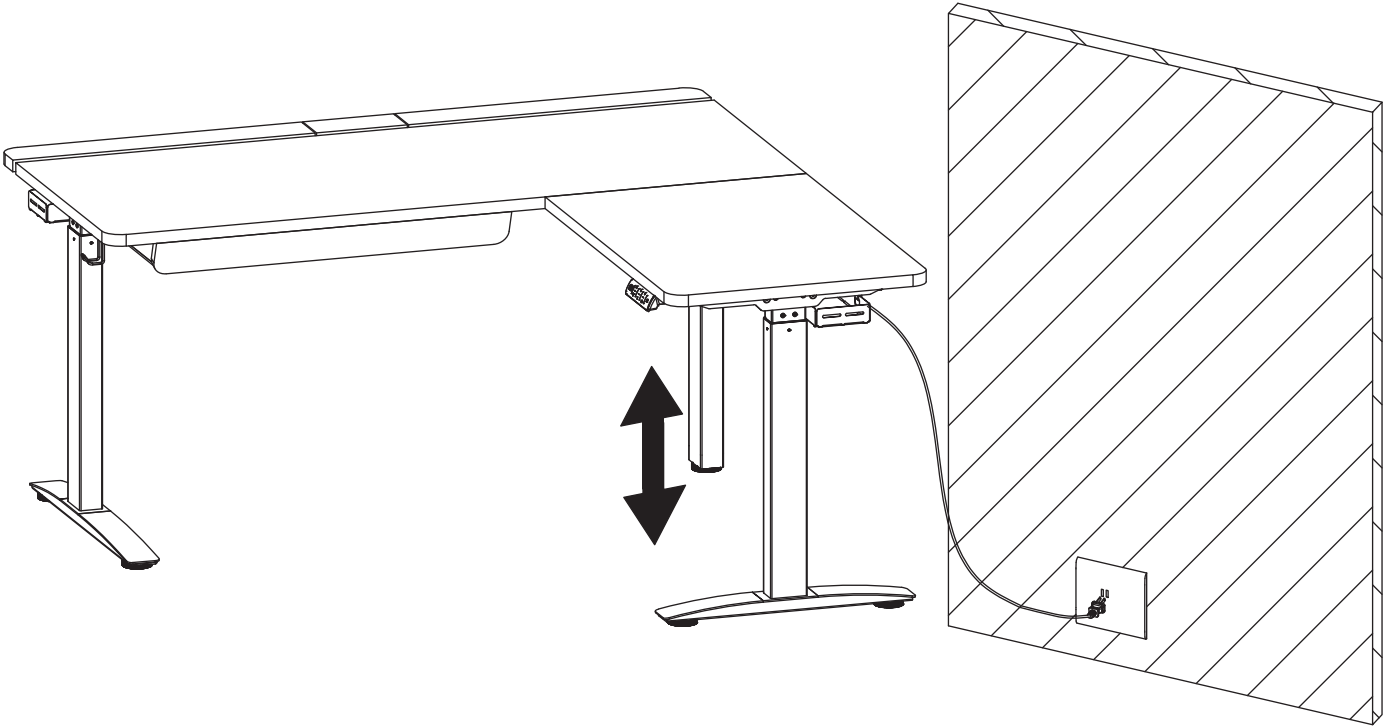



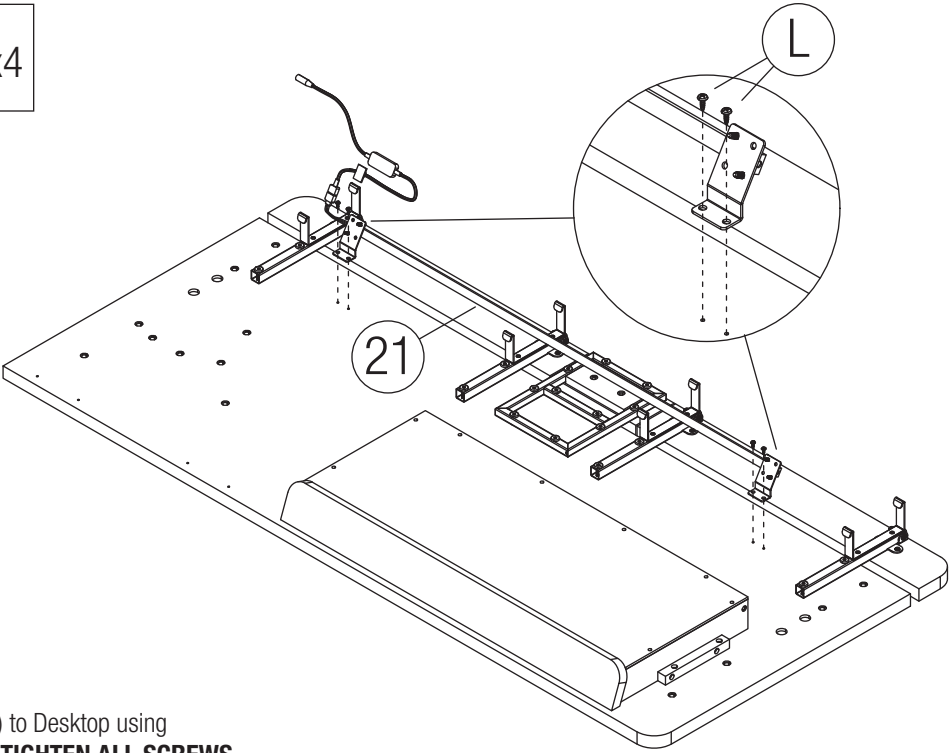


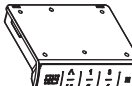
Factory reset is required for first time initialization.

STEP 5




Attach Bar with Cables (21) to Desktop using Phillips Screws (L). **FULLY TIGHTEN ALL SCREWS.**

STEP 6



L  x4	Q  x1	G  x4	R  x1
F  x3	E  x1		

 Connect Power Cable to Power Adapter.

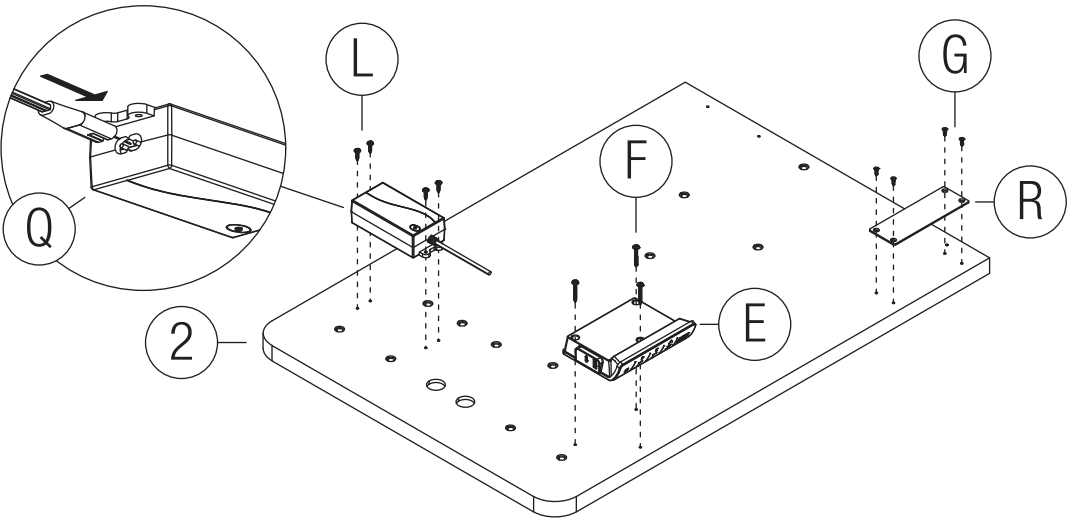



Attach Power Adapter (Q) to Right Desktop (2) using Phillips Screws (L). Attach Handset (E) to Right Desktop using Phillips Screws (F). Attach Magnetic Plate (R) to Right Desktop using Phillips Screws (G). **FULLY TIGHTEN ALL SCREWS.**

  STEP 7

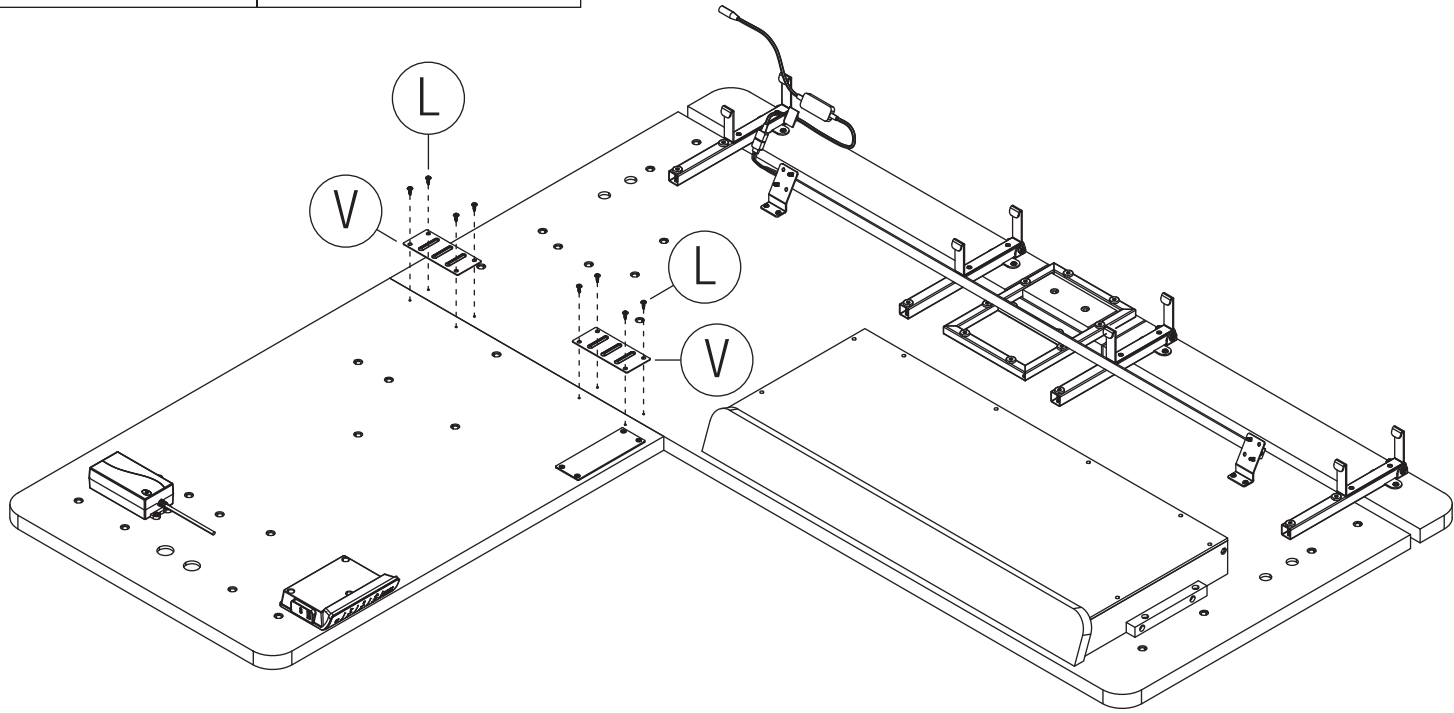



Attach Connector Plates (V) to Desktops using Phillips Screws (L). **FULLY TIGHTEN ALL SCREWS.**

  STEP 8

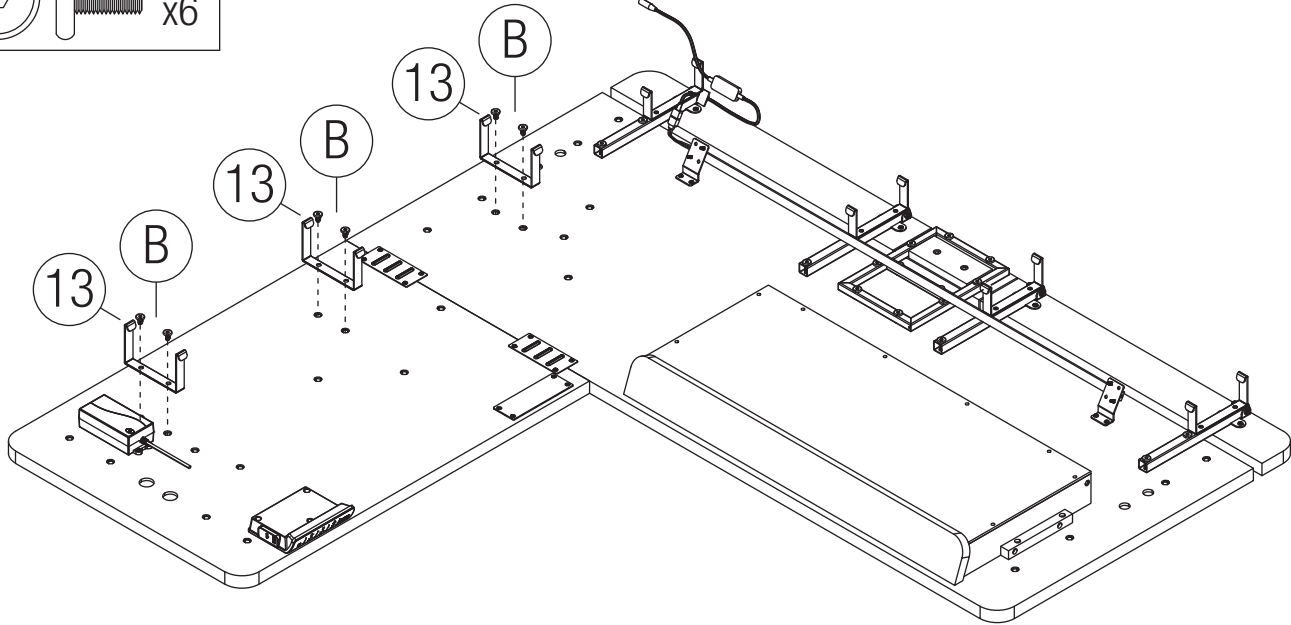

Attach U-Brackets (13) to Desktops using Allen Bolts (B). **FULLY TIGHTEN ALL BOLTS.**


 
 
STEP 19

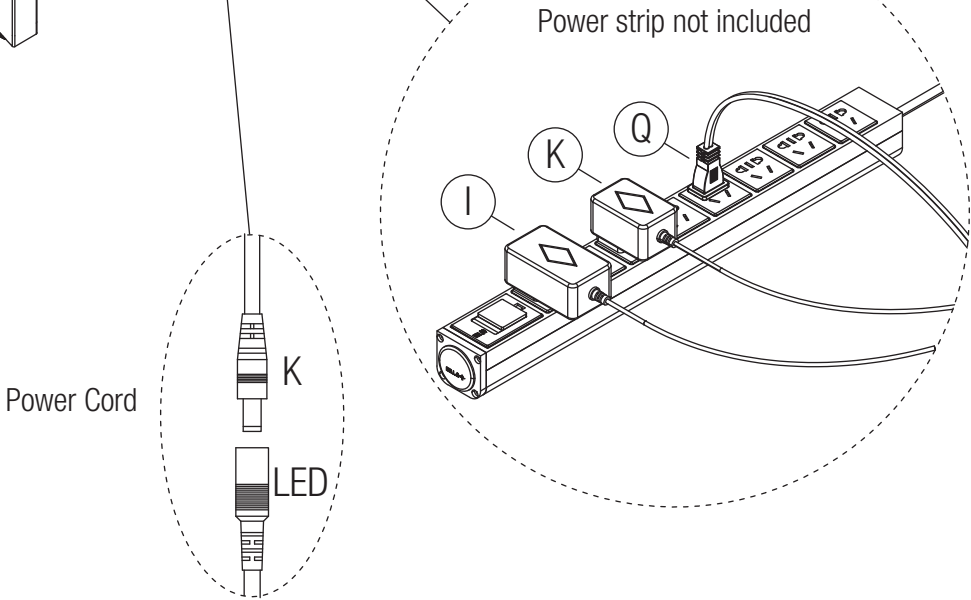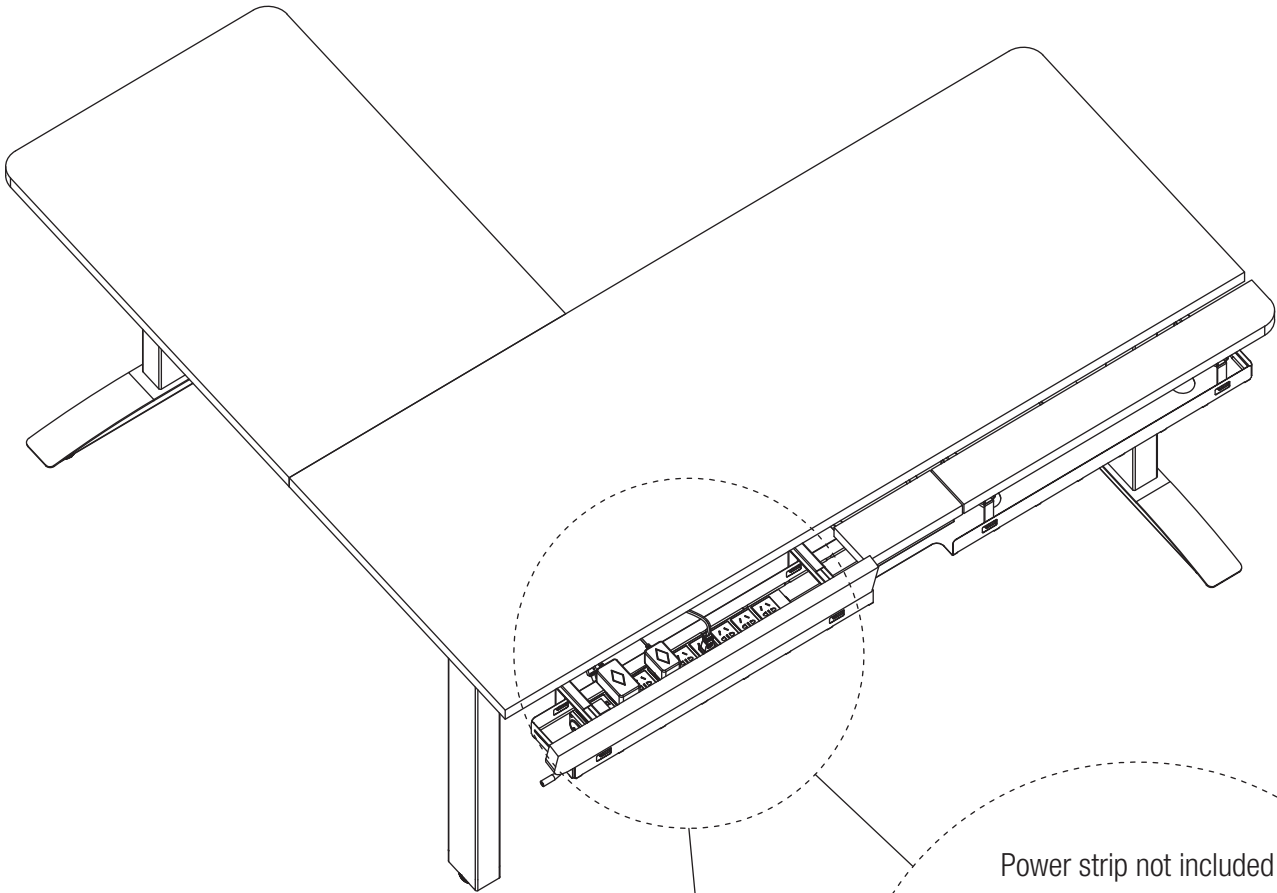



Connect Power Adapter (Q), LED Power Adapter (K), and USB Power Adapter (I) to power strip.



   STEP 18

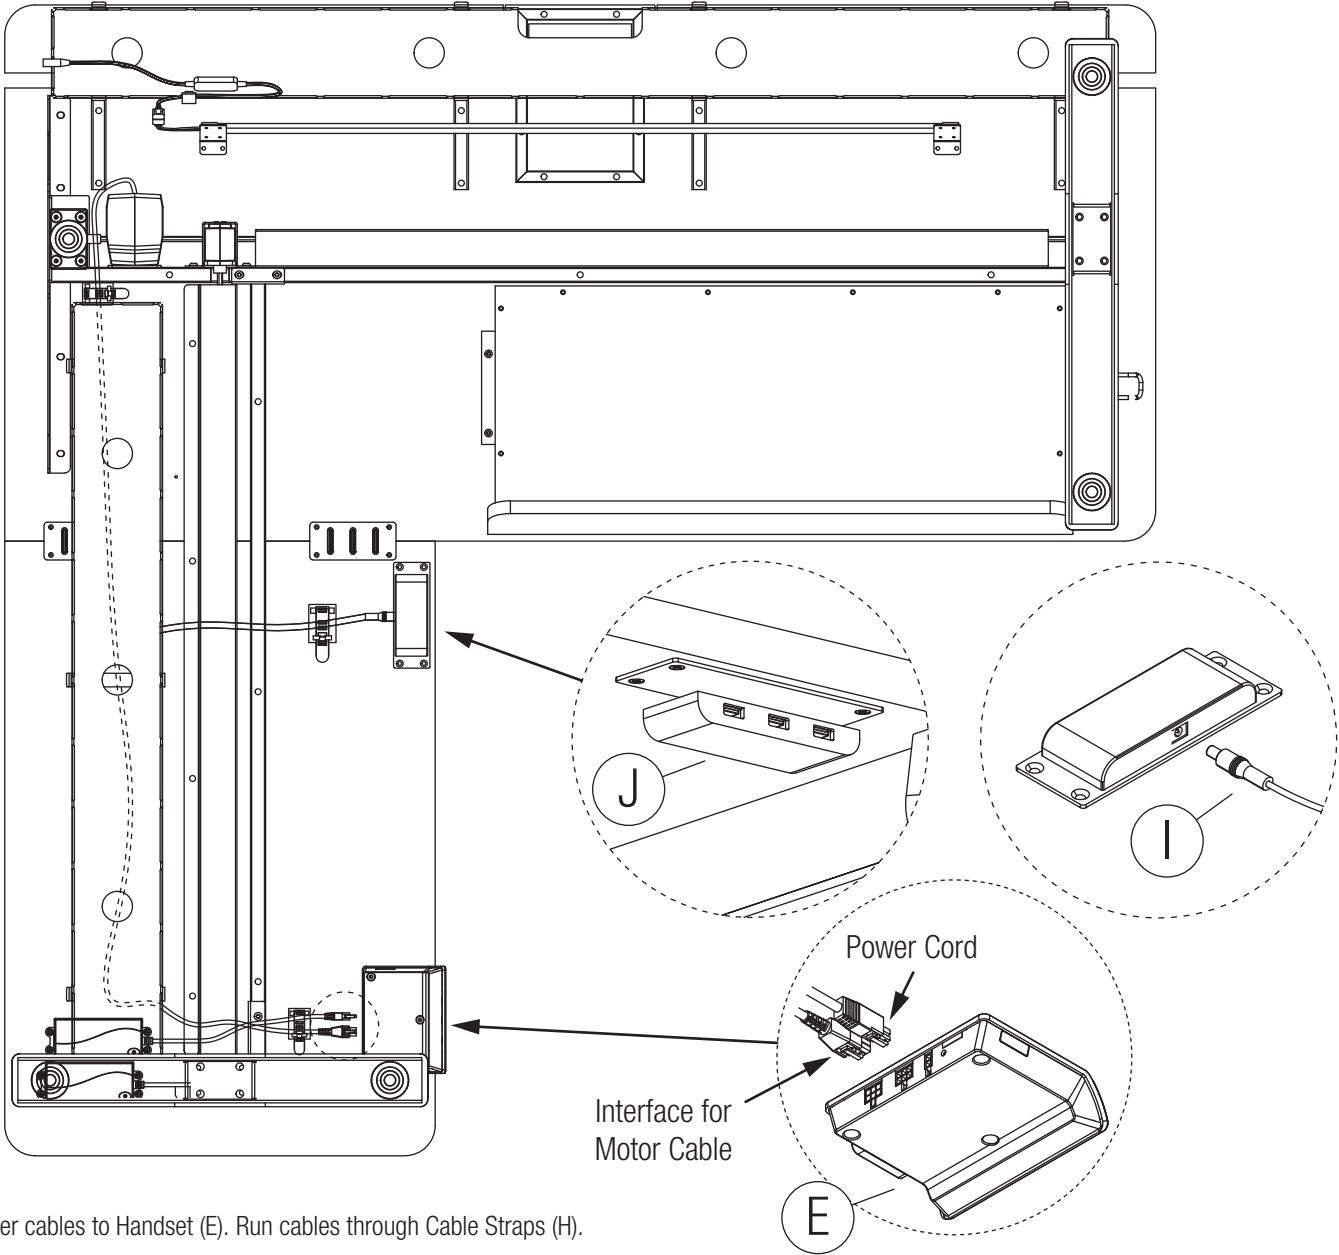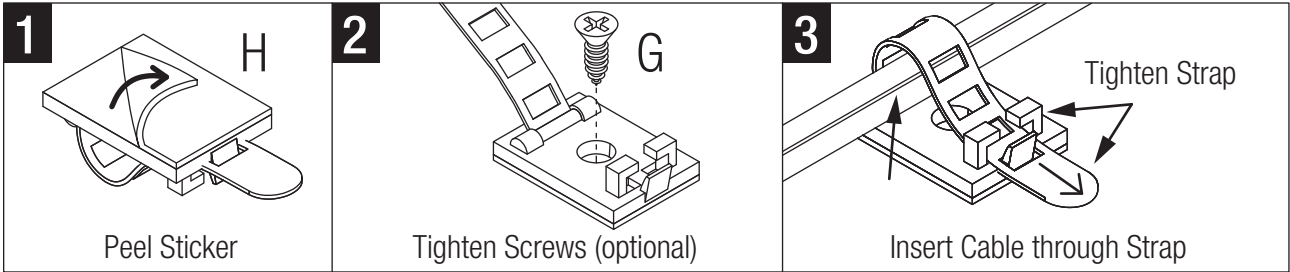



  STEP 9

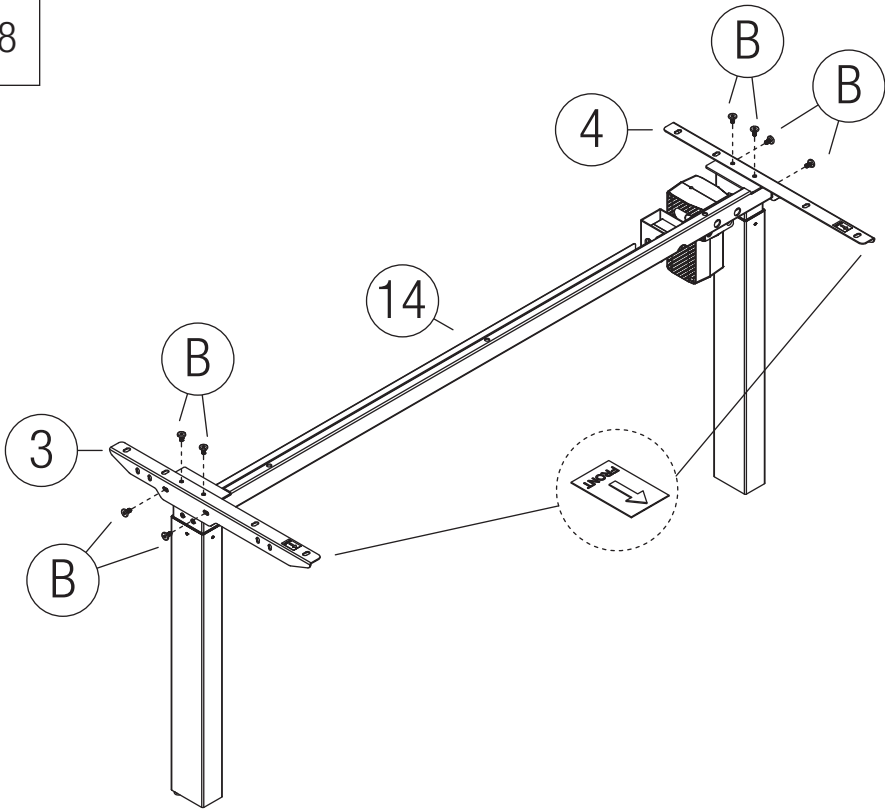



Attach Brackets (3 & 4) to Left Legs (14) using Allen Bolts (B). **FULLY TIGHTEN ALL BOLTS.**

  STEP 10

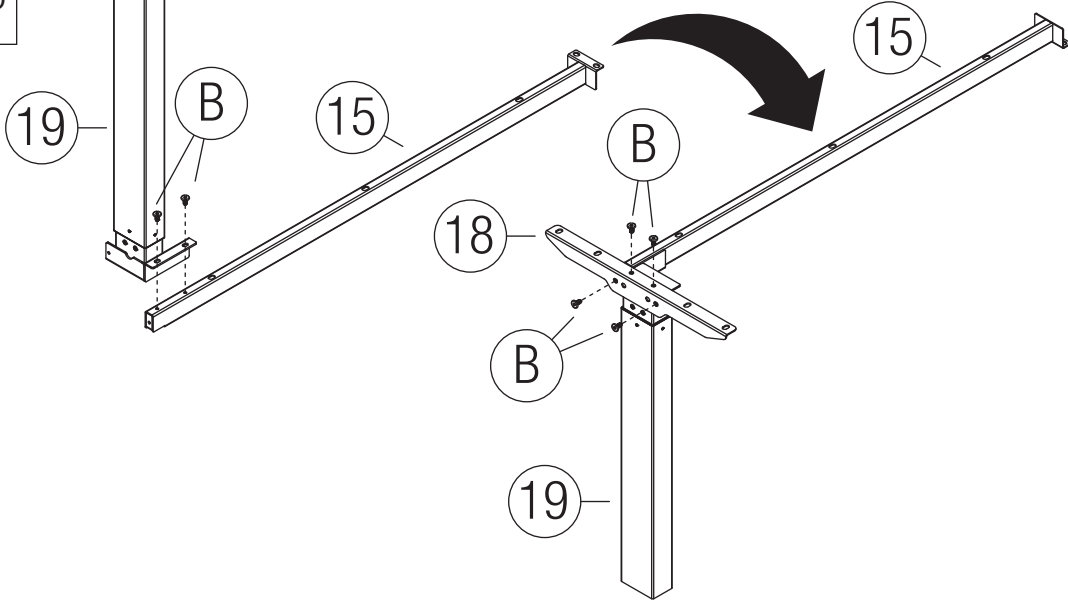



Attach Right Leg (19) to Leg Support (15) using Allen Bolts (B). Turn Leg Support over and attach Bracket (18) using Allen Bolts (B). **FULLY TIGHTEN ALL BOLTS.**

**STEP 11**

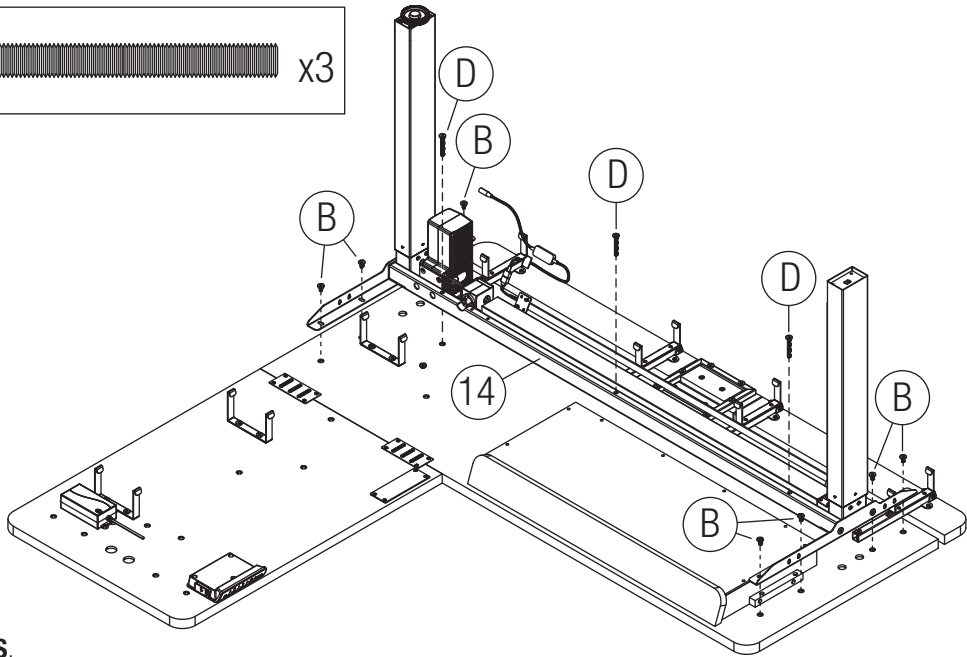  



Attach Left Legs (14) to Desktop using Allen Bolts (B & D). **FULLY TIGHTEN ALL BOLTS.**

**STEP 12**

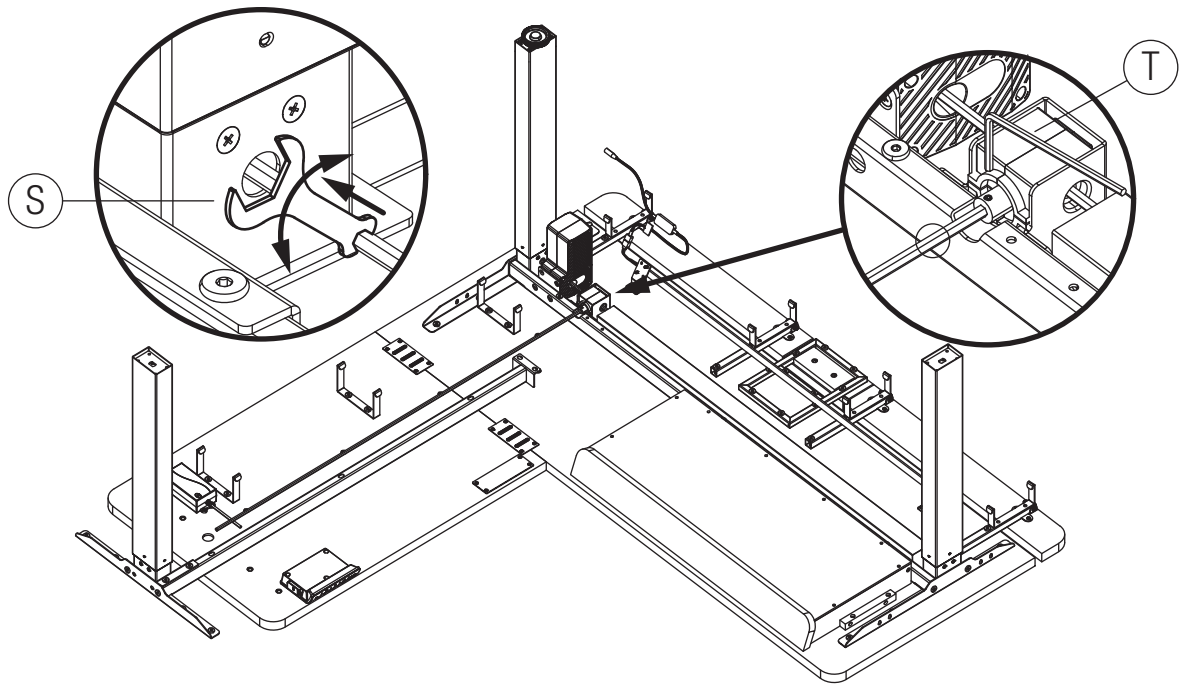  


Fine-tune with the aid of a Hex Wrench (S) if necessary to align the Hexagonal Shaft to the hole. Do not make large adjustments. If the correction is excessive, set the metal foot to the lowest possible level and retune.

**STEP 17**

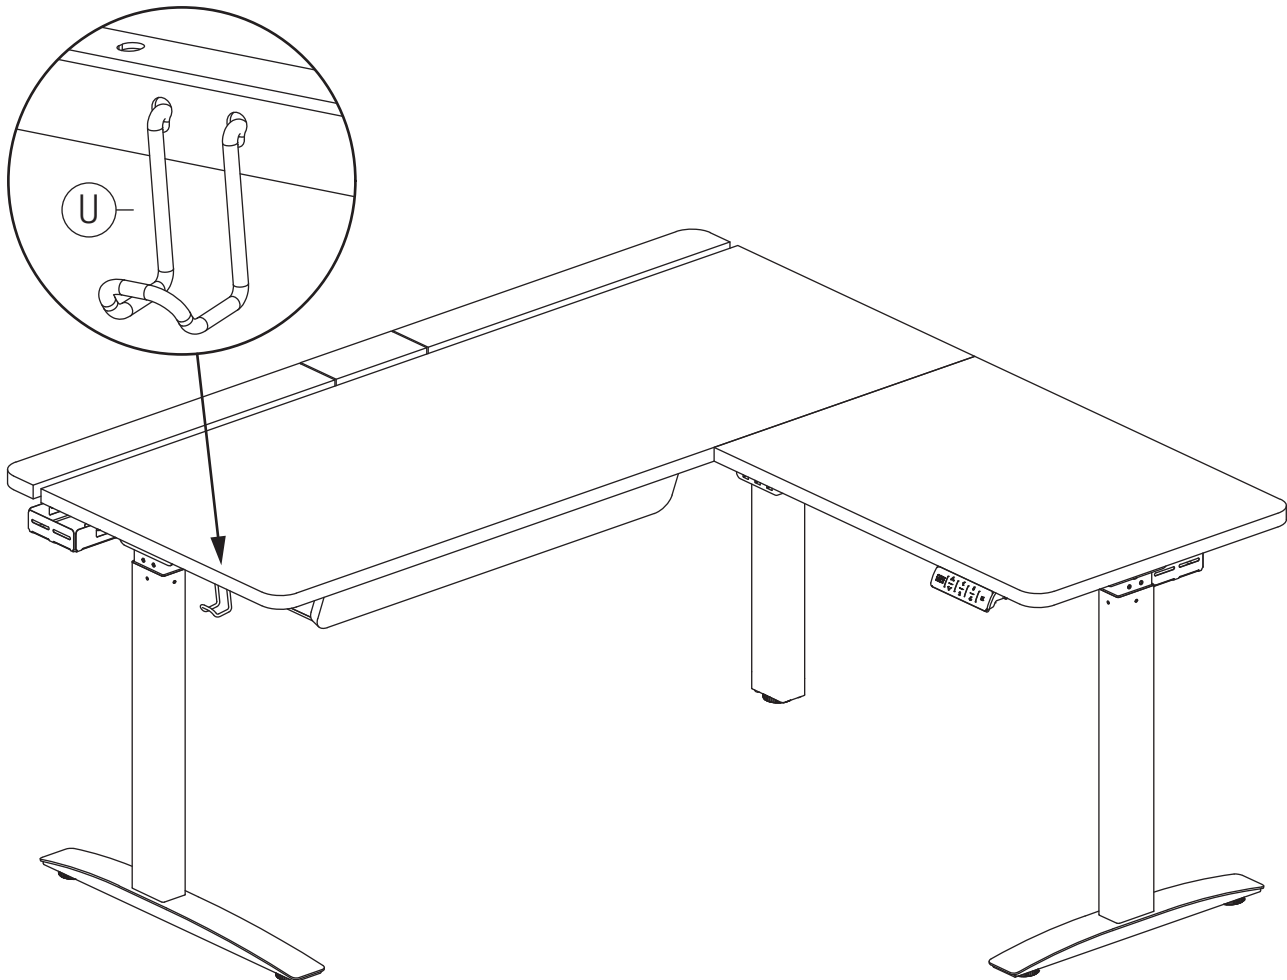  


 Install Hook (U) and adjust Floor Levelers as needed.

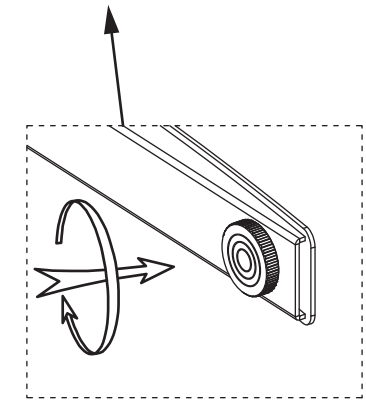



Adjust Floor Levelers as needed.

**STEP 16**

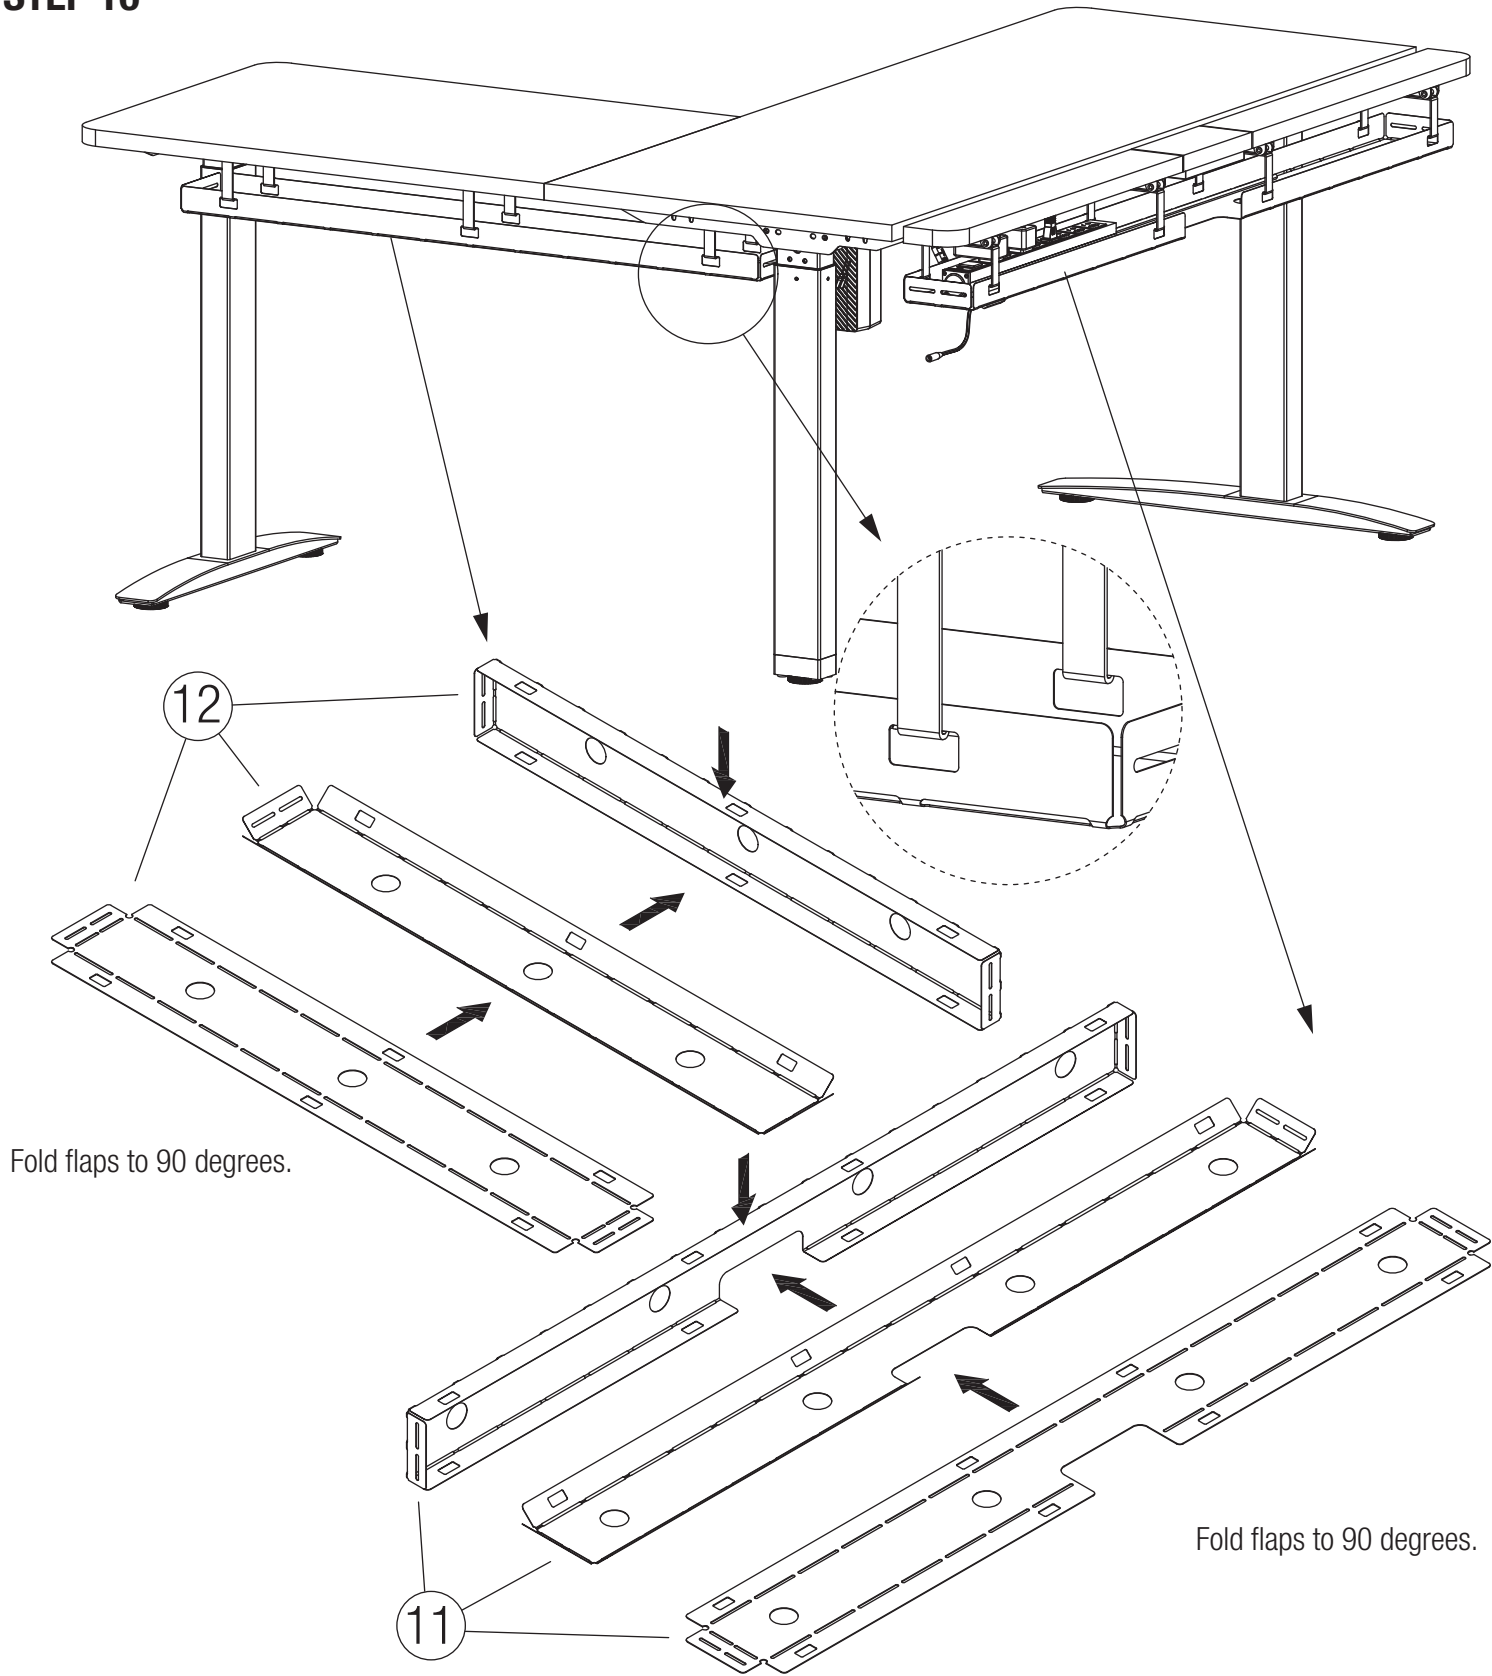 

Fold flaps of Cable Organizers (11 & 12) to 90 degrees along punched lines and attach to U-Brackets.



**STEP 13**

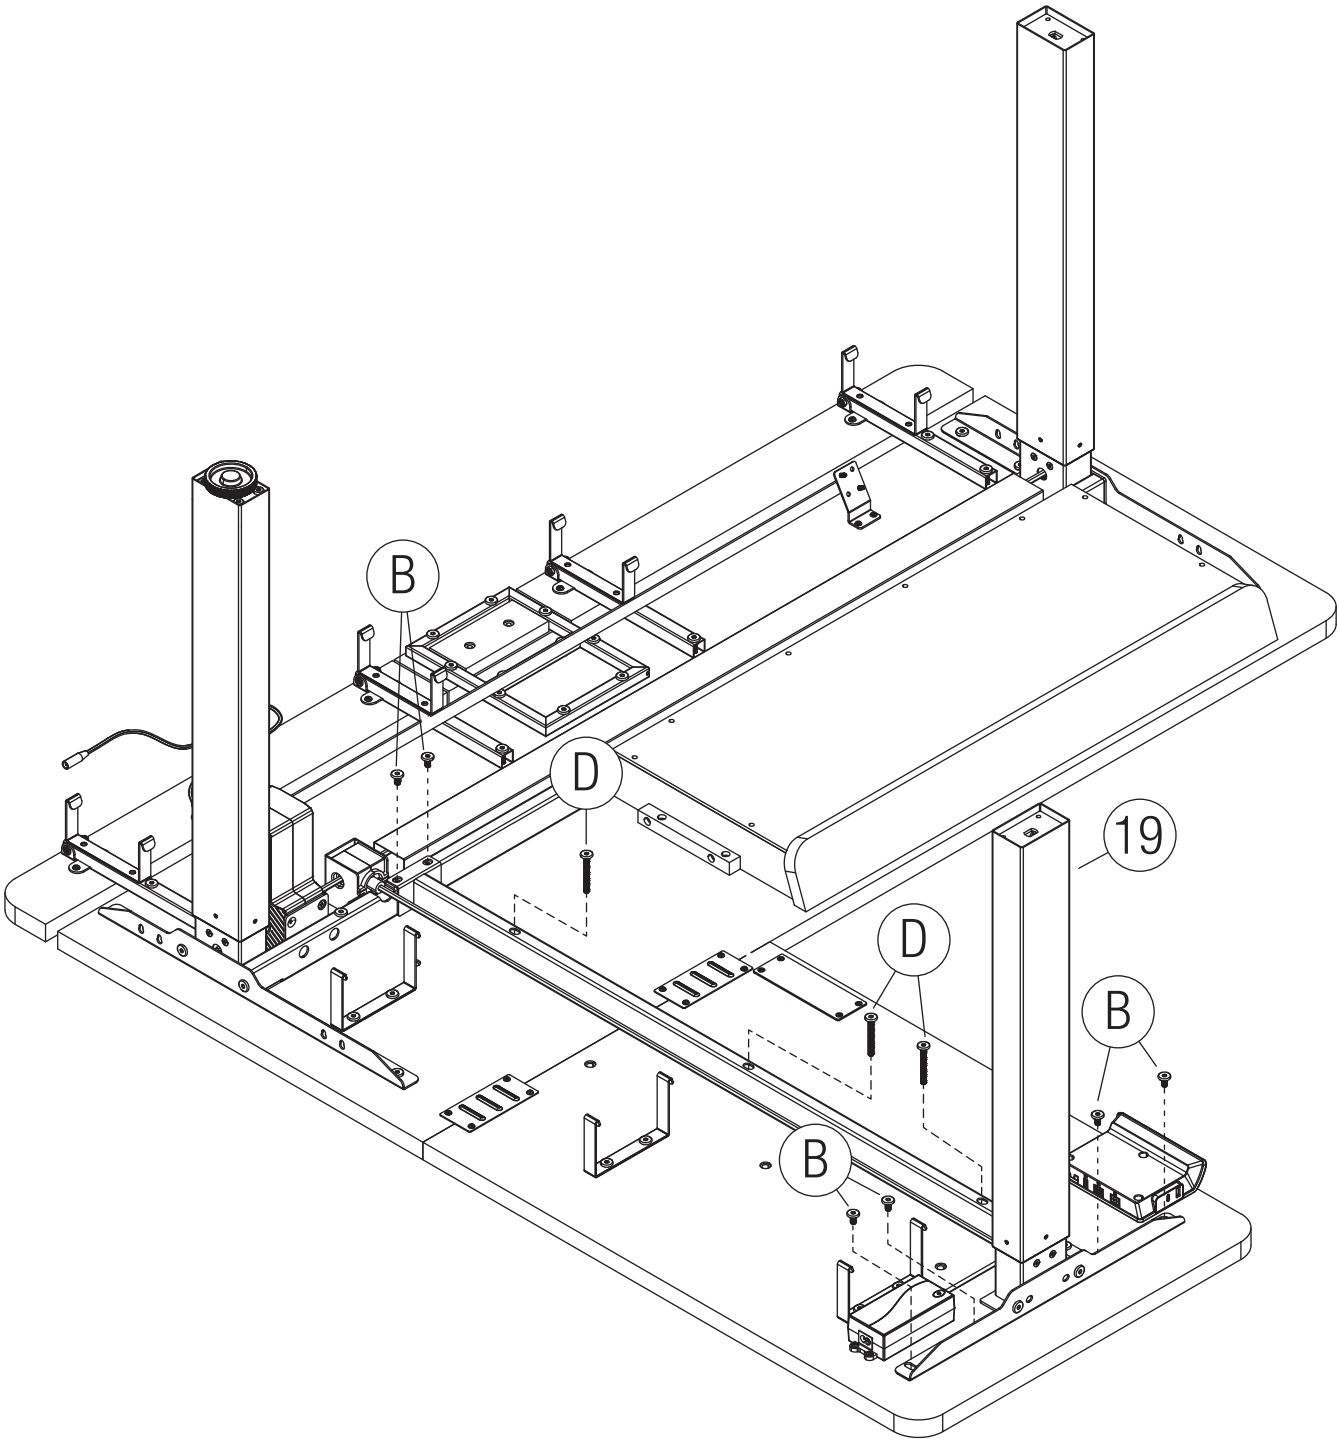  

Attach Right Leg (19) to Desktops using Allen Bolts (B & D). **FULLY TIGHTEN ALL BOLTS.**

KIL55LS  
**ELECTRIC LIFT L-SHAPED GAMING DESK**  
ASSEMBLY INSTRUCTIONS



**STEP 14**

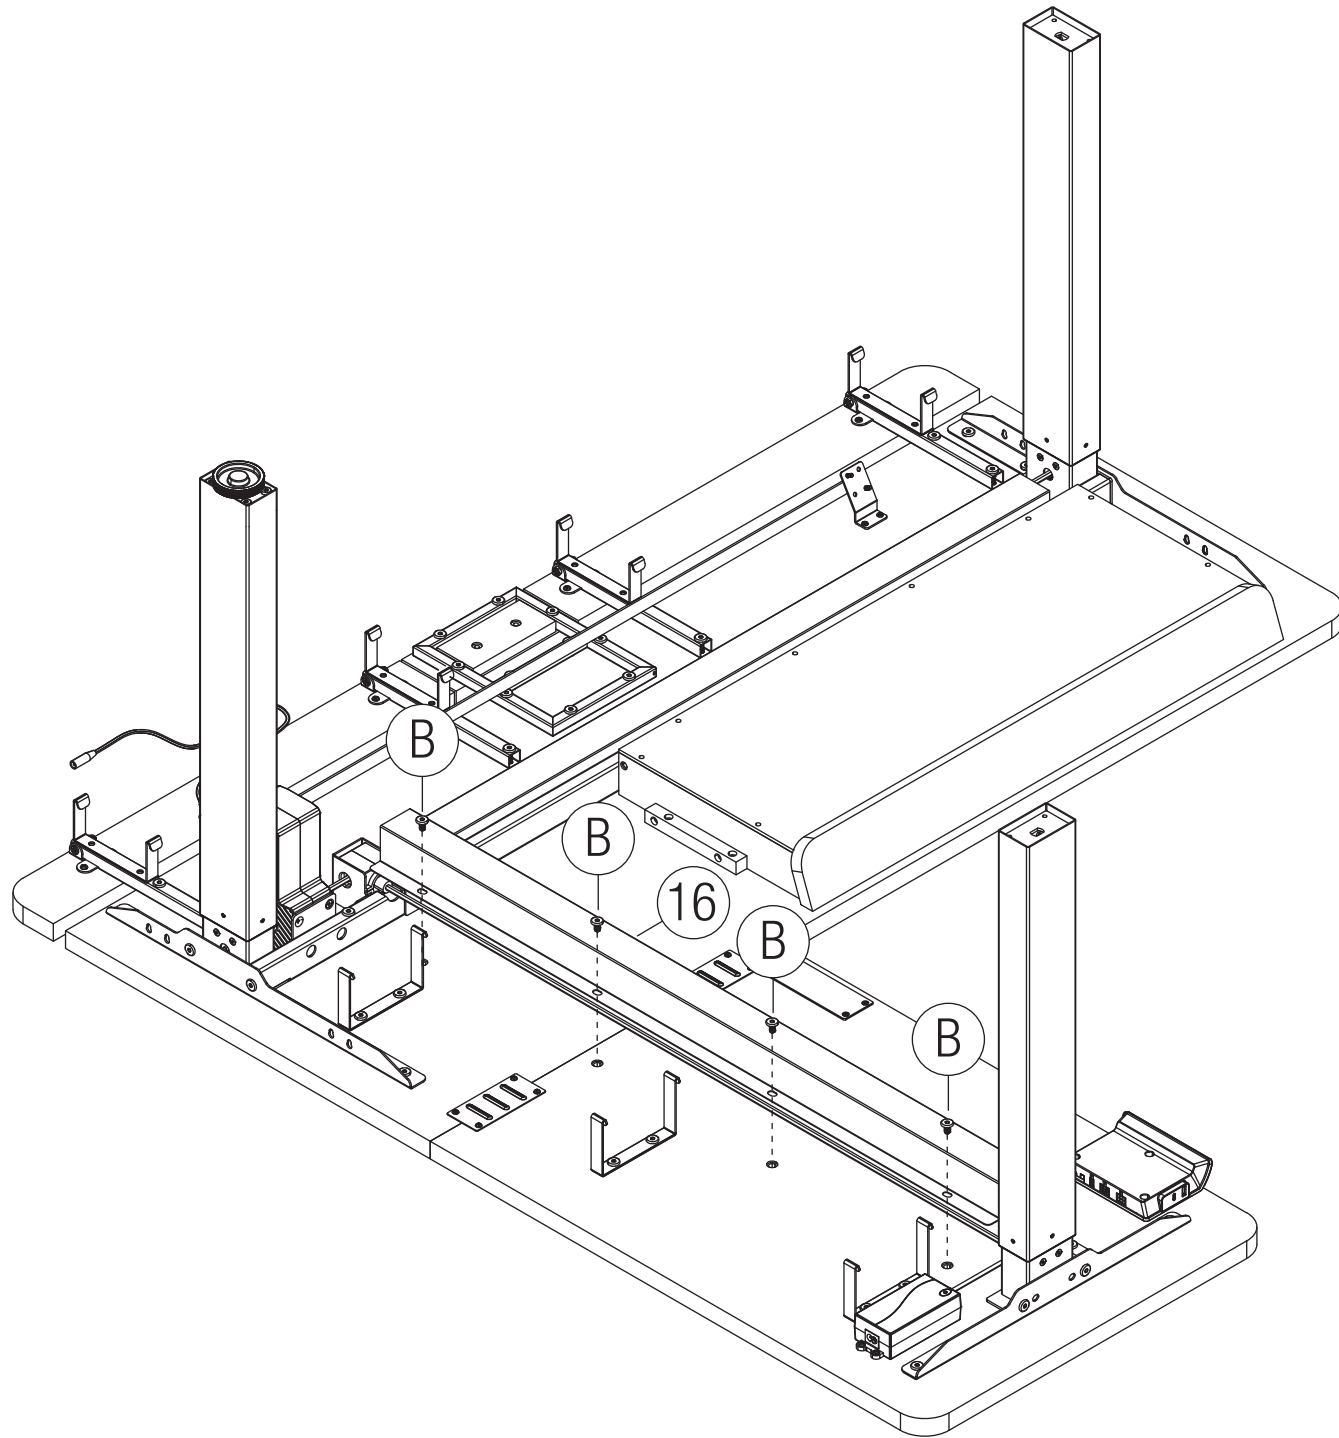  

Attach Shaft Cover (16) to Desktops using Allen Bolts (B). **FULLY TIGHTEN ALL BOLTS.**

KIL55LS  
**ELECTRIC LIFT L-SHAPED GAMING DESK**  
ASSEMBLY INSTRUCTIONS

**STEP 15**

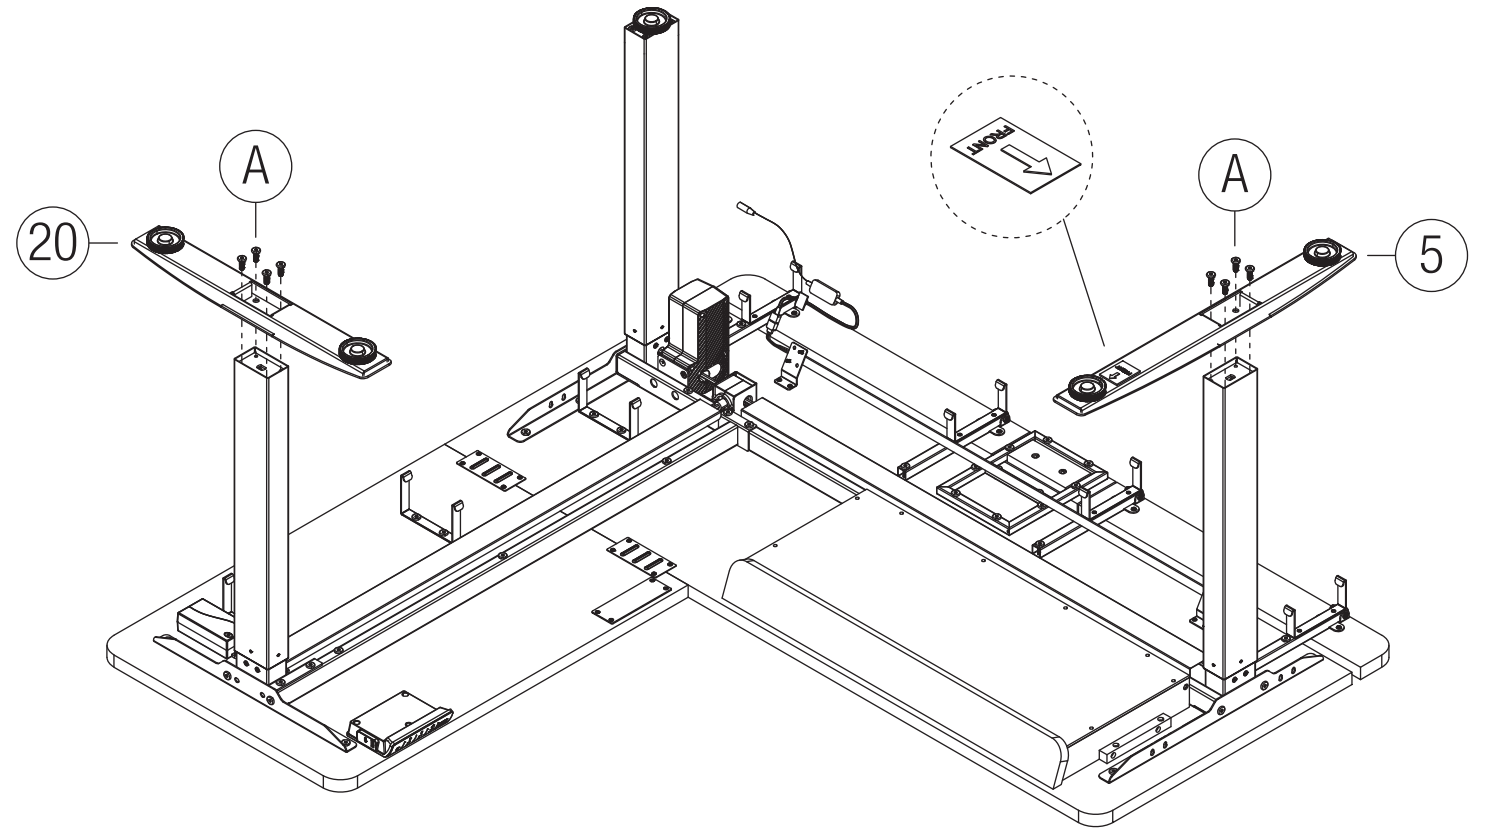  

Attach Left and Right Feet (5 & 20) using Allen Bolts (A). **FULLY TIGHTEN ALL BOLTS.**