
### ASSEMBLY INSTRUCTION 24INCH BATH VANTINY (COMBO)

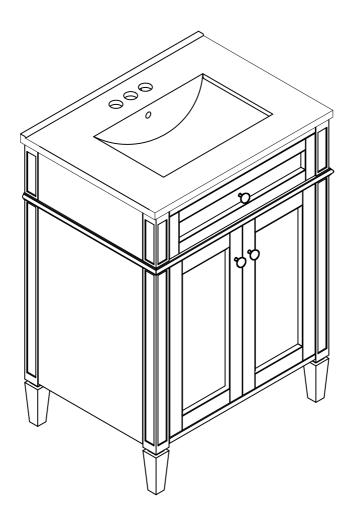

Thank you for purchasing this quality product. Be sure to check all pac material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardw.

Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"



\*Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!

\*Please assemble on a clean soft sunrface to avoid damage.







Tools Required





**IMPORTANT:** 

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

## PLEASE DO NOT RETURN TO STORE



# Please do not return this product to the retailer!! We are able to assist you in ANY way

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

- 1. Note: This is not a clothing storage cabinet and it is not recommended to use it as a clothing storage cabinet.
- 2. All cabinets come with TRD, stainless steel or our "L-Bracket "when shipped.


### **Before Installation**


### Important – Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will
  make the assembly easier, and will help eliminate damage to the product or injury to persons during
  assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.


### **Cam Lock Assembly Instructions**

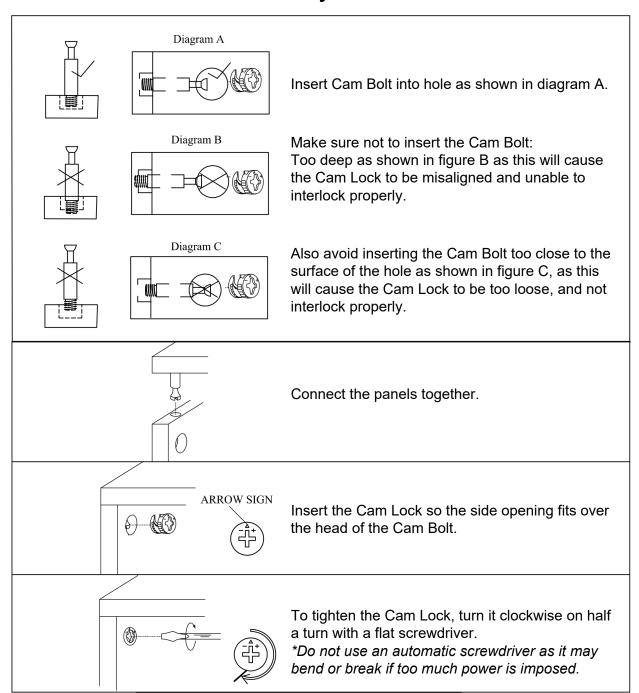

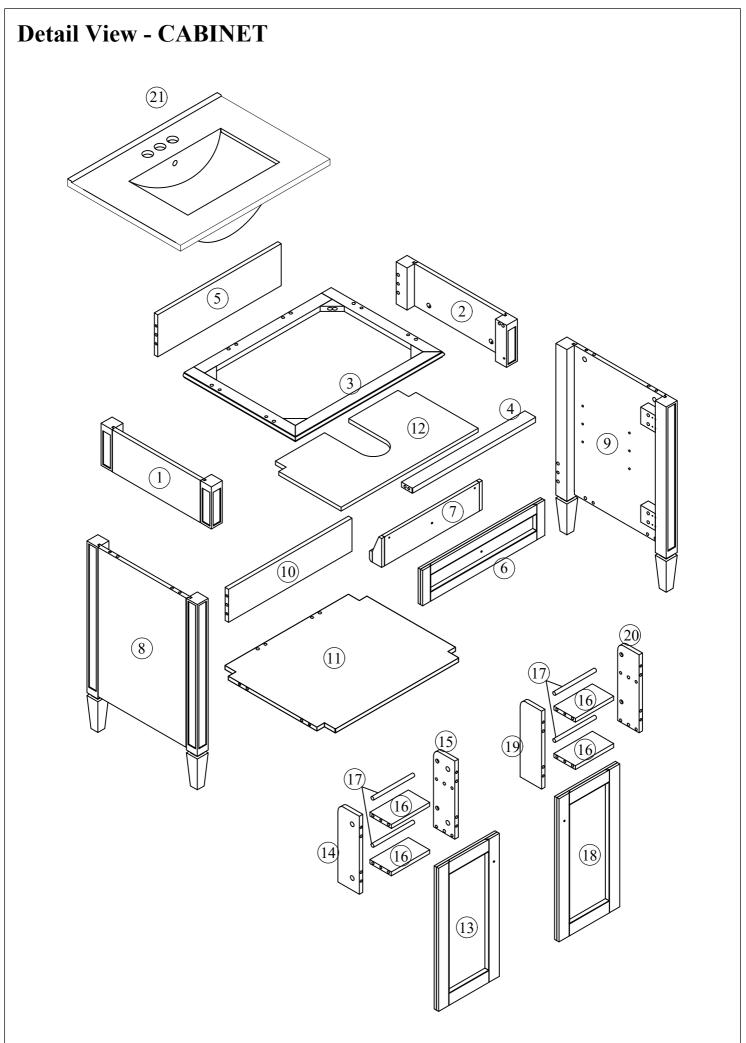


Identifying the Hardware -Indentify the hardware using the illustrations below.

### Part List-N710P293309

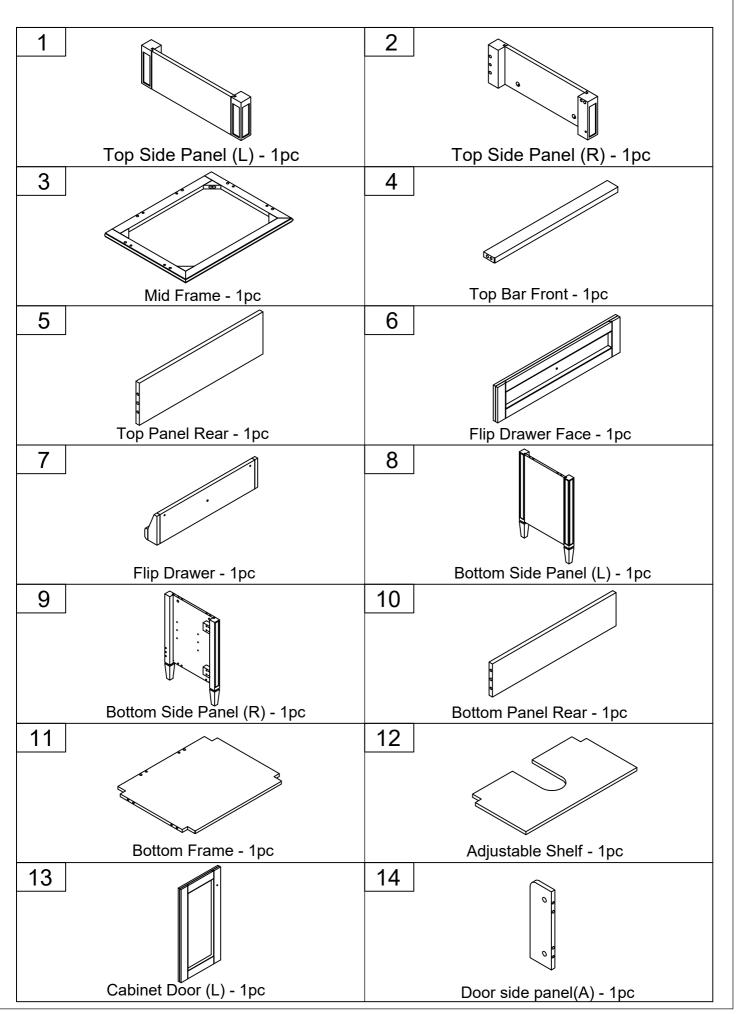


### Part List-N710P293309

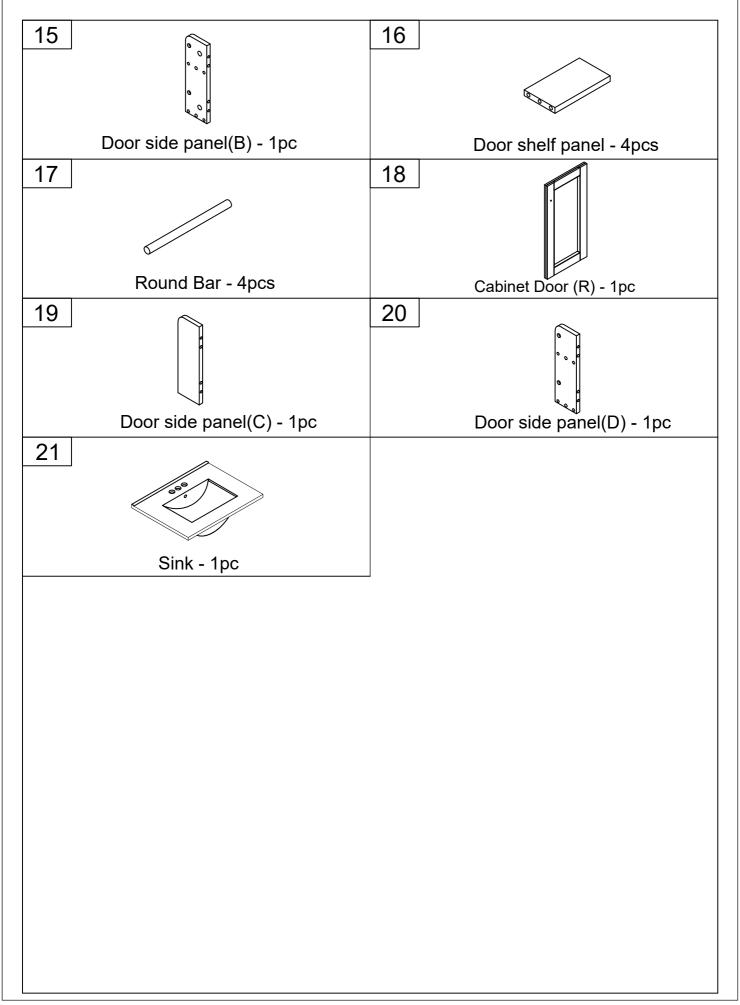


# Hardware List-N710P293309

| В  | C (Summing)  |
|--|--|
| ø14.5x12mm                                       | ø8xø4x19mm   |
| Three in one lock - 42pcs                        | Round head screw - 2pcs  |
| E  | F  |
|  |  |
| ø5/32"x25mm                                      | ø5/32"x28mm  |
| Handle screw - 2pcs                              | Handle screw - 1pc   |
| H  |  |
| 41x28x15mm                                       | ø6xø3x12mm   |
| Rotary Hinge (2pcs)                              | Flat head screw (8pcs)   |
| <b>K</b> ⊕ → → → → → → → → → → → → → → → → → → → | L  |
| Flat head screw - 24pcs                          | Laminate pad - 4pcs  |
| Anti fall hardware (2sets)                       |  |
|  | ø14.5x12mm  Three in one lock - 42pcs  E  ø5/32"x25mm  Handle screw - 2pcs  H  41x28x15mm  Rotary Hinge (2pcs)  K  ø7xø3.5x15mm  Flat head screw - 24pcs |

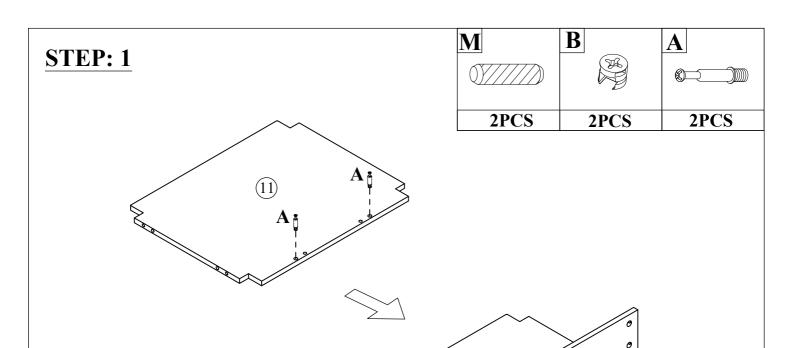

 
(11)








(10)




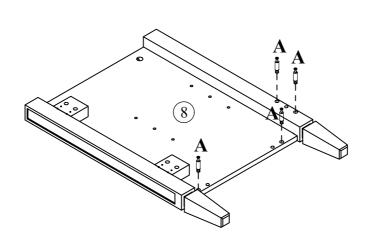


 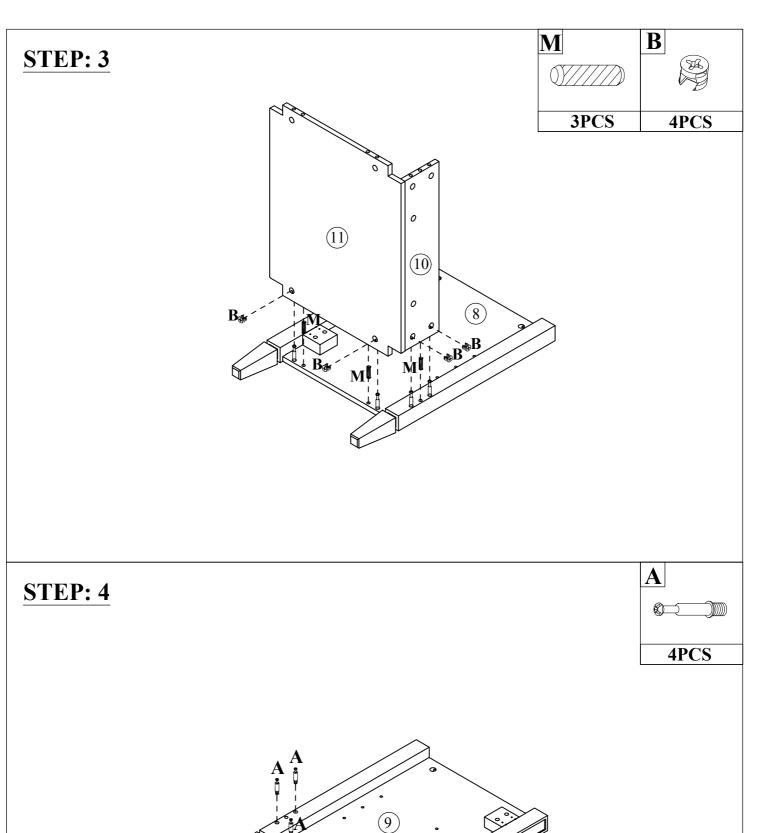


 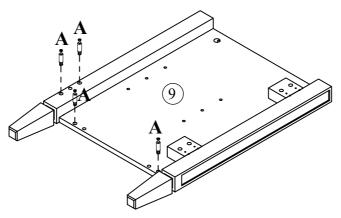


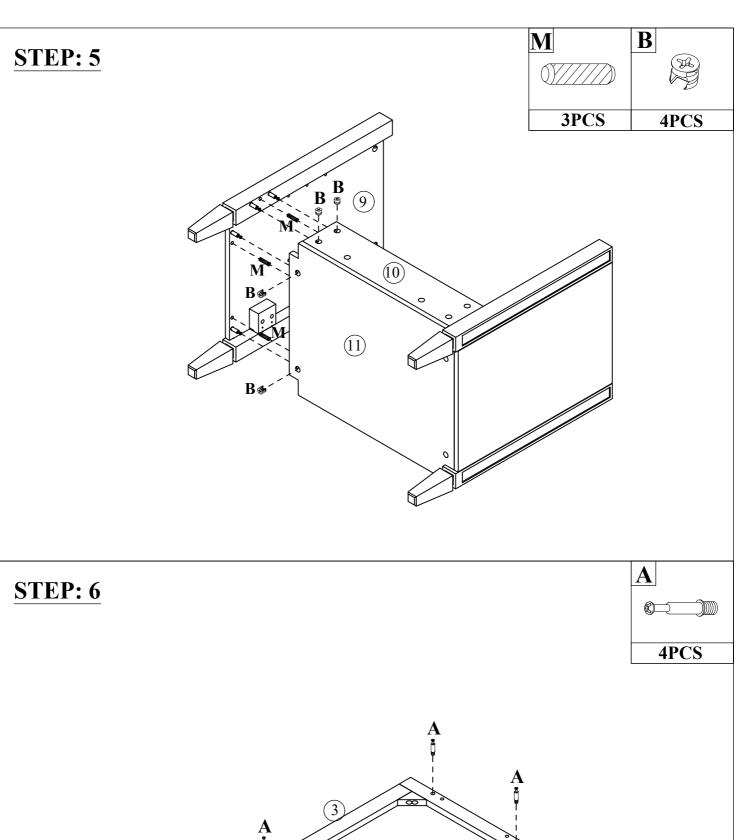


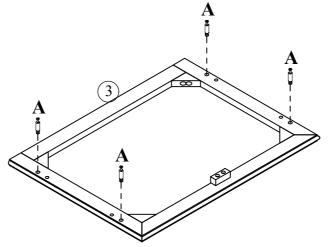


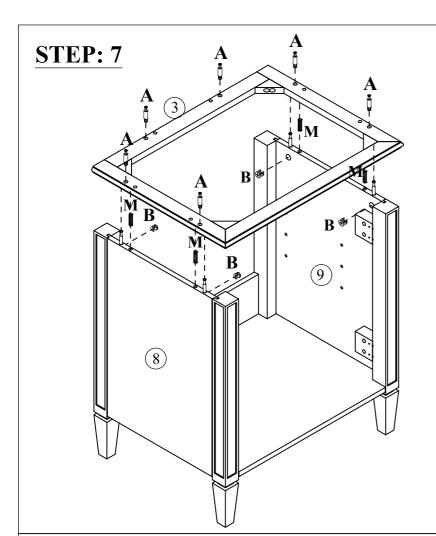








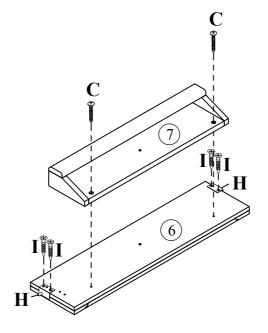


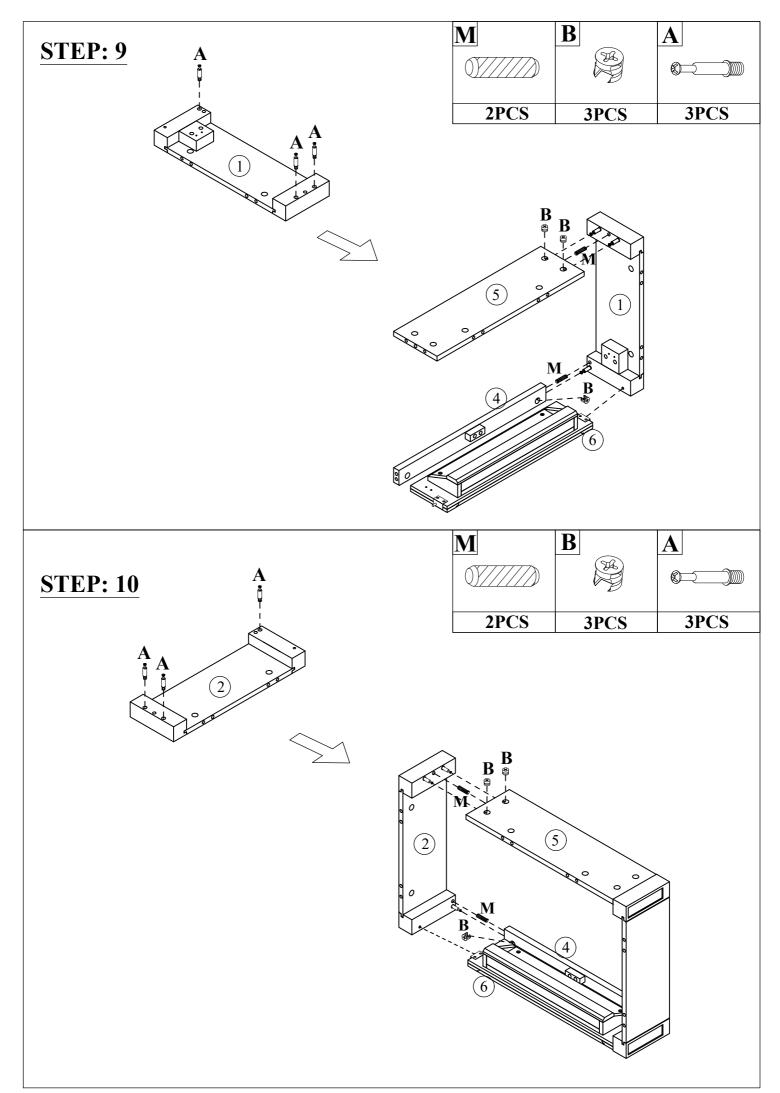


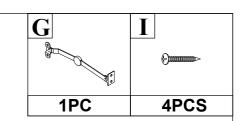


 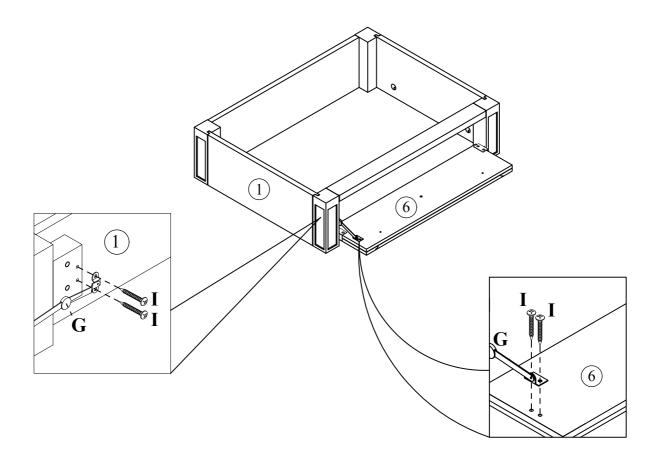


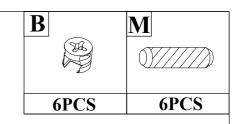


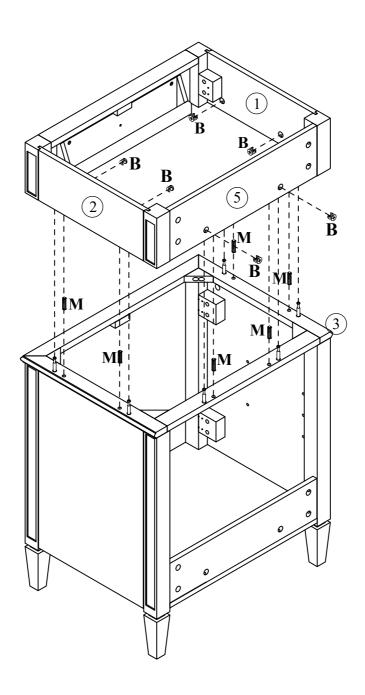


 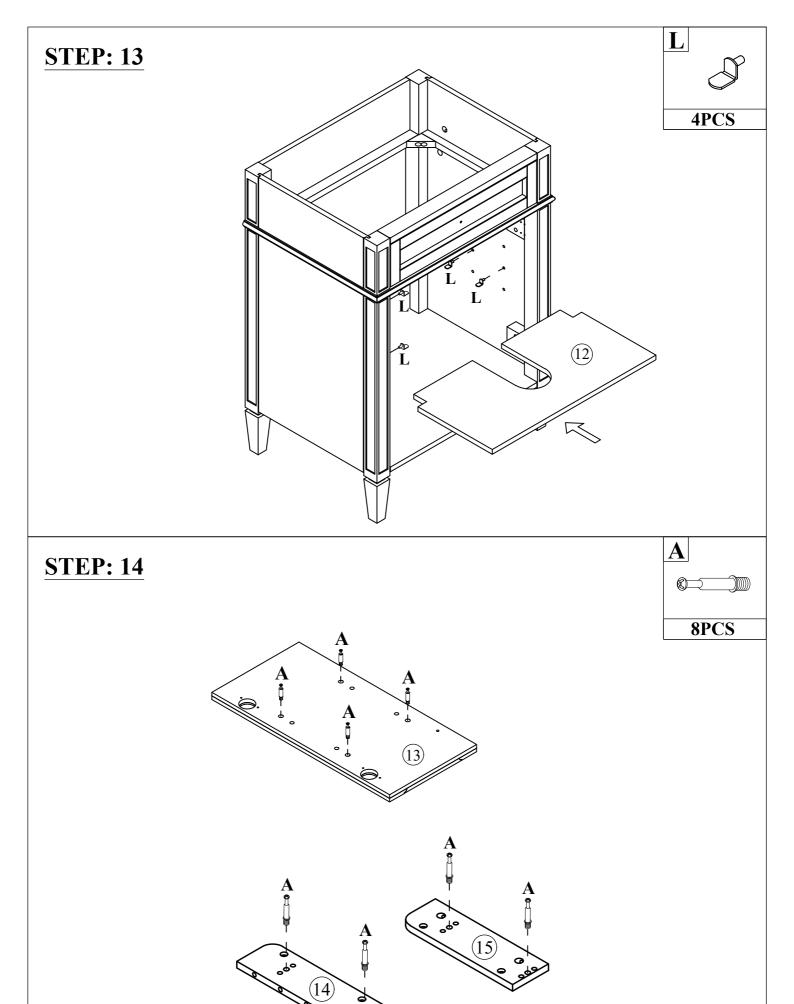


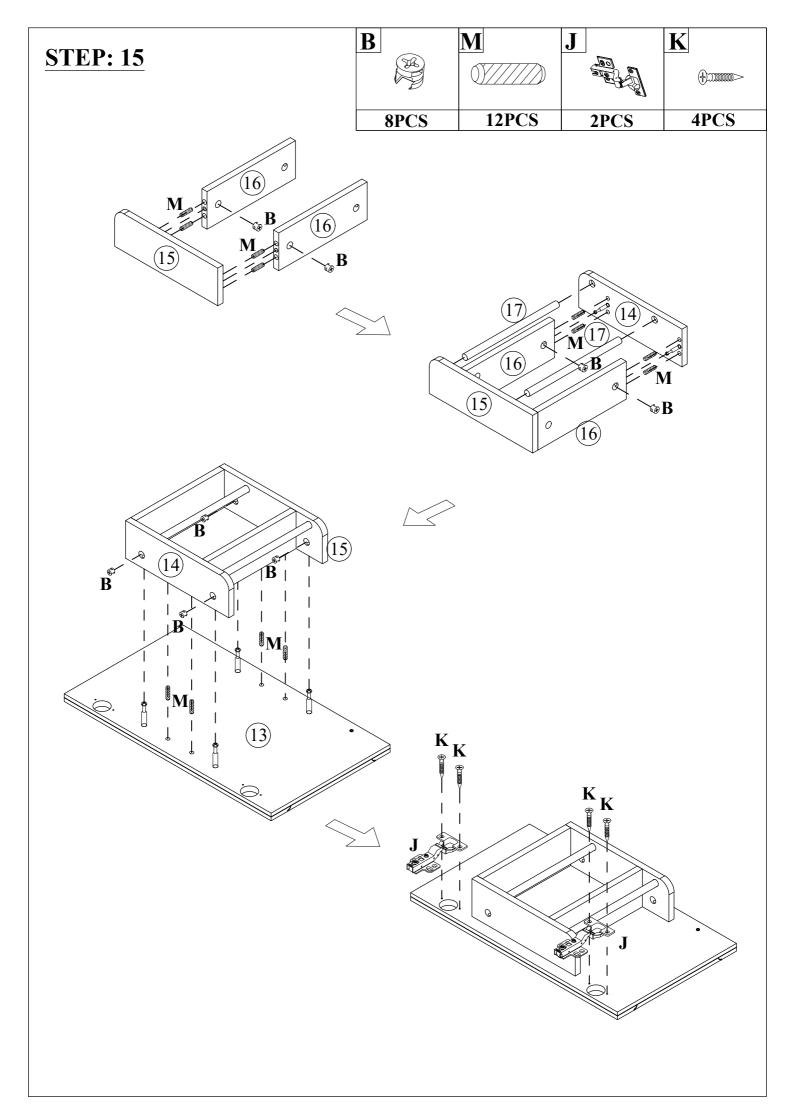




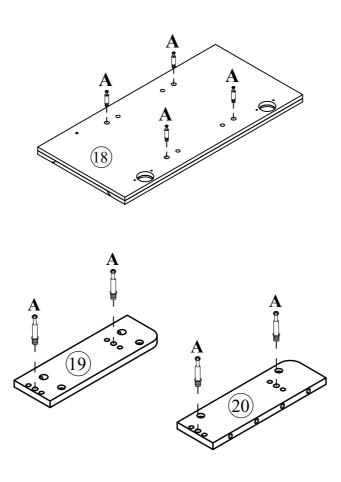

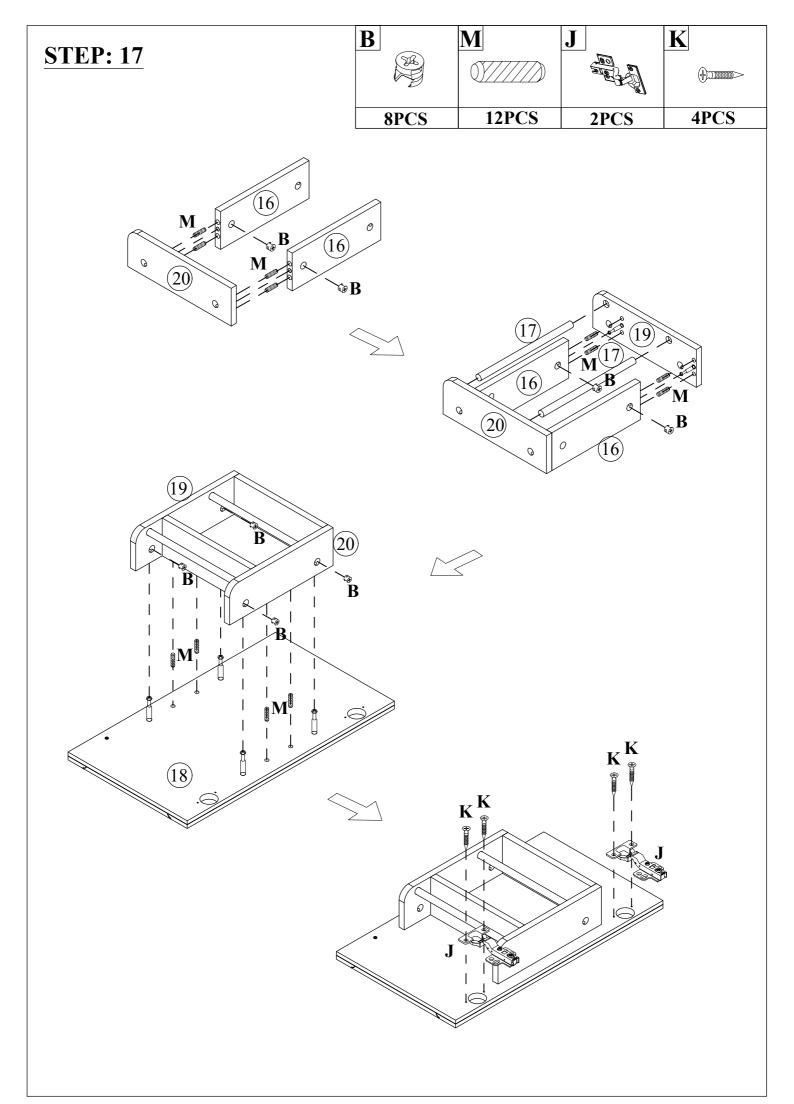



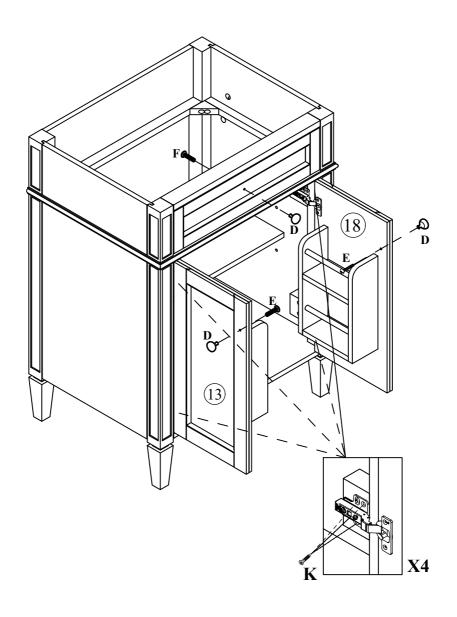



Use the screws to adjust up or down


Use the screws to permanent

Use the screws to adjust in or out

# STEP: 19 Wall STEP: 19

 


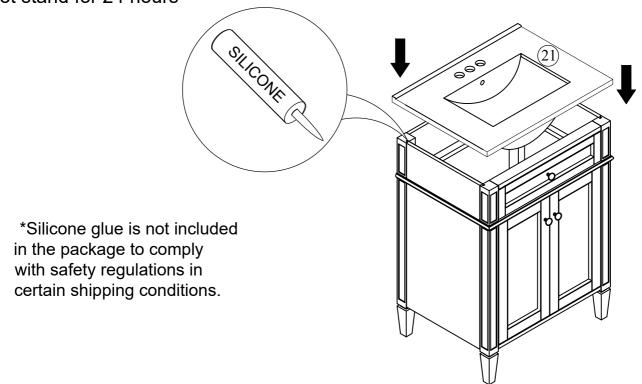

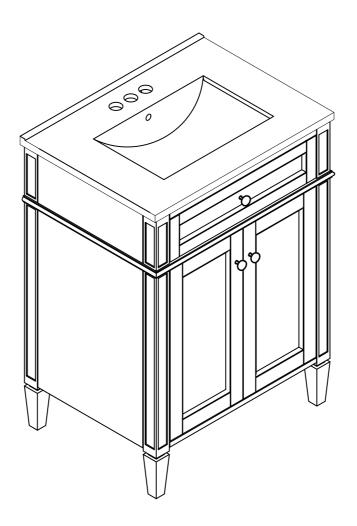




### HINGE ADJUSTMENTS

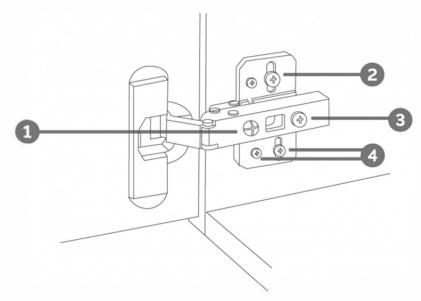

### 1 Sideways / Tilt adjustment


Turn the screw clockwise to move the door further away from the side of the cabinet anticlockwise to move the door closer to the side of the cabinet

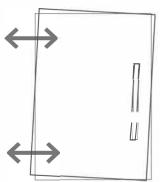

### 2 4 Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up anticlockwise to move the door down

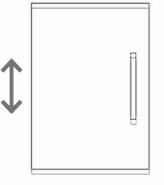

### Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw

clockwise to decrease the gap between the door and the cabinet

anticlockwise to increase the gap between the door and the cabinet

