

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

603431PPP POWER RECLINING SOFA

REVISION 0: 08/22/2025 PAGE 1 OF 5 COASTERFURNITURE.COM

ITEM:603431PPP

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



WARNING!


- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishment.




ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

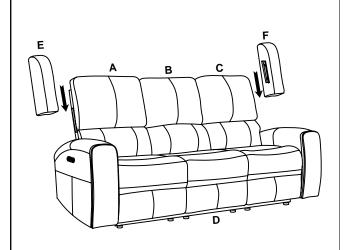

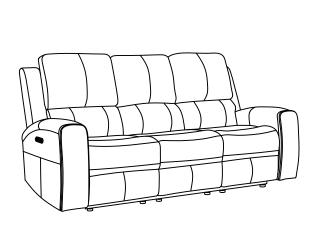

A LEFT BACK

1 PC

B MIDDLE BACK

1 PC

C RIGHT BACK

D BASE

1 PC

E LEFT EAR

1 PC

F RIGHT EAR

m))


1 PC

G PLUG-IN POWER SUPPLY

1 PC

COASTERFURNITURE.COM

PAGE 2 OF 5

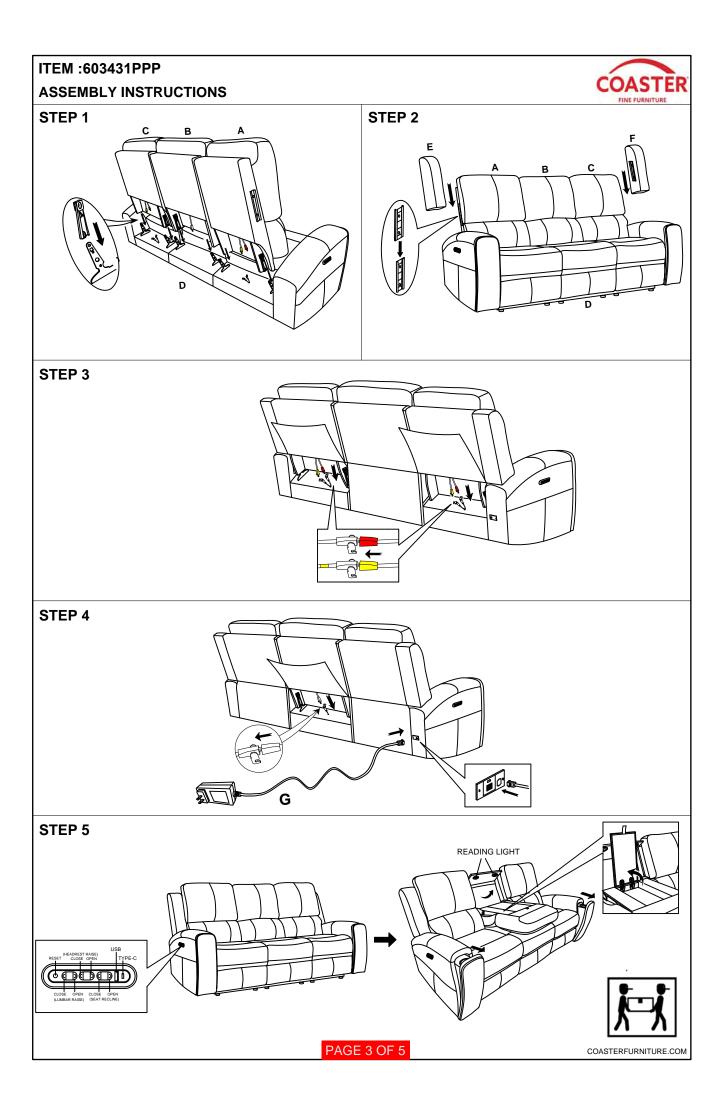

ITEM:603431PPP


ASSEMBLY INSTRUCTIONS



Please follow below steps to install the 9V batteries when there is no power to operate the motion sofa.(Any model of 9V battery is applicable)


STEP 1

Open the marked battery door on the backup battery box.

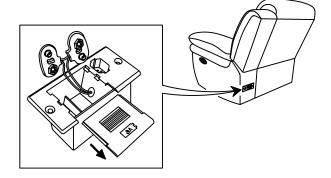


STEP 2

Install two 9V batteries in the backup battery box.(batteries are not included)

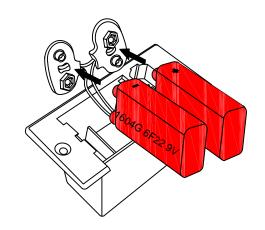

STEP 3


Push the batteries in.

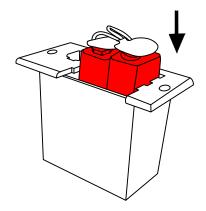

STEP 4

Close the box door.

Notice: Please don't keep the battery in the box when the power motion sofa is under daily use with power supply.

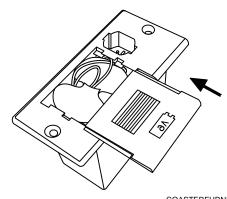

PAGE 4 OF 5

ITEM:603431PPP **ASSEMBLY INSTRUCTIONS** 27.5" 42. 75" 69. 25" 5. 19" 25. 40.5" 86" 67. 25" 7. 5" (THE D 29. 25" 5. 25.

PAGE 5 OF 5

COASTERFURNITURE.COM



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

603432PPP POWER RECLINING LOVESEAT

REVISION 0: 08/22/2025 PAGE 1 OF 5 COASTERFURNITURE.COM

ITEM:603432PPP

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



WARNING!


- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishment.




ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

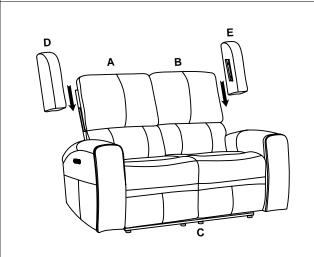

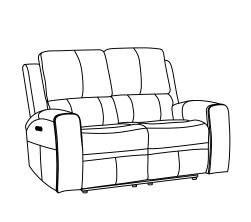

A LEFT BACK

1 PC

B RIGHT BACK

1 PC

C BASE

1 PC

D LEFT EAR

E RIGHT EAR

F PLUG-IN POWER SUPPLY

1 PC

1 PC

1 PC

ITEM:603432PPP **ASSEMBLY INSTRUCTIONS** STEP 1 STEP 2 FRONT С STEP 3 STEP 4 STEP 5 PAGE 3 OF 5 COASTERFURNITURE.COM

ITEM:603432PPP


ASSEMBLY INSTRUCTIONS



Please follow below steps to install the 9V batteries when there is no power to operate the motion sofa.(Any model of 9V battery is applicable)


STEP 1

Open the marked battery door on the backup battery box.

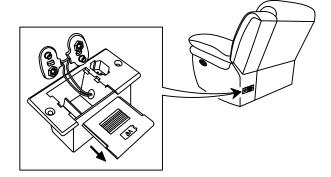


STEP 2

Install two 9V batteries in the backup battery box.(batteries are not included)

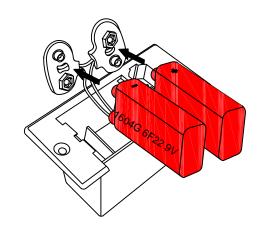

STEP 3


Push the batteries in.

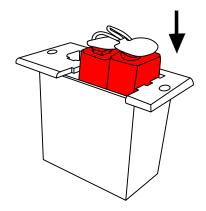

STEP 4

Close the box door.

Notice: Please don't keep the battery in the box when the power motion sofa is under daily use with power supply.

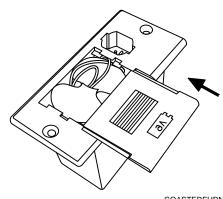

PAGE 4 OF 5

ITEM:603432PPP

ASSEMBLY INSTRUCTIONS



