



ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

603431PPP
POWER RECLINING SOFA

ITEM :603431PPP

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



WARNING!

 
 
- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishment.



ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

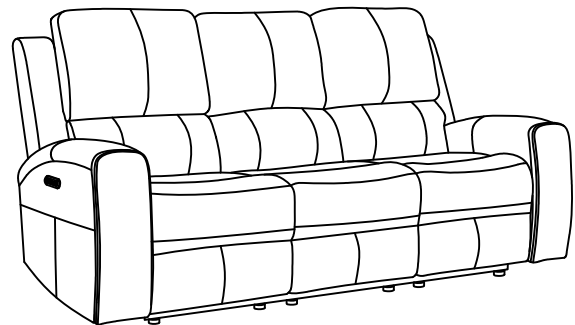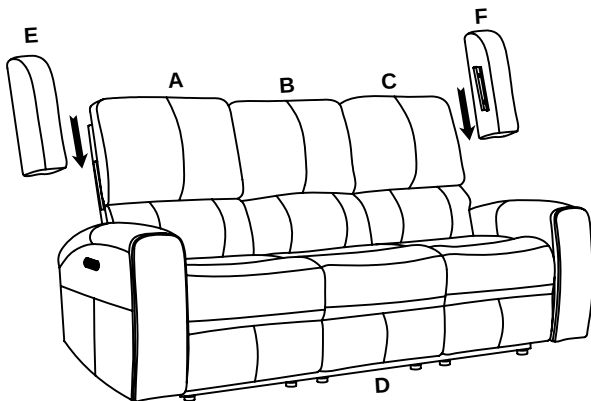

A LEFT BACK

B MIDDLE BACK

C RIGHT BACK

D BASE

E LEFT EAR

F RIGHT EAR

G PLUG-IN POWER SUPPLY



1 PC



1 PC



1 PC



1 PC



 
 
 
 
 
1 PC



1 PC




1 PC

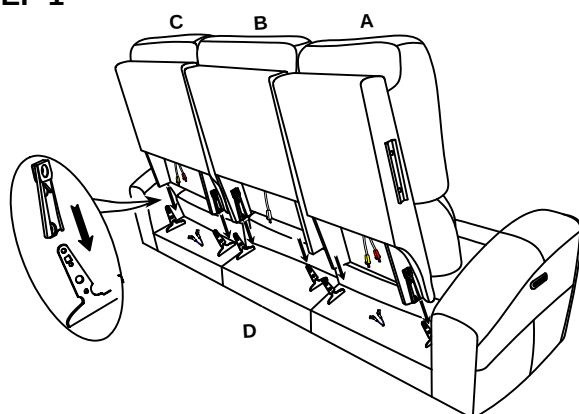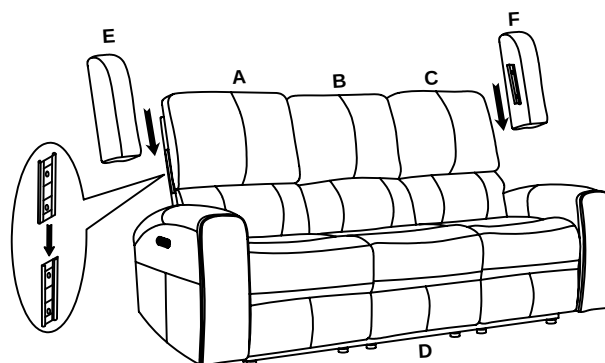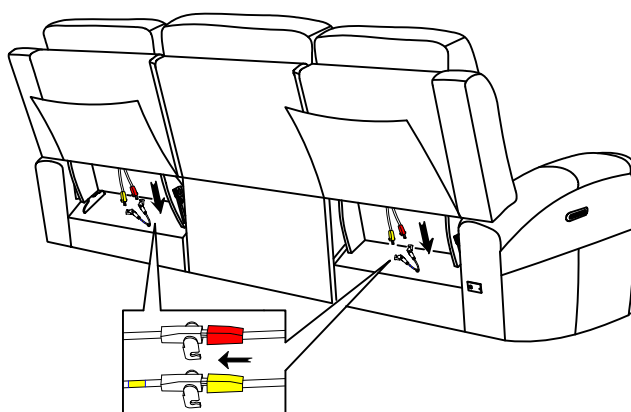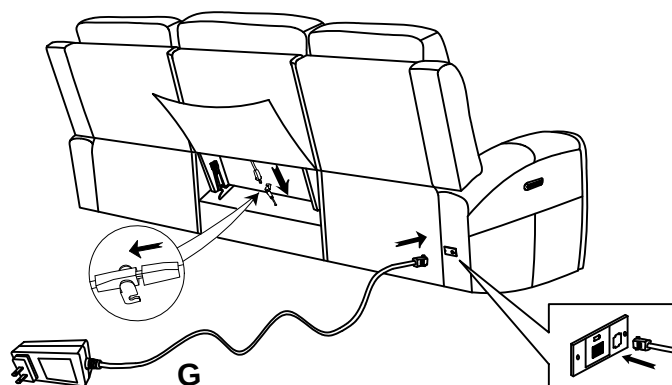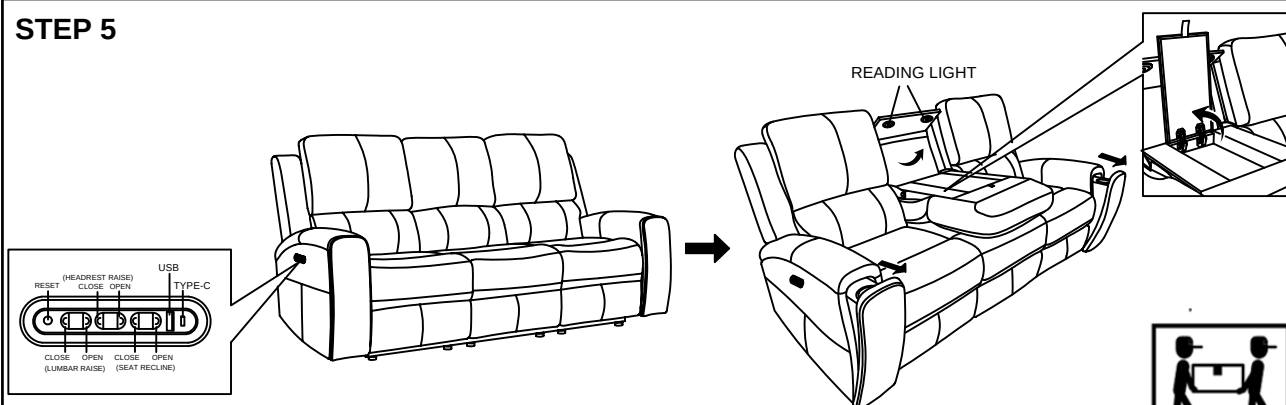STEP 1**STEP 2****STEP 3****STEP 4****STEP 5**

Please follow below steps to install the 9V batteries when there is no power to operate the motion sofa.(Any model of 9V battery is applicable)


STEP 1

 Open the marked battery door on the backup battery box.

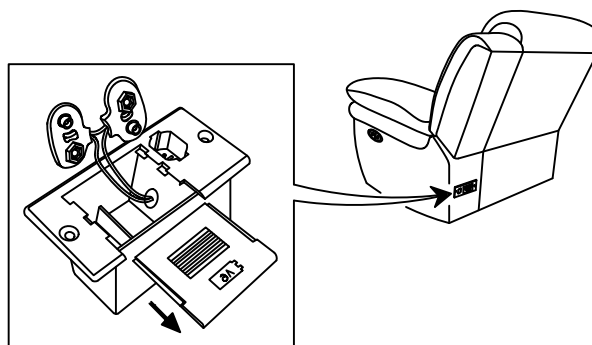


STEP 2

 Install two 9V batteries in the backup battery box.(batteries are not included)

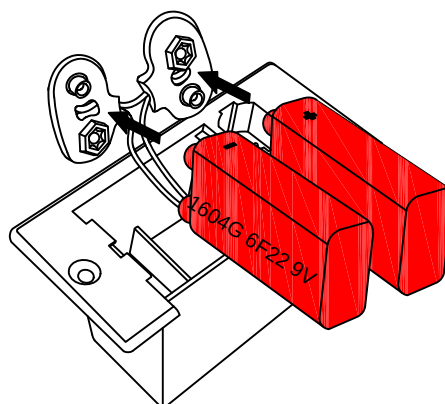

STEP 3

 
Push the batteries in.




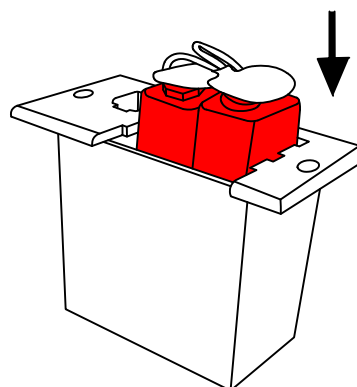


STEP 4

Close the box door.

     Notice: Please don't keep the battery in the box when the power motion sofa is under daily use with power supply.

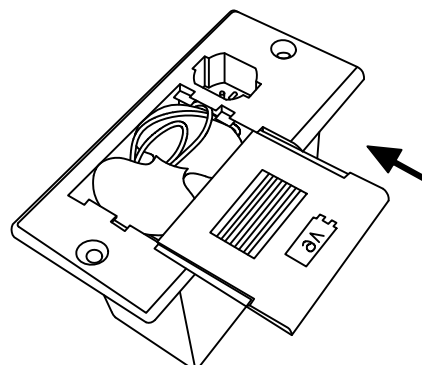

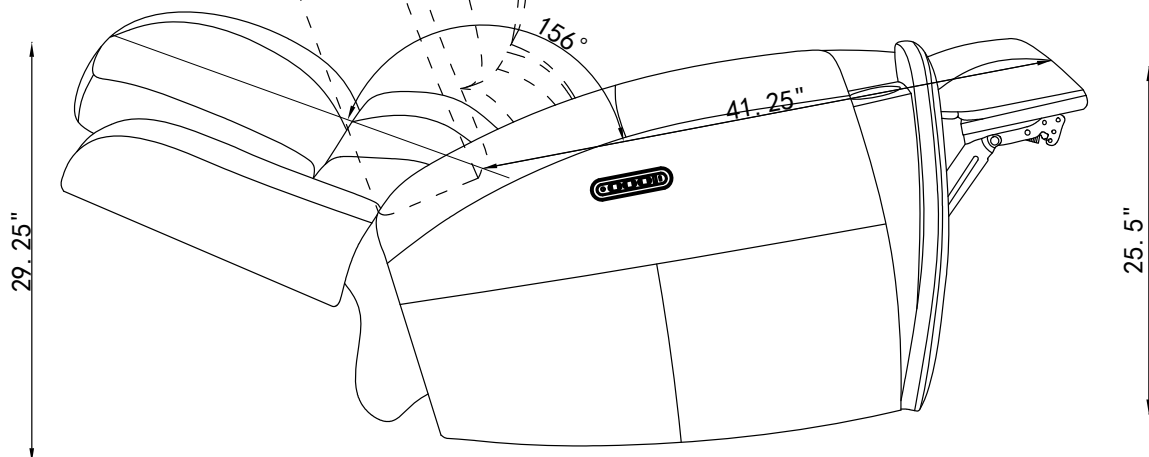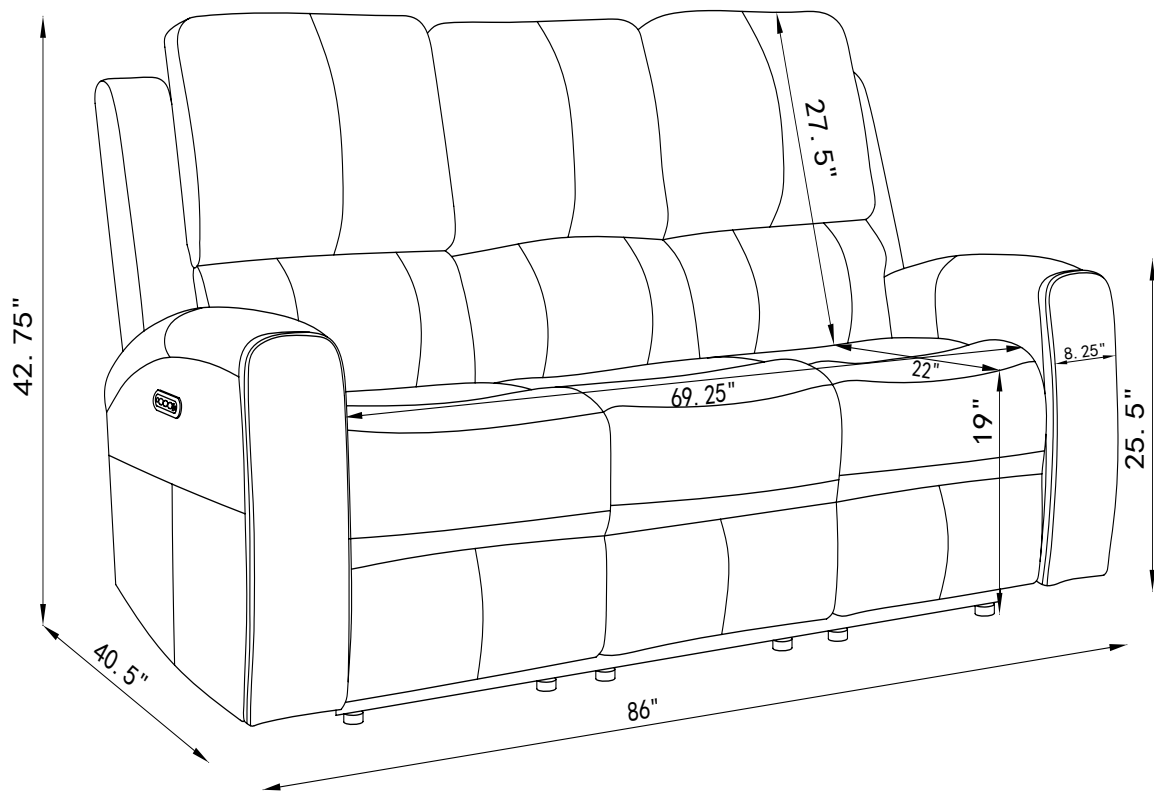



ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

603432PPP
POWER RECLINING LOVESEAT

ITEM :603432PPP

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



WARNING!

 
 
- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishment.



ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

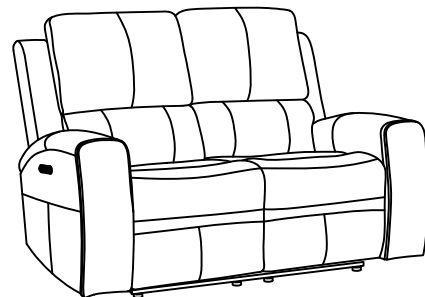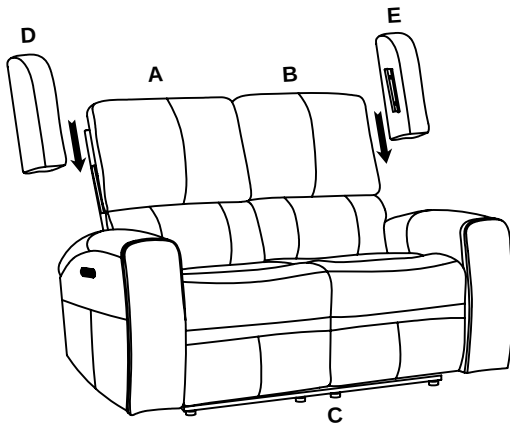

A LEFT BACK

B RIGHT BACK

C BASE

D LEFT EAR

E RIGHT EAR

F PLUG-IN POWER SUPPLY



1 PC



1 PC



1 PC



1 PC



1 PC



 
1 PC

ITEM :603432PPP


ASSEMBLY INSTRUCTIONS




STEP 1

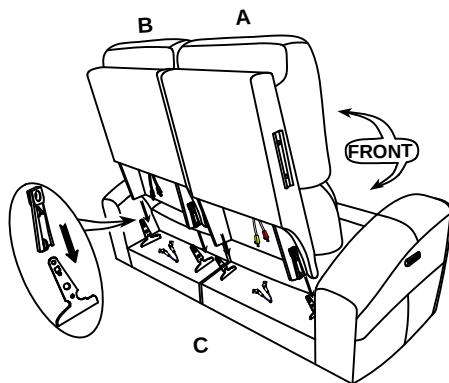

 
STEP 2

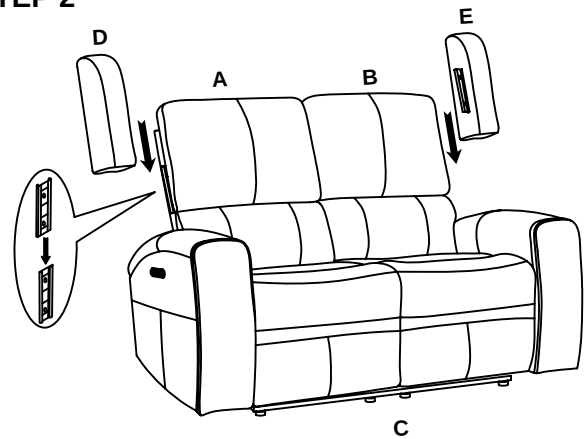


 
STEP 3

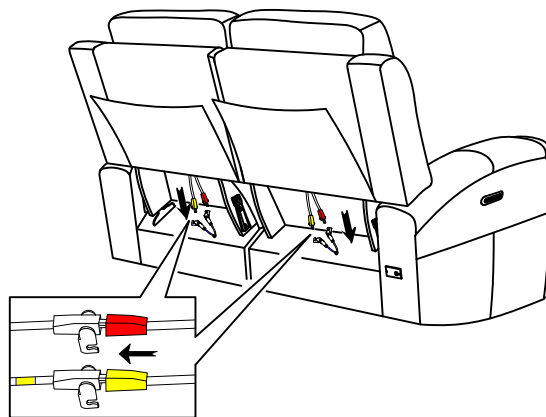

 STEP 4

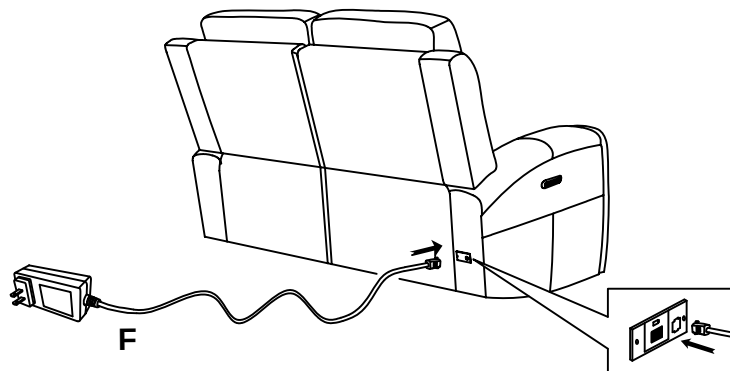

  STEP 5

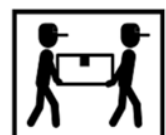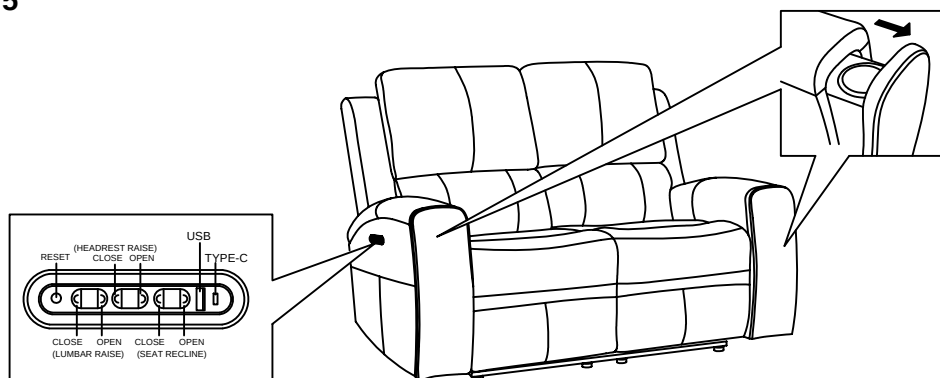


ASSEMBLY INSTRUCTIONS


Please follow below steps to install the 9V batteries when there is no power to operate the motion sofa.(Any model of 9V battery is applicable)

STEP 1

 
Open the marked battery door on the backup battery box.

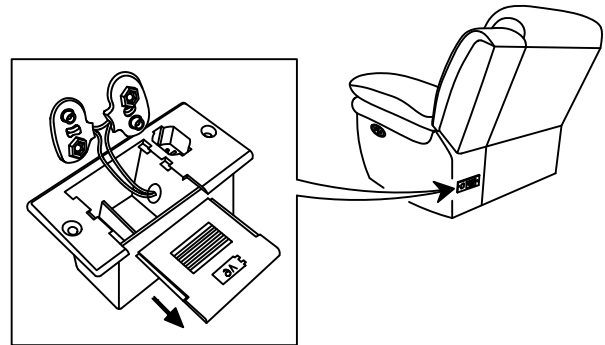**STEP 2**

 Install two 9V batteries in the backup battery box.(batteries are not included)

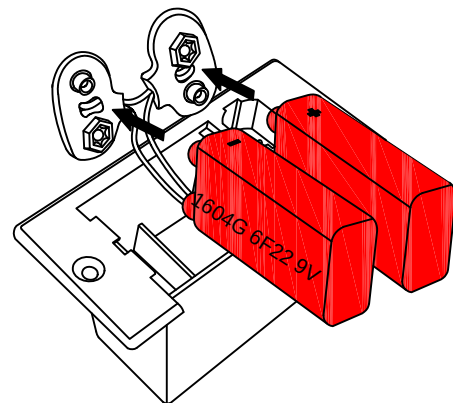
**STEP 3**

 Push the batteries in.

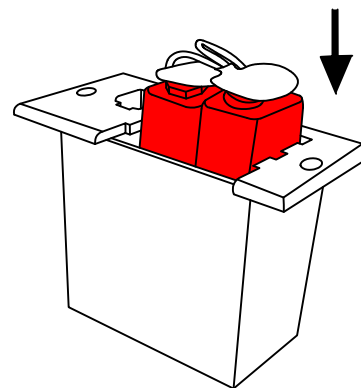**STEP 4**



Close the box door.

 Notice: Please don't keep the battery in the box when the power motion sofa is under daily use with power supply.

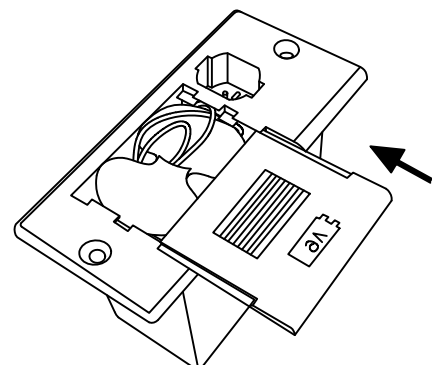

ITEM :603432PPP

  ASSEMBLY INSTRUCTIONS

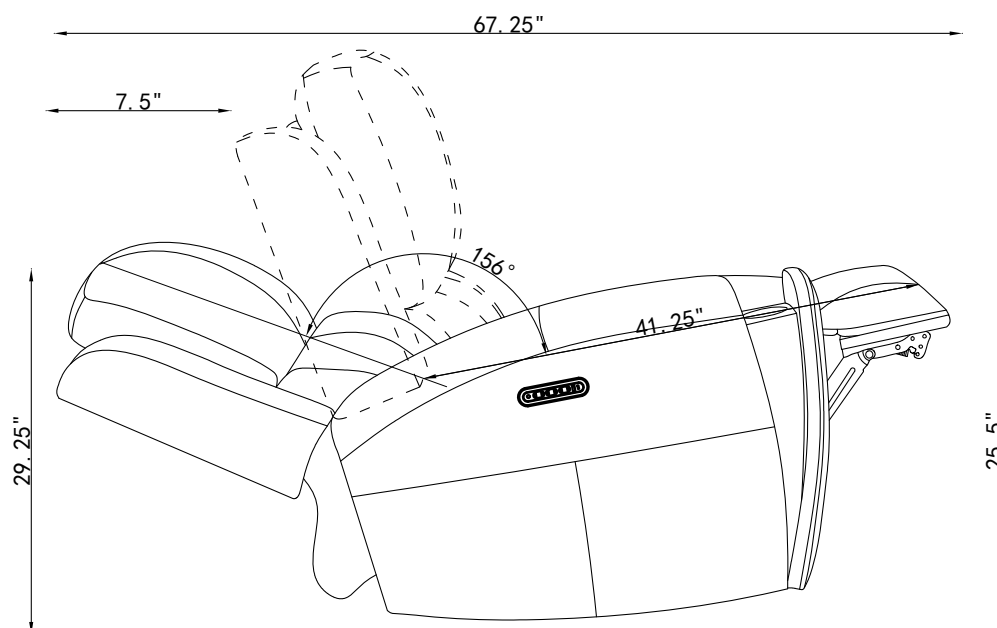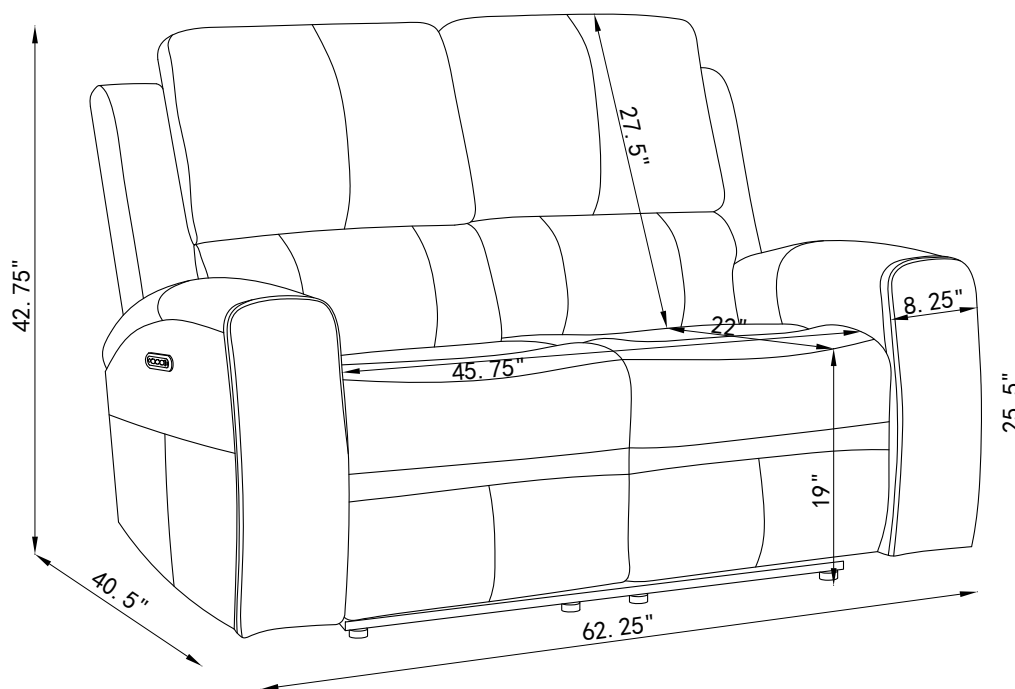



ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

603433PPP
POWER SWIVEL GLIDER RECLINER

ITEM :603433PPP

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



WARNING!

 
 
- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishment.



ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

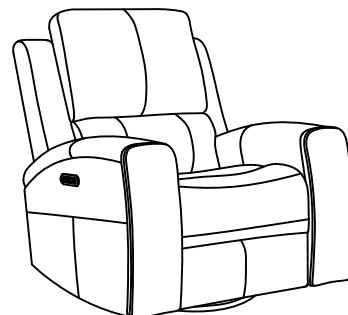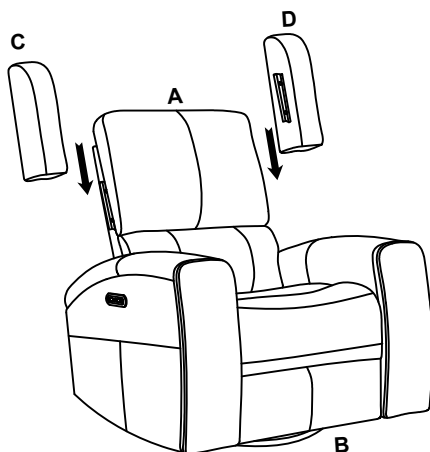

A BACK



1 PC

B BASE



1 PC

C LEFT EAR



1 PC

D RIGHT EAR



1 PC

E POWER CORD



1 PC

F ADAPTER WITH BAT. BACKUP



 
1 PC

ITEM :603433PPP


ASSEMBLY INSTRUCTIONS




STEP 1

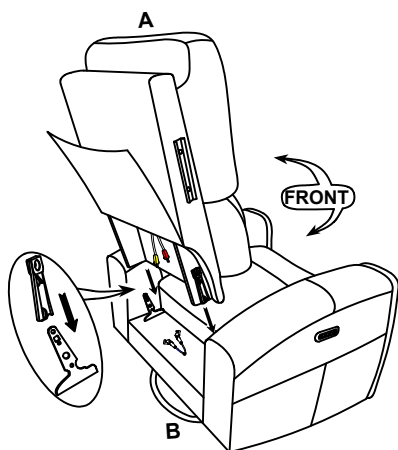

 
STEP 2

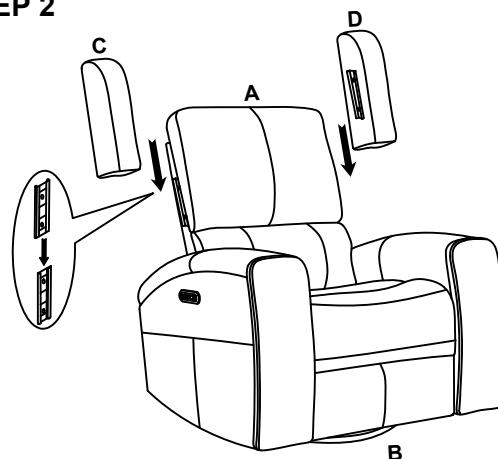


 
STEP 3

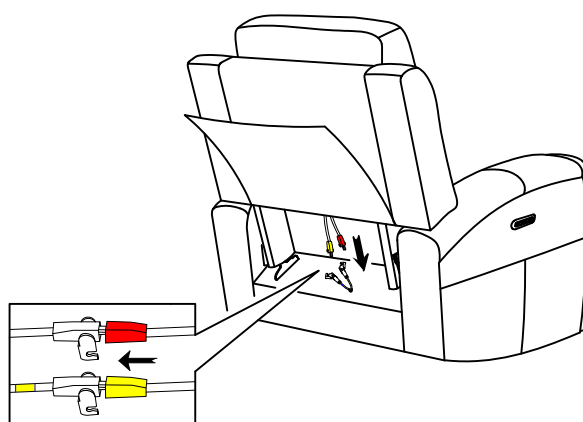

 STEP 4

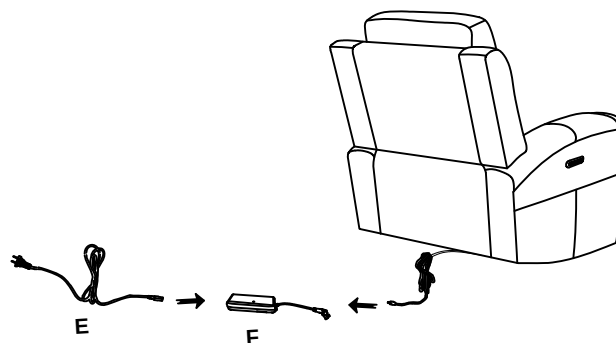

  STEP 5

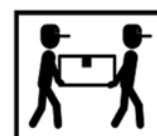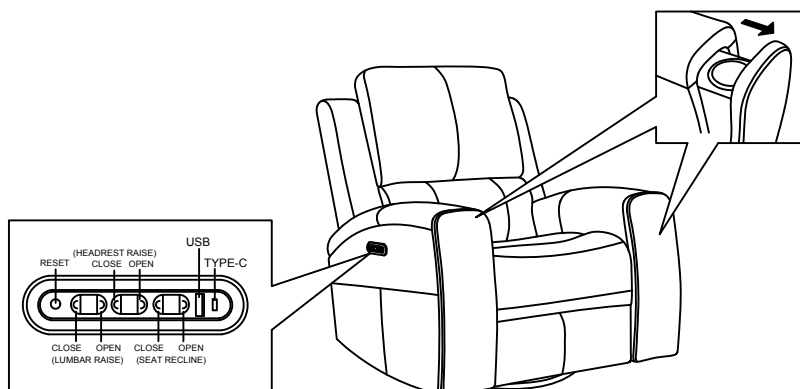


ASSEMBLY INSTRUCTIONS


Please follow below steps to install the 9V batteries when there is no power to operate the motion sofa.(Any model of 9V battery is applicable)

STEP 1

 
Open the marked battery door on the backup battery box.

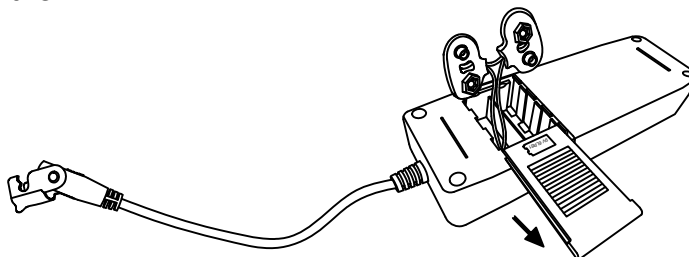**STEP 2**

 Install two 9V batteries in the backup battery box.(batteries are not included)

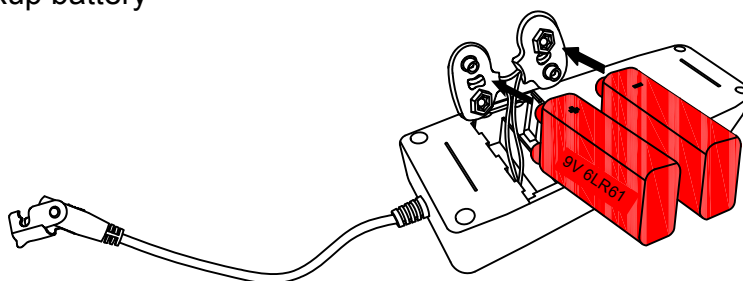
**STEP 3**

 Push the batteries in.

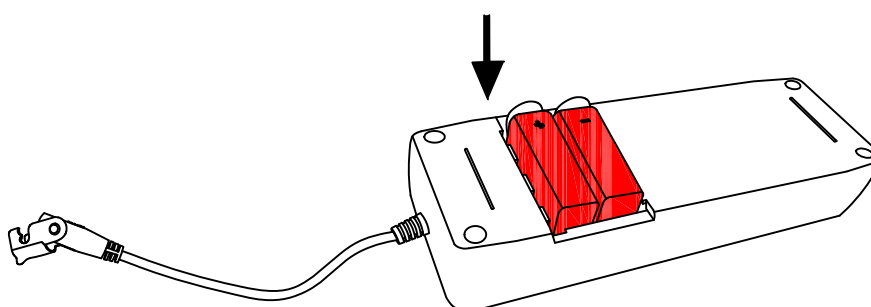**STEP 4**

Close the box door.

 Notice: Please don't keep the battery in the box when the power motion sofa is under daily use with power supply.

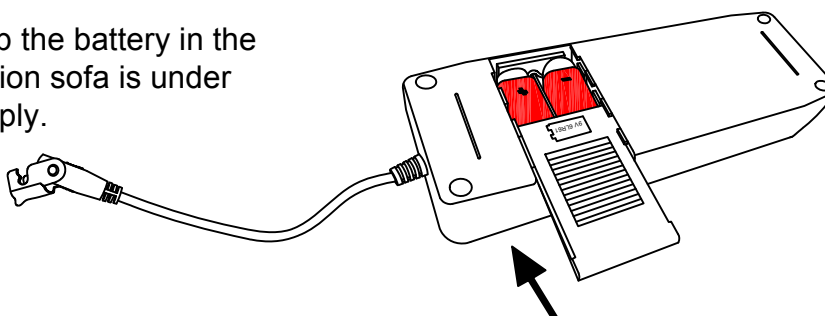

ITEM :603433PPP

ASSEMBLY INSTRUCTIONS

