

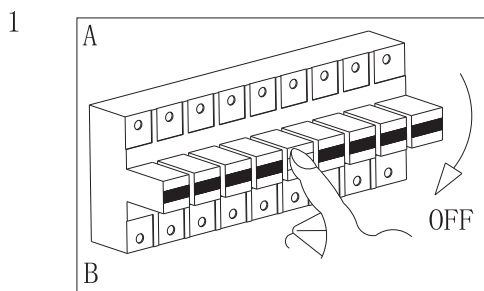


ZS-040-8


—User Manual

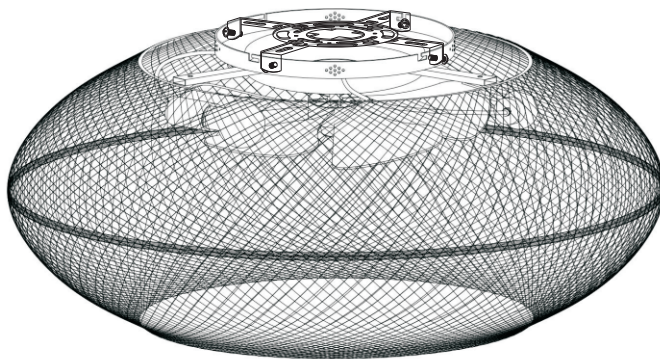


please confirm that the voltage matches the product, and turn off the power at the installation location to ensure safety.

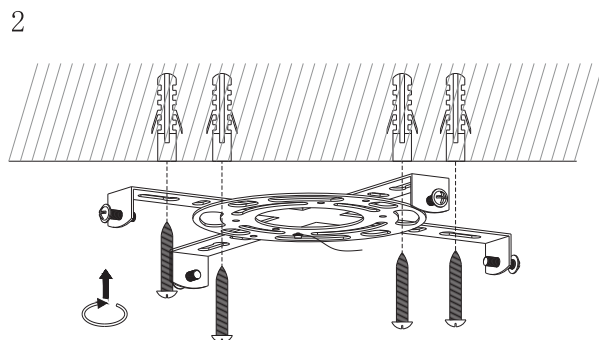


Securely attach the mounting plate to the ceiling.

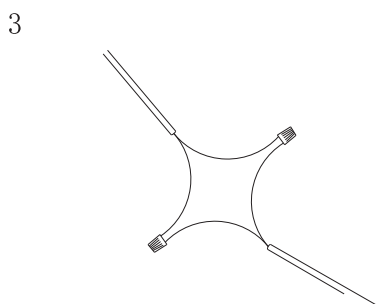


Connect the lamp driver input to the power source correctly and securely.

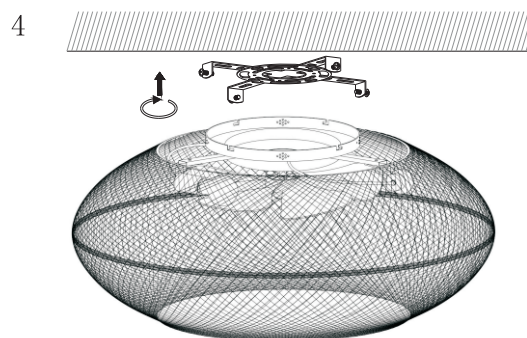

Rotate the lamp body to align the screws on the mounting plate with the holes on the leftmost hub.

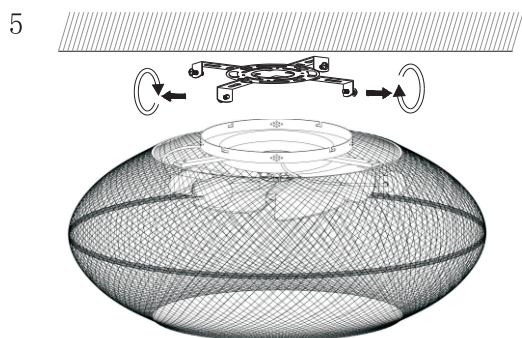

Tighten the four screws on the mounting plate to ensure the fixture is securely installed.

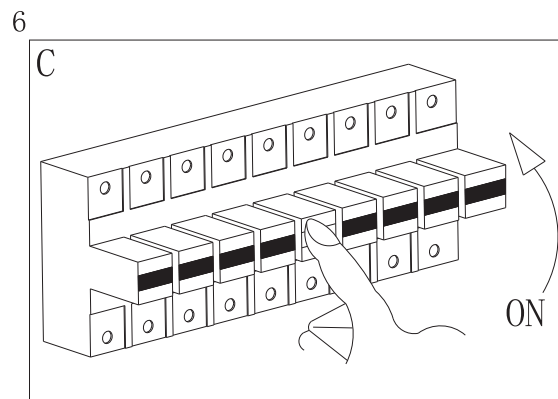

Turn on the power switch.

Fan lamp remote control instructions

Remote control key function:

ⓐ:Main switch

ⓑ:Light switch

ⓒ:rotation

ⓓ:Natural wind

ⓔ:reversal

ⓕ:Fan off


ⓖ:Fan gear key Gear 1-6Forward

ⓓⓗ:Fixed time 1 hour

ⓓⓔⓗ:Fixed time 2 hours+pair key

ⓓⓔⓔⓗ:Fixed time 4 hours

Remote control battery : No. 7 1.5V*2

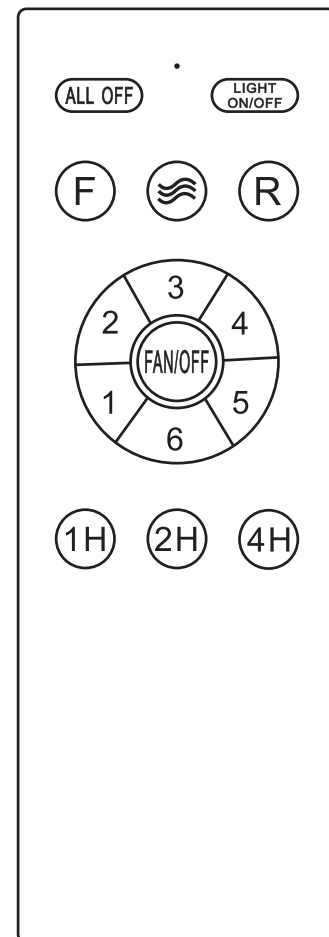

Product introduction :

1. This product adopts 433 wireless digital technology ,

Remote control one-to-one control ,

The workpiece can be controlled from any angle within the allowable space ,

Not limited by direction , Simple and convenient operation ,

Strong anti-interference ability.

2 . Remote control instructions :

① . If the remote control is not used for a long time , Please remove the battery.

② . Remote control matching code :

Turn on the power ,

Press the pair code button within 5 seconds of the light on ,

When you hear two "tick" sound or the light flashes, the code matches successfully.

If you need to match the code again , You need to wait 30 seconds before turning on the power and repeat the above operation.

warning :

This electronic switch product needs to be operated by professionals during installation.

Remote trigger electronic switch ,

The radio frequency of the remote control transmitter is 433M

