


**RIDE ON TRACTOR
WITH DETACHABLE TRAILER**



**ELECTRIC RIDE ON TOY
FOR KIDS**



If you have any question, please contact
at L843485741@outlook.com directly.

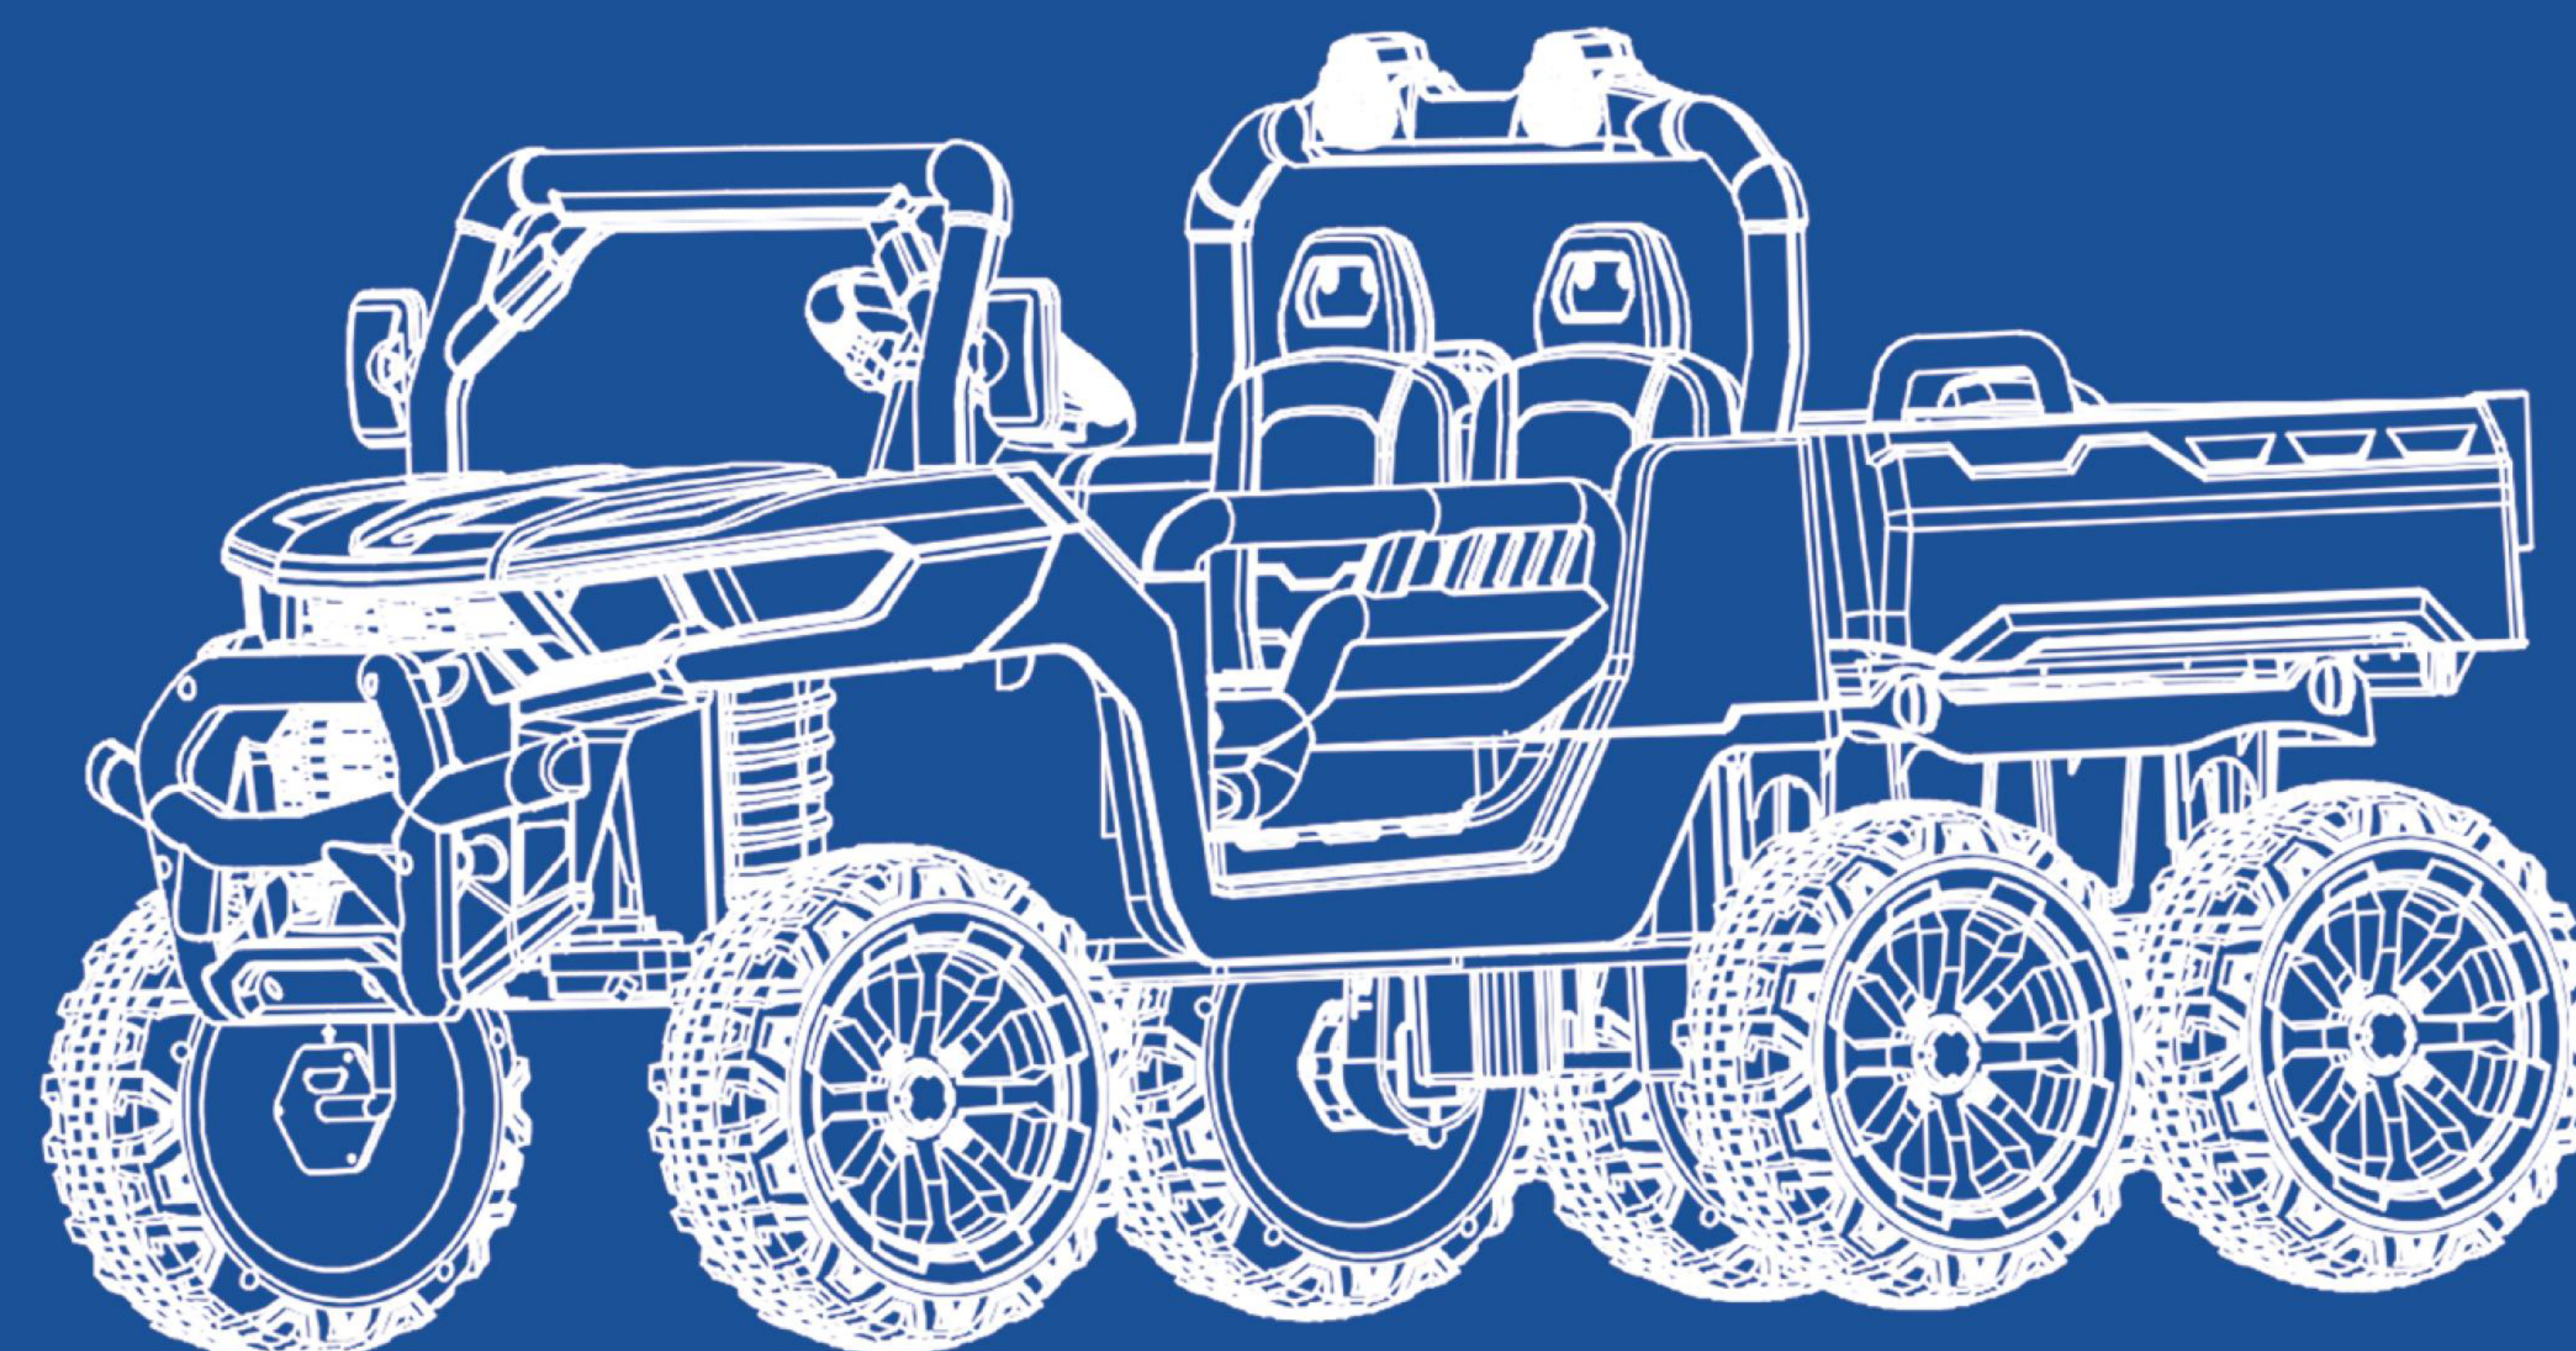

**RIDE ON TRACTOR
WITH DETACHABLE TRAILER**





Please charge for 12
hours before initial use.

After initial charge
follow the charging
times specified in the
manual.

WARNING

- 1.CHOKING HAZARD-Small parts.
- 2.Not for children under 3 yrs.The maximum load is 120LBS
- 3.Only use the battery specified by the manufacturer.
- 4.Only use the charger specified by the manufacturer.
- 5.The battery on the vehicle is not replaceable.
- 6.To reduce the risk of injury,adult supervision isrequired.
- 7.Never use in roadways,near motor vehicles,on or near steep inclines , or steps,swim-
ming pools or other bodies of water,always wear shoes,and never allow more than one
rider;
- 8.The toy should be used with caution since skill is required to avoid falls, or collisions
causing injury to the user or third parties
- 9.Do not mix old and new batteries
- 10.Do not mix alkaline,standard (carbon-zinc),or rechargeable batteries.
- 11.Adult assembly required
- 12.RISK OF FIRE.Do not bypass.Replace only with


SPECIFICATIONS

Weight Capacity	120LBS
Age Range	3+ years
Max Speed	15MPH
Charging Time	8-12hours
Run Time	1-2hours
Battery Type	12V/24V
Electric Motor	4*100W
Charger	Output: DC 12V/24V
Material	PP+Metal

CARING FOR YOUR RIDE-ON

- Park the vehicle indoors or cover it with a tarp to protect it from wet weather.
- Do not leave the vehicle in the sun for long periods of time or fading may occur. Store in shade or cover with tarp.
- Keep away from fire.
- Do not wash the vehicle with a hose.
- Do not wash the vehicle with soap.
- Charge battery at least once a month to prolong the life of the battery.

OPERATING INSTRUCTIONS

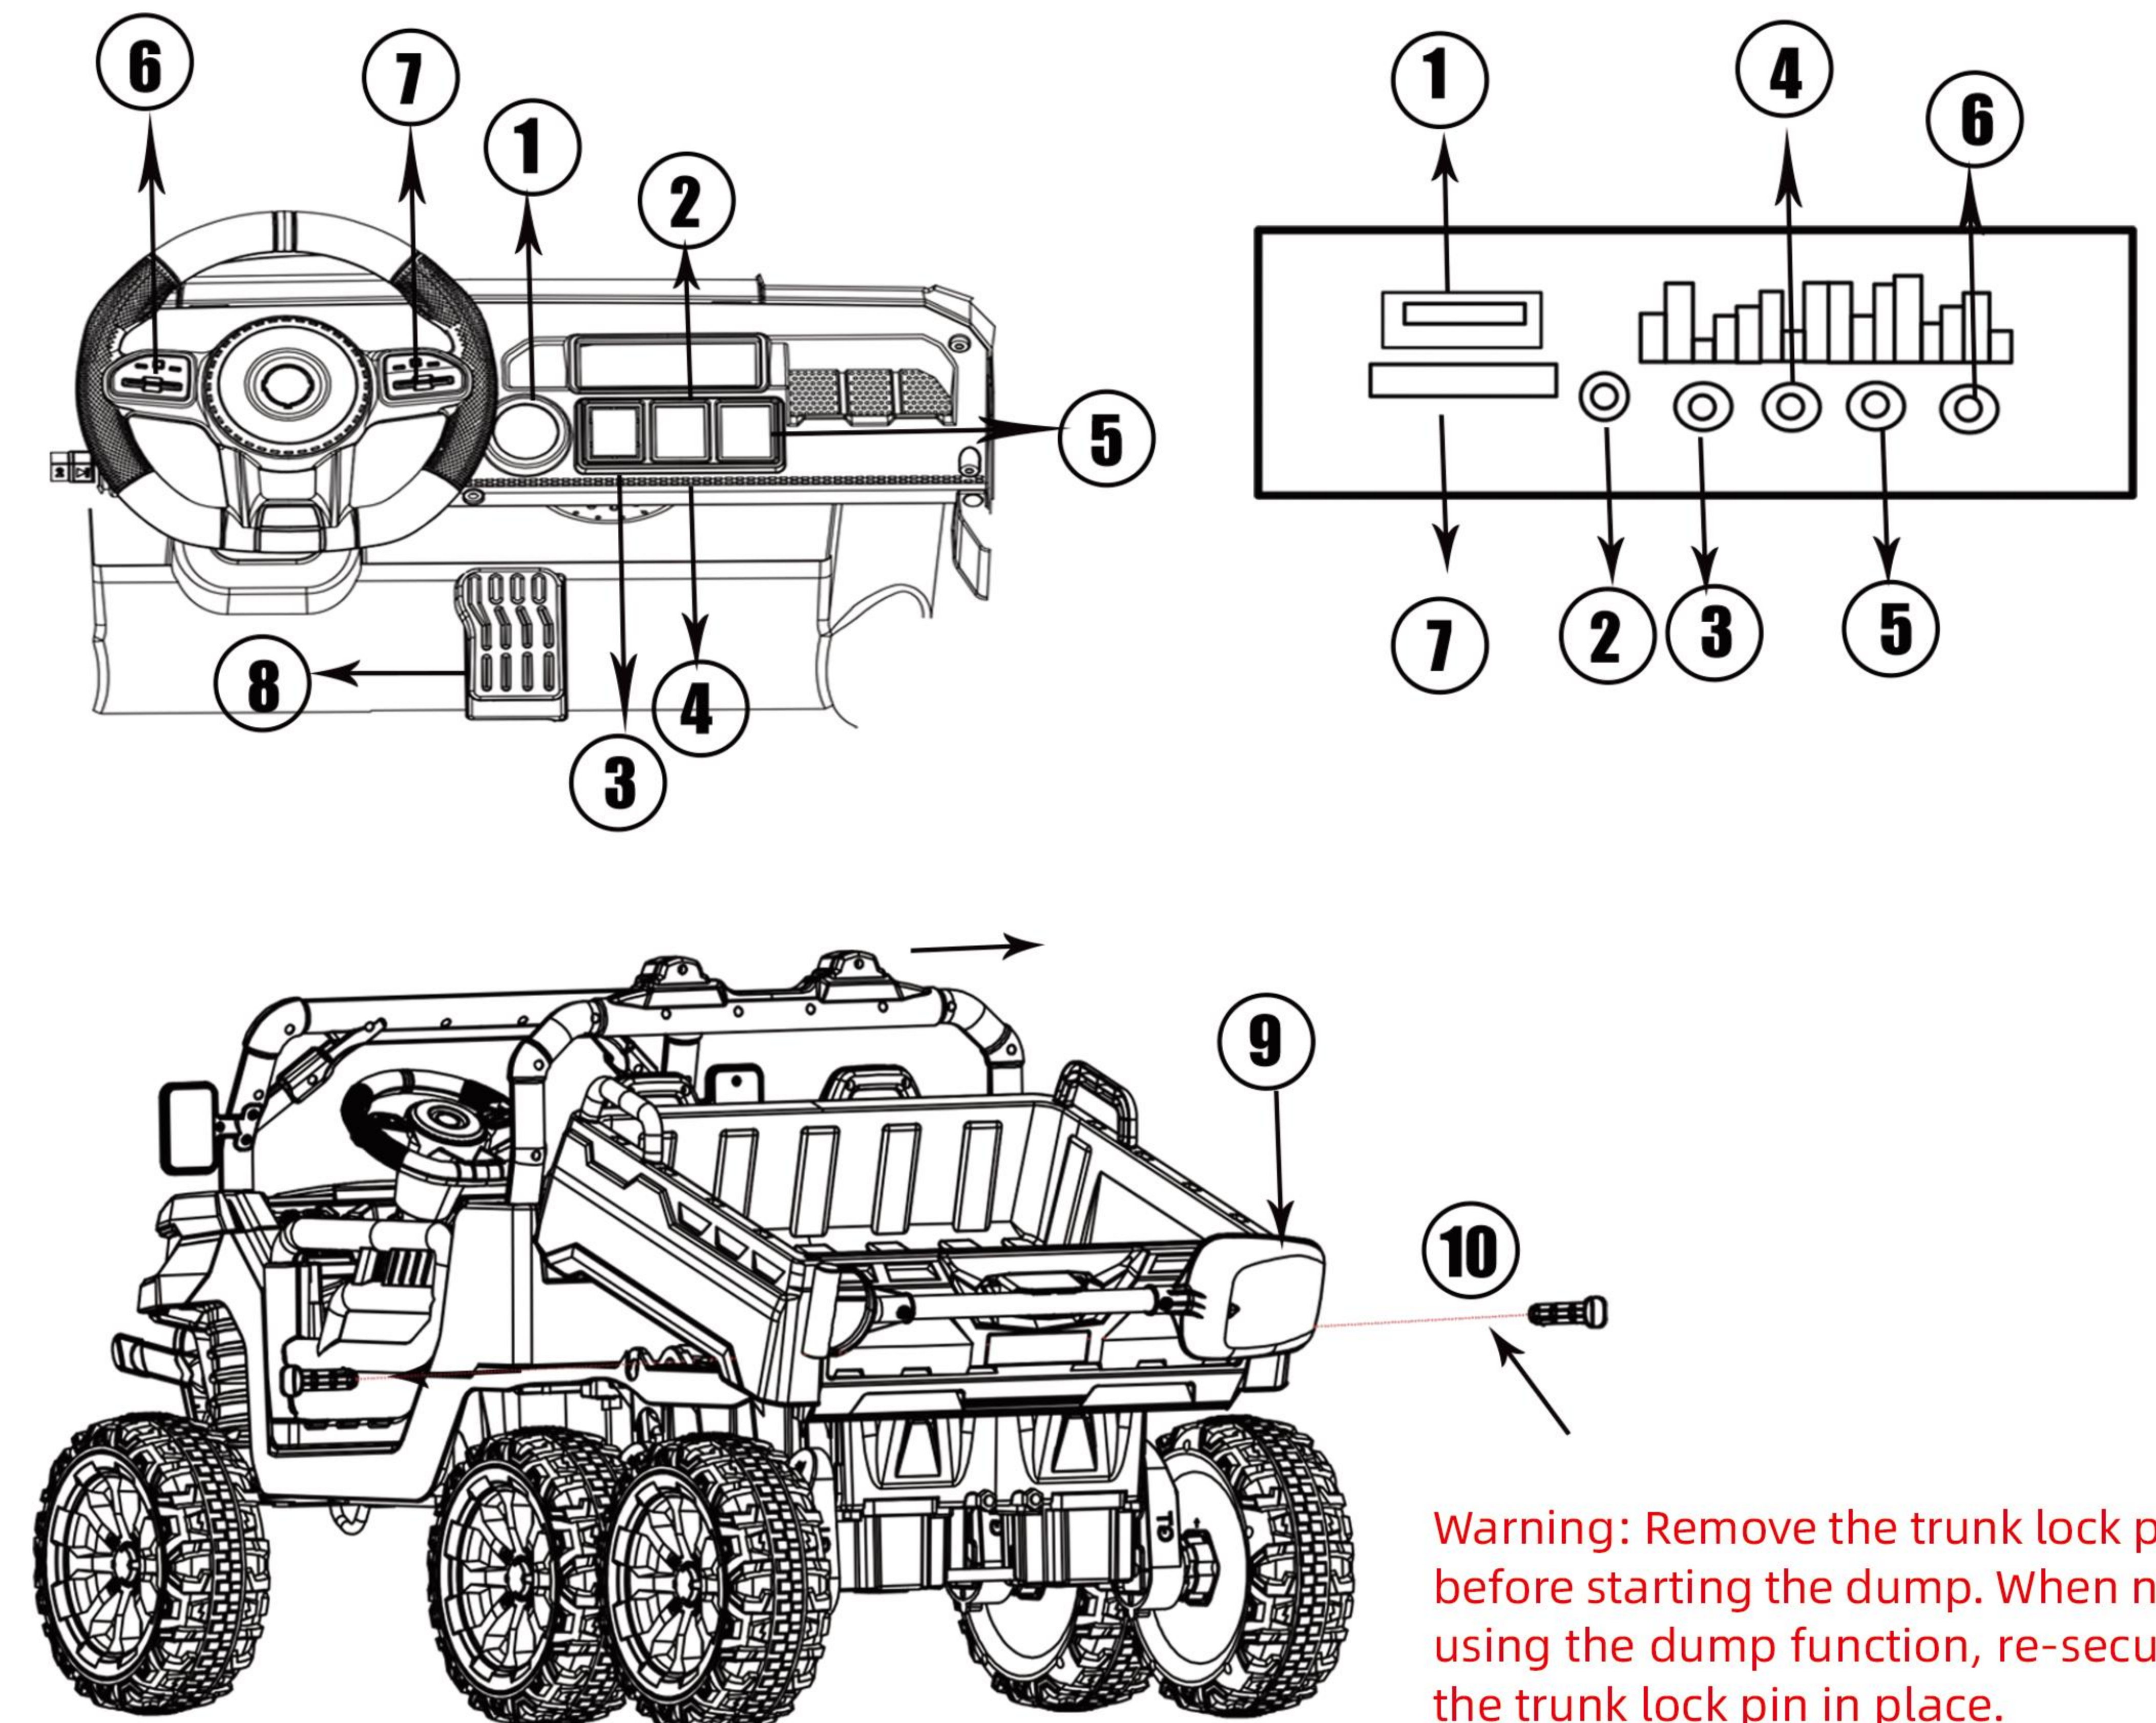

- A: The rider should sit down, fasten the seatbelt, and press the power switch. The vehicle will start, indicating that the power is connected.

- B: 1. Main power switch 2. Music button 3. High/low speed switch
 4. Forward/reverse switch 5. Dump truck activation switch 6. Music change button
 7. Horn button 8. Foot pedal accelerator 9. Shovel
 10. Note: To activate the dump truck function, remove the trunk lock pin before starting the dump.

When not using the dump function, re-secure the trunk lock pin in place.

- C: 1. USB port 2. MP3 interface 3. Horn button/Volume control
 4. Pause/Play button 5. Music change button/Volume + 6. Bluetooth/Music change button

Note:

It is not recommended to switch between forward and reverse gears while driving, as this may damage the equipment. To change direction, release the pedal switch first, then switch between forward and reverse gears.

PRODUCT ASSEMBLY

1

Installing the Front Undercarriage/Shock Absorber Decorative Parts:

(1) Use a wrench to remove the two $\Phi 10$ locknuts on the front undercarriage, then take out the shock absorber spring without removing it. Next, insert the front undercarriage into the round tube and tighten the $\Phi 10$ locknuts with a wrench.


(2) Install the shock absorber decorative parts on the corresponding positions on both sides of the vehicle body using a Phillips screwdriver. Fix the shock absorber decorative parts with 4*14 round head self-tapping screws on each side.






$\Phi 10$ Screw nuts * 2



4x14
Round Head Screw * 4

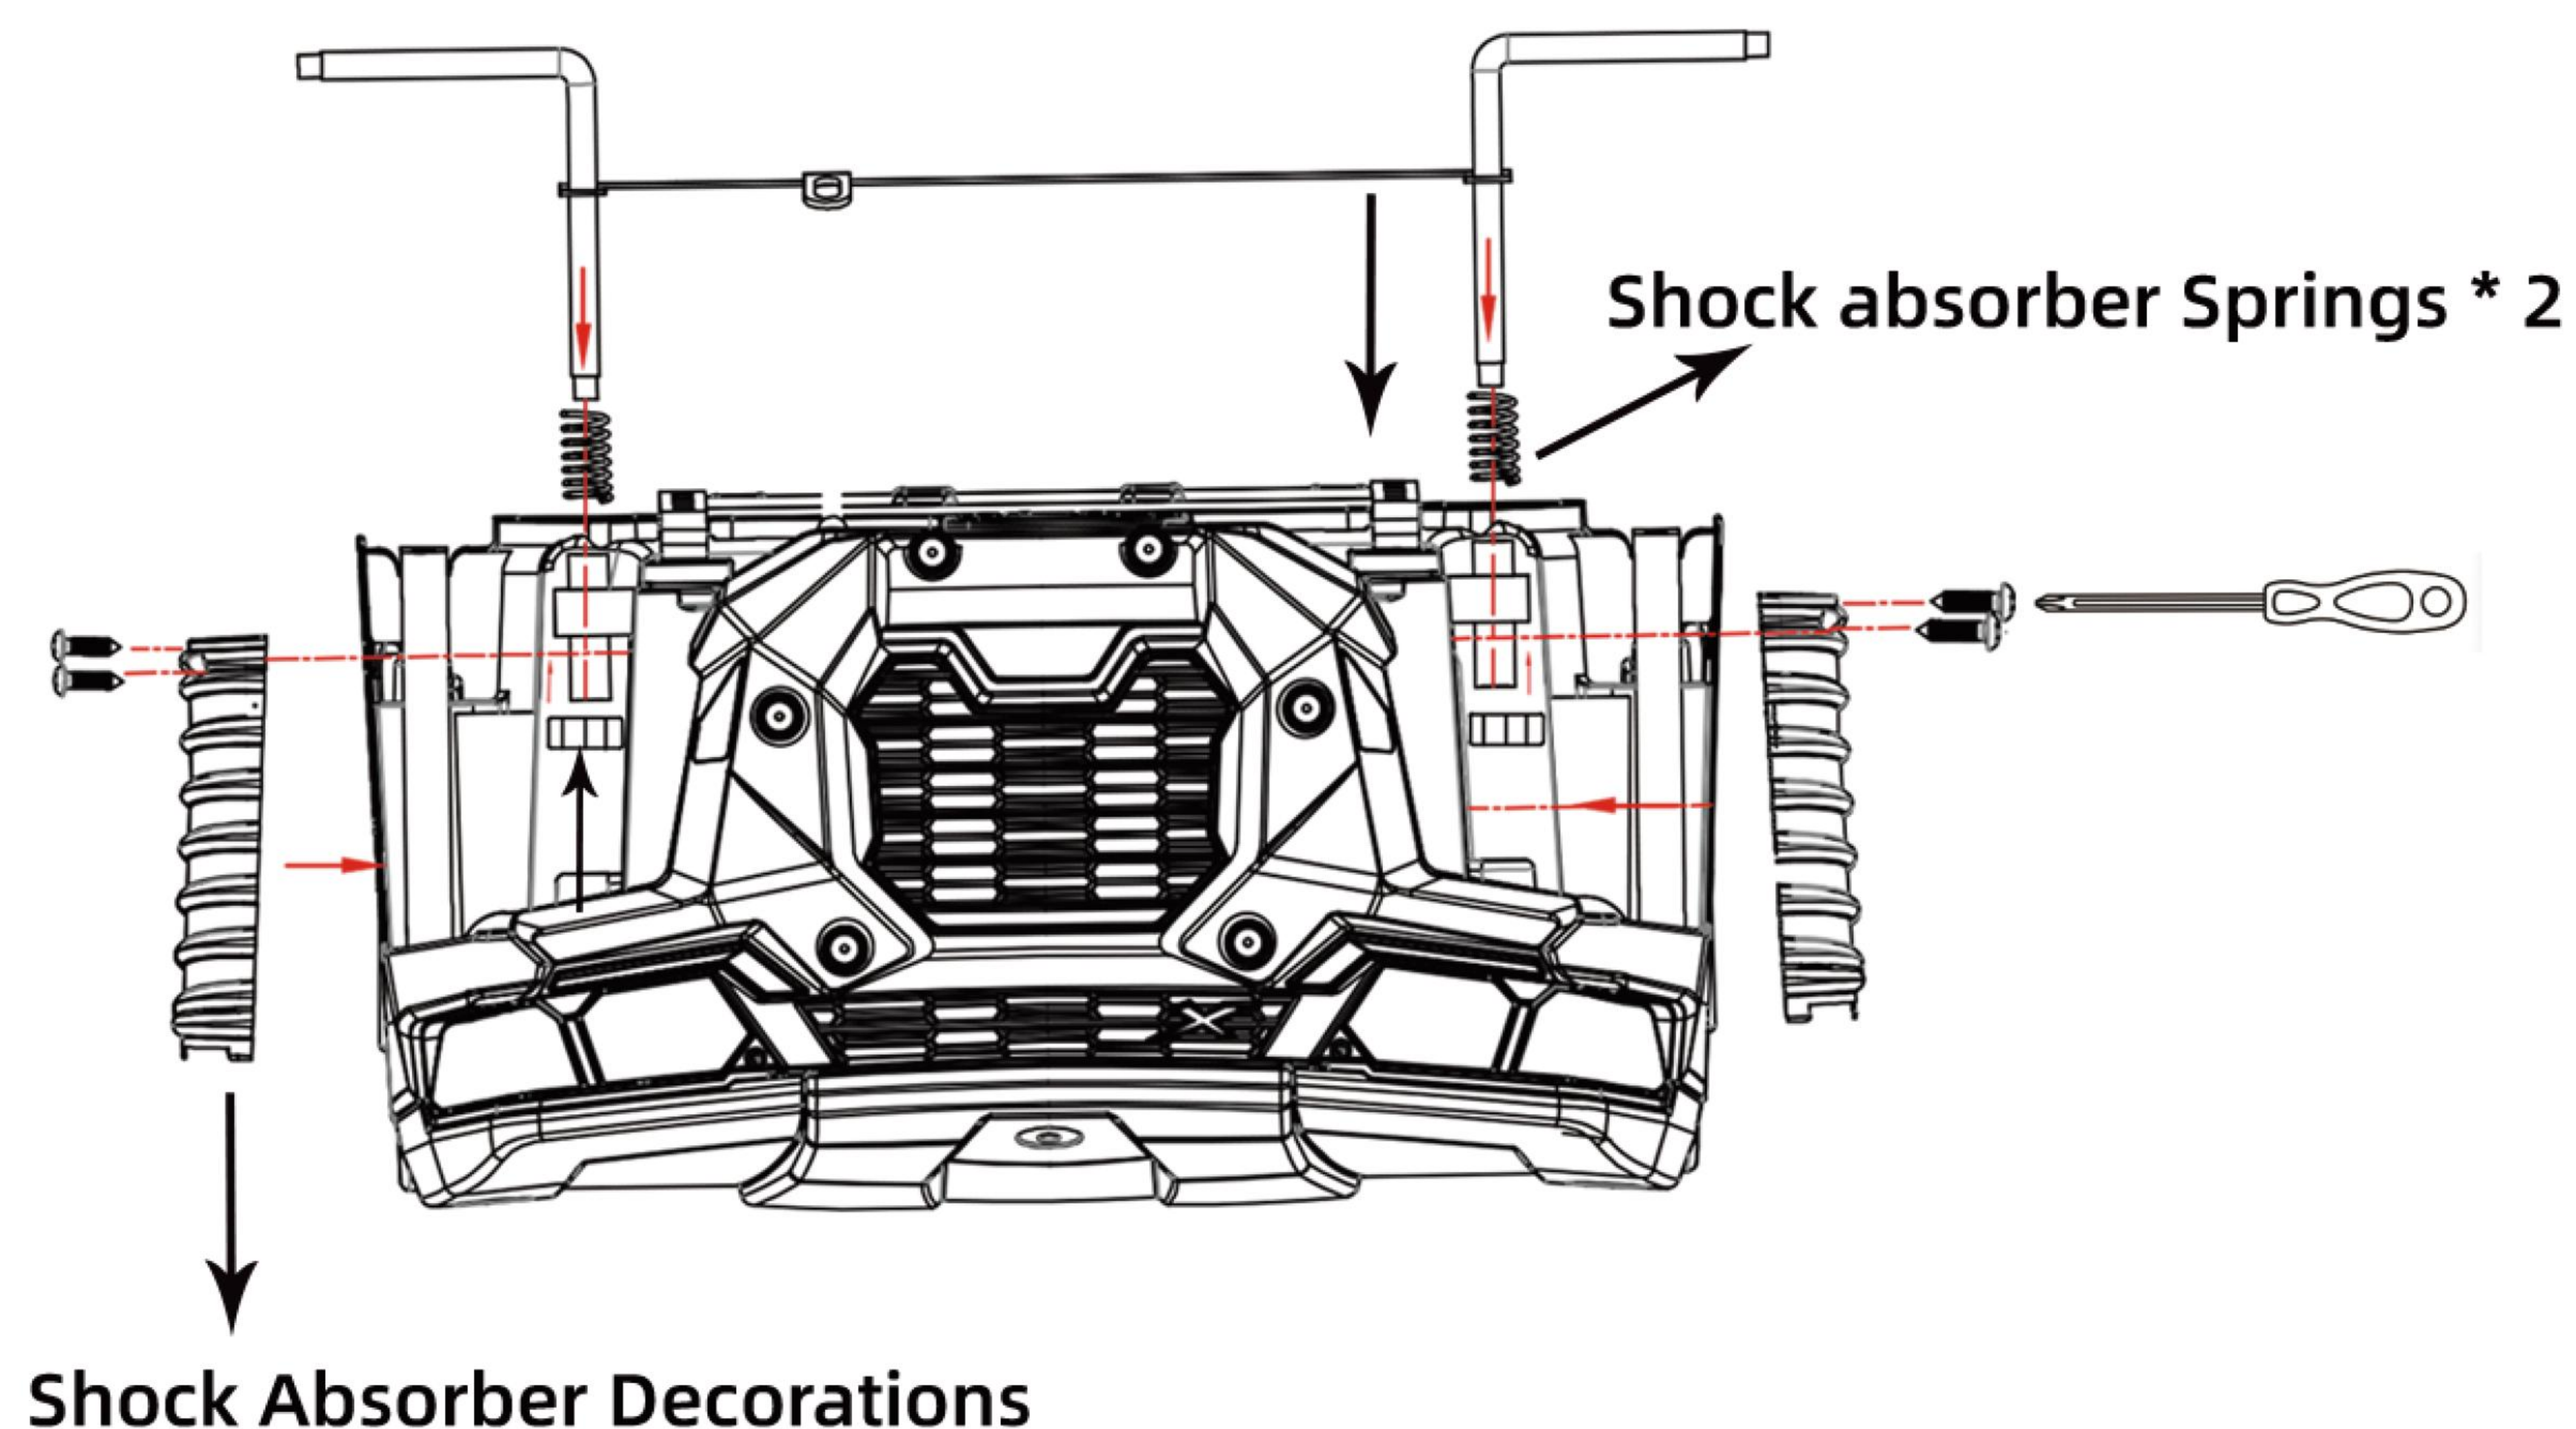

REMOTE CONTROL (2.4G) FUNCTION INSTRUCTIONS

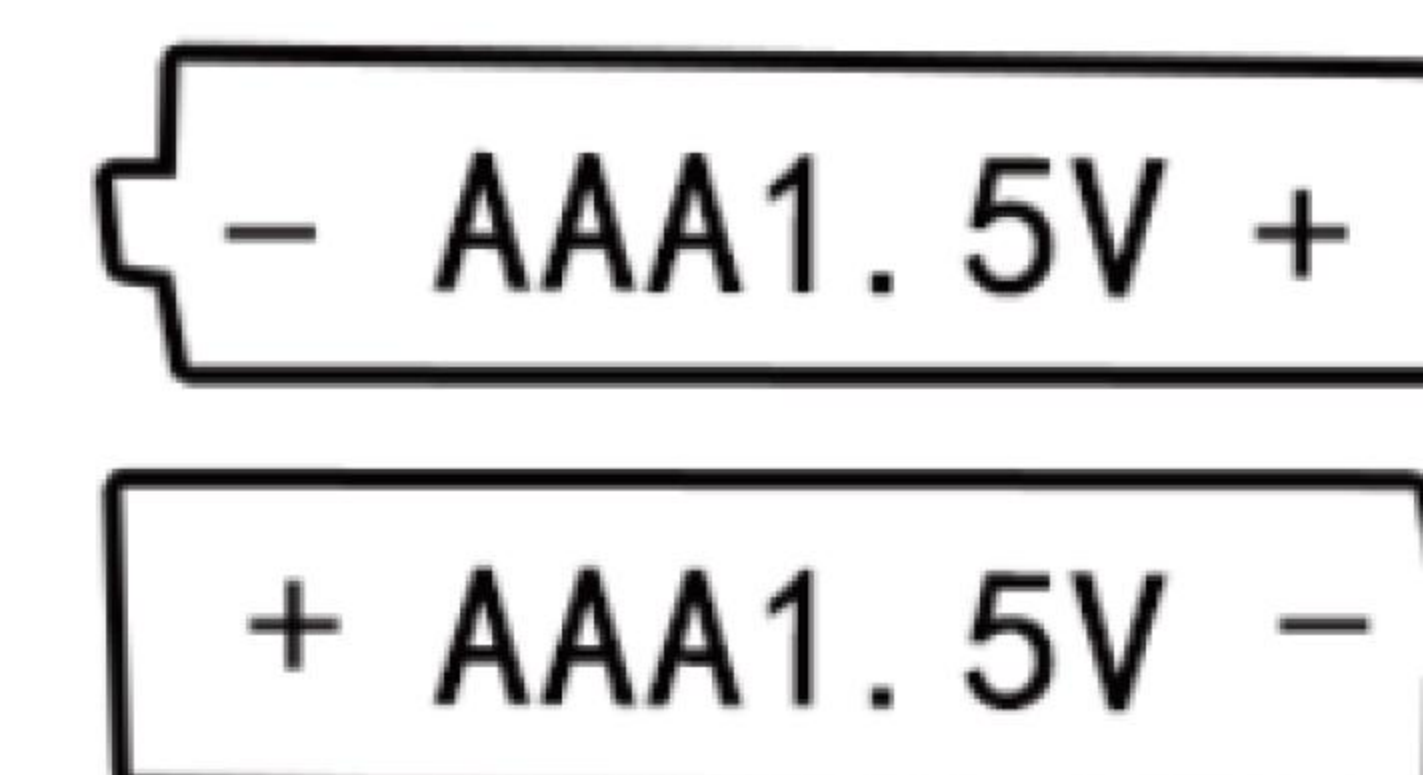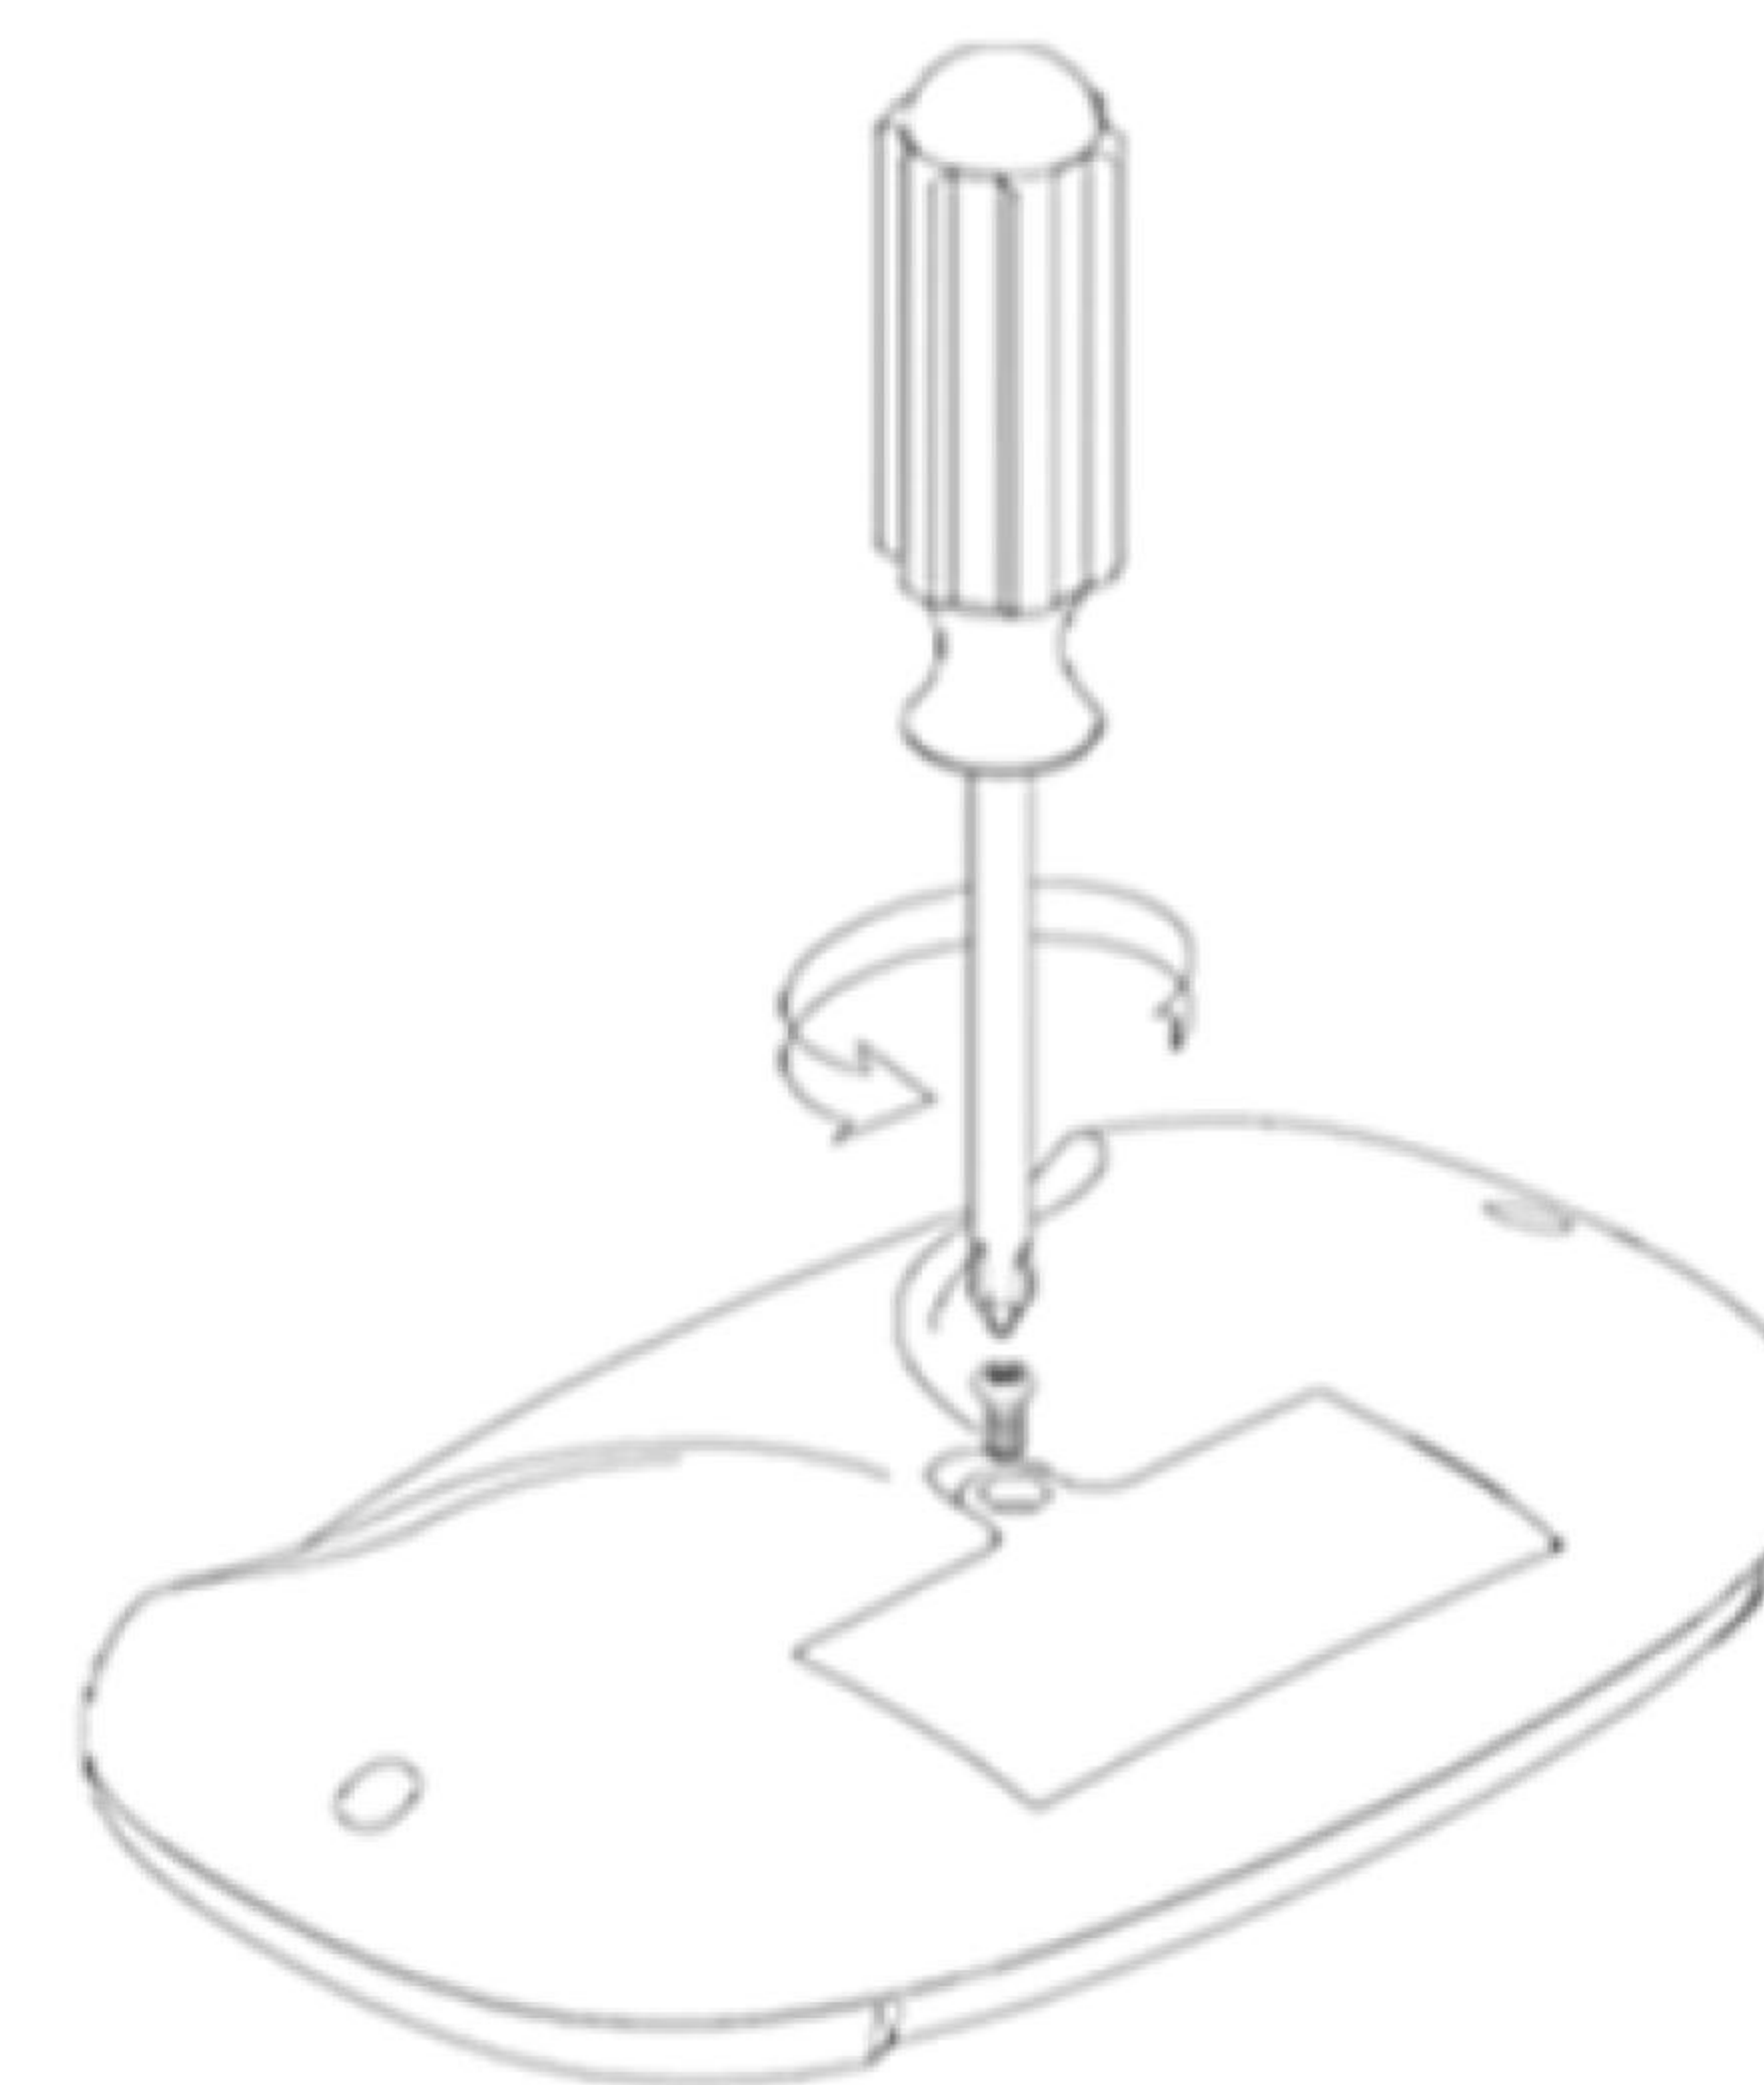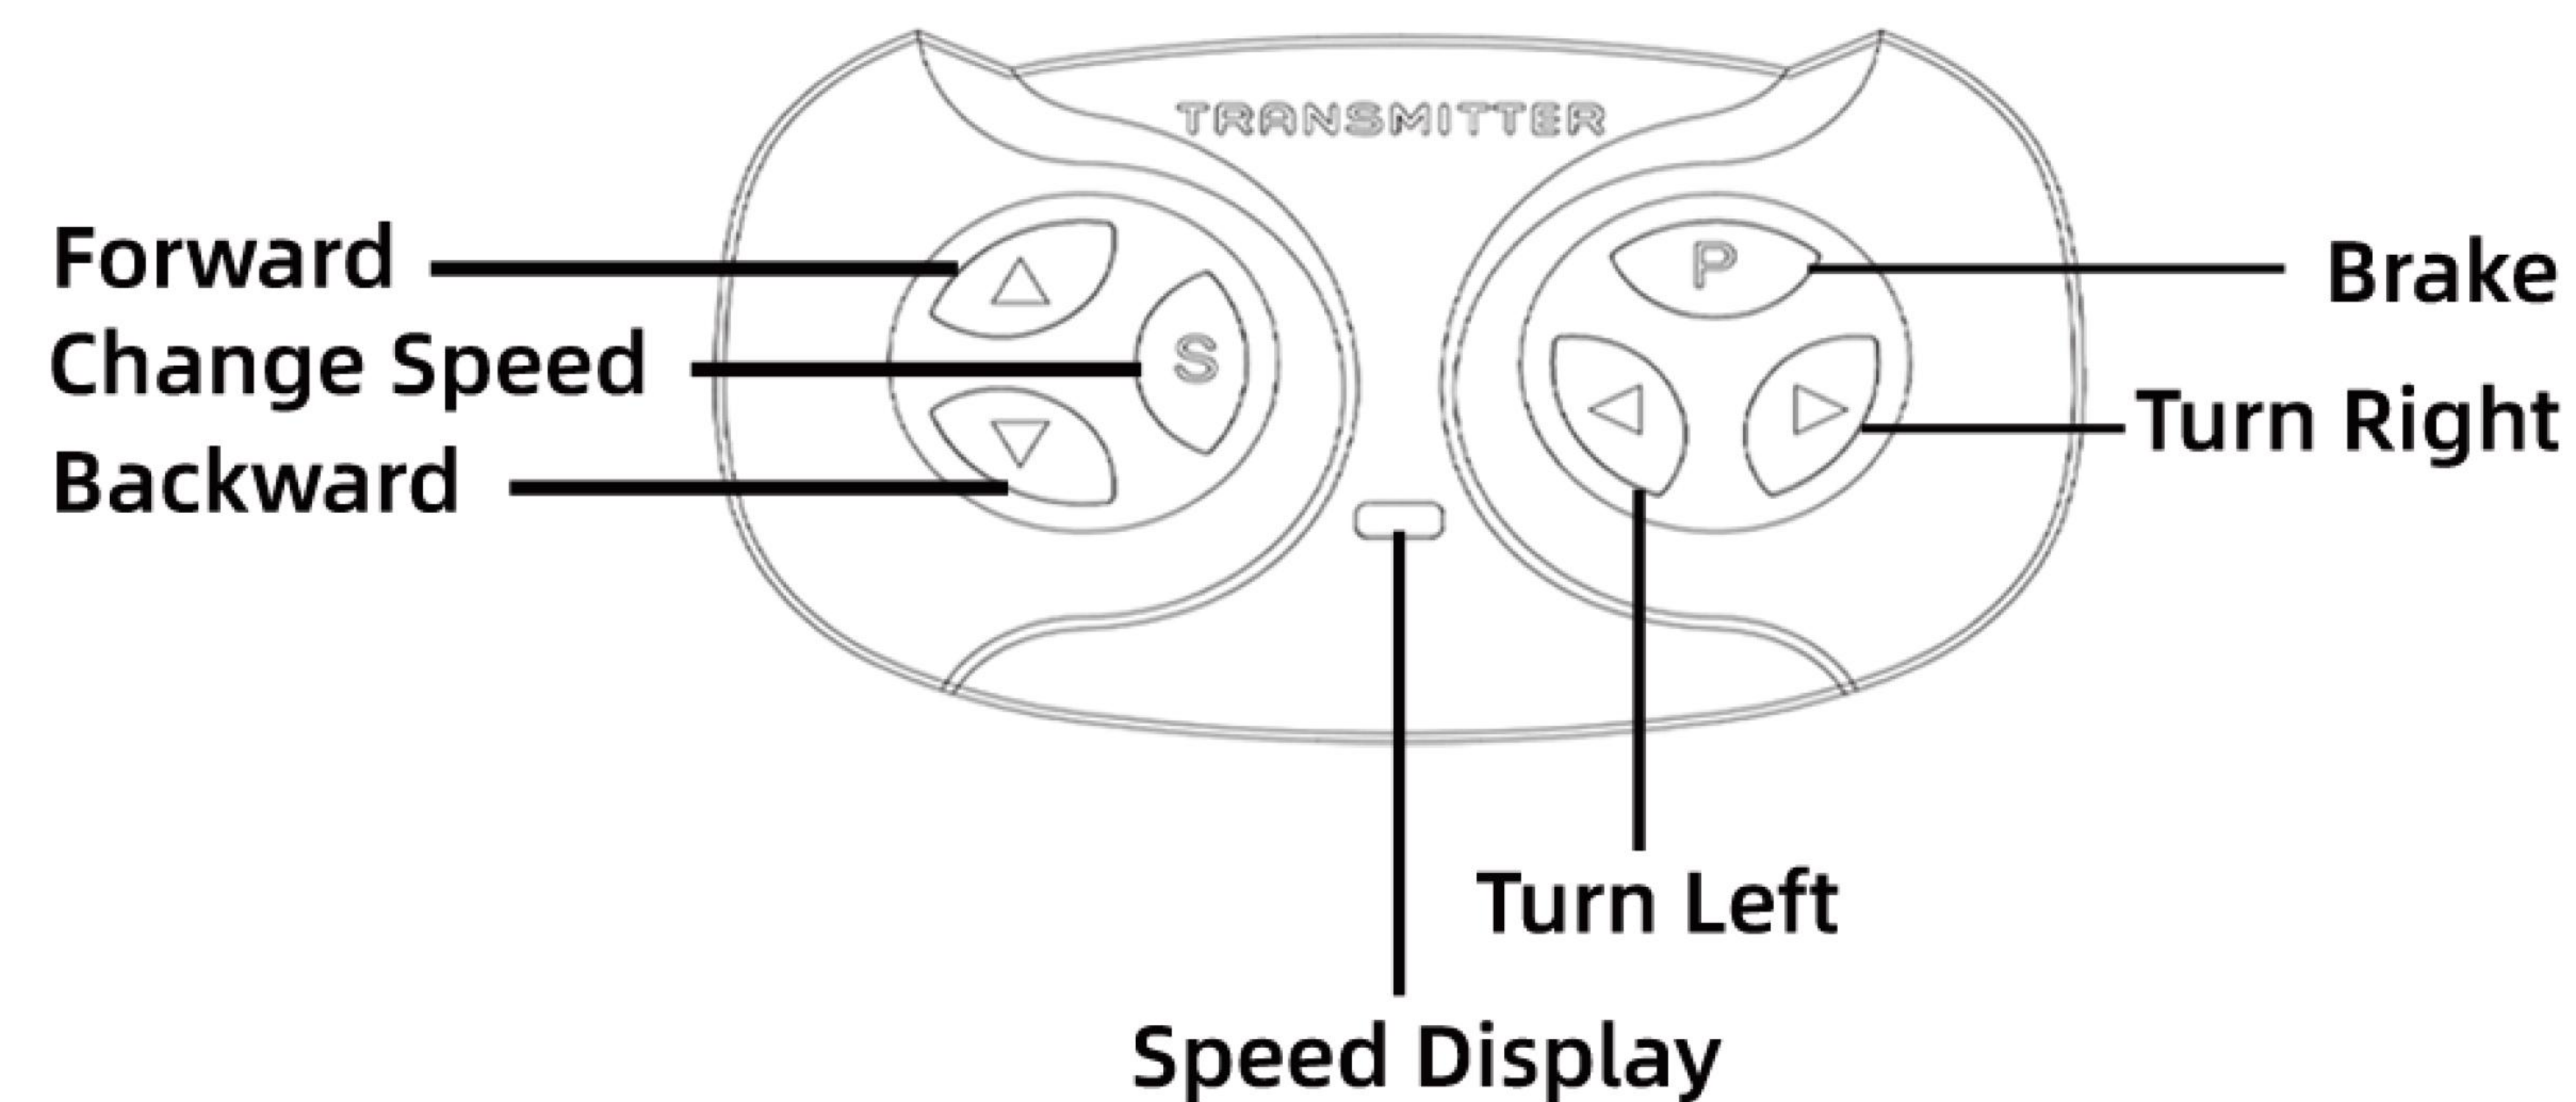


3

Installing the Rear Shock Absorber Cover:

Install the rear shock absorber cover on the corresponding position at the back of the vehicle using 16 4*12 round head self-tapping screws, and then tighten and secure it with a Phillips screwdriver.



**4x12
Round Head Screw**

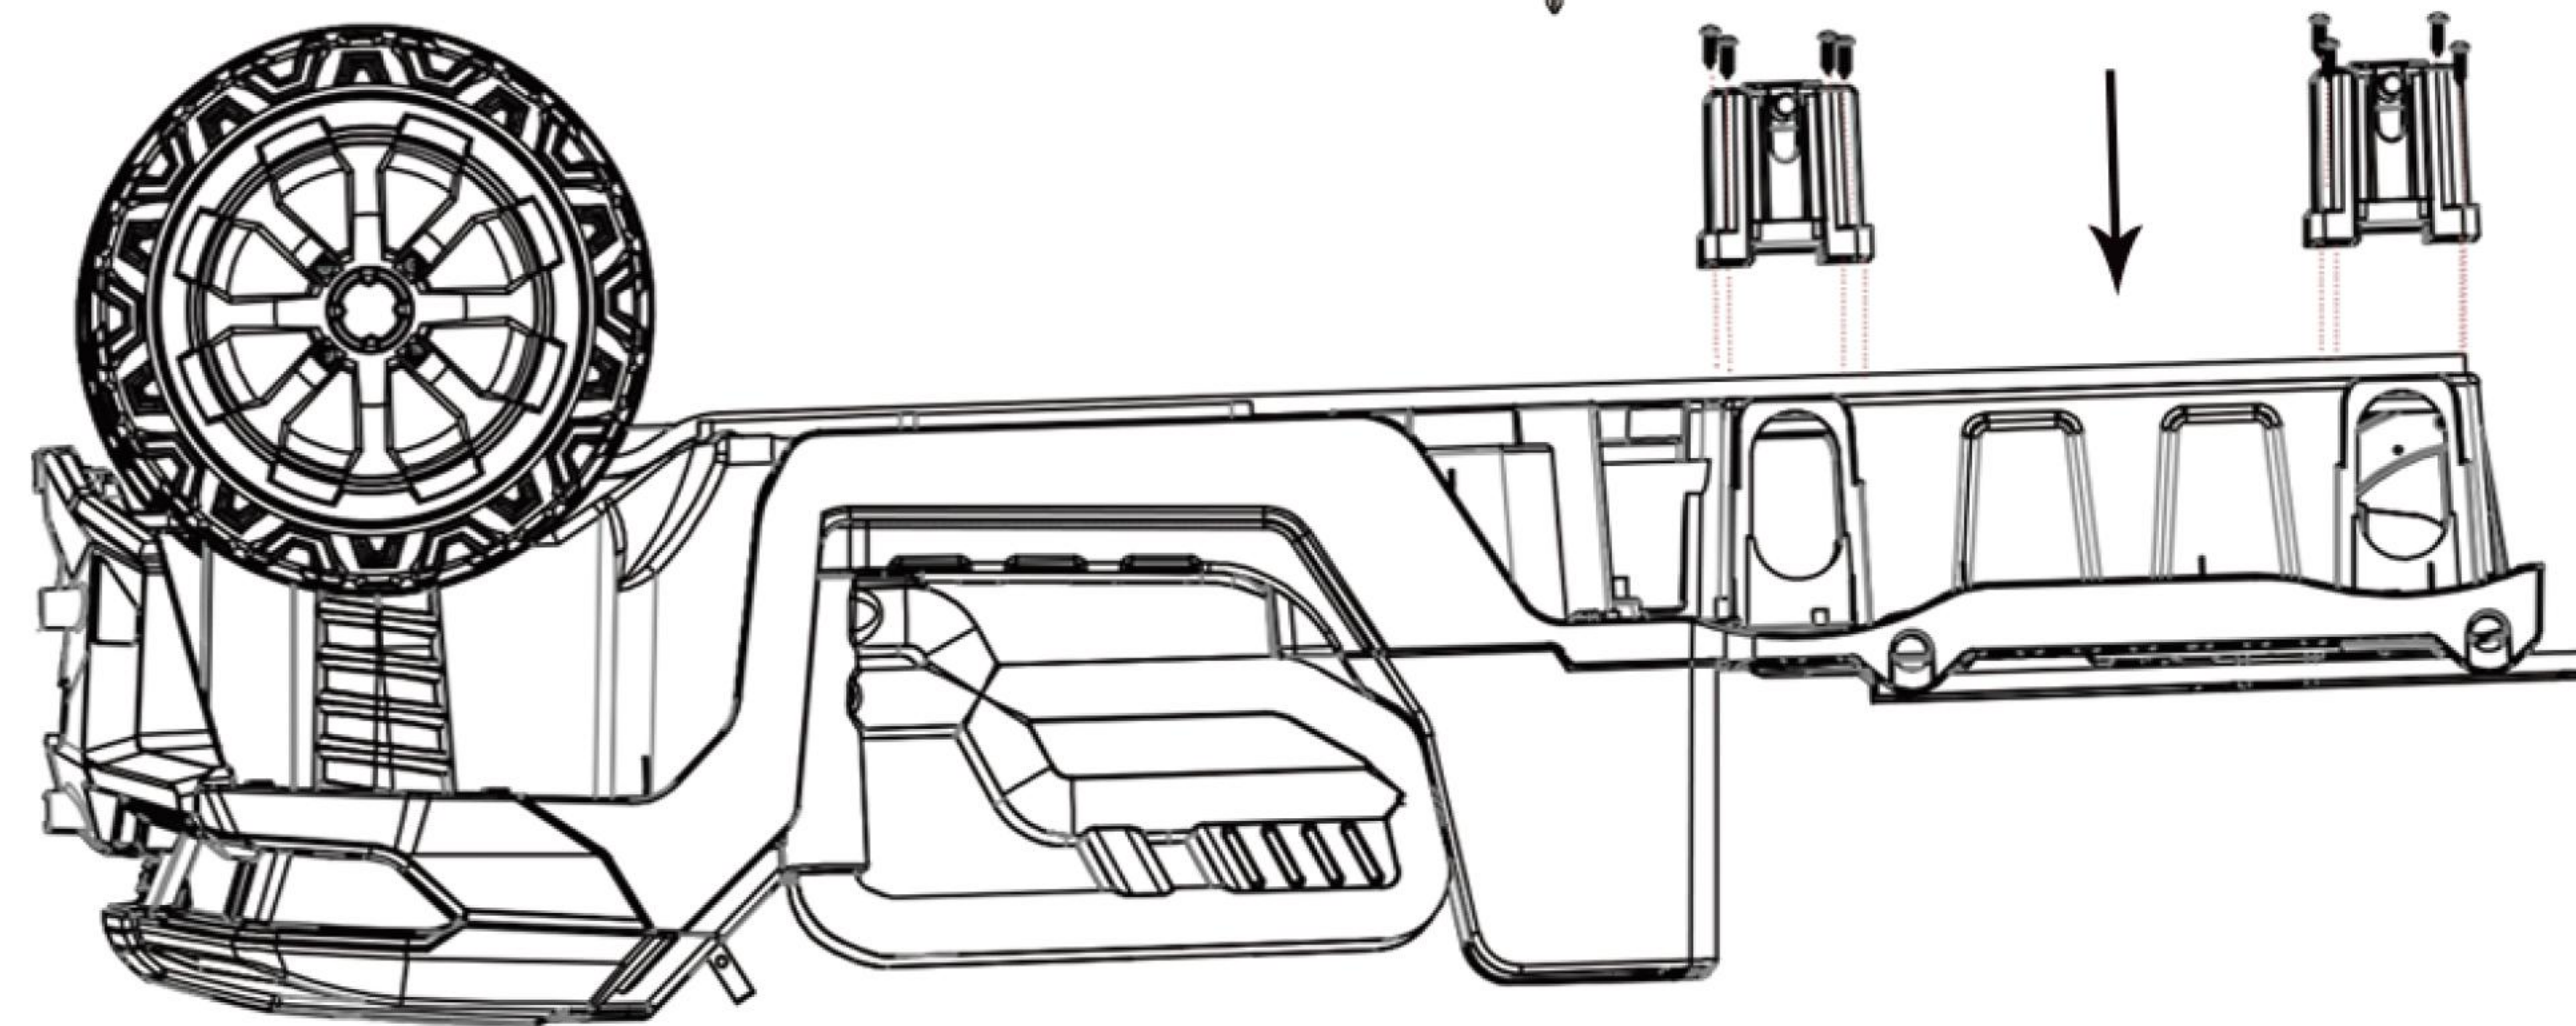

4


Installing the Rear Drive Motor/Rear Wheels:

(1) Use a wrench to remove the $\Phi 10$ nuts on the rear axle and take out the M10 flat washers.

(2) Install the rear drive motors on the rear axle (Note: Ensure that the markings L1, L2, R1, and R2 on the rear drive motor match the corresponding markings on the vehicle body for correct installation).

(3) Install the rear wheels on the rear axle, placing an M10 flat washer and $\Phi 10$ nuts on each side. Tighten the nuts with a wrench and snap the axle covers onto the rear wheels.

M10 Flat Washer

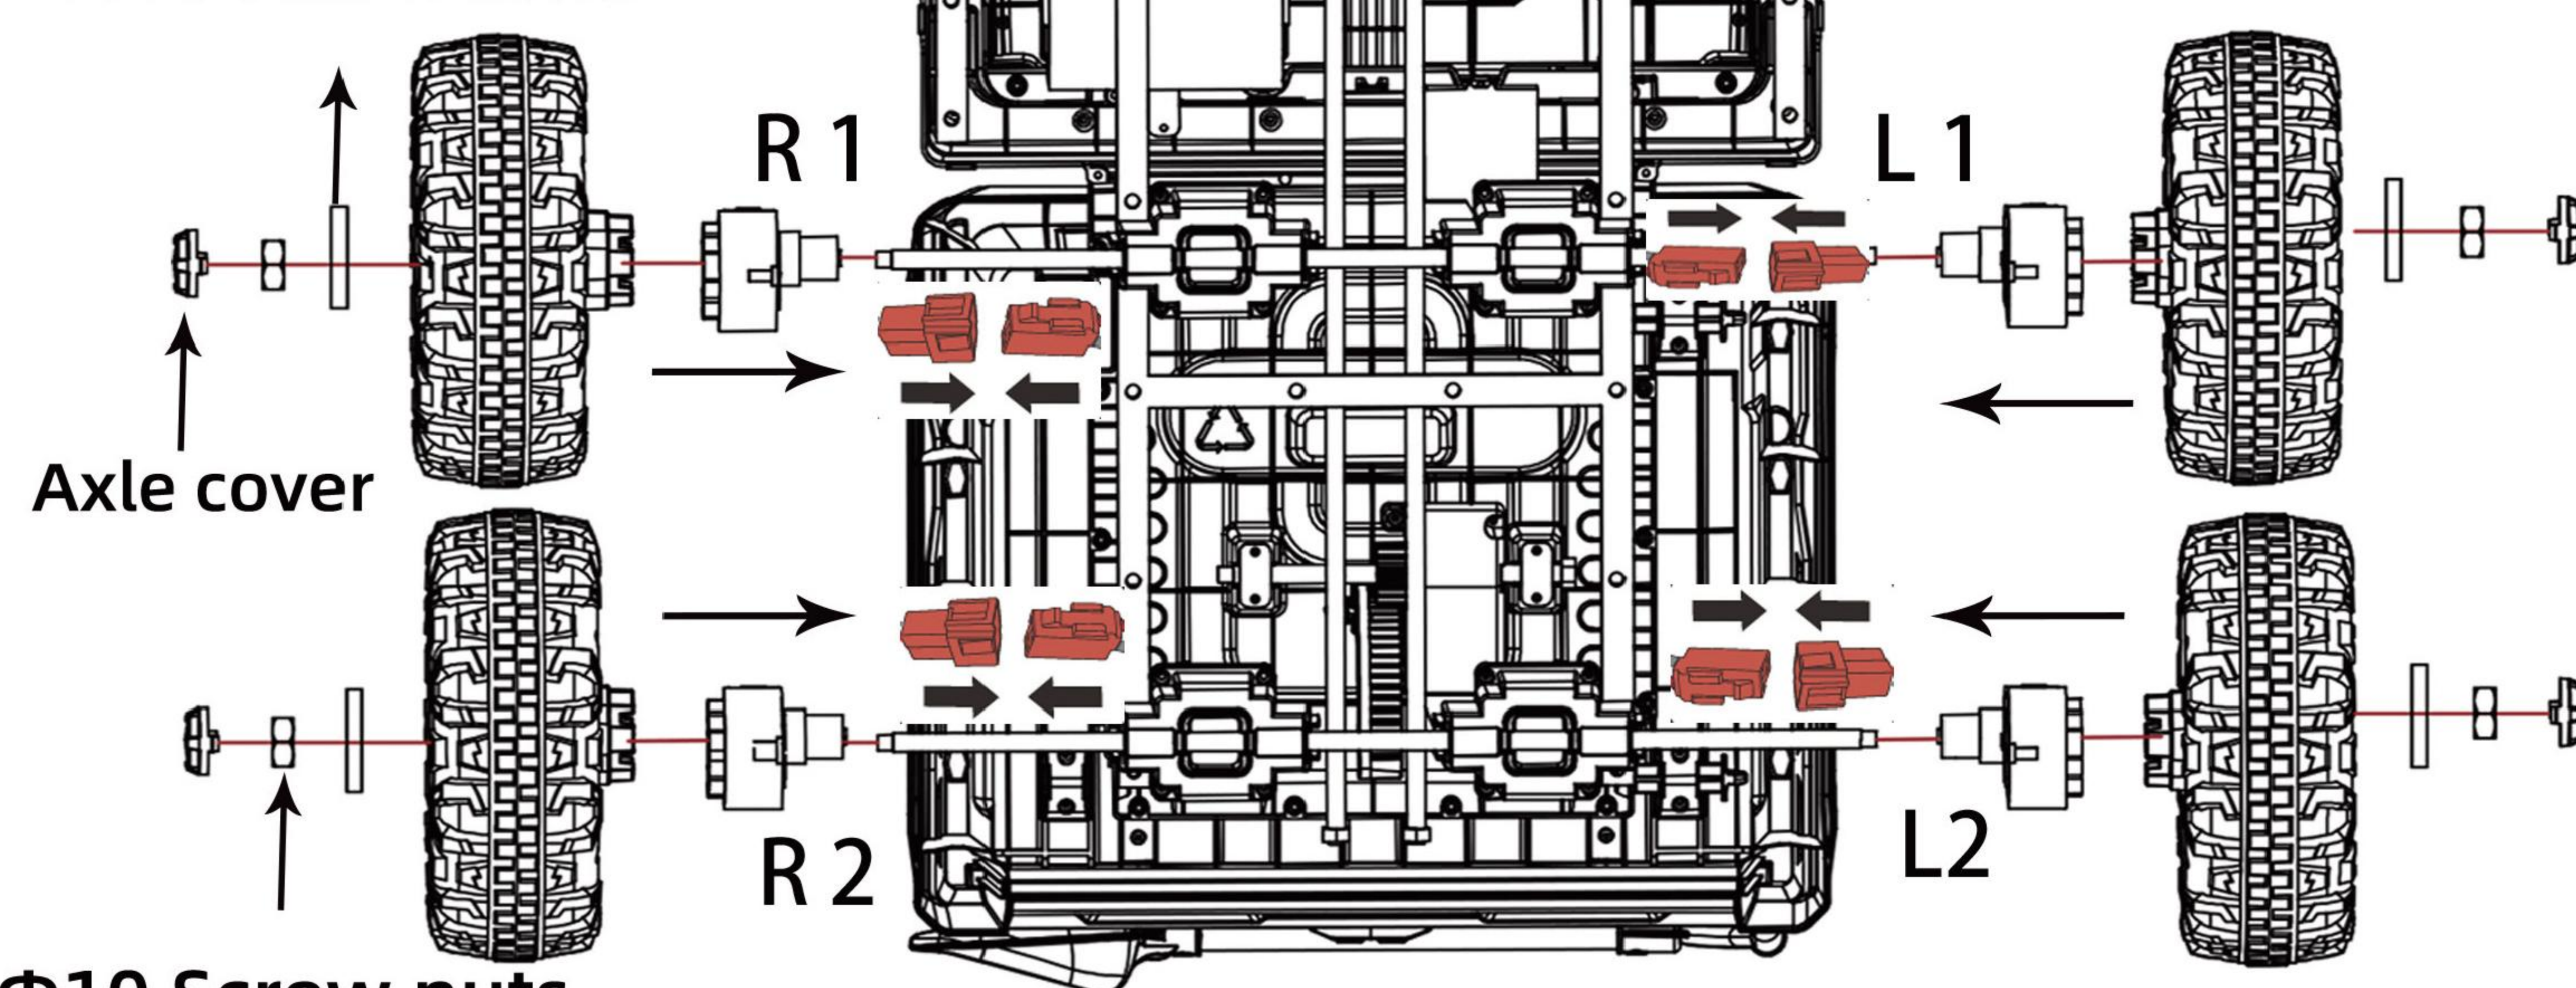

Φ10 Screw nuts

9




Installing the Rear Trunk/Trunk Lock Pin/Trunk Handle/Rear Trunk Cover/Shovel:

(1) Install the rear trunk at the corresponding position on the back of the vehicle body, then secure it with the trunk lock pin.

(2) Use a Phillips screwdriver and 4*14 round head self-tapping screws to secure the trunk to the lifting device. **(Warning: Remove the trunk lock pin before starting the dump. When not using the dump function, re-secure the trunk lock pin in place.)**

(3) Install the handle at the appropriate position on the trunk and then install the rear trunk cover (Note: When installing the rear trunk cover, install one side first before installing the other side).


(4) Snap the shovel into the corresponding position on the rear trunk cover.

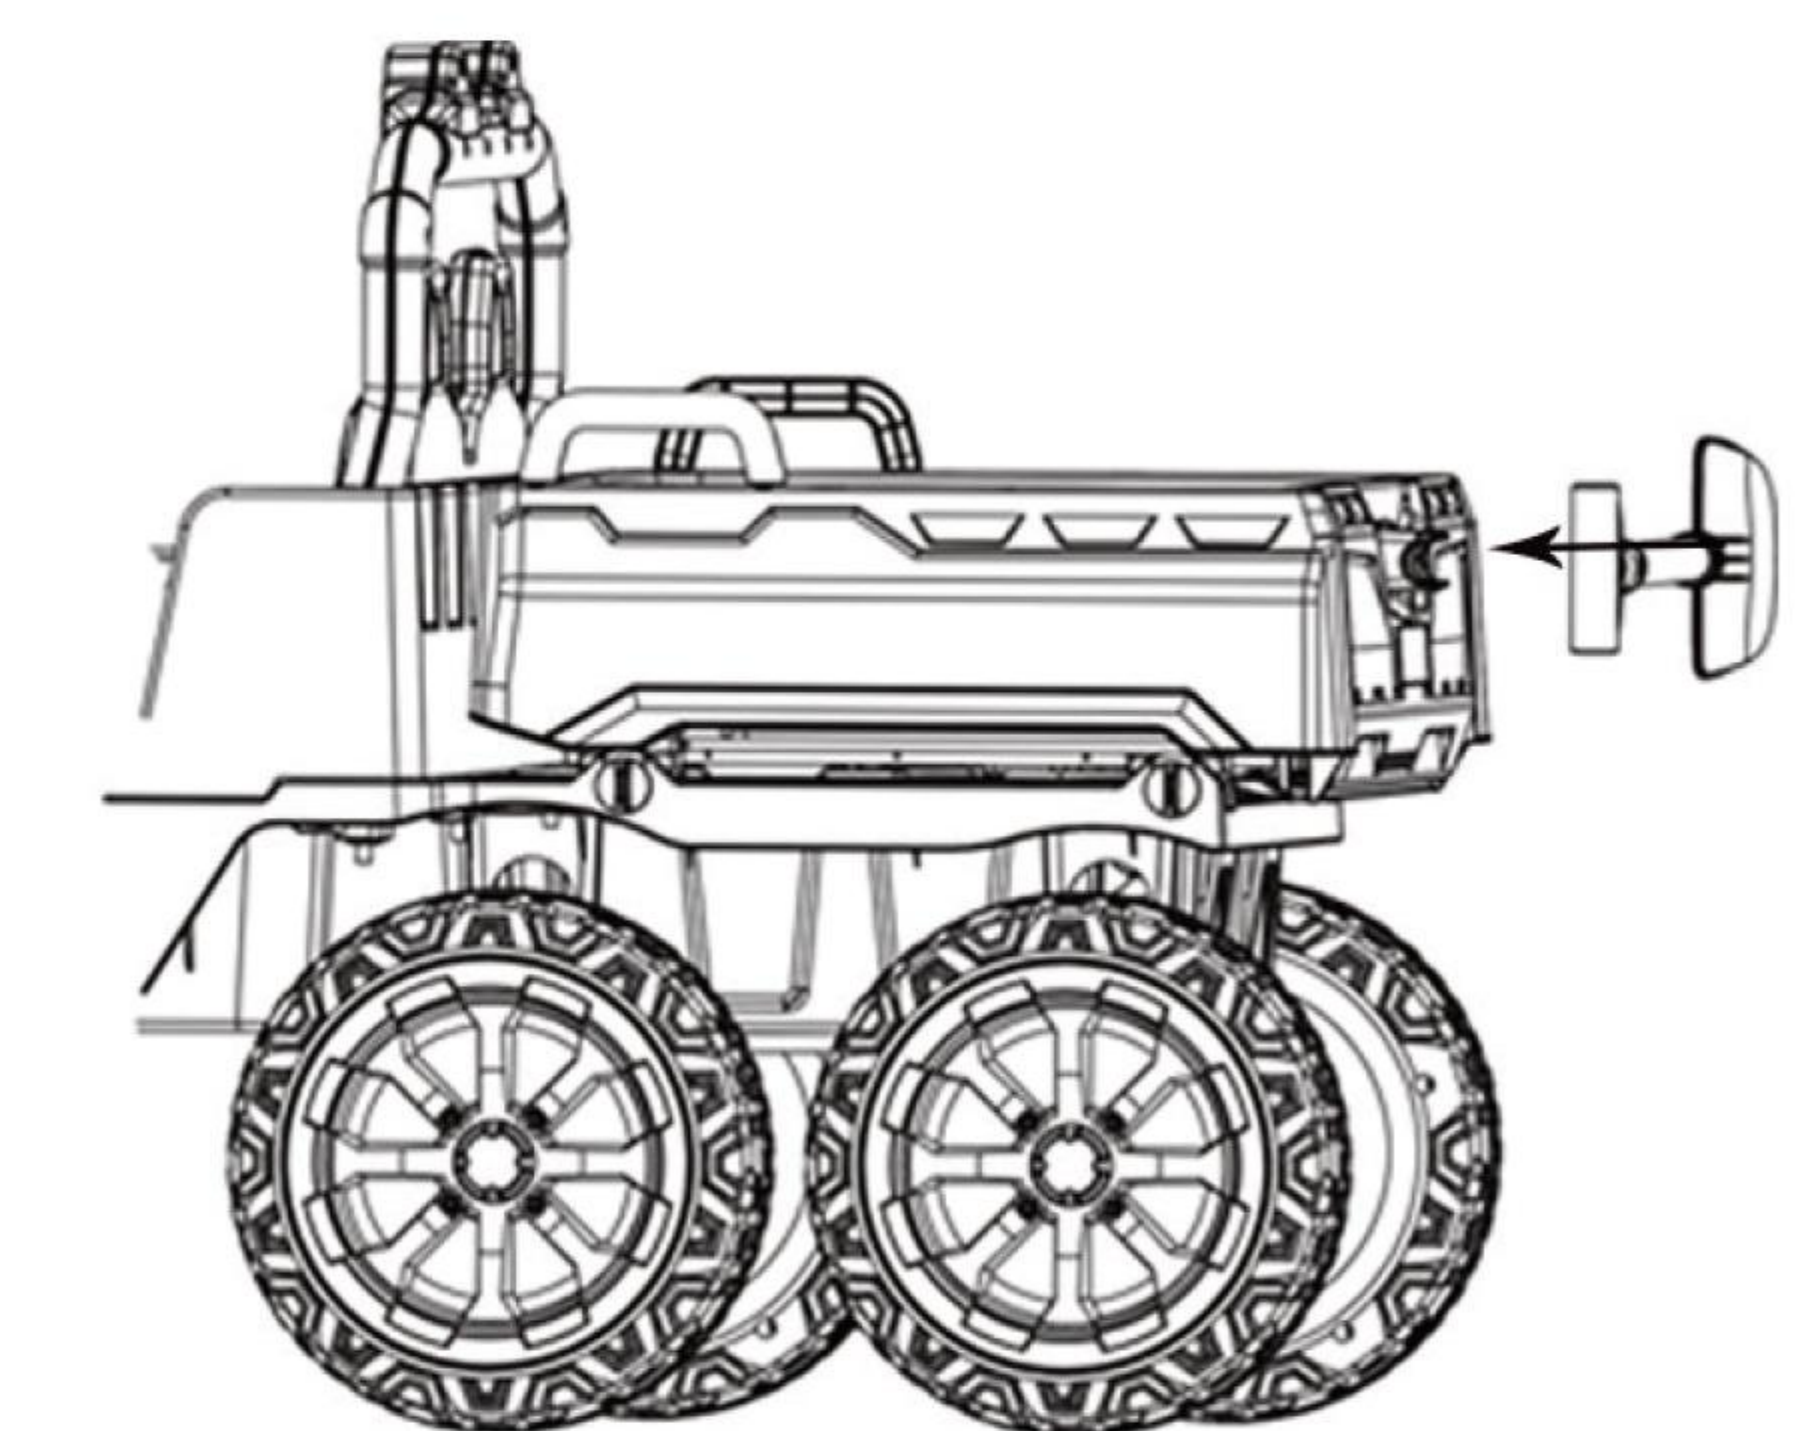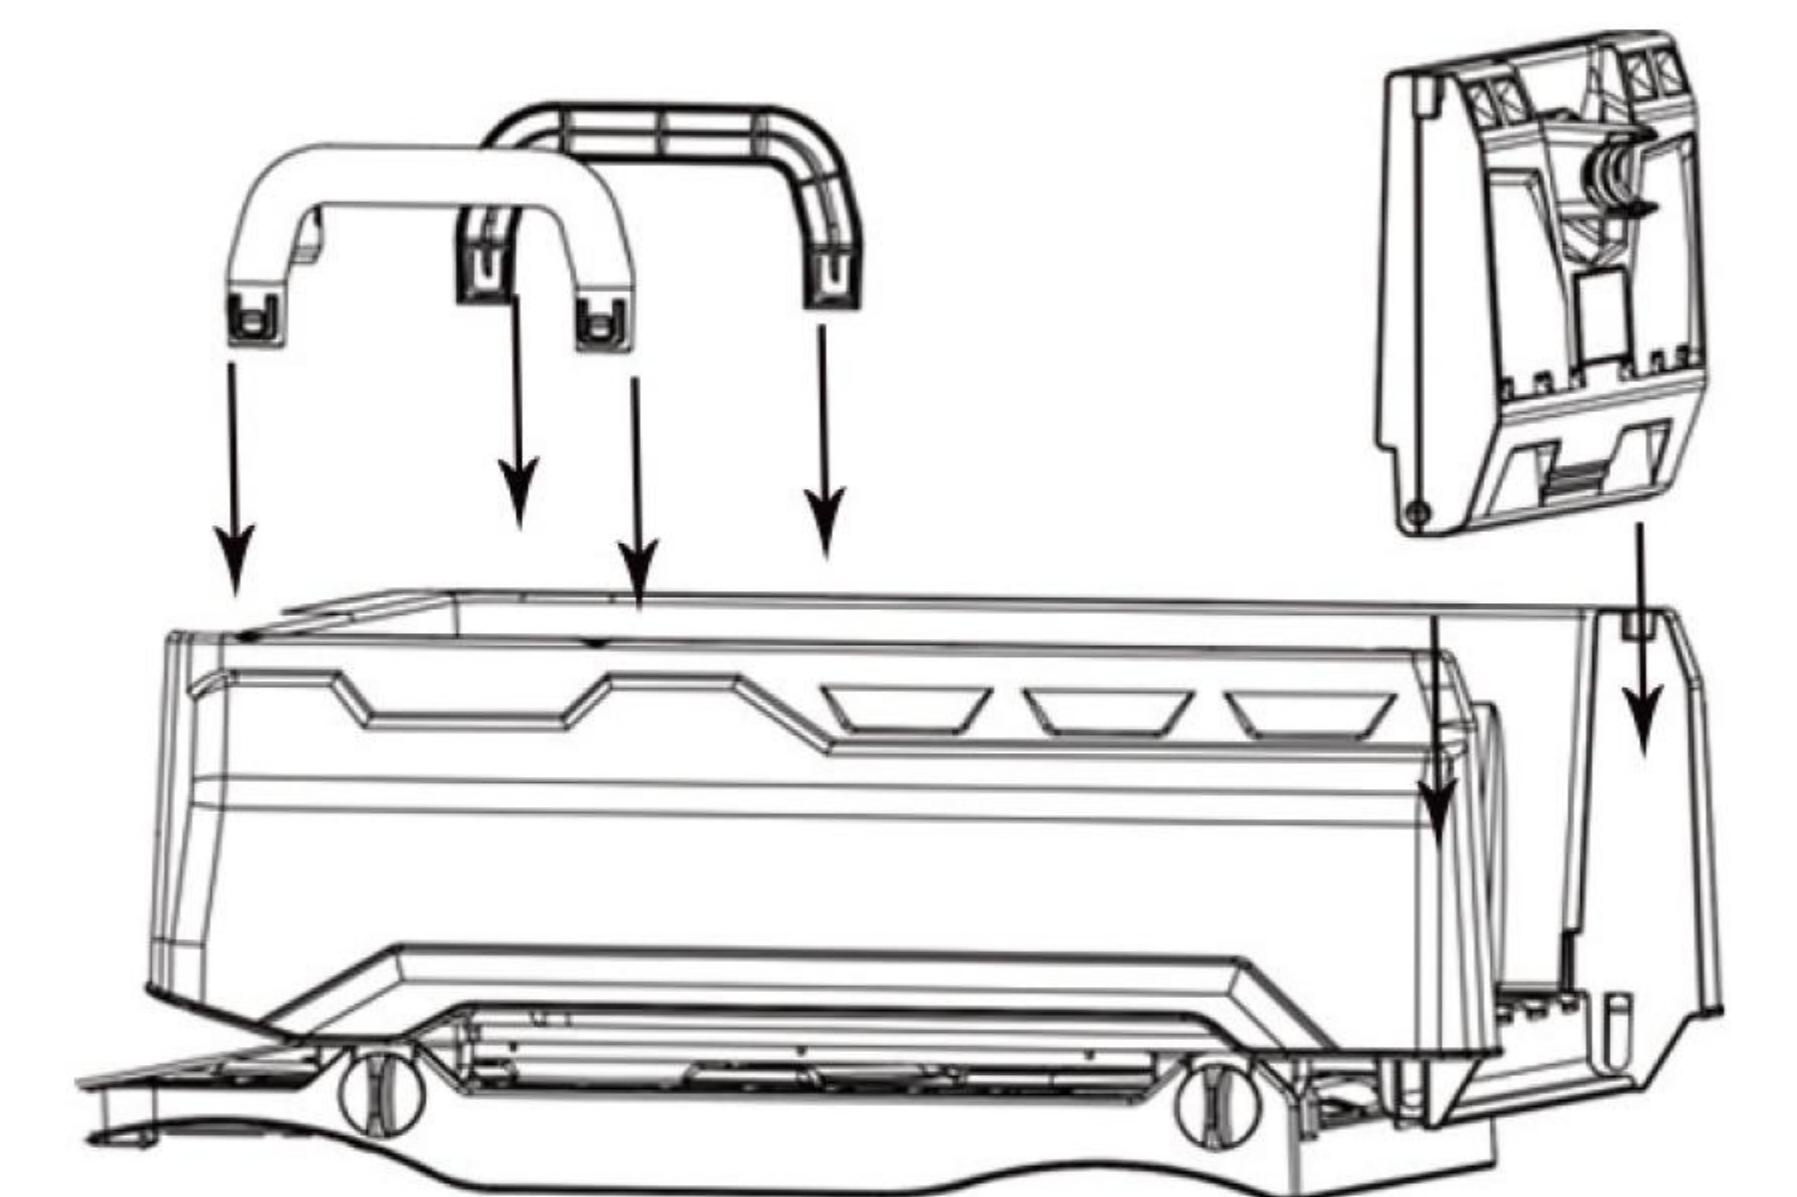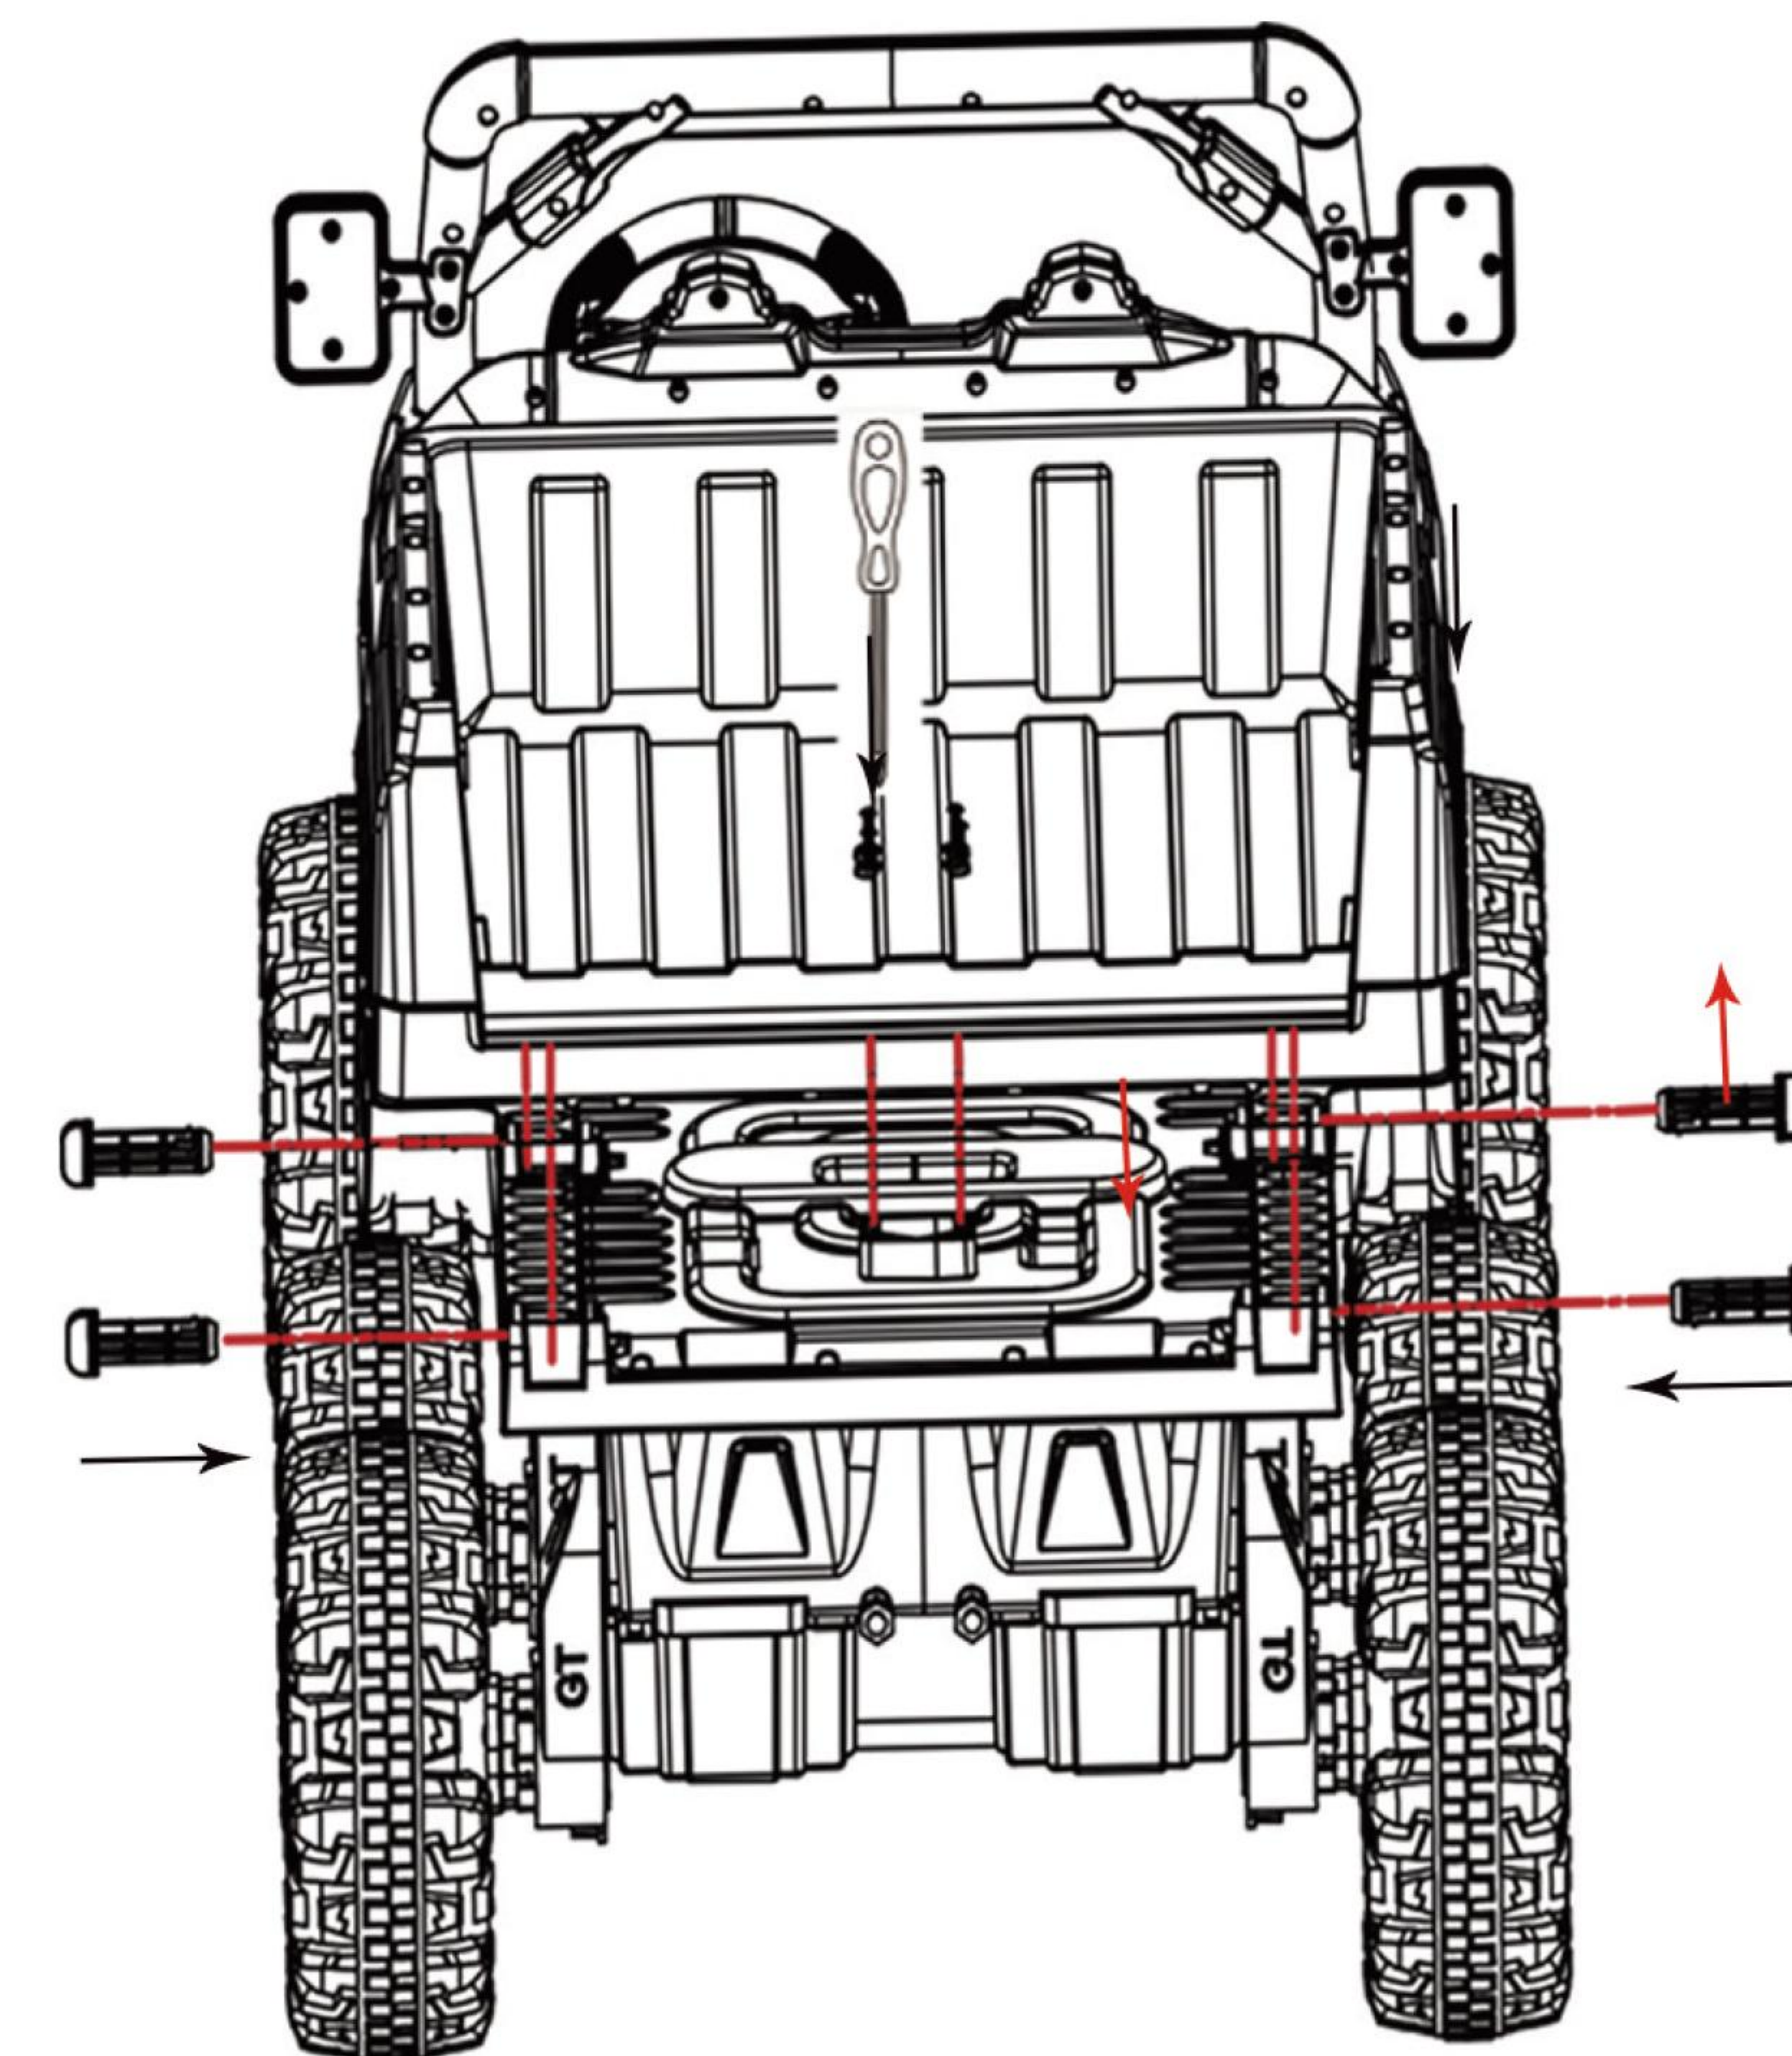

6

Installing the Seat Support/Seat/Seat Backrest:


- (1) Install the seat support at the appropriate position under the seat.
- (2) Install the seat backrest at the corresponding position on the rear of the vehicle body.
- (3) Install the seat at the appropriate position, securing it with 2 4*12 round head self-tapping screws using a Phillips screwdriver.

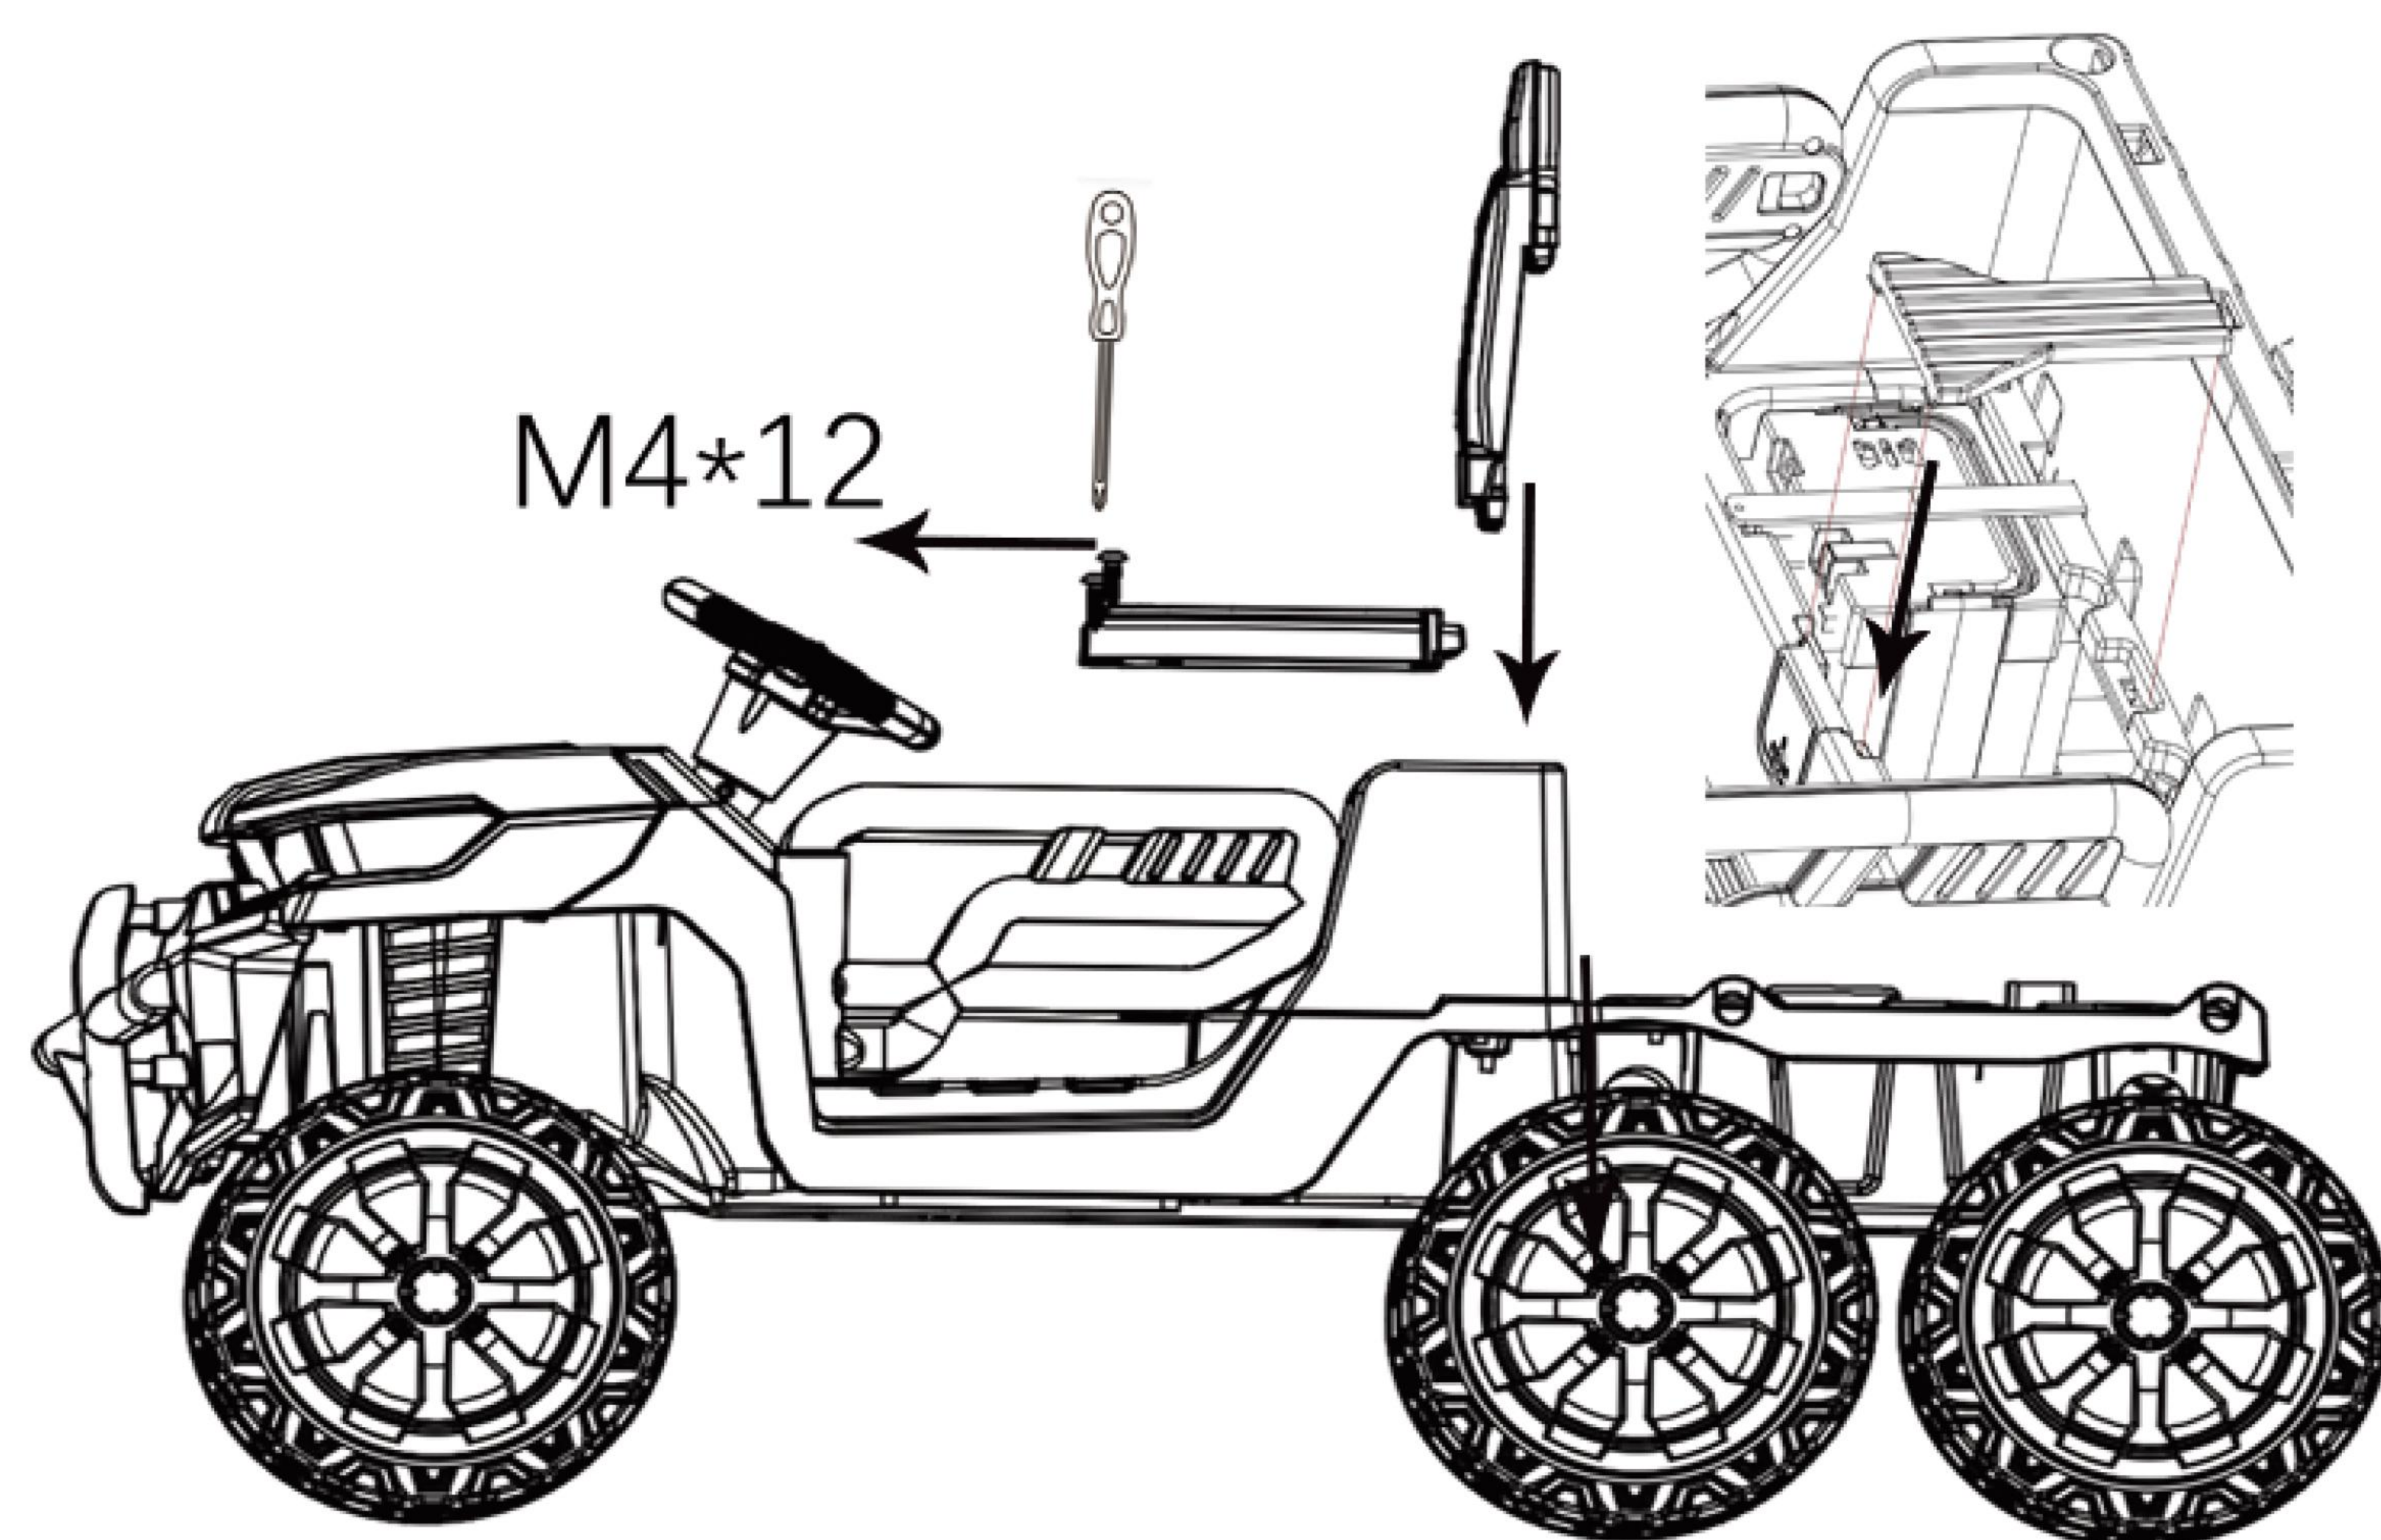

7

Installing the Rear Trunk Base and Rearview Mirror:


- (1) First, install the rear trunk base at the corresponding position on the bottom of the rear trunk, and secure it with 8 4*12 round head self-tapping screws using a Phillips screwdriver.
- (2) Install the rearview mirrors on both sides of the front windshield, securing them with 4 4*12 round head self-tapping screws using a Phillips screwdriver.

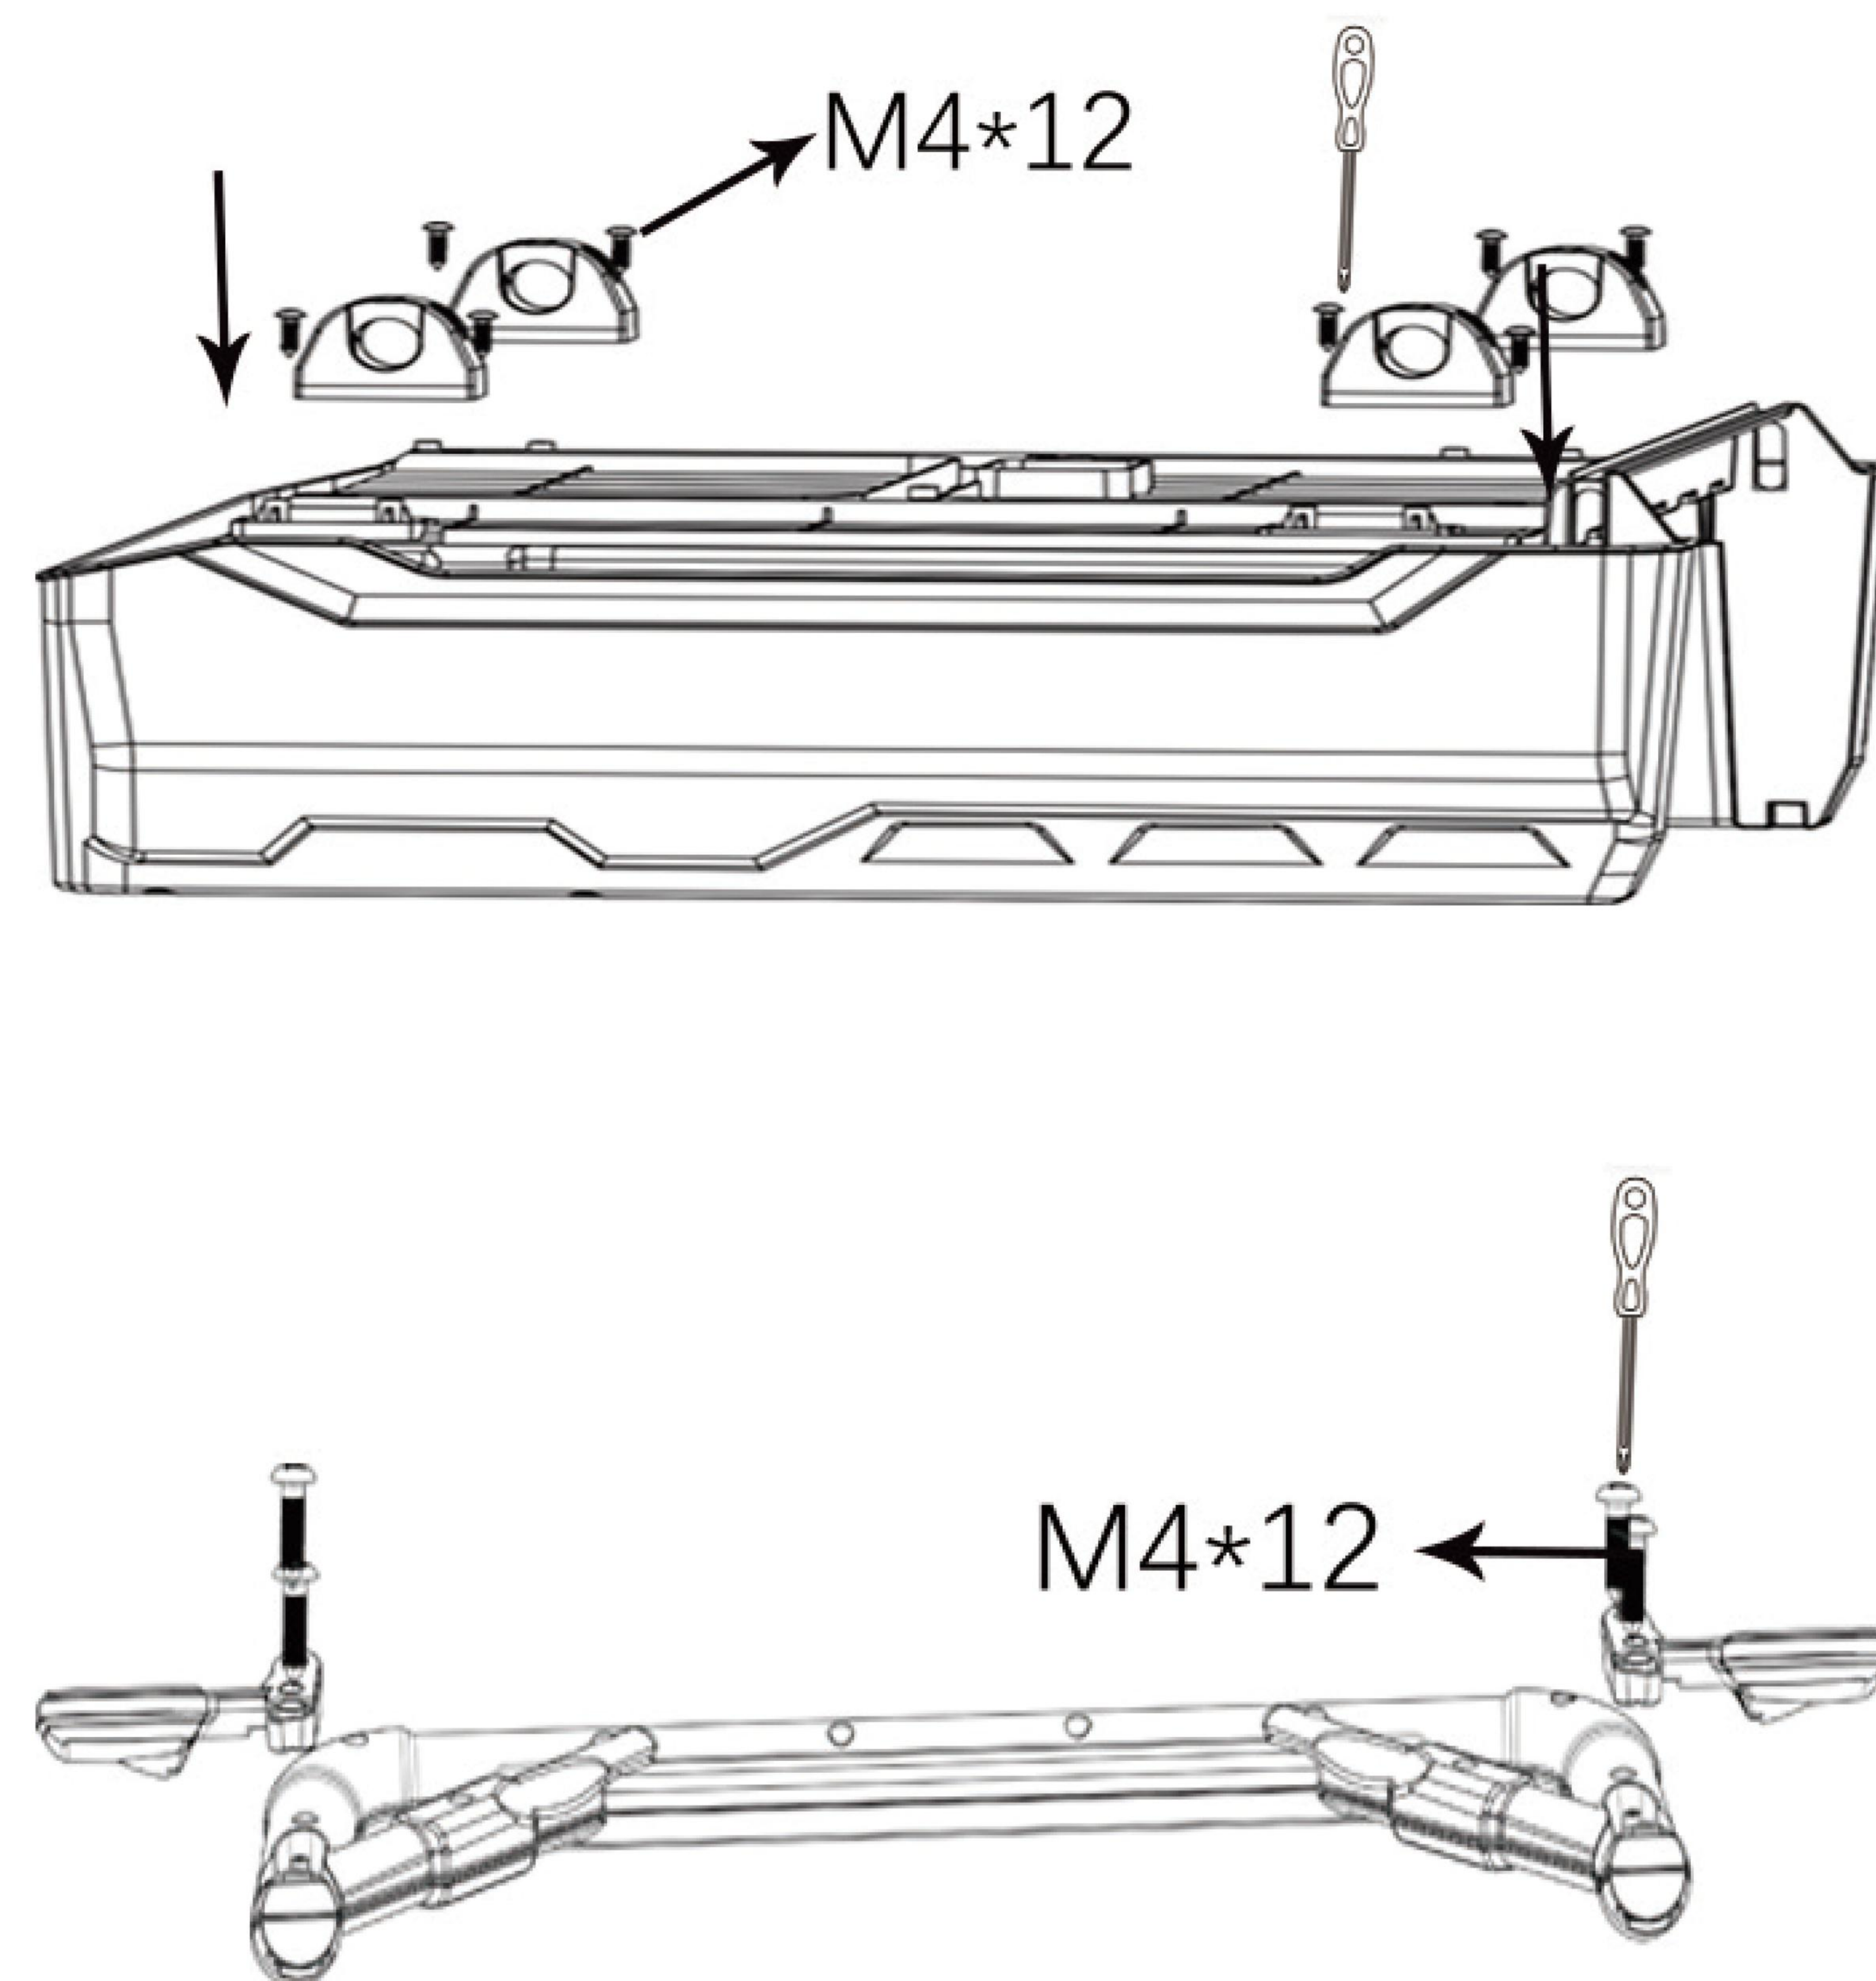

8

Installing the Rear Spoiler/Front Windshield:



- (1) Snap the front windshield into the corresponding position on the front of the vehicle.
- (2) Snap the rear spoiler into the corresponding position on the rear of the vehicle.

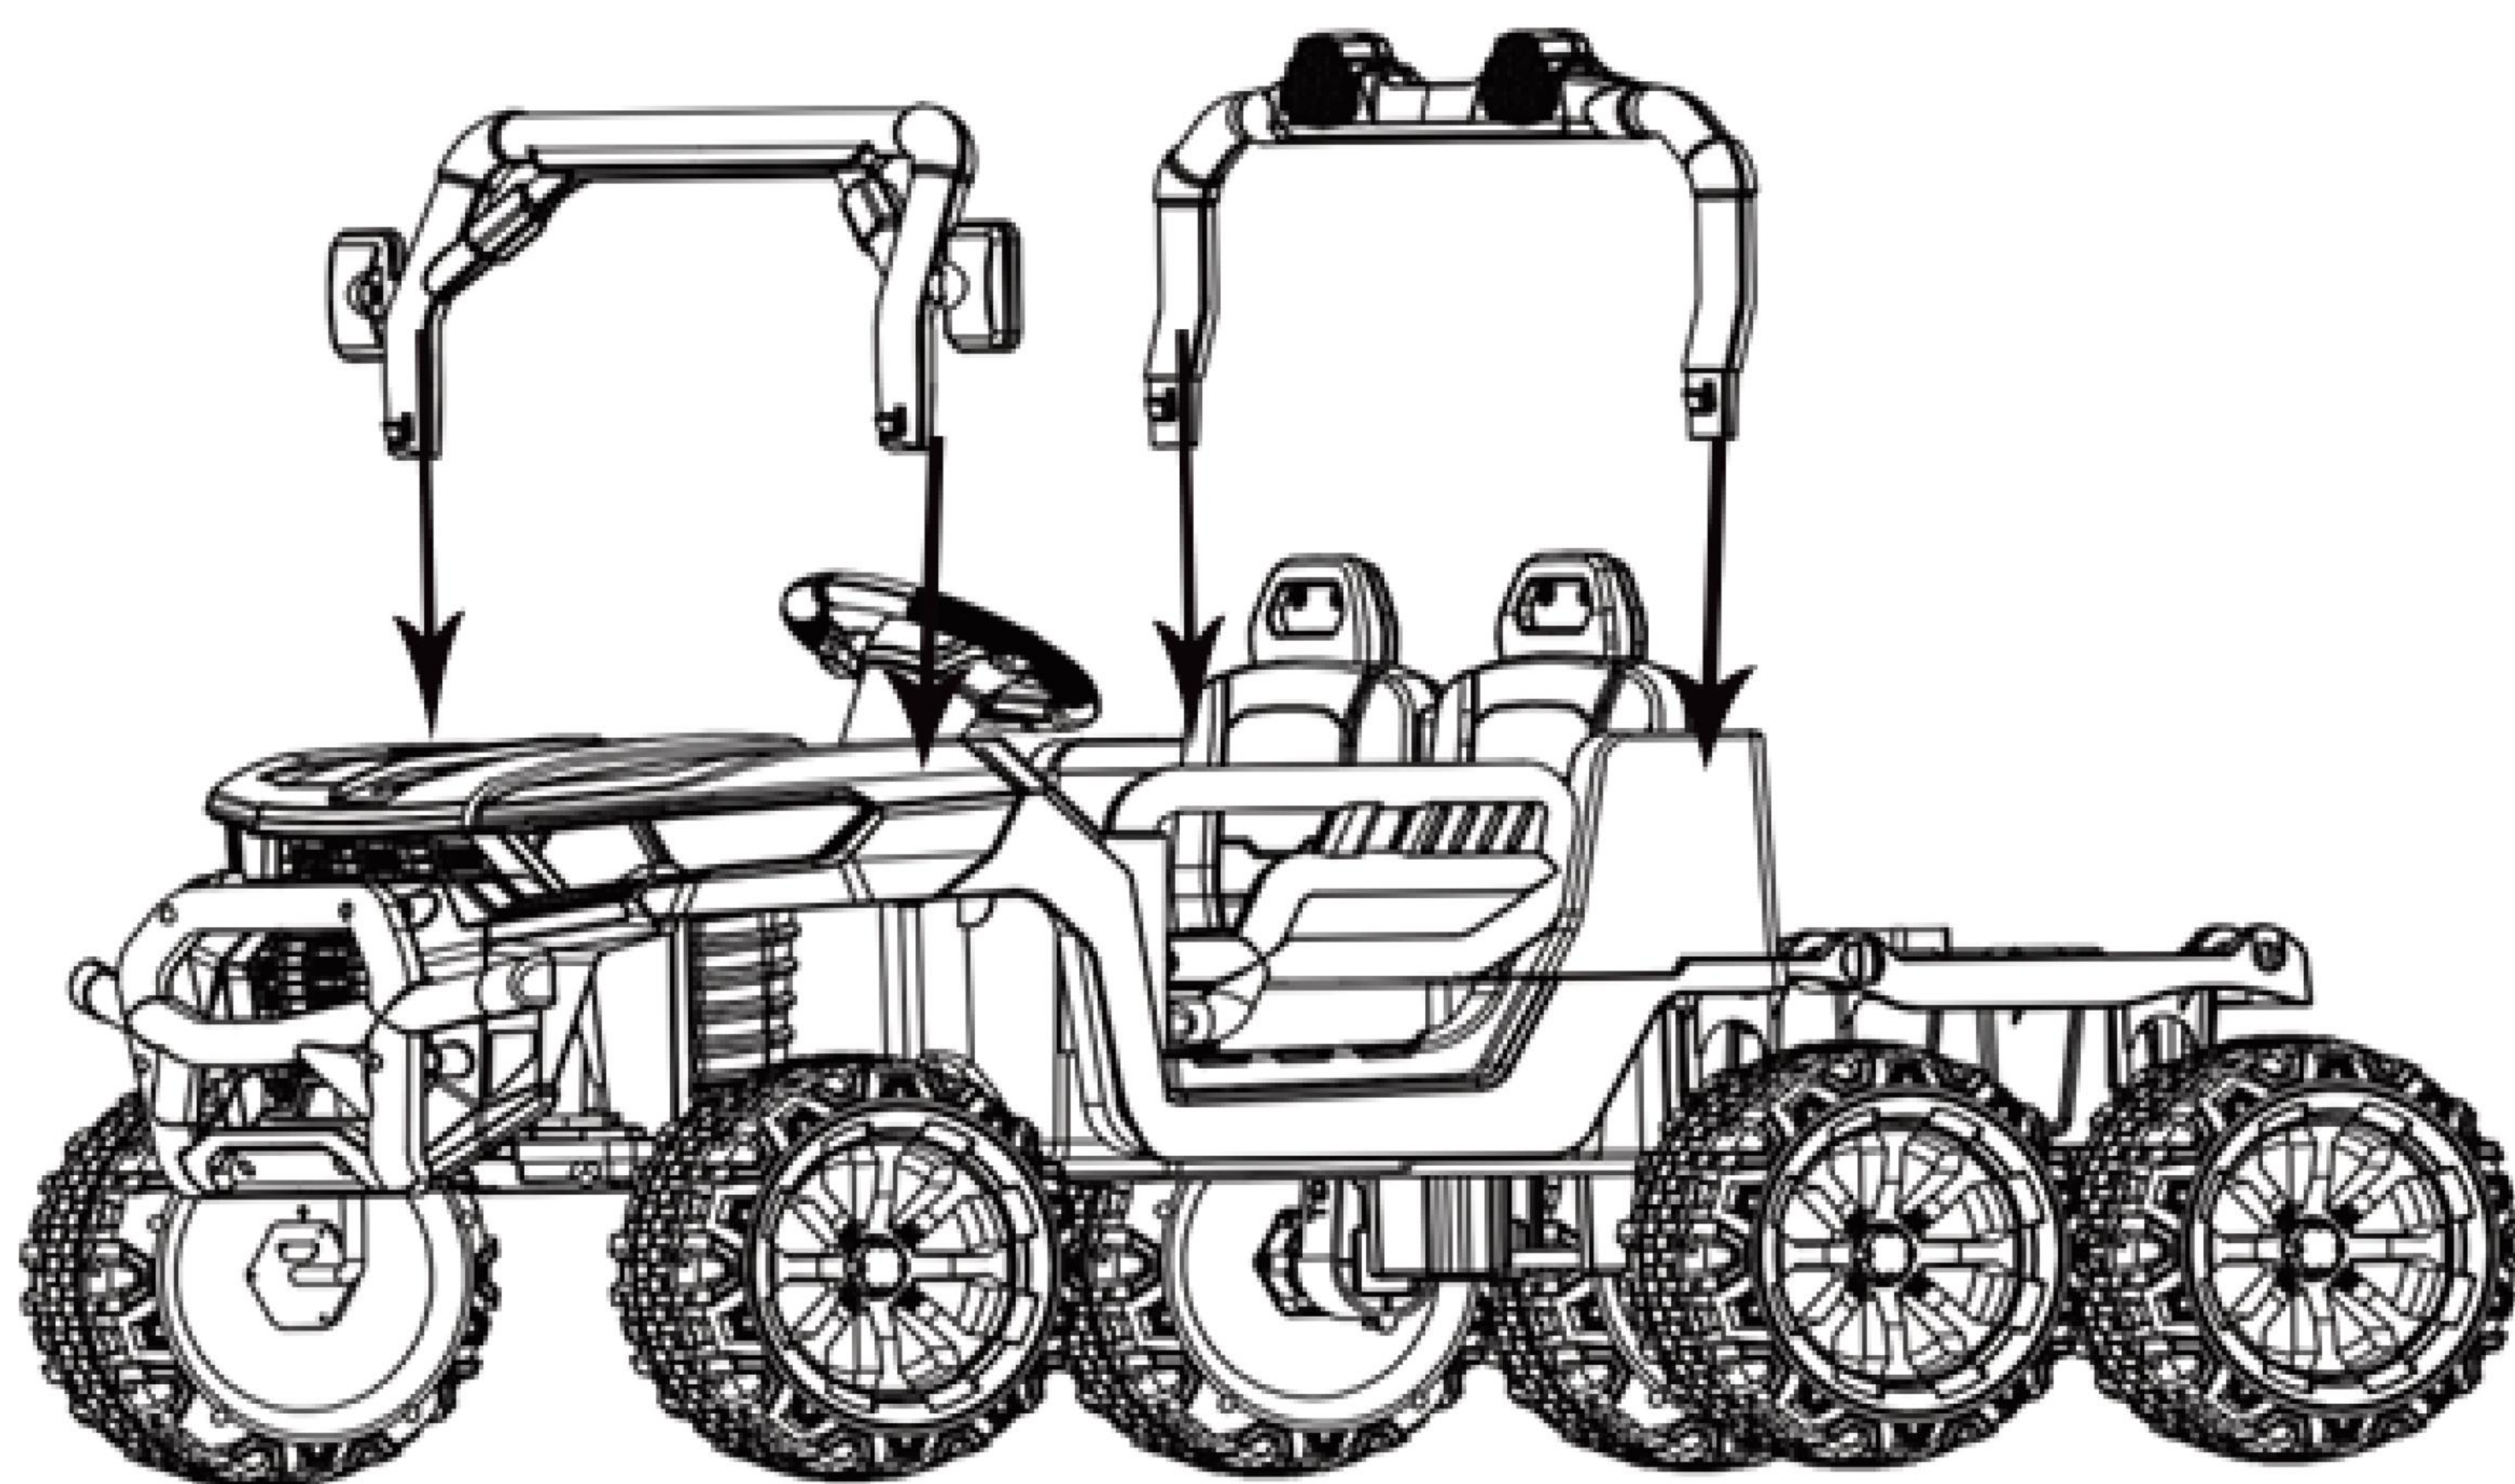

5


Installing the Steering Wheel/Front Bumper:

- (1) Use a Phillips screwdriver to remove the 5*40 screw rod from the steering wheel.
- (2) Connect the wires on the steering wheel to the instrument panel wires, then install the steering wheel onto the steering rod, and secure it by inserting the 5*40 screw rod back into the steering wheel and tightening it with a Phillips screwdriver.
- (3) Install the front bumper at the corresponding position on the front of the vehicle and secure it with 6 4*14 round head self-tapping screws using a Phillips screwdriver.

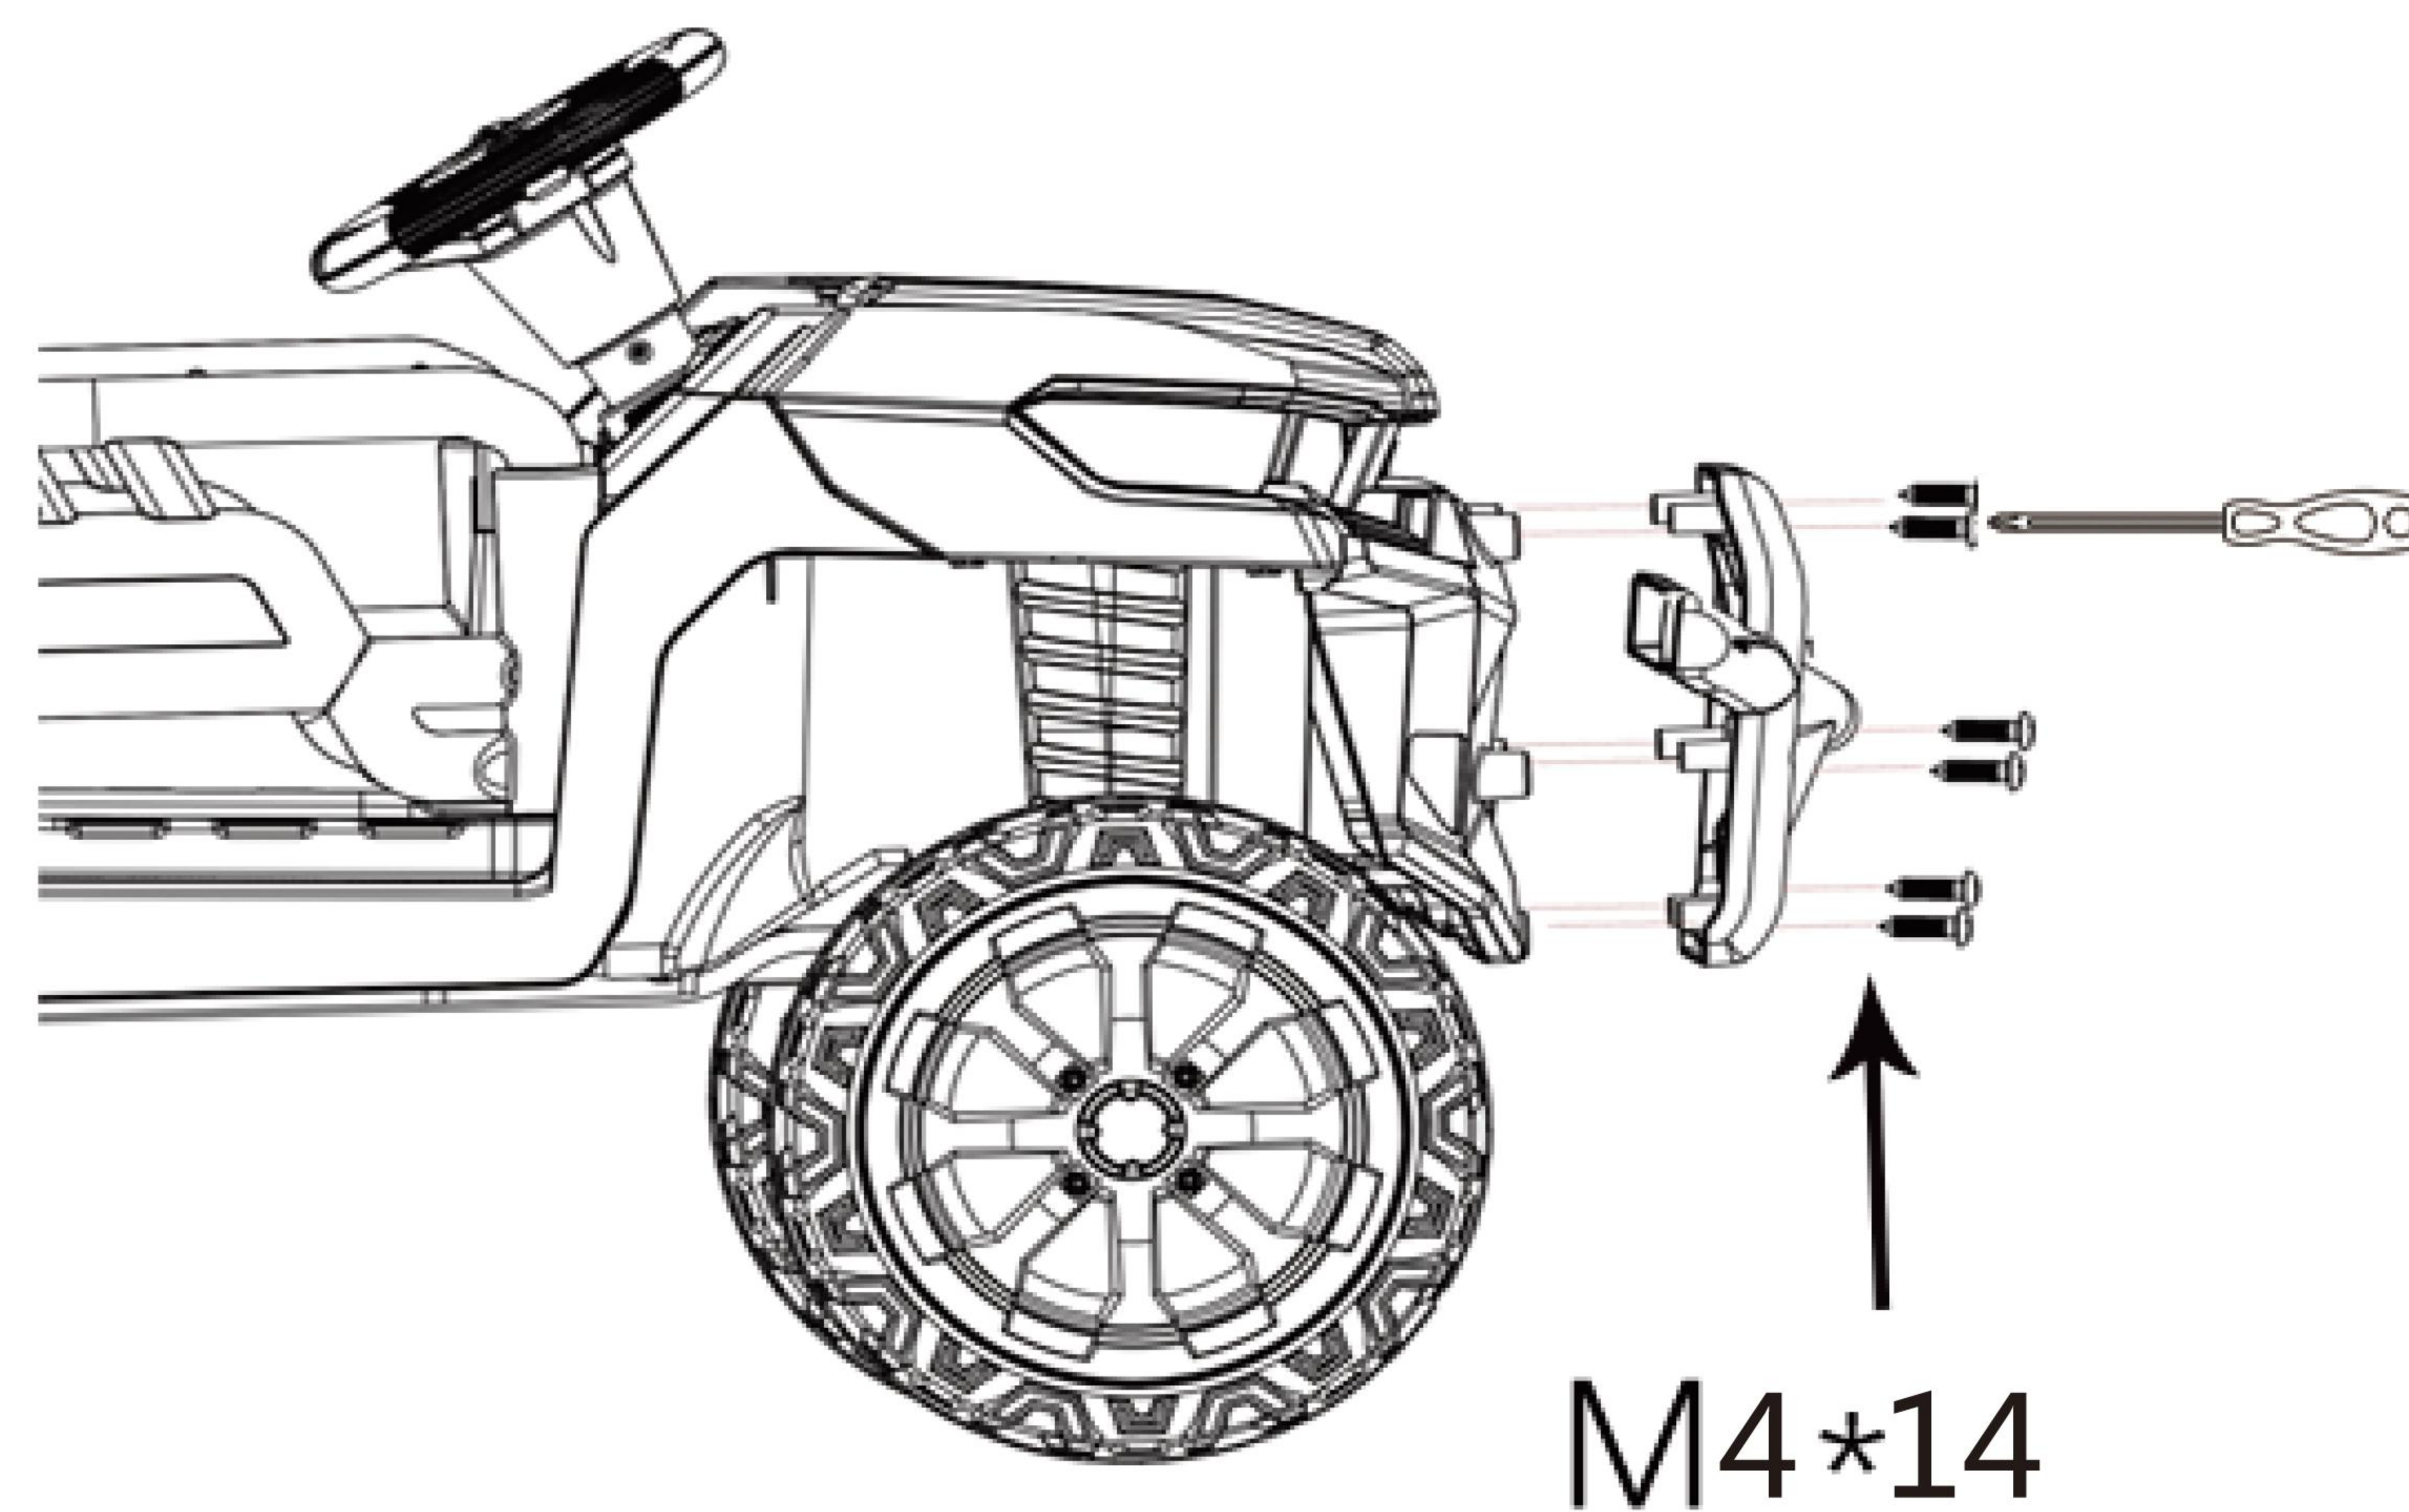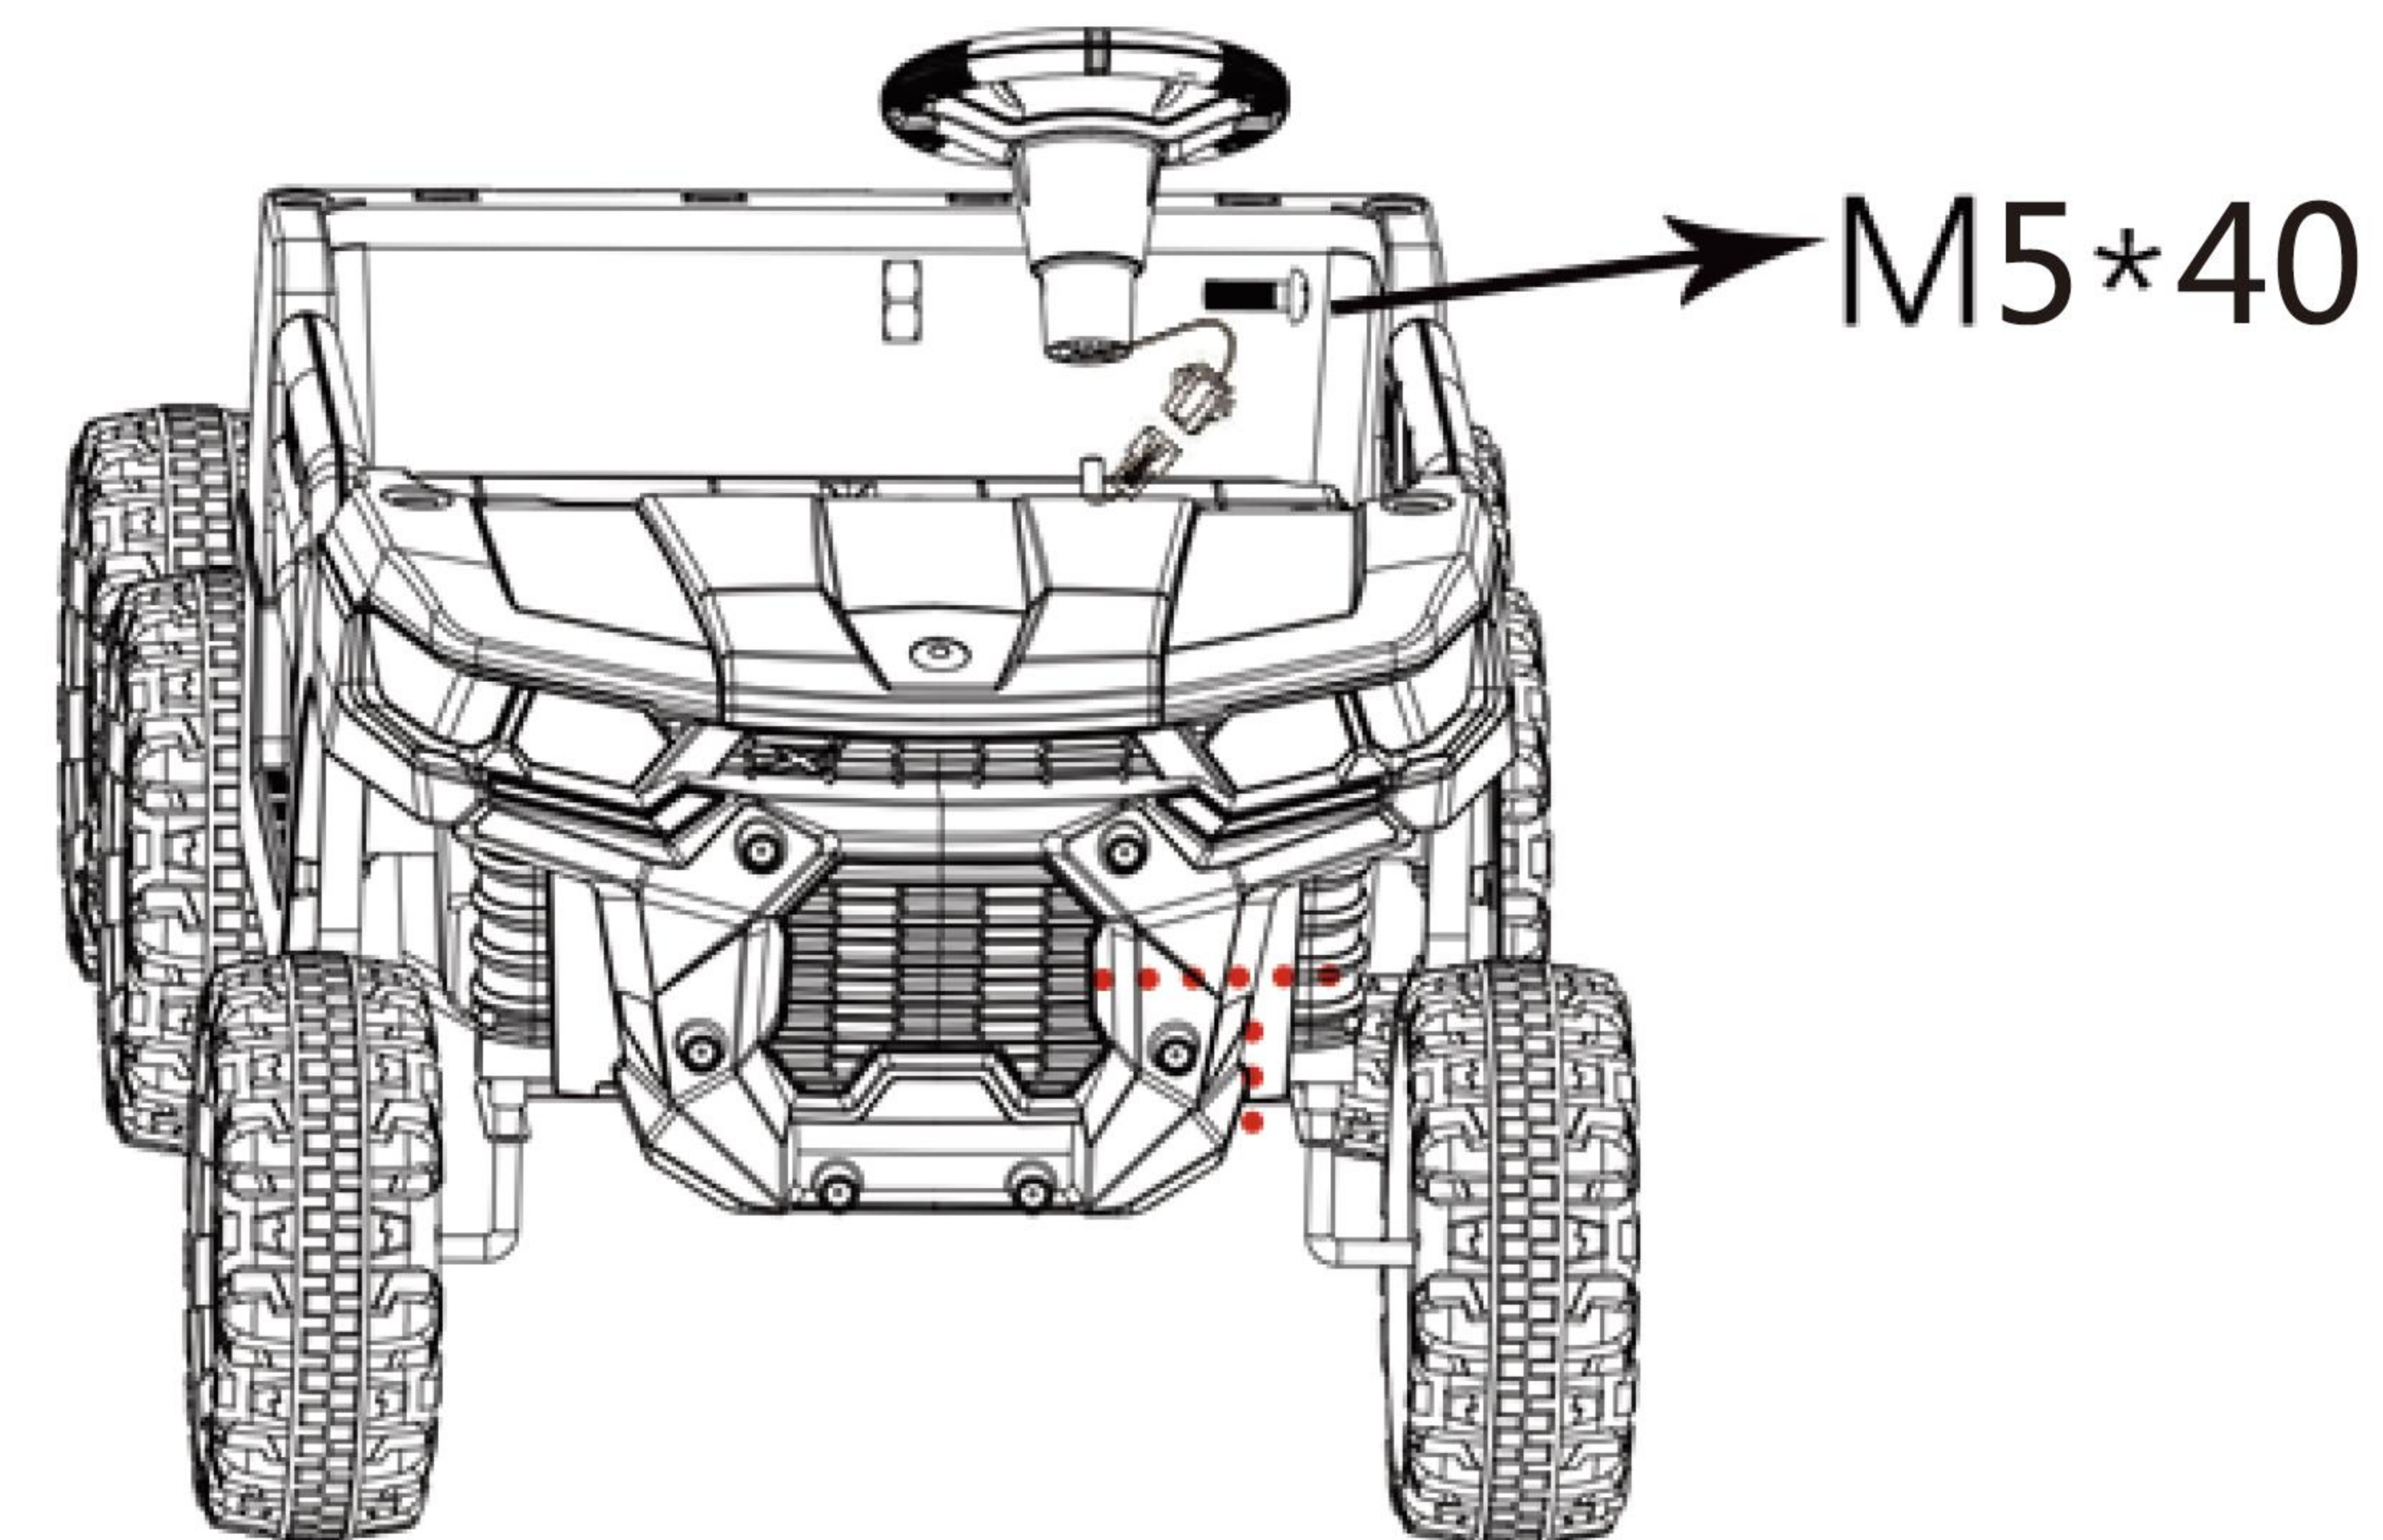


CHARGING INSTRUCTIONS

Note: The removal and installation of the seat and battery connection must be done by an adult.

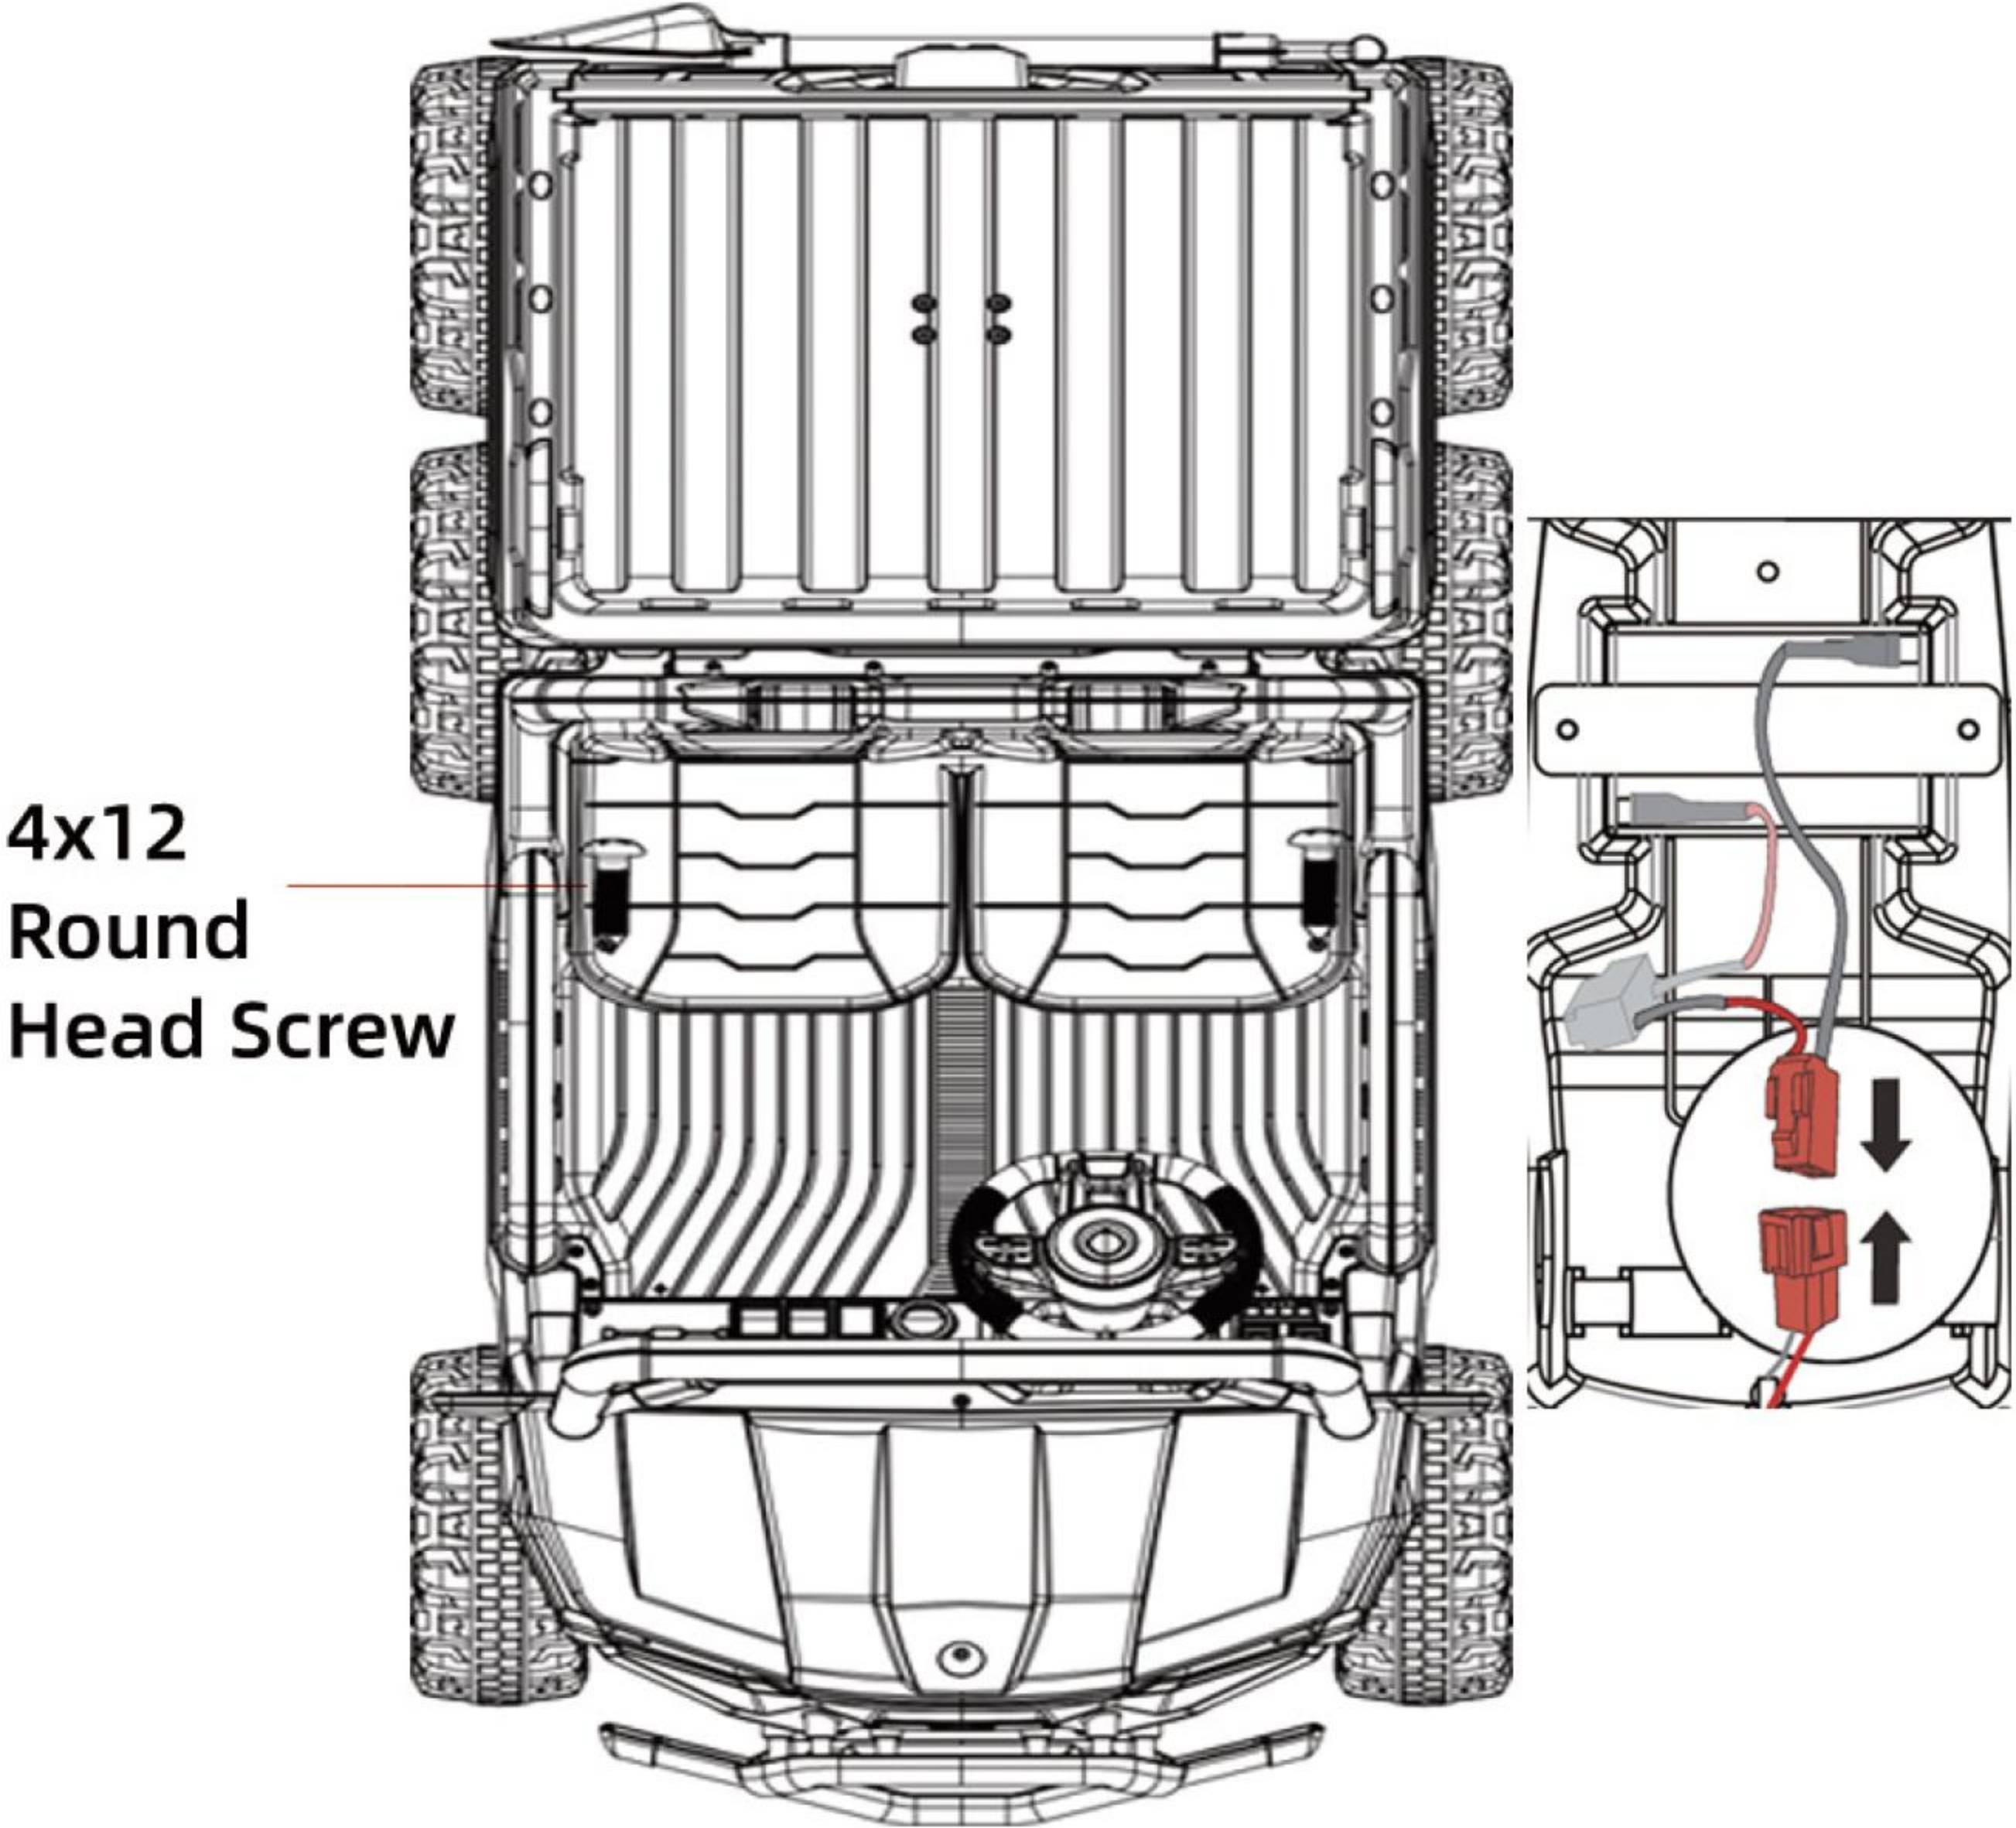



Connecting the Battery Power:
Before first use and battery charging, you must connect the battery power connector under the seat. To do this, use a Phillips screwdriver to loosen and remove the seat screws, then remove the seat. Underneath the seat, you will find two red plugs from two red cables, as shown in the diagram. Align the terminals and press them together until a secure connection is made. (The same steps apply when replacing the seat and battery.) Then, tighten the screws with a Phillips screwdriver.

Caution: Only use the original charger and battery provided with this vehicle. For safety reasons, all battery charging should be carried out by an adult.

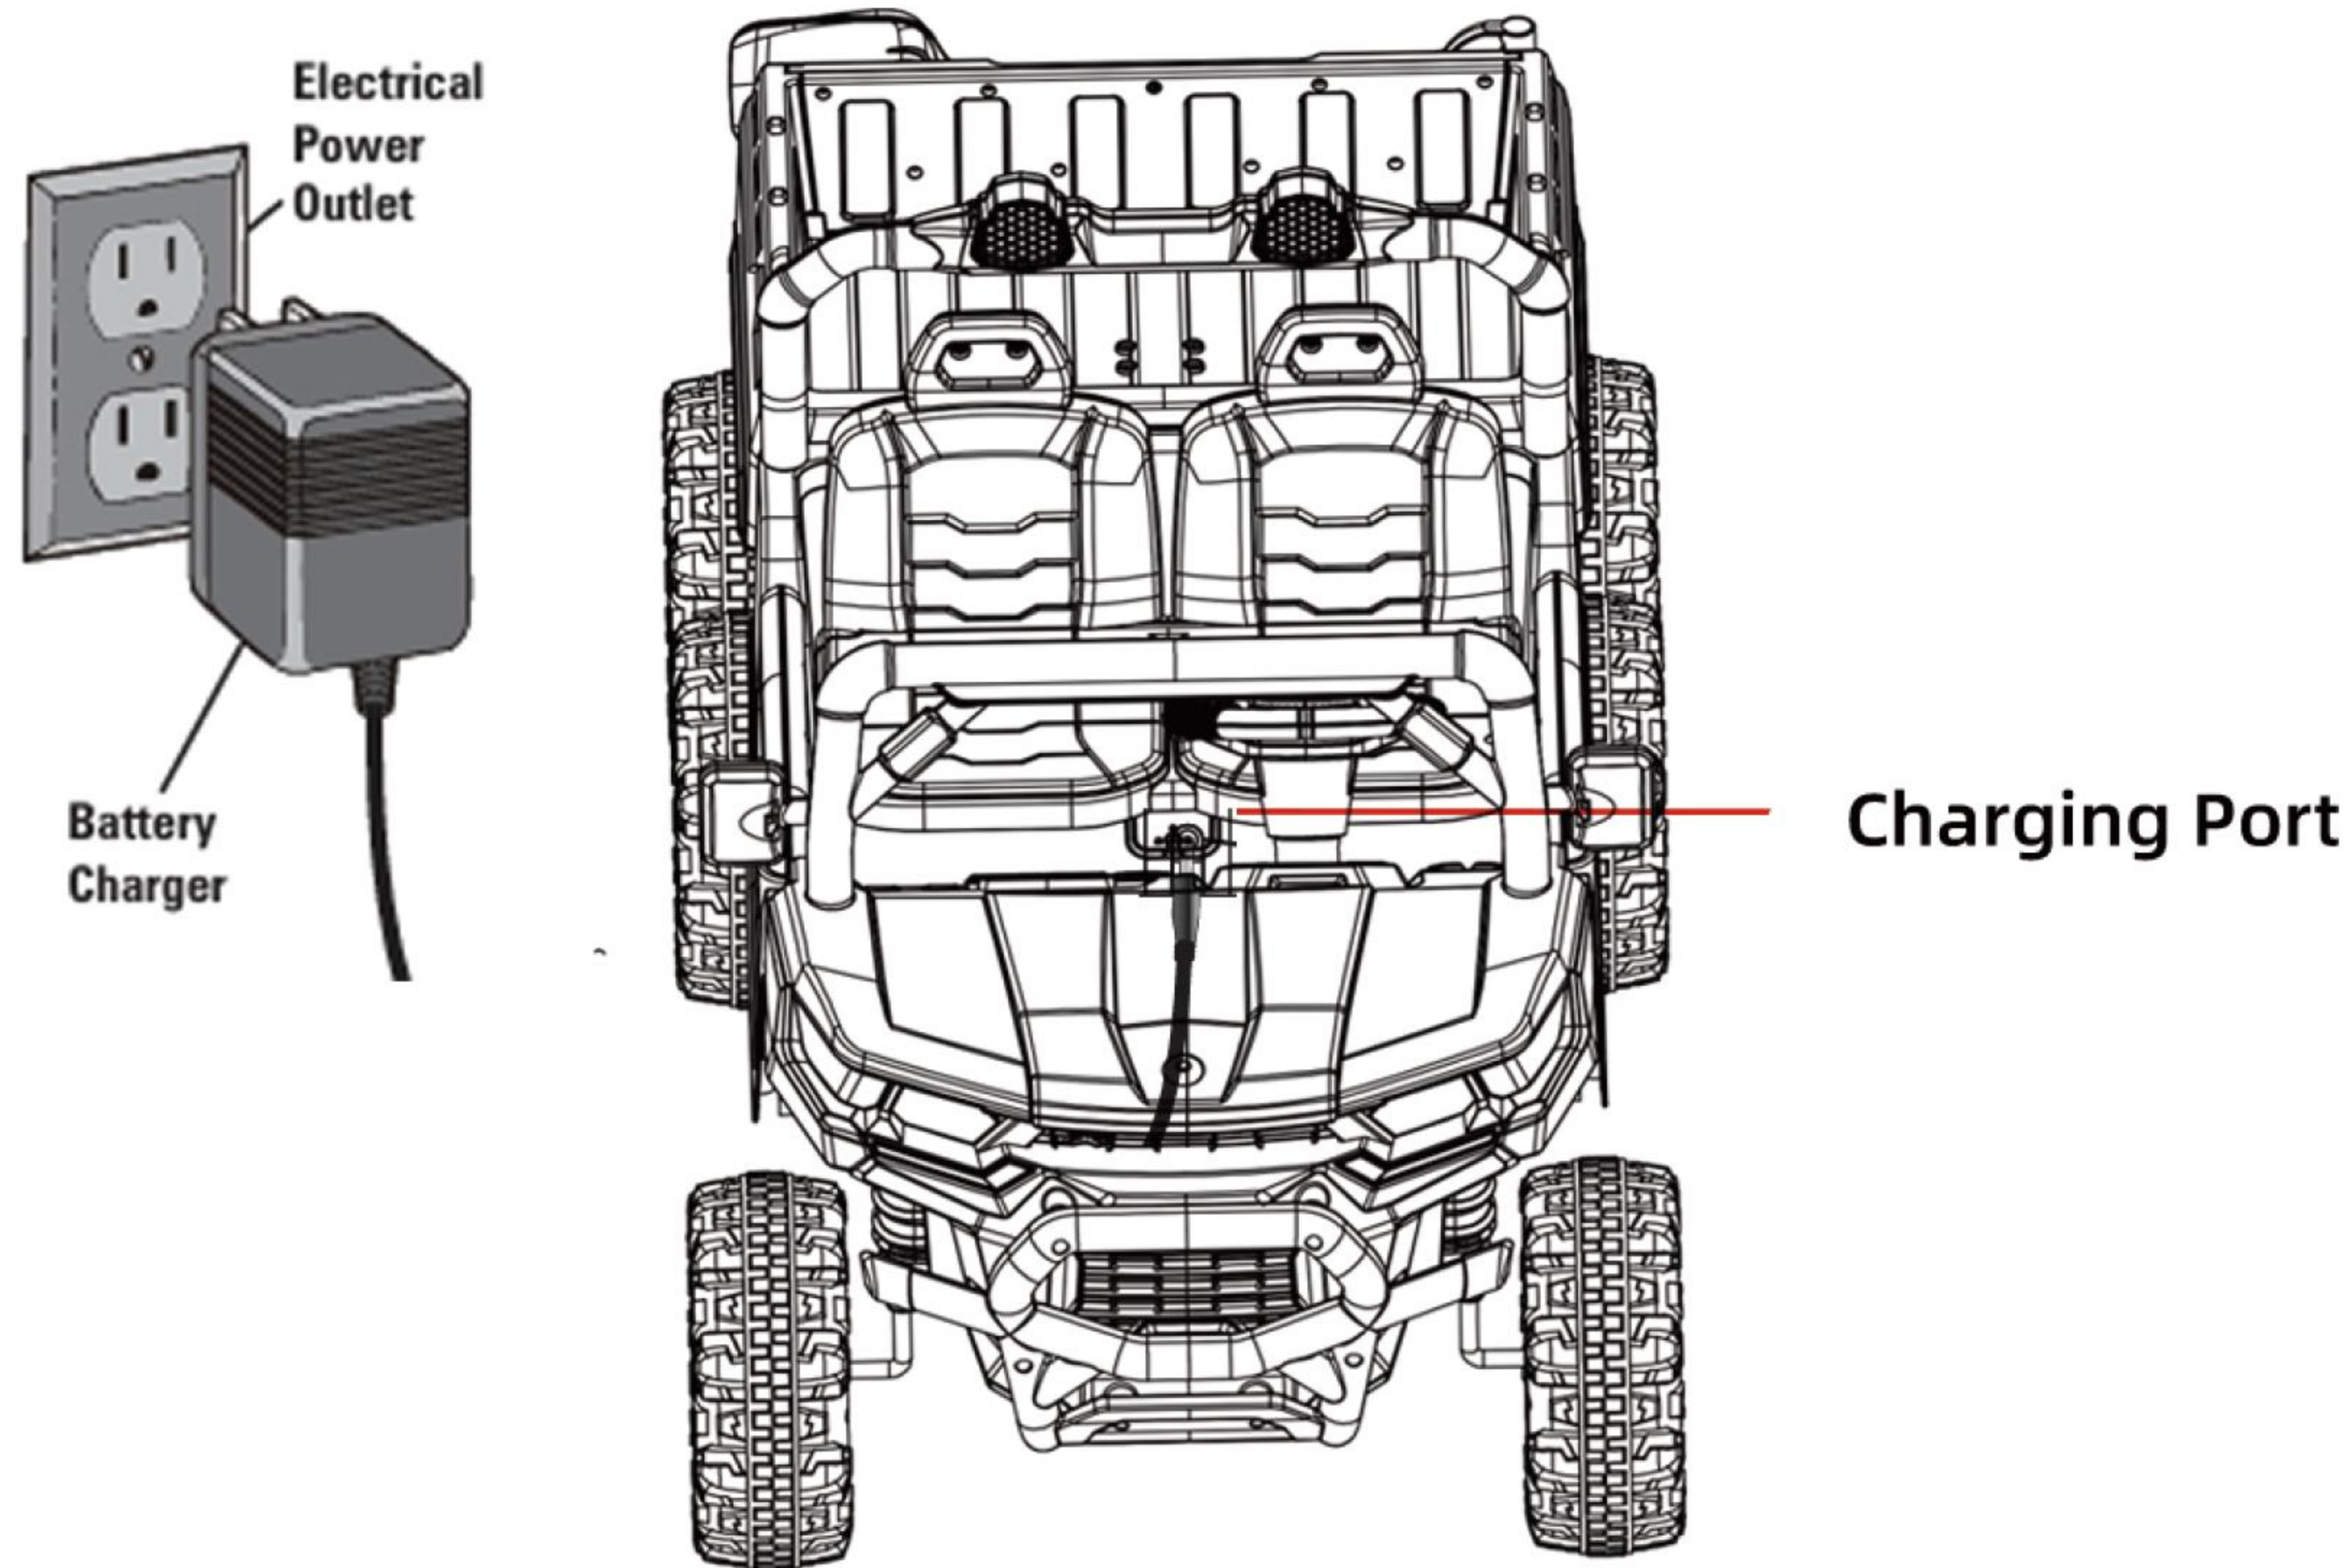

2

Installing the Steering Rod/Front Wheel:
(1) First, install the steering rod into the steering motor hole, aligning the steering groove with the hole in the front undercarriage.
(2) Use a wrench to remove the $\Phi 10$ nuts and M10 flat washers on both sides of the front undercarriage; do not remove the M12 flat washers.
(3) Install the front wheels on both sides of the front undercarriage, place an M10 flat washer on each side, and tighten the $\Phi 10$ nuts with a wrench. Finally, snap the axle covers onto both sides of the wheels.

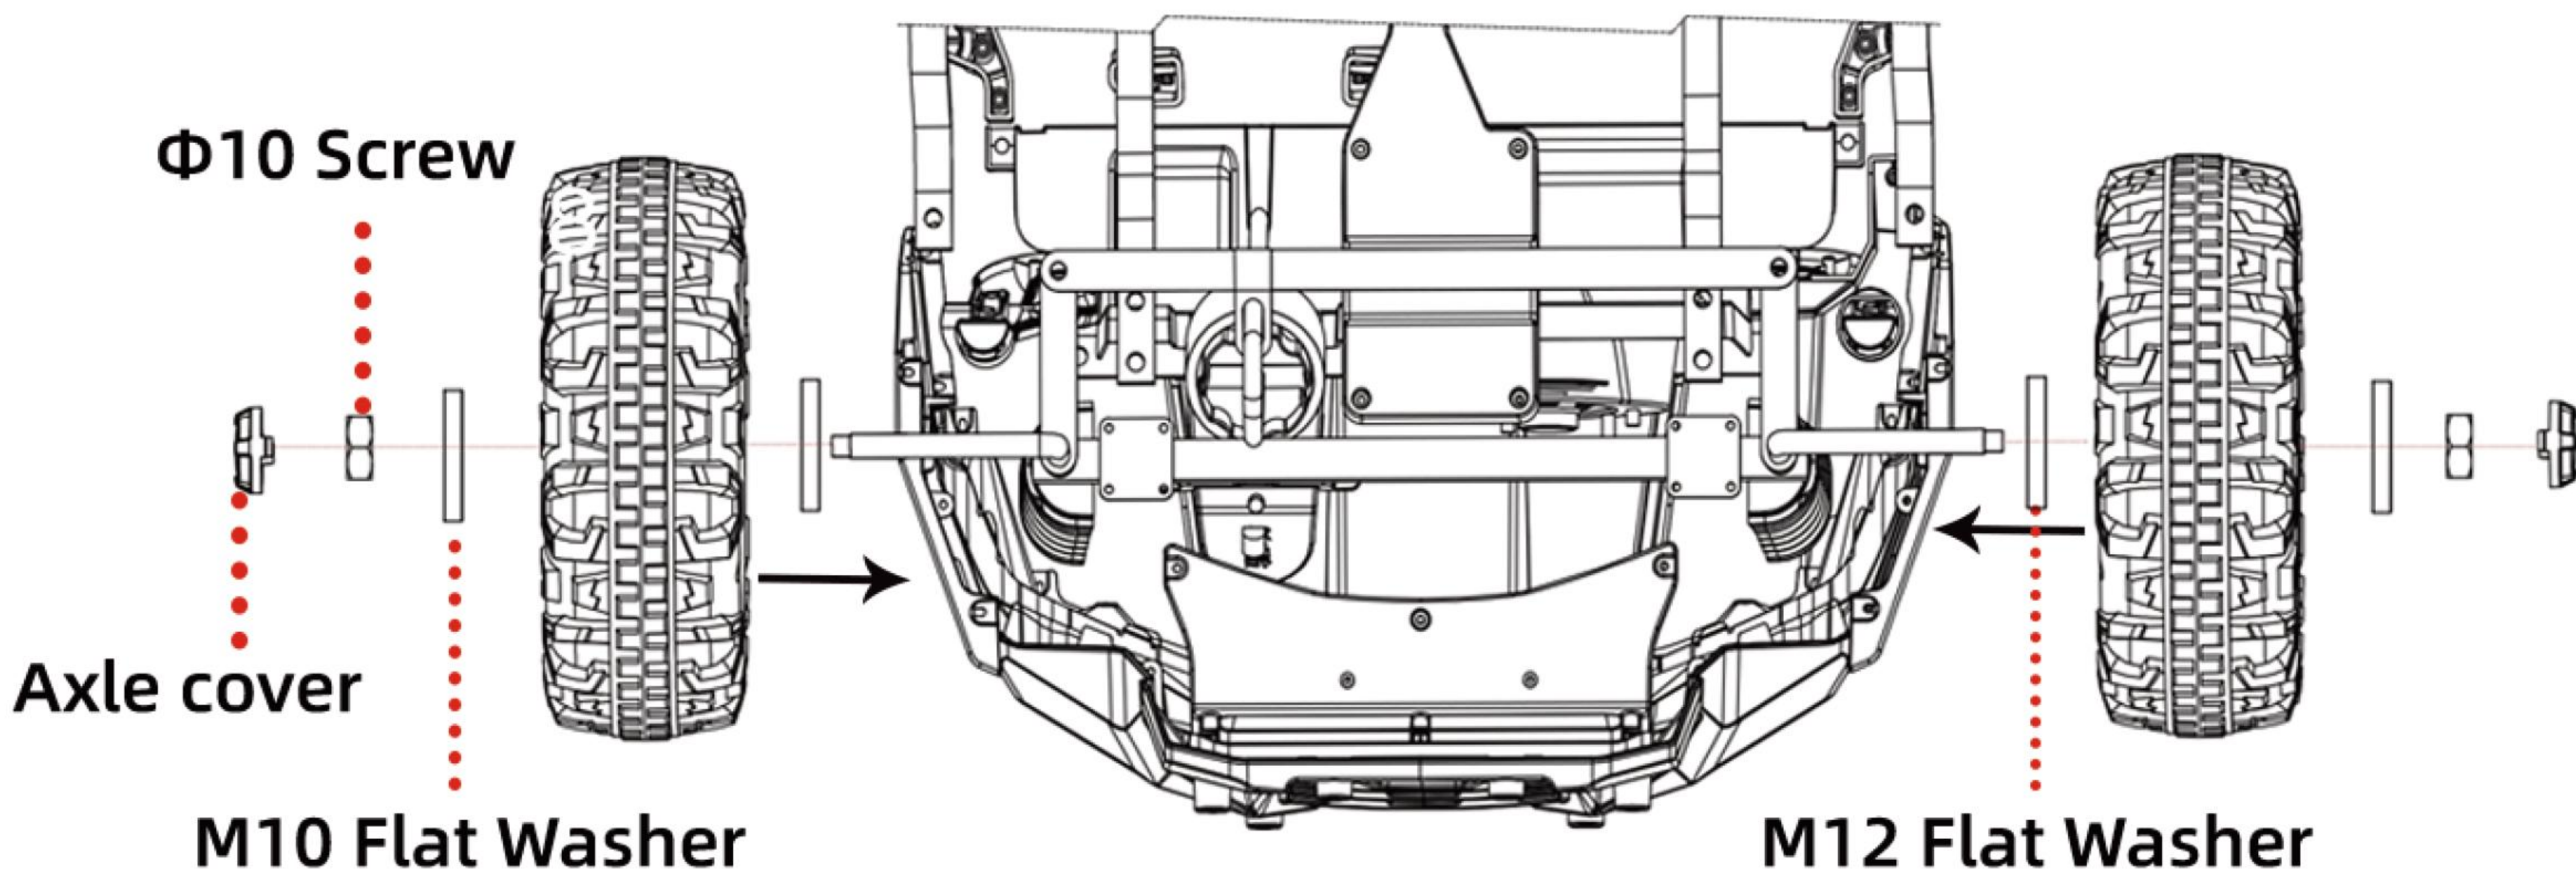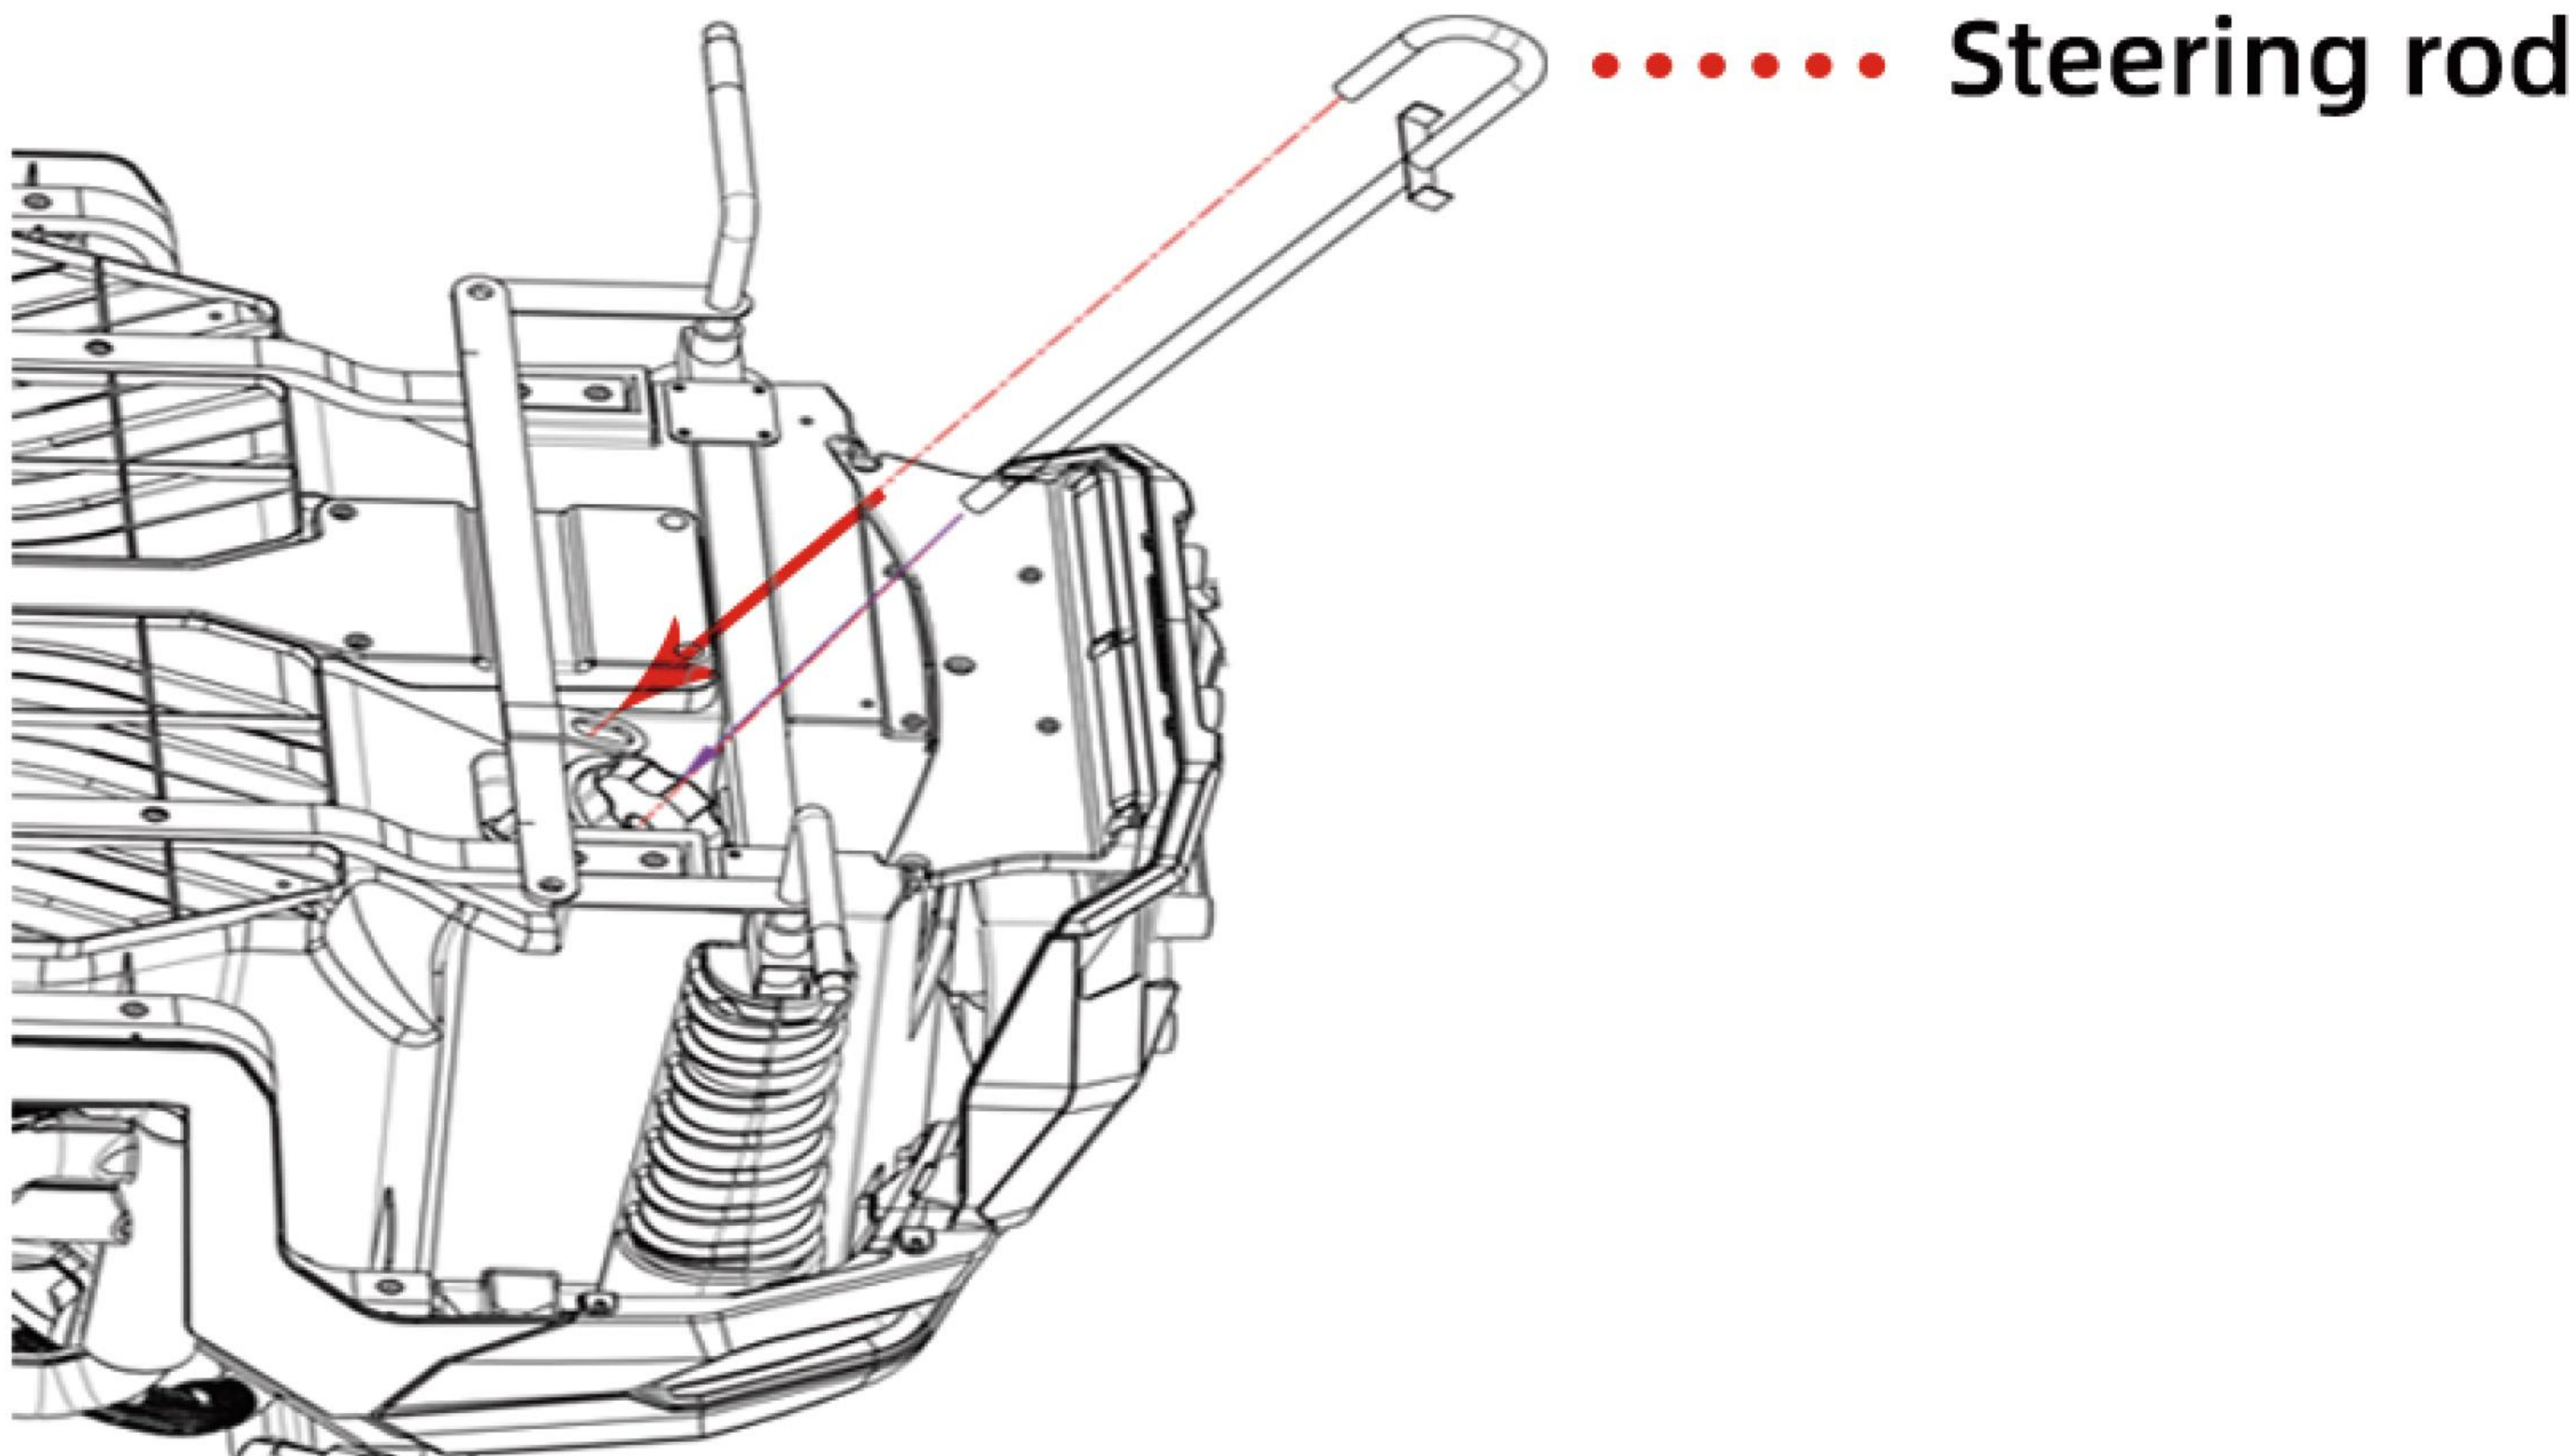

REMOTE CONTROL (2.4G) FUNCTION INSTRUCTIONS

1. First, open the back cover of the remote control and correctly insert two AAA 1.5V batteries, then close the battery cover. (The same steps apply when replacing the batteries.)
2. Turn off the main power switch on the car.
3. Simultaneously press the two buttons next to the "S" button (for forward and backward) and hold them down. While holding the buttons, turn on the car's power when the indicator light flashes. When the red indicator light stops flashing, the pairing is successful.
 - "↑" moves forward.
 - "↓" moves backward.
 - "←" turns left.
 - "→" turns right.
 - Button "S" is for speed adjustment: each press changes the speed, with one light indicating low speed, two lights for medium speed, and three lights for high speed.


- Warning! Not suitable for children under 3 years old due to small parts which may pose a choking hazard.
- Insert two AAA (1.5V) batteries as shown in the diagram.
 - Do not charge non-rechargeable batteries.
 - Do not mix different types of batteries or new and old batteries.
 - Install the batteries with the correct polarity as indicated in the diagram.
 - Remove exhausted batteries from the product promptly.
 - Do not short-circuit the power terminals.
 - The packaging of this product contains important information, so please keep it.

- Brake Function:
- "p" is the brake button. Press it once to keep the car in a braking state, with all red indicator lights flashing. Press it again to release the brake.

Precautions

- The remote control has a power-saving feature and will automatically turn off if not used for about 10 seconds. Press any button to reactivate it.
 - The frequency pairing button needs to be operated once during the initial use or when replacing the batteries.
 - Ensure the remote control does not get damp or wet, as this may affect performance or cause it to stop working.
 - Pay attention to the battery polarity when installing batteries.
 - Do not mix new and old batteries.
 - If the remote control range decreases or becomes less responsive, please replace the batteries.
 - Remove the batteries if the remote control will not be used for a long time. Store used batteries separately to protect the environment.

PARTS LIST

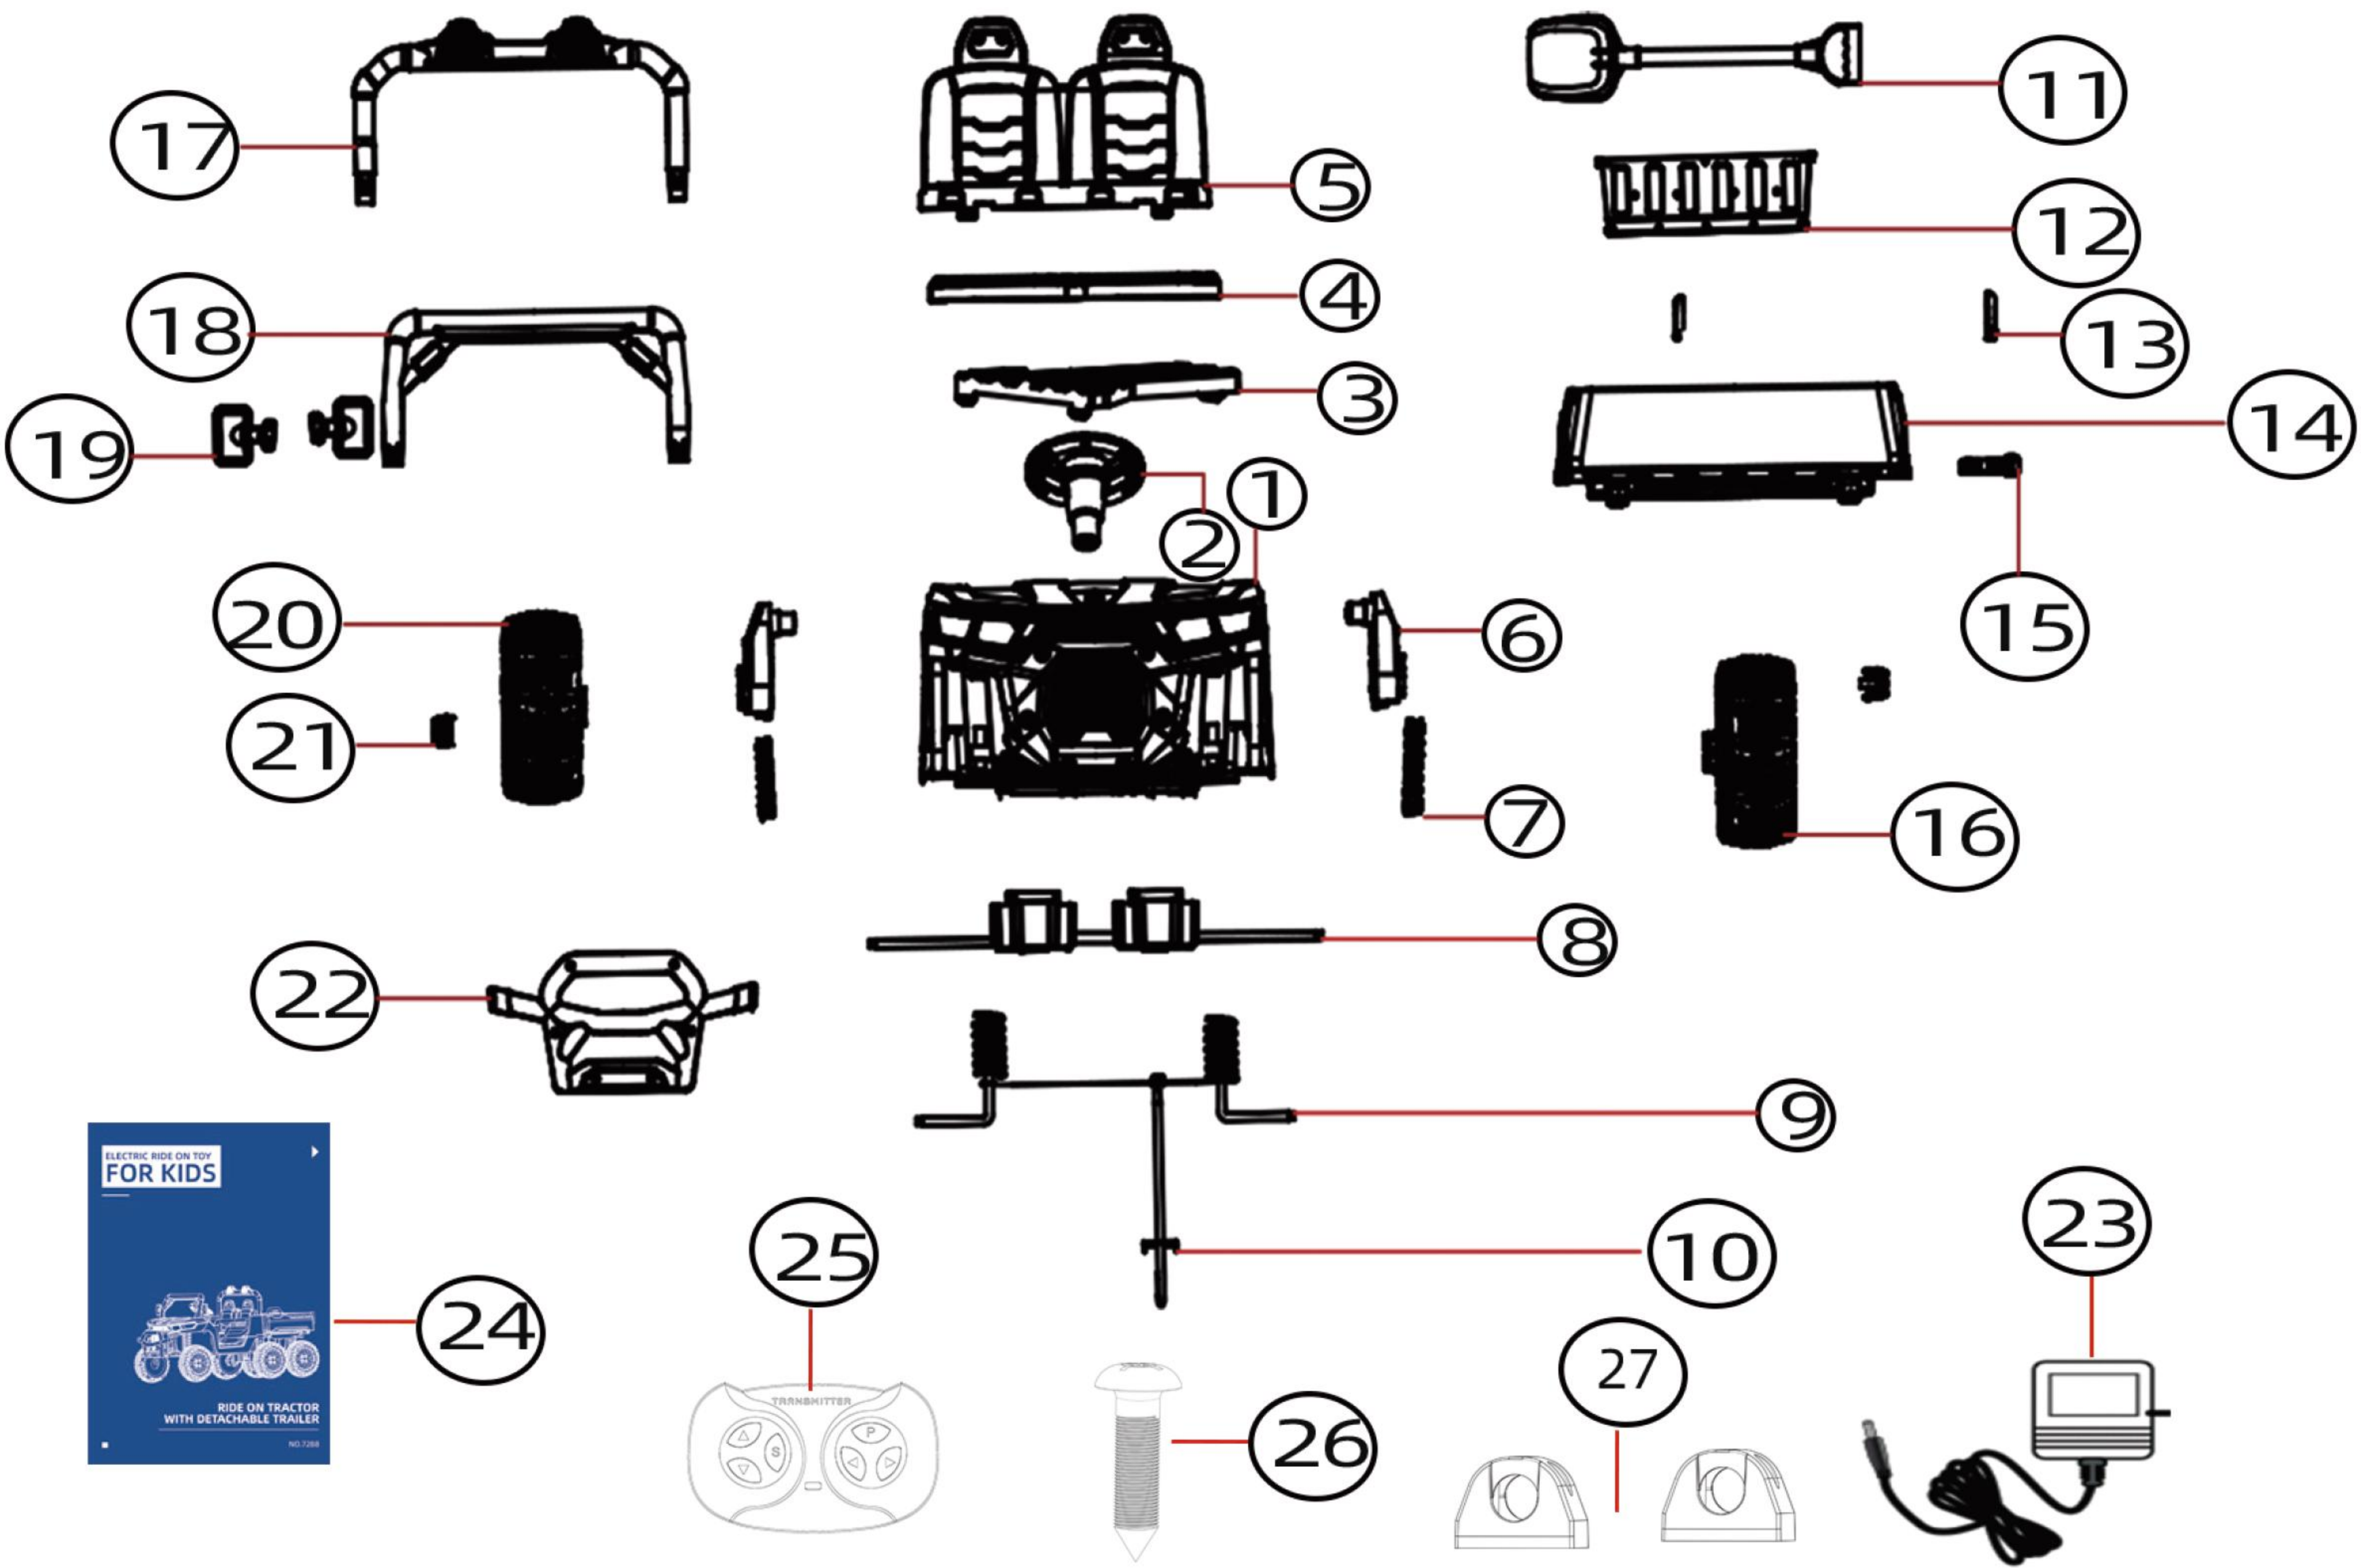

NO.	part	quantity	NO.	part	quantity
1	Vehicle Body	1	15	Trunk Fixing Pin	4
2	Steering Wheel	1	16	Rear Wheel	4
3	Seat Support	1	17	Rear Spoiler	1
4	Seat	1	18	Front Windshield	1
5	Backrest	1	19	Rearview Mirrors (Left and Right)	1pair
6	Rear Drive Motor	4			
7	Shock Absorber Decorations	2	20	Front Wheel	2
8	Rear Shock Absorber Sleeve	2	21	Axle Cap	6
9	Front Steering Frame	1	22	Front Bumper	1
10	Steering Rod	1	23	Charger	1
11	Shovel	1	24	Instruction Manual	1
12	Rear Trunk Cover	1	25	Remote Control	1
13	Trunk Handle	2	26	Round Head Screws	44
14	Rear Trunk	1	27	trunk base	4

TROUBLESHOOTING

Problem	Reason	Solution
Vehicle does not move	Low battery	Fully charge the battery
	Electrical protection	Stop use for several minutes and restart
	Switch not in the correct position	Completely press in switches
	Battery connectors disconnected	Plug in battery connectors
Battery does not recharge	Battery connectors disconnected	Plug in battery connectors
	Charger not connected to socket or outlet	Completely plug in the charger
Battery does not last	Battery does not have a full charge	Fully charge the battery
Battery is warm and makes a slight noise while charging	Normal	Normal
Slow speed	Low battery	Fully charge the battery
	Overloaded vehicle	Reduce the weight on the vehicle
	Uneven or sloped road	Drive on flat pavement
Vehicles shakes while driving	Loose connection to motor	Ensure the motor is properly connected to the battery
Difficulty shifting between forward/reverse	Attempting to shift while vehicle in motion	Only shift when the vehicle is at a stop
Vehicle is silent	Steering wheel is not properly connected	Properly connect the steering wheel connector

SAFETY

This vehicle must be assembled by an adult who has read and understood the instructions in this manual.

Keep the packaging and bags away from children and dispose of all packaging before use. Always use common sense and safe practices when operating this vehicle.

NOTE: For best performance, only use this vehicle on flat and hard surfaces. The following **[safety hazards]** may result in serious injury or death:

- Never open the battery. Batteries contain lead and lead compounds (acids) that are toxic and corrosive.
- Do not leave a child unattended during operation. Do not use this in a location that may require braking capability, as this could result in loss of control, which may cause serious injury or death.
- Use of this vehicle in unsafe conditions such as snow, rain, loose dirt, mud, sand, or gravel may result in an unexpected accident such as tipping over, and could damage the electrical system or battery.
- Do not operate this vehicle in an unsafe manner. Examples include but are not limited to:
 - Pulling the vehicle with another vehicle or similar device
 - Allowing more than one rider
 - Pushing the user
 - Traveling at an unsafe speed