

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

950429
ACCENT CABINET

ITEM:950429



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

 


ASSEMBLY TIME


30 MINUTES

PARTS IDENTIFICATION


A LEFT SIDE PANEL 1 PC

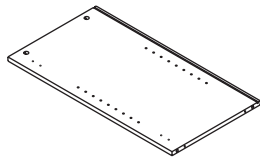


B RIGHT SIDE PANEL 1 PC

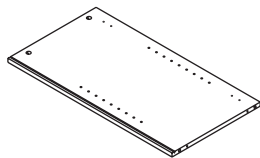 


C MIDDLE DIVIDER PANEL 1 PC

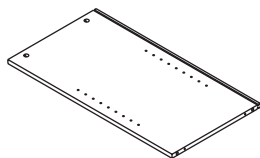 


D LONG CROSS BRACE 2 PCS

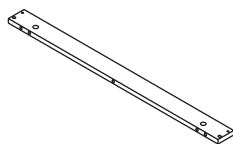 


E SHORT CROSS BRACE 2 PCS

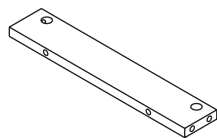 


F BOTTOM PANEL 1 PC

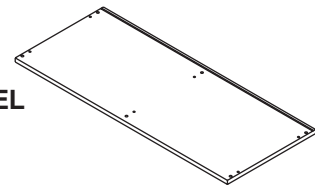 


G TOP PANEL 1 PC

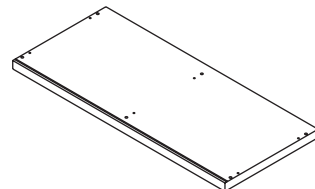 

H BACK PANEL 2 PCS

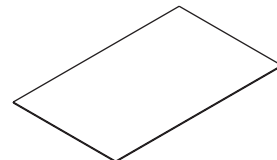 

  
 
 

 


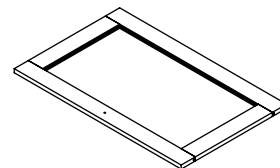






I GLASS DOOR 2 PCS



NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

 ITEM: **950429****HARDWARE IDENTIFICATION****Z**

| NO | DESCRIPTION | FIGURE | Q'TY | NO | DESCRIPTION | FIGURE | Q'TY |
|----|--------------------------|---|--------|----|----------------------------|---|--------|
| 1 | GLUE 40g |  | 1 PC | 8 | HINGE Ø35mm SR |  | 4 PCS |
| 2 | WOODEN DOWEL Ø8x30mm |  | 26 PCS | 9 | HINGE SCREW Ø 4x15mm SR |  | 16 PCS |
| 3 | CAM BOLT Ø7x35.5mm SR |  | 14 PCS | 10 | HANDLE |  | 2 PCS |
| 4 | CAM LOCK Ø15x12mm SR |  | 14 PCS | 11 | HANDLE BOLT Ø4x25mm SR |  | 2 PCS |
| 5 | SCREW Ø4.5x42mm SR |  | 6 PCS | 12 | FIXER |  | 6 PCS |
| 6 | PLASTIC FEET Ø15mm |  | 4 PCS | 13 | FIXER SCREW Ø 3x19mm SR |  | 6 PCS |
| 7 | PIN Ø5x20.5mm SR |  | 8 PCS | 14 | STICKER Ø20mm |  | 3 PCS |

 
 
 
 
 
Z8 not included in blister packaging.**NOTE:**

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **950429**

STEP 1






COASTER
FINE FURNITURE

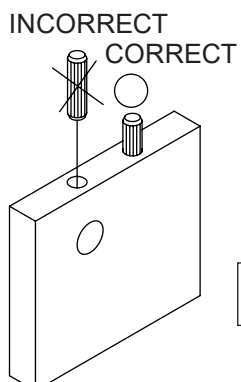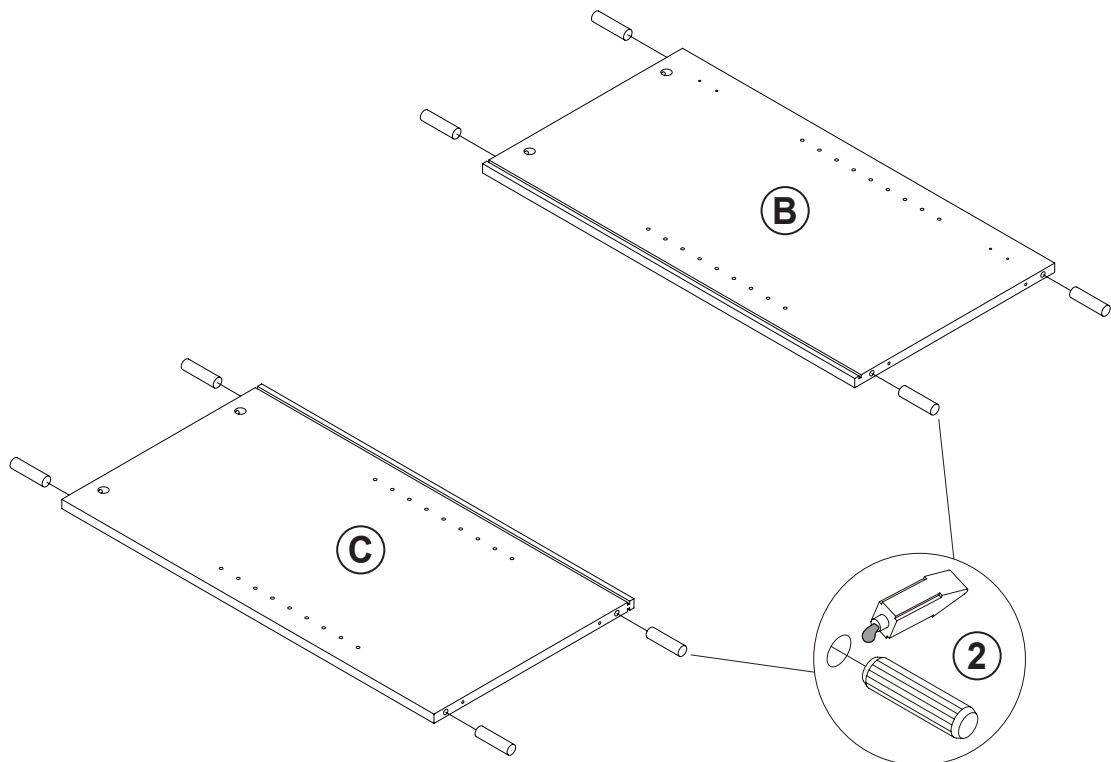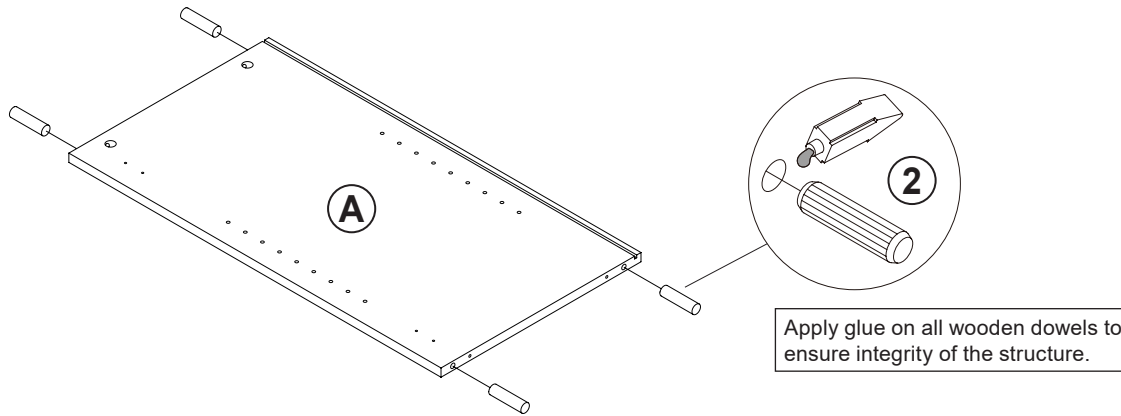



Apply glue on all wooden dowels to ensure integrity of the structure.

ITEM:950429

     STEP 2

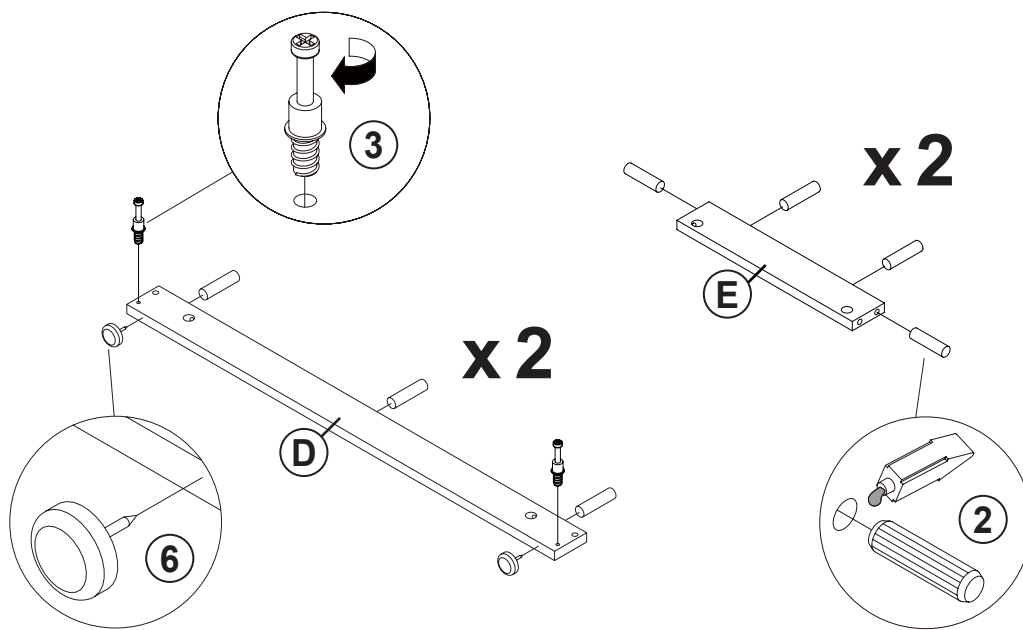

 
 
STEP 3

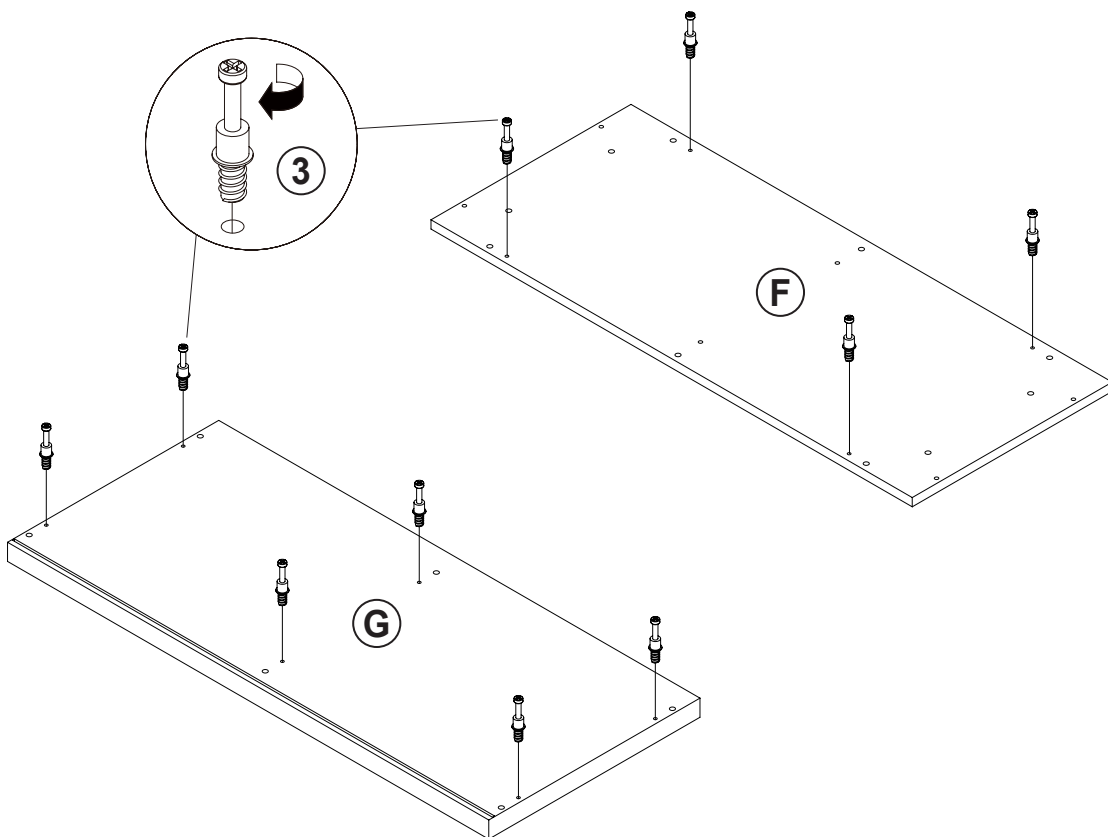




ITEM: **950429**

STEP 4

  COASTER
FINE FURNITURE

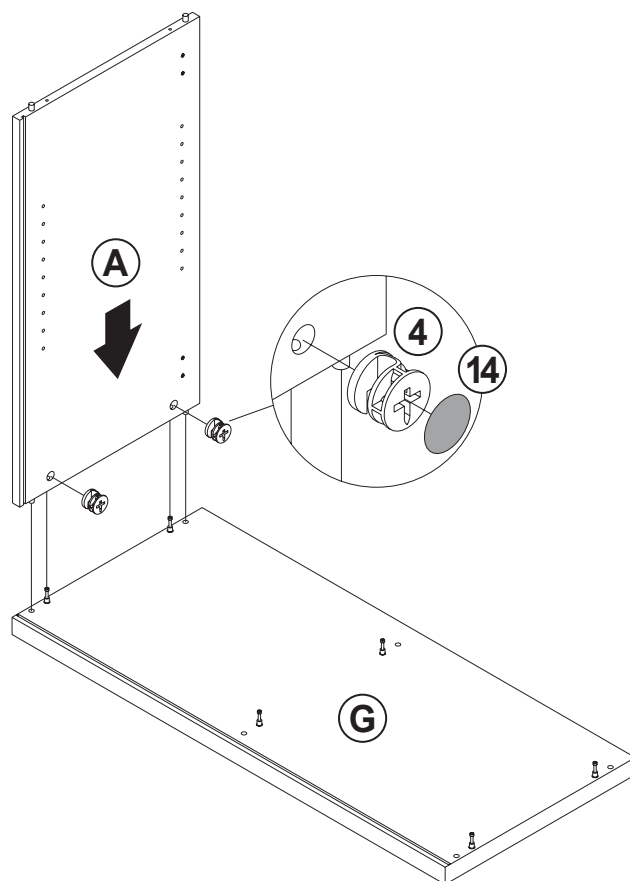

 
 
 
STEP 5

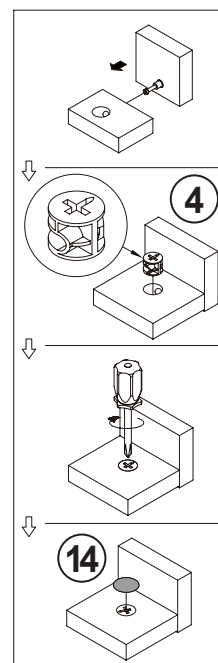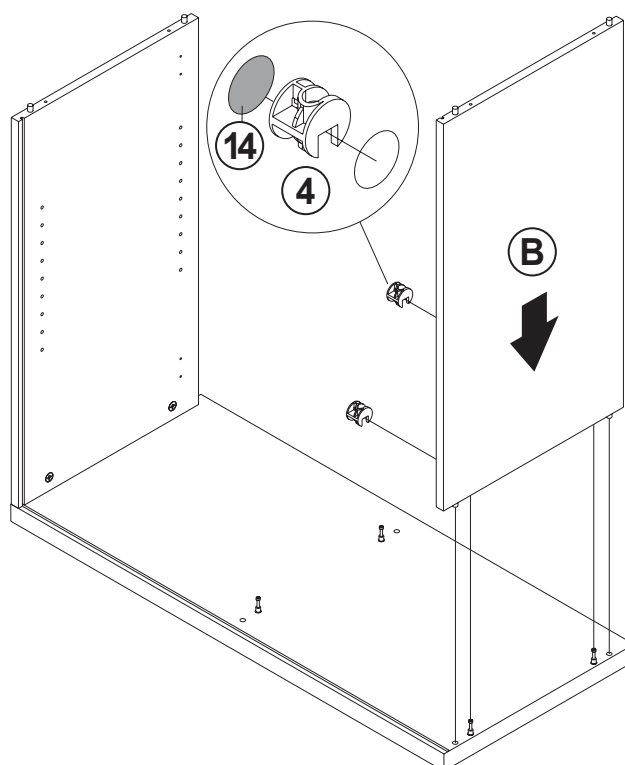


ITEM: **950429**

STEP 6

   COASTER
FINE FURNITURE

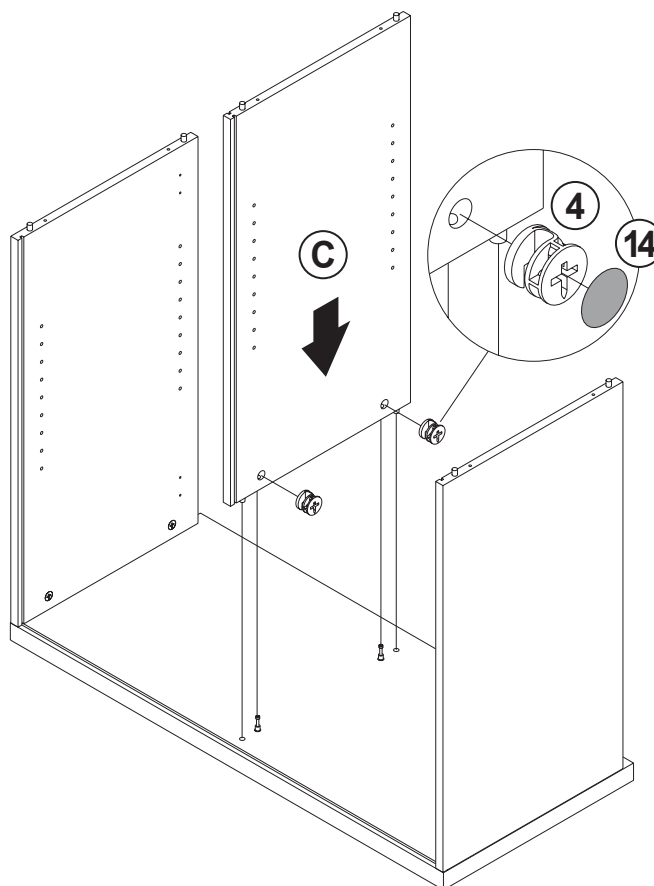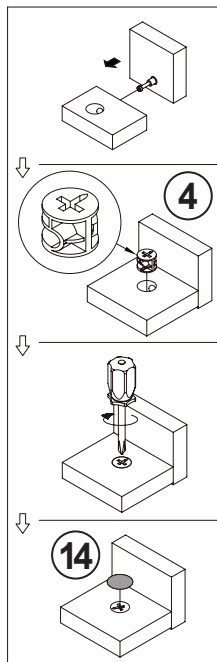

 
STEP 7

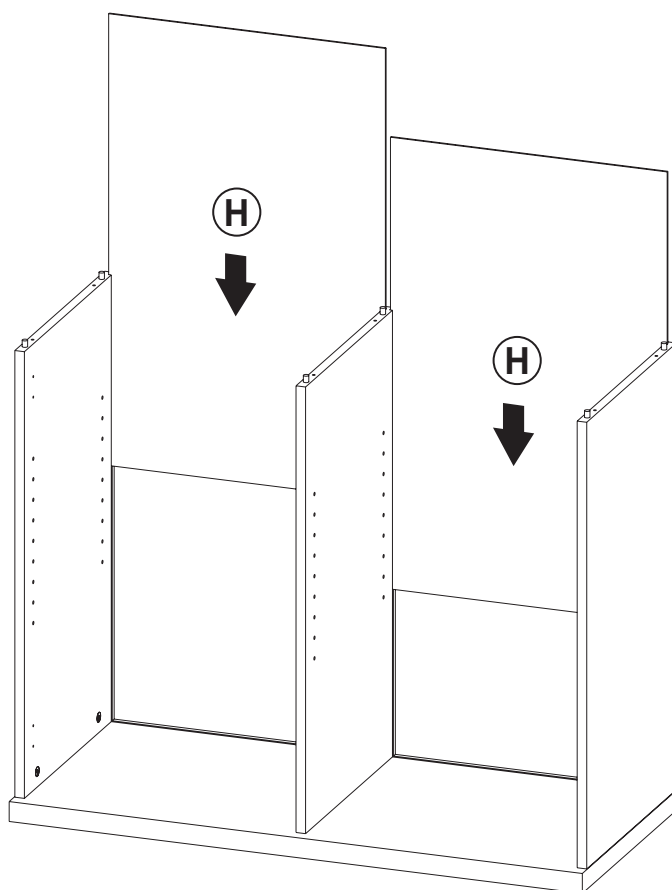





ITEM: **950429**

COASTER
FINE FURNITURE

 STEP 8

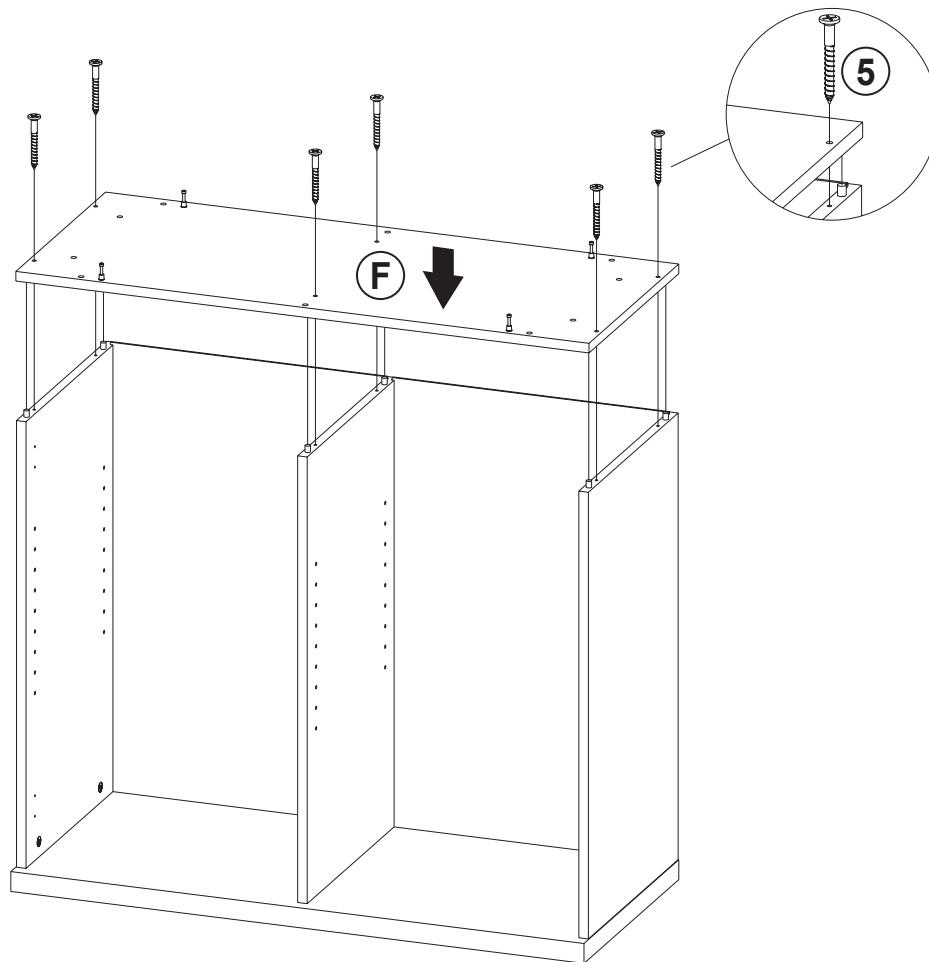

 
 
 
 
STEP 9

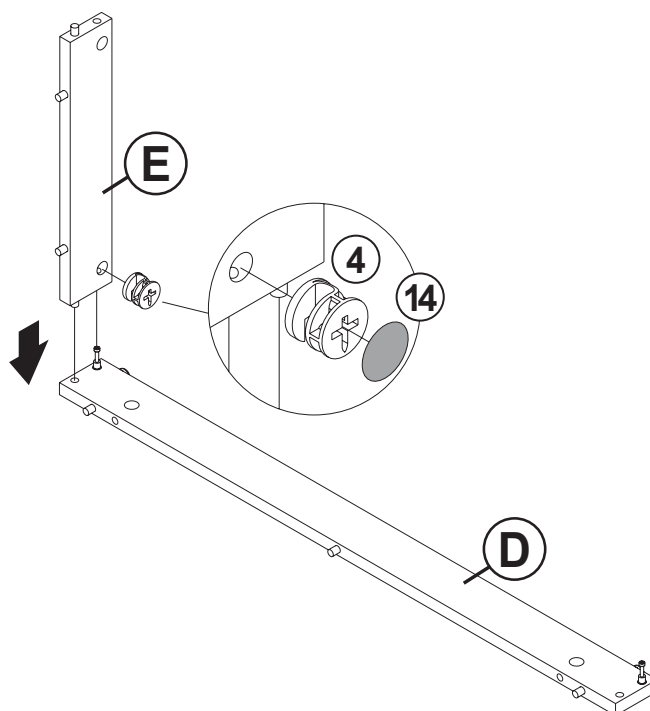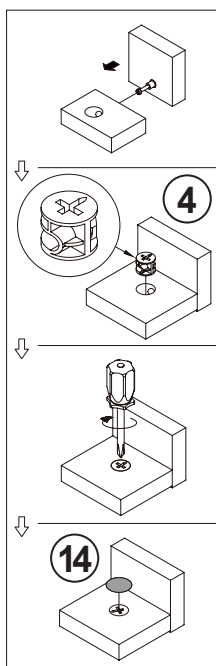



ITEM: **950429**

STEP 10

    COASTER
FINE FURNITURE

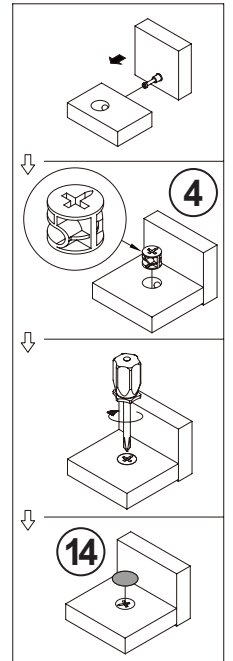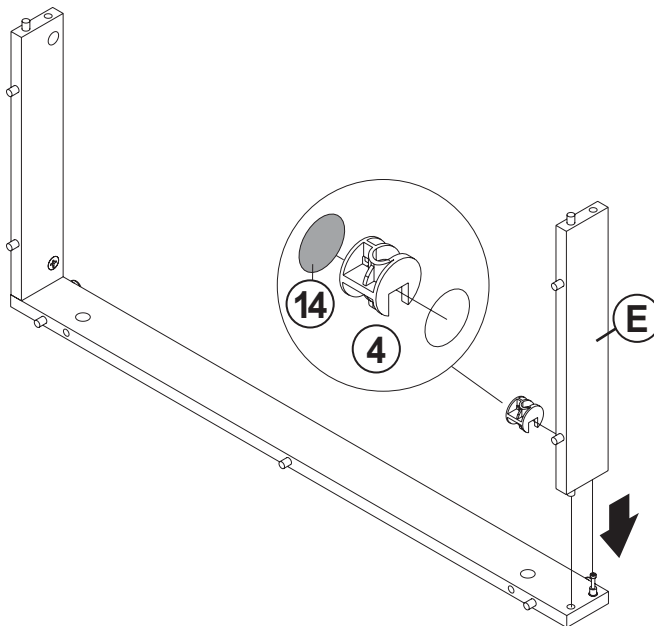



 
 
STEP 11

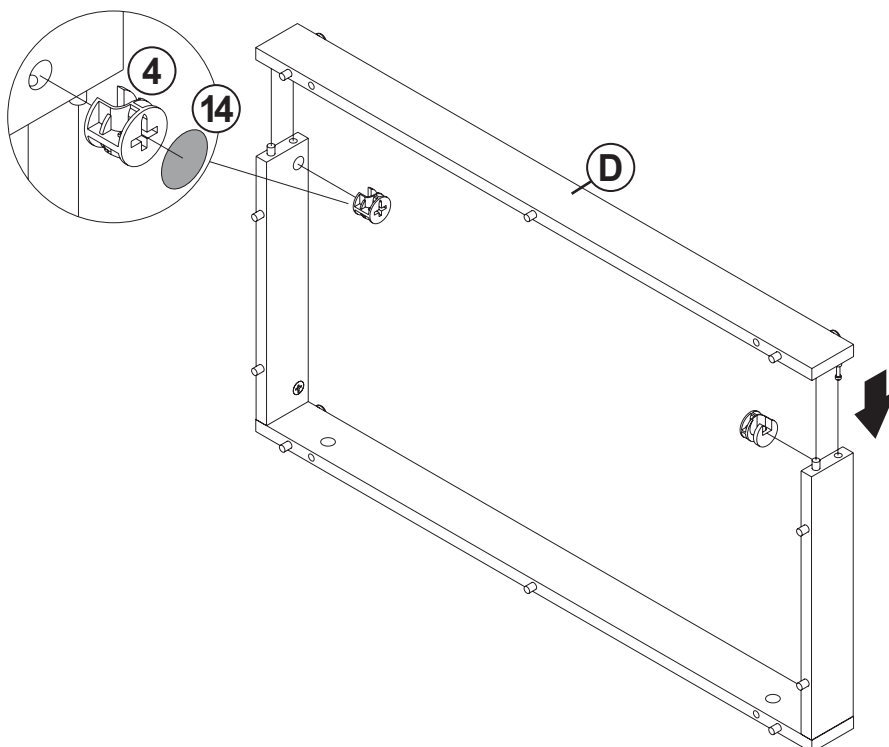



ITEM: **950429**

STEP 12

    COASTER
FINE FURNITURE

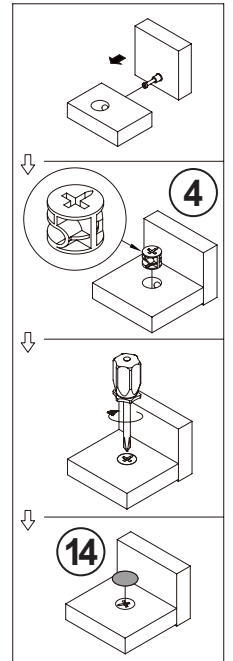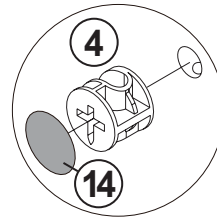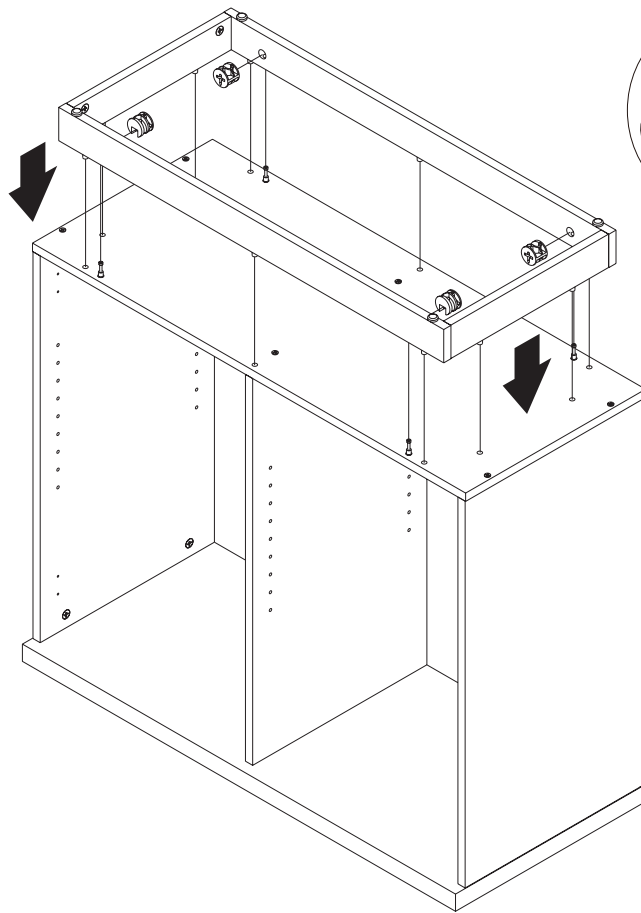

 
 
STEP 13

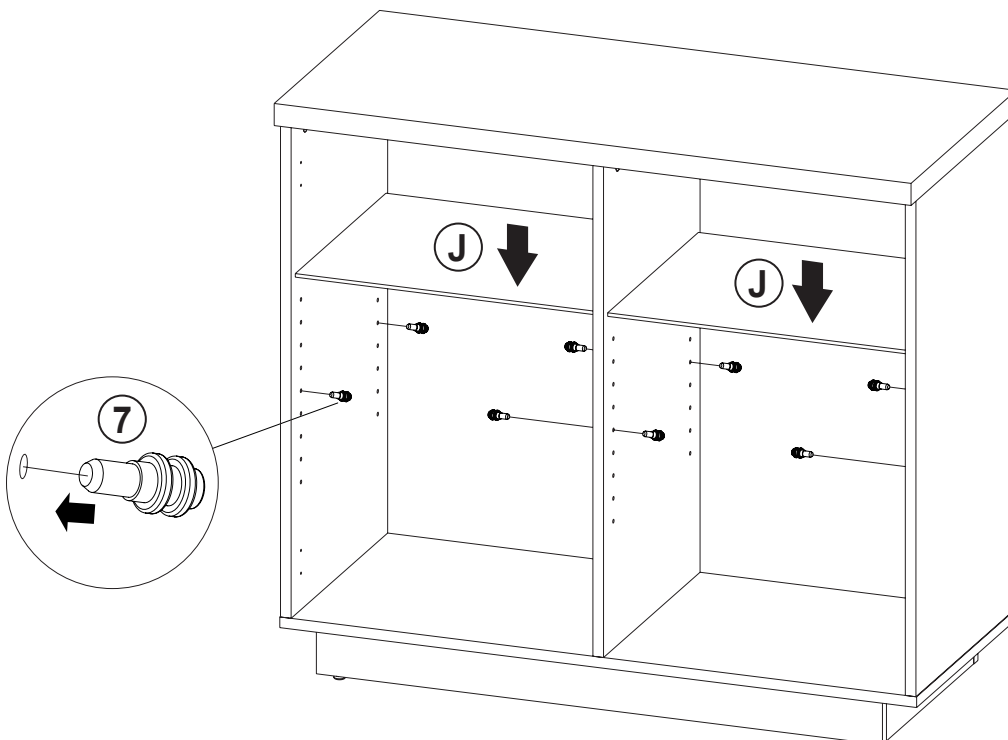





ITEM: **950429**

STEP 14

  
COASTER
FINE FURNITURE

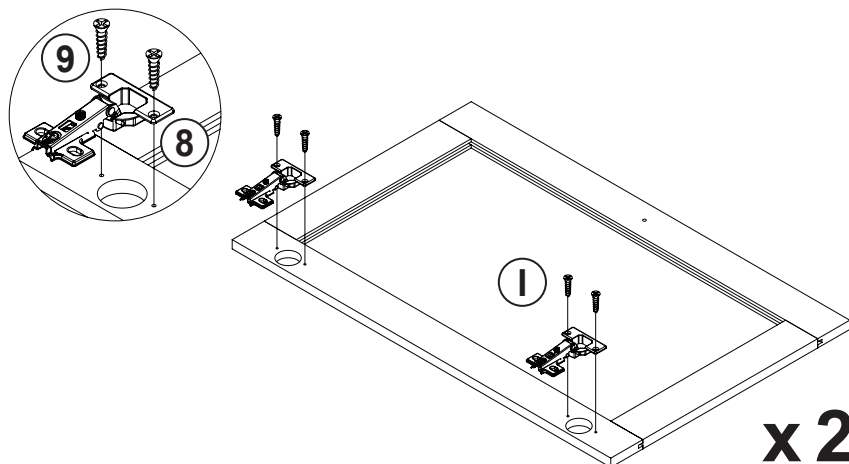

    
STEP 15

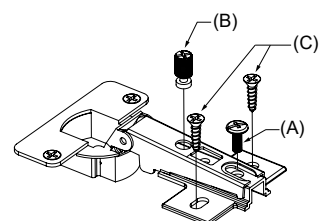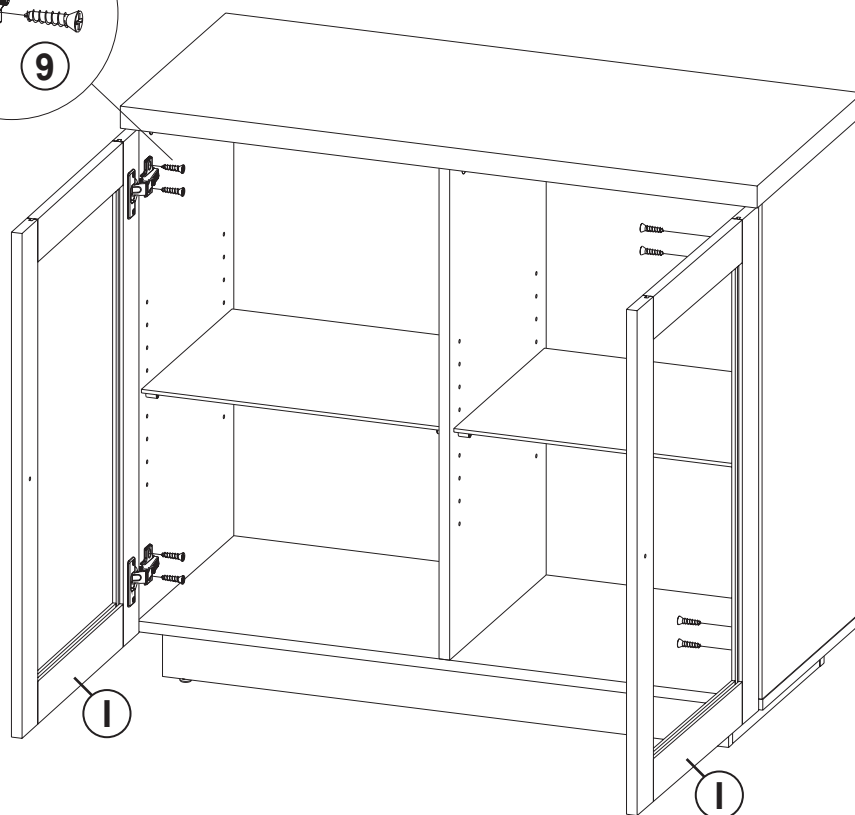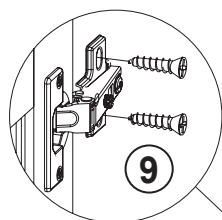


HORIZONTAL BY
SCREW A ADJUSTMENT

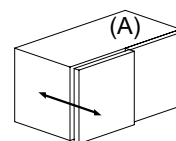 

LATERAL BY
SCREW B ADJUSTMENT

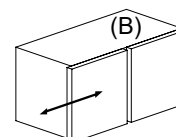 





VERTICAL BY
SCREW C ADJUSTMENT

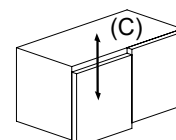 





ITEM: **950429**

STEP 16

    COASTER
FINE FURNITURE

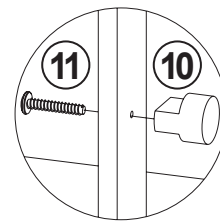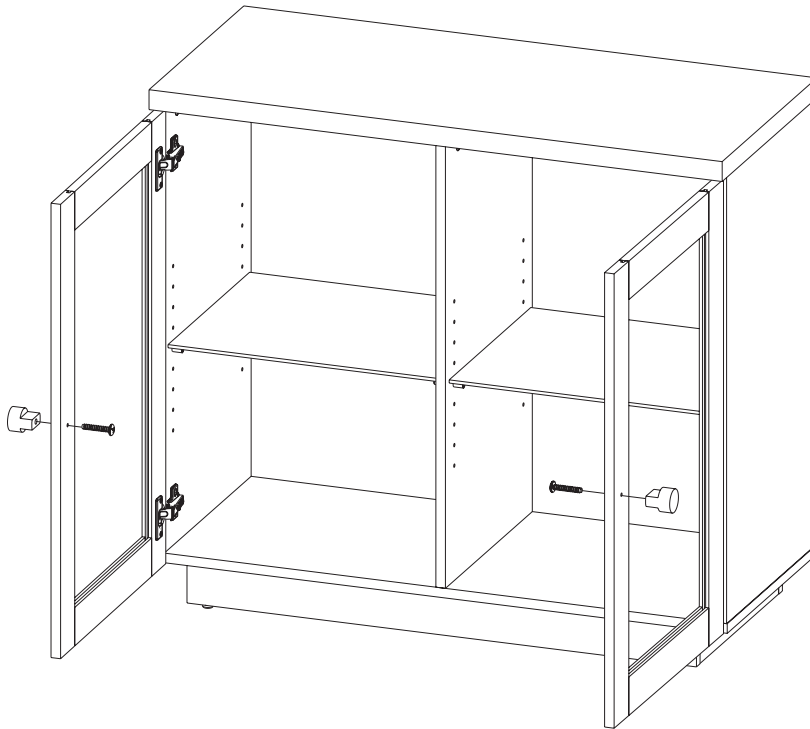

    STEP 17

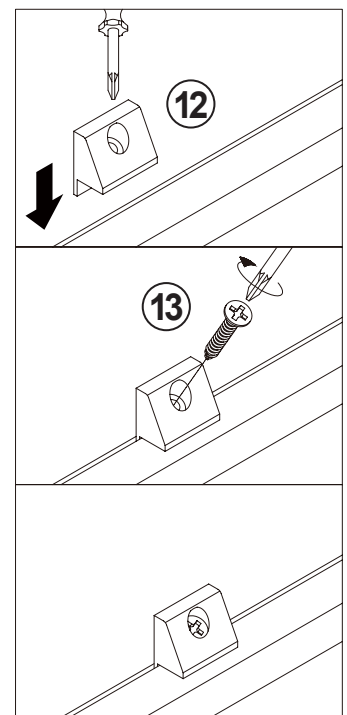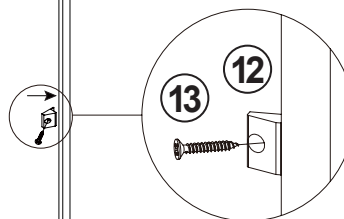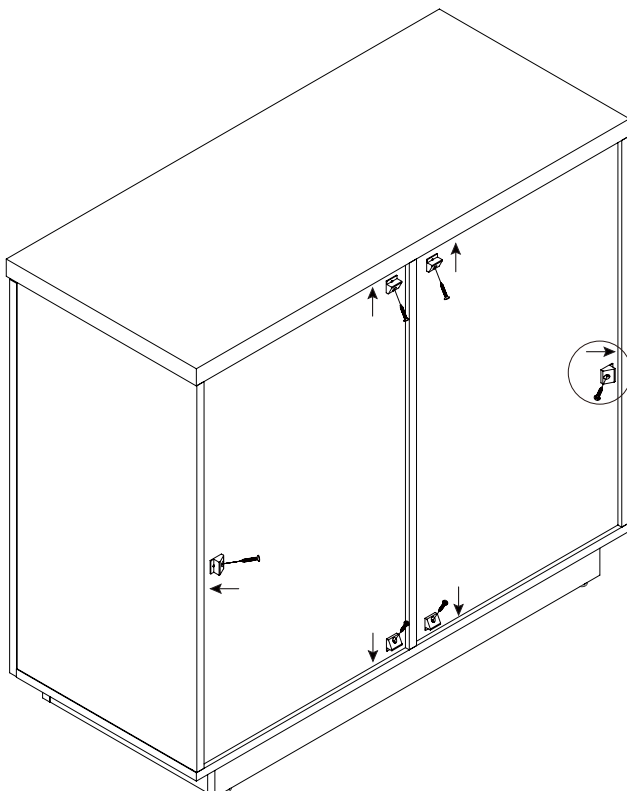



ITEM: **950429**





STEP 18

  COMPLETE

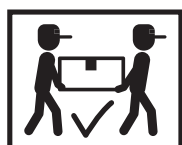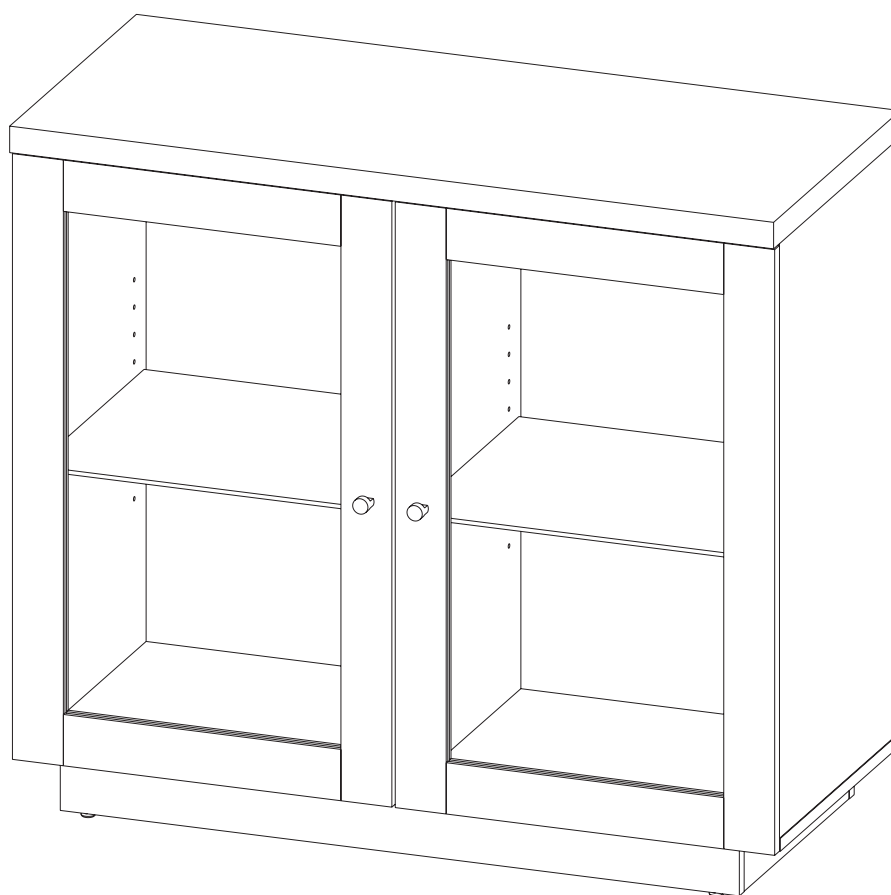

ITEM: 950429

  COASTER
FINE FURNITURE

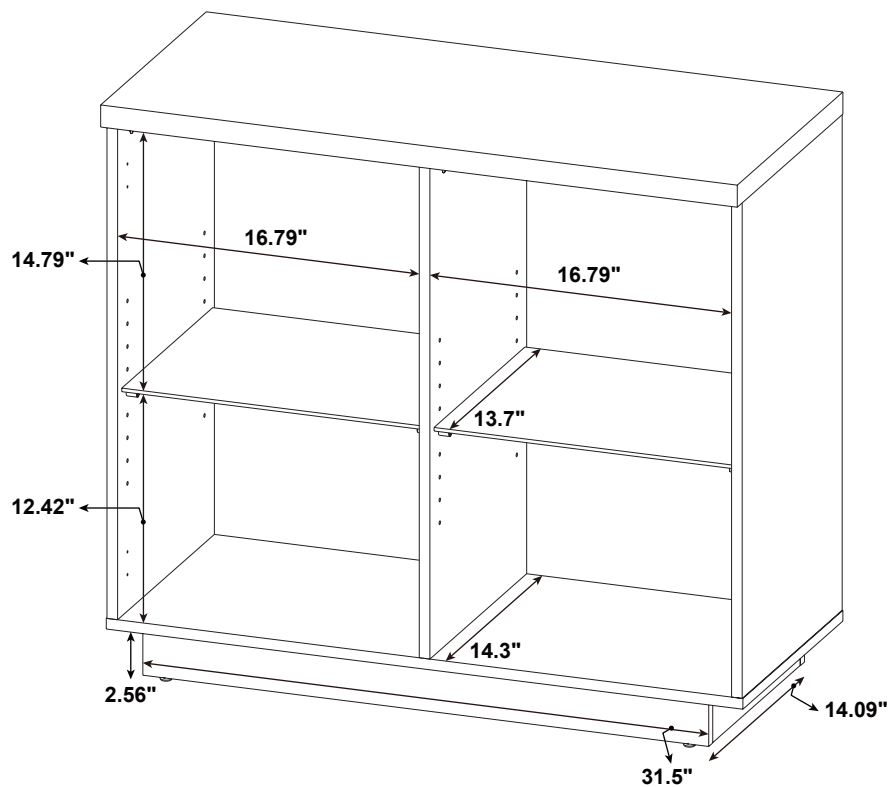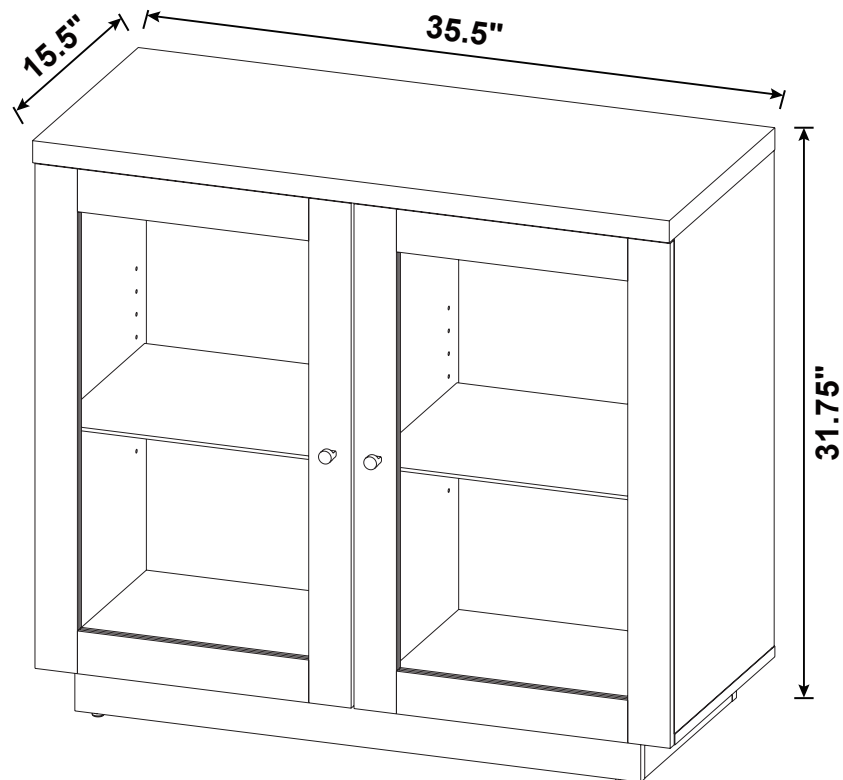

Note : Dimension tolerance $\pm 5\%$

 
ANTI-TIPPING INSTALLMENT INSTRUCTIONS
FURNITURE TIPPING RESTRAINT**WARNING**

Injury may result from tipping furniture.
This restraint may protect against tipping furniture.
Do not allow children to climb on furniture.
This restraint is not a substitute for proper adult supervision.
Failure to detach this restraint before moving the furniture may result in injury and damage.


This restraint must be screwed to a wood stud on the wall, using the long screw provided.

STEP 1

Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

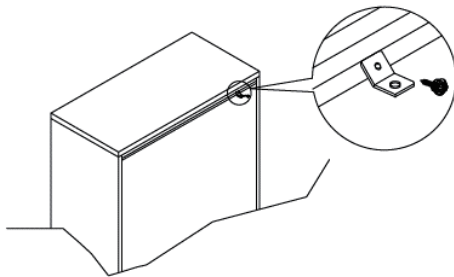**STEP 2**

 Locate the wood stud on the wall, and secure the other bracket, 2 inches below the back of the unit.

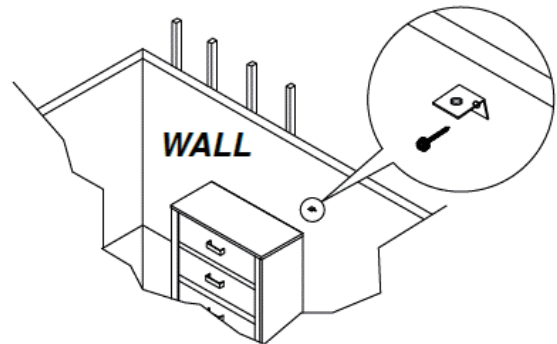**STEP 3**

Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end, and drag it through, until the slack is removed. Ensure that the strap is securely laced and locked.

