
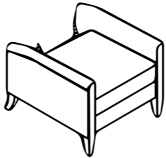
 

 


ASSEMBLY INSTRUCTIONS

ITEM NO: 194S9506-F1S
PUSH BACK RECLINING CHAIR

Legs and hardware are stored in the bottom of the seat, please take them out for assembly.


 **Note:** Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.

| PART | DRAWING | DESCRIPTION | QTY |
|------|---|-------------|------|
| A |  | Seat | 1 PC |
| B |  | Backrest | 1 PC |
| C |  | Right Wing | 1 PC |
| D |  | Left Wing | 1 PC |


ASSEMBLY INSTRUCTIONS

ITEM NO: 194S9506-F1S
PUSH BACK RECLINING CHAIR

STEP 1:

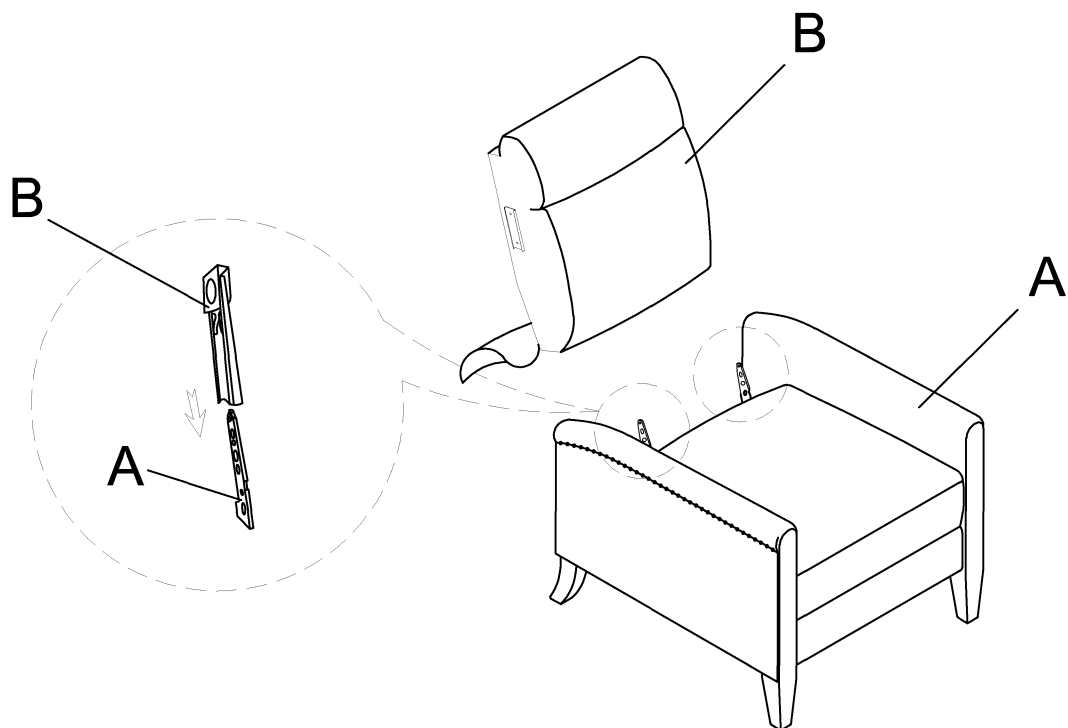


STEP 2:

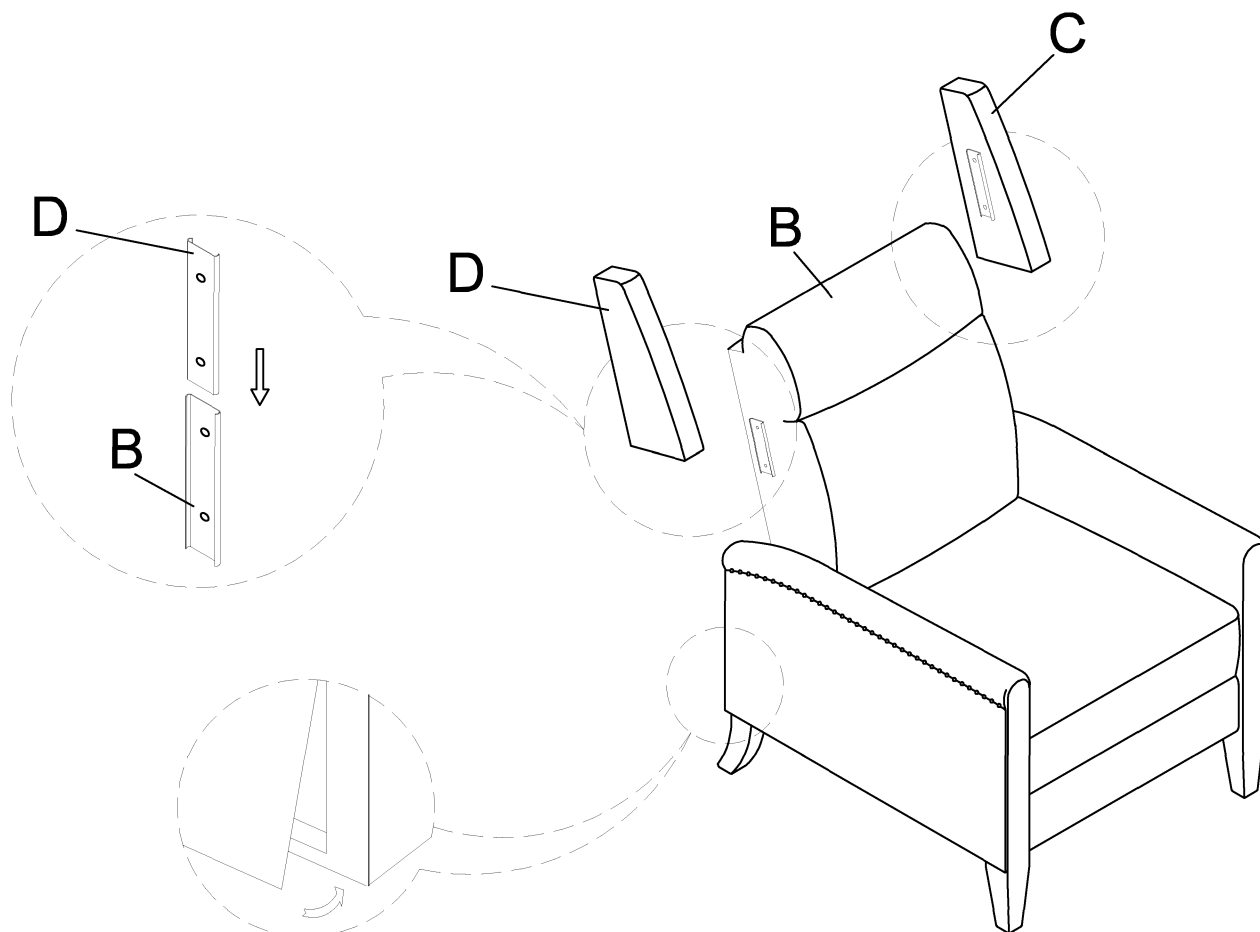

ASSEMBLY INSTRUCTIONS

ITEM NO: 194S9506-F1S
PUSH BACK RECLINING CHAIR

COMPLETED

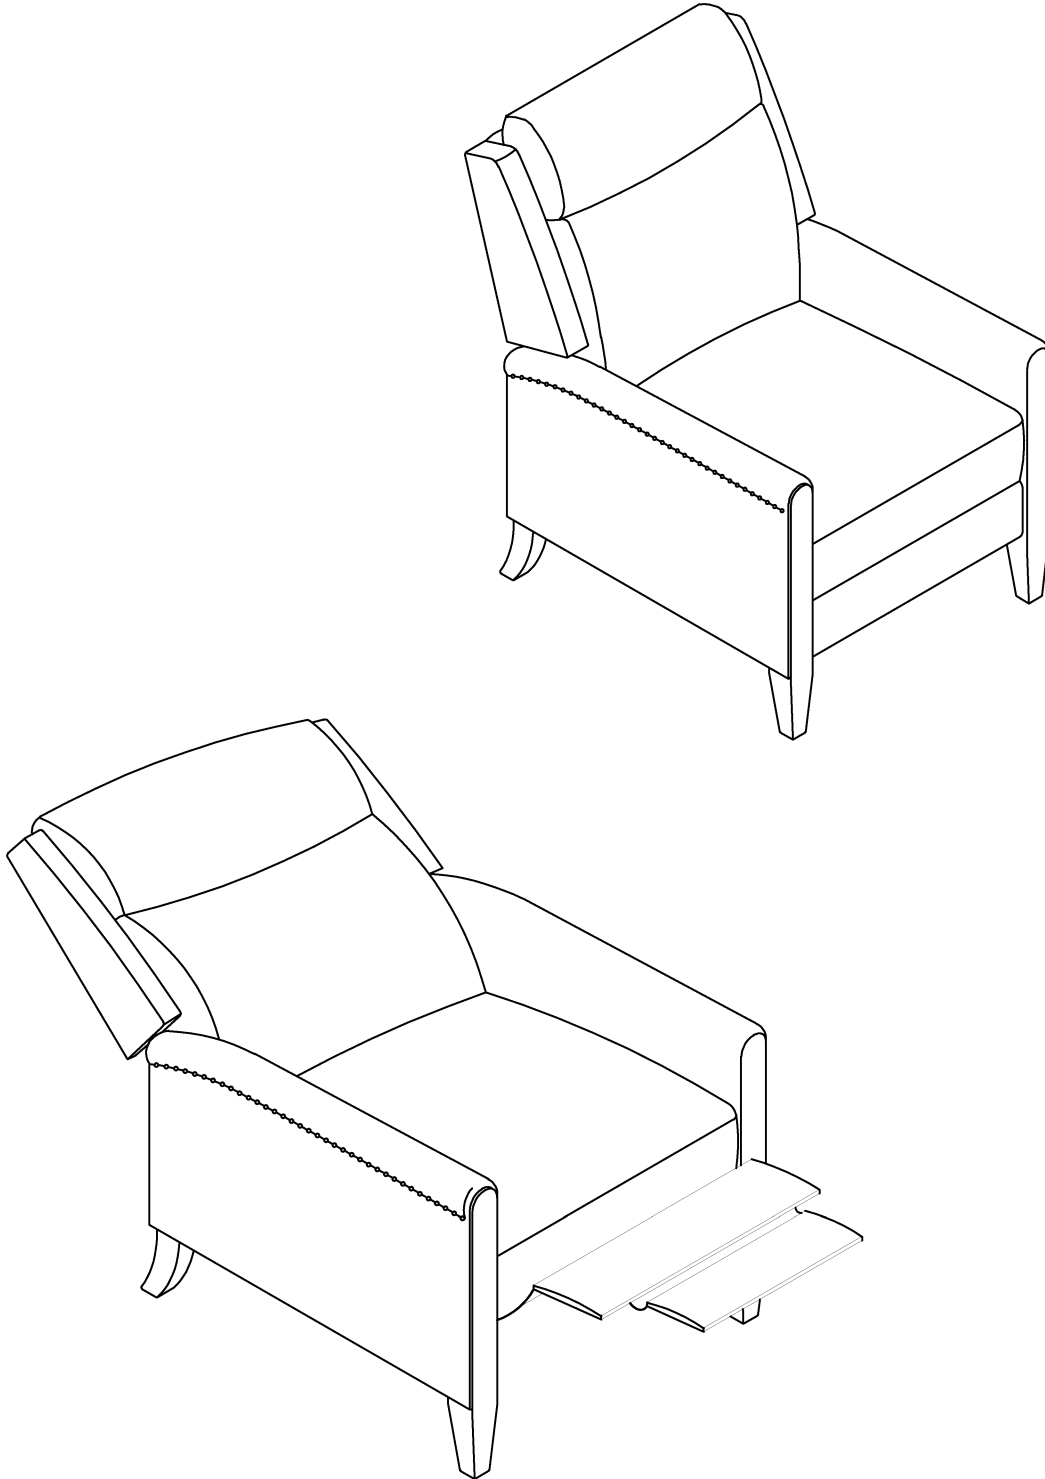

Care Instruction for Textured Fabric Furniture:

In order to maintain the original appearance of your Textured Fabric furniture, please follow below simple care procedures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets.
Sunlight and or exposure to heating and air conditioning outlets will fade / damage Textured Fabric.
- Vacuum or wipe with a soft cloth to remove dust.
- Hardware may loosen over time. Periodically check to make sure all connection are tight, Re-tighten if necessary



For item use on wooden floor, hard surfaces or carpets, it is recommended to install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.