 


# **CROSLEY**

 
 
 
 
 
 
 
 
 
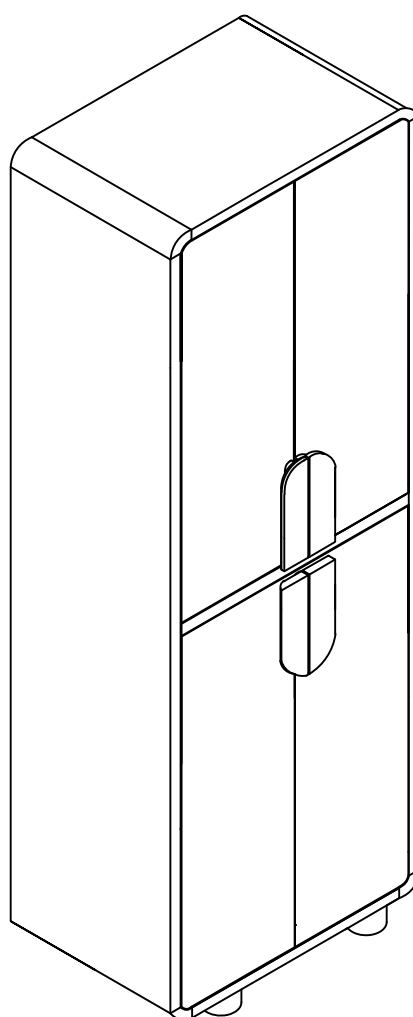 


 
 
---

## FURNITURE

Pantry  
CF3143

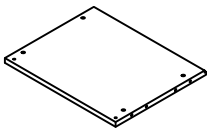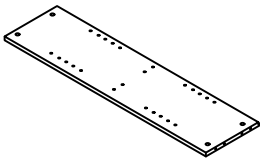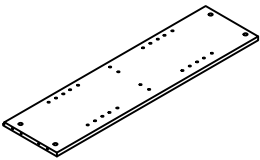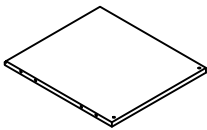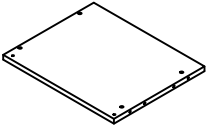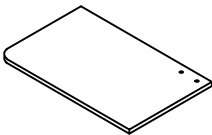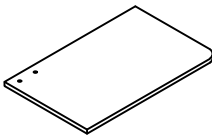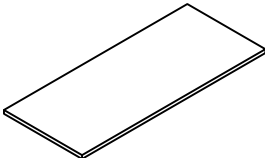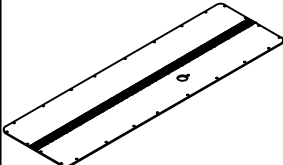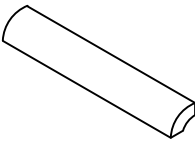

# PART LIST

 
<div>A</div> 	<div>B</div> 	<div>C</div> 	<div>D</div> 	<div>E</div> 
Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Bottom Panel 1 PC	Fixed Panel 1 PC
<div>F</div> 	<div>G</div> 	<div>H</div> 	<div>I</div> 	<div>J</div> 
Door Panel 2 PCS	Door Panel 2 PCS	Adjustable Shelf 4 PCS	Back Panel 1 PC	Corner 4 PCS
<div>K</div> 	<div>L</div> 	<div>M</div> 	<div>N</div> 	
Left Handle 2 PCS	Right Handle 2 PCS	Leg 4 PCS	Cover 1 PC	

# HARDWARE LIST

#1	#2	#3	#4	#5
				
Ø10*50mm				12*Ø3*D6mm
Wood Dowel	Cam Bolt	Cam Lock	Magnet	Screw
20 PCS (Extra 1)	20 PCS (Extra 1)	20 PCS (Extra 1)	4 PCS	8 PCS (Extra 1)
#6	#7	#8	#9	#10
				
3/4"*Ø5/32"*D9mm		1/2"*Ø1/4		
Round Head Bolt	Binding Post	Bolt	Metal Plate	Adjustable Leveler
8 PCS (Extra 1)	1 SET (Extra 1)	4 PCS (Extra 1)	2 PCS	4 PCS
#11	#12	#13	#14	#15
				
		ØM2	ØM4	
Round Head Screw	Cover	Small Allen Wrench	Allen Wrench	Shelf Holder
24 PCS (Extra 1)	12 PCS	1 PC	1 PC	16 PCS (Extra 1)
#16				
				
Safety Strap Kit				
2 SETS				

## ADDITIONAL TOOLS (Not Provided)

Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.


Step 1. Insert cam bolts (part #2) into pre-drilled holes of panels (parts B & C) and corners (part J) using phillips head screwdriver.

Note : Do not over tighten cam bolts. Stop tightening once threads on cam bolts are no longer visible.

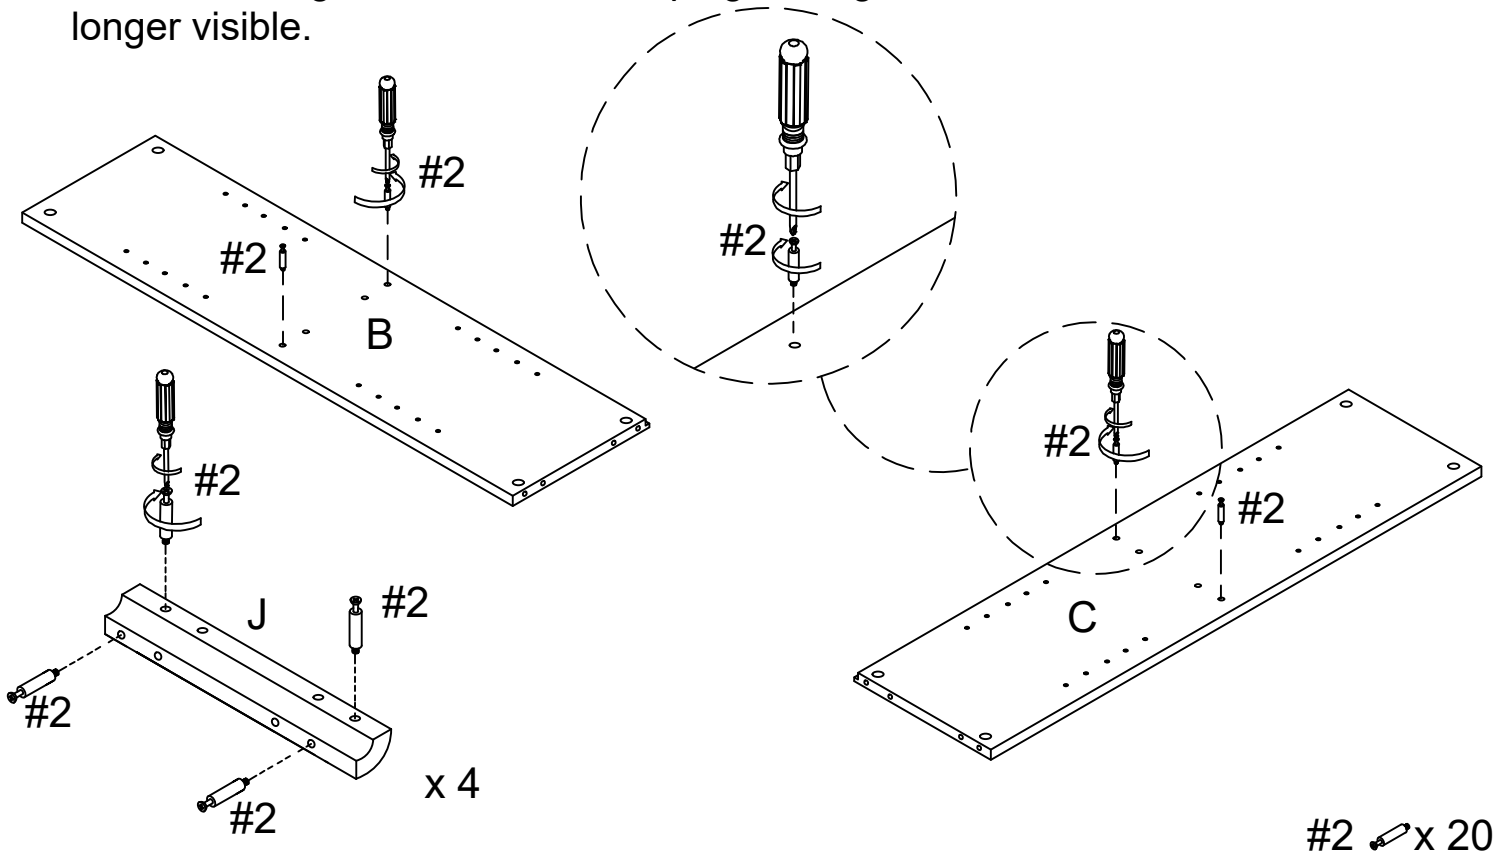


Step 2. Attach corners (part J) to panels (parts B & C) using wood dowels (part #1), cam locks (part #3) and phillips head screwdriver.

Note : Cam locks must rotate a full 180°. See pictured insert.

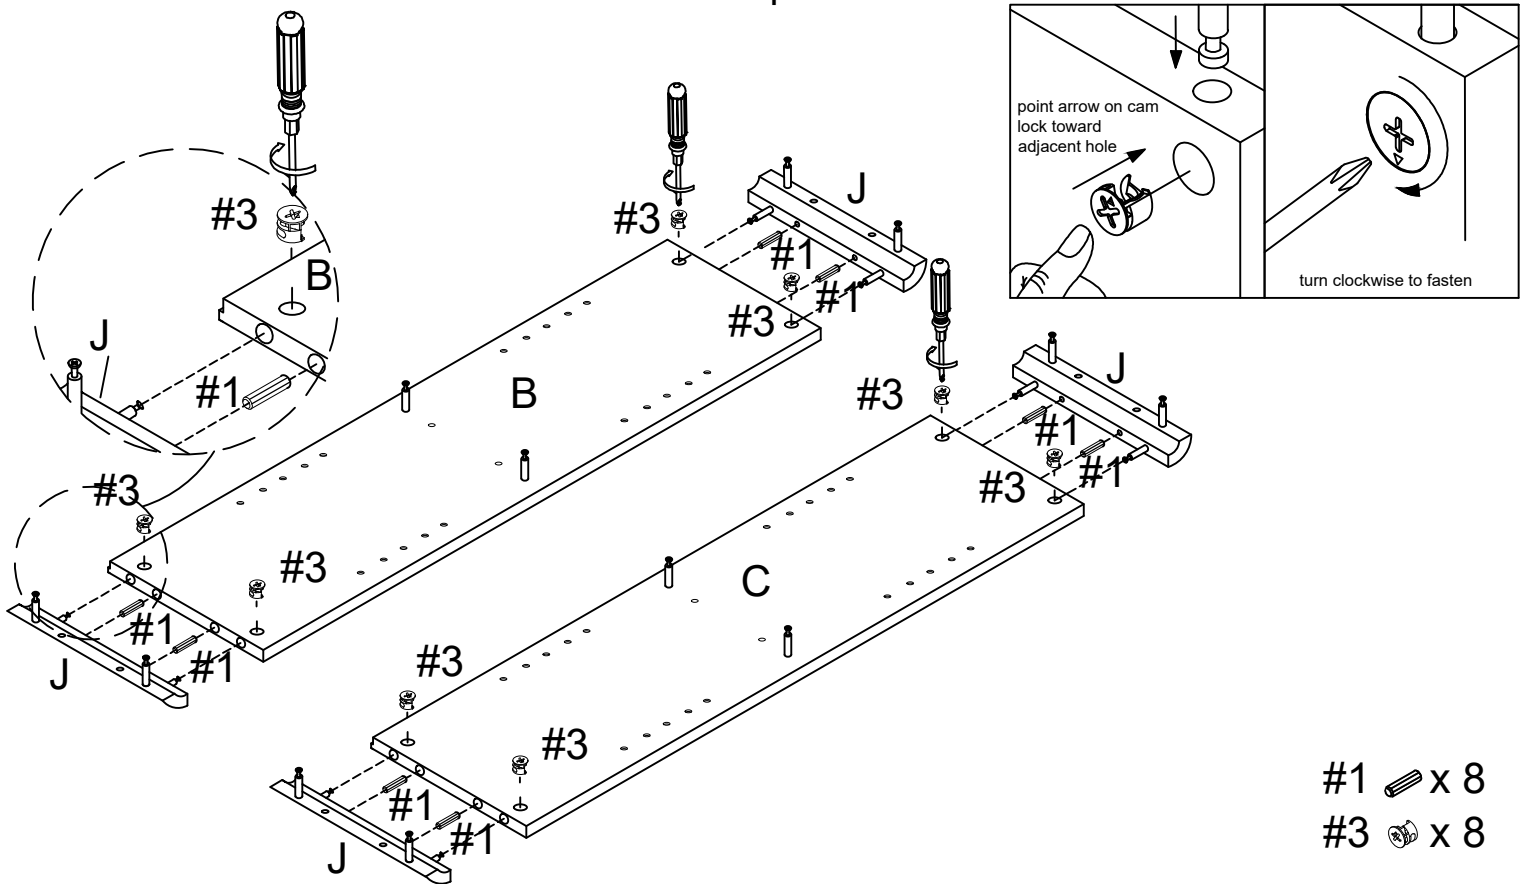


Step 3. Attach magnets (part #4) to panels (parts A, D & E) using screws (part #5) and phillips head screwdriver.

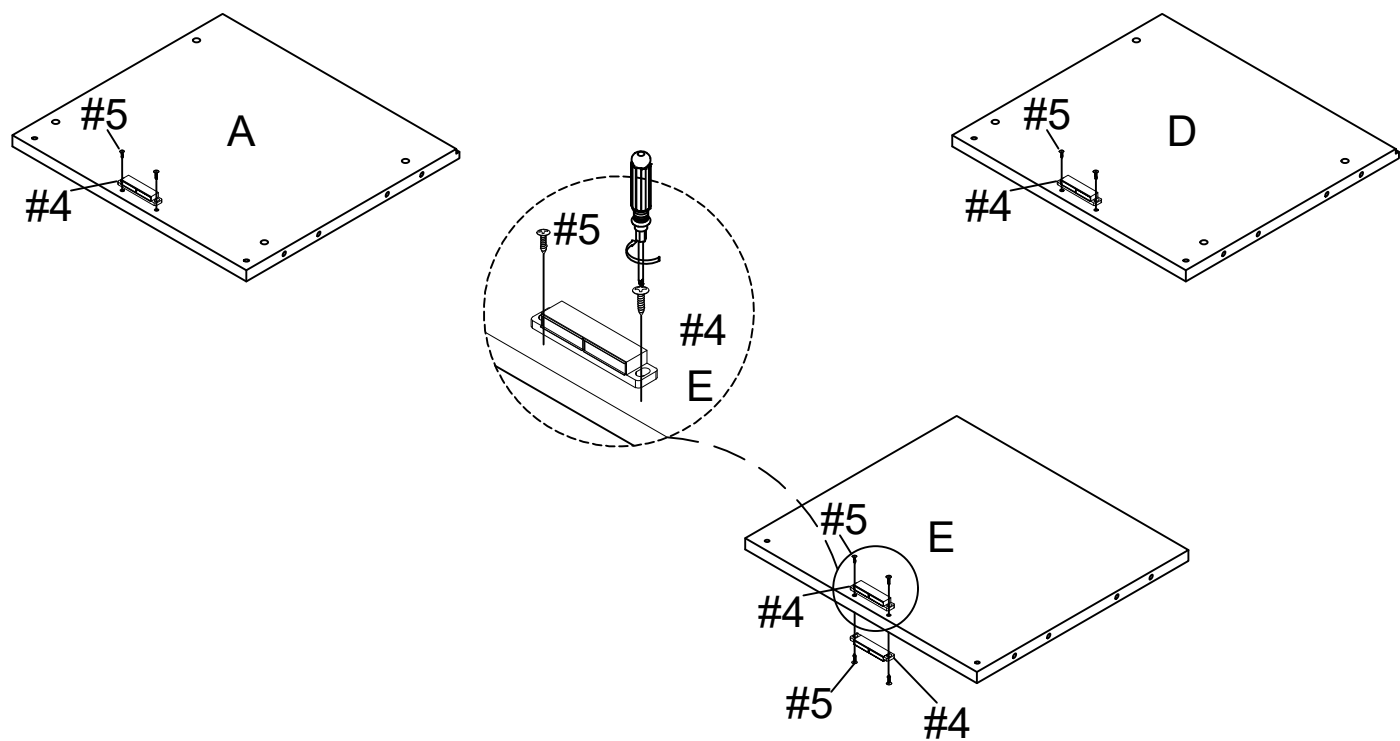


#4  x 4  
#5  x 8

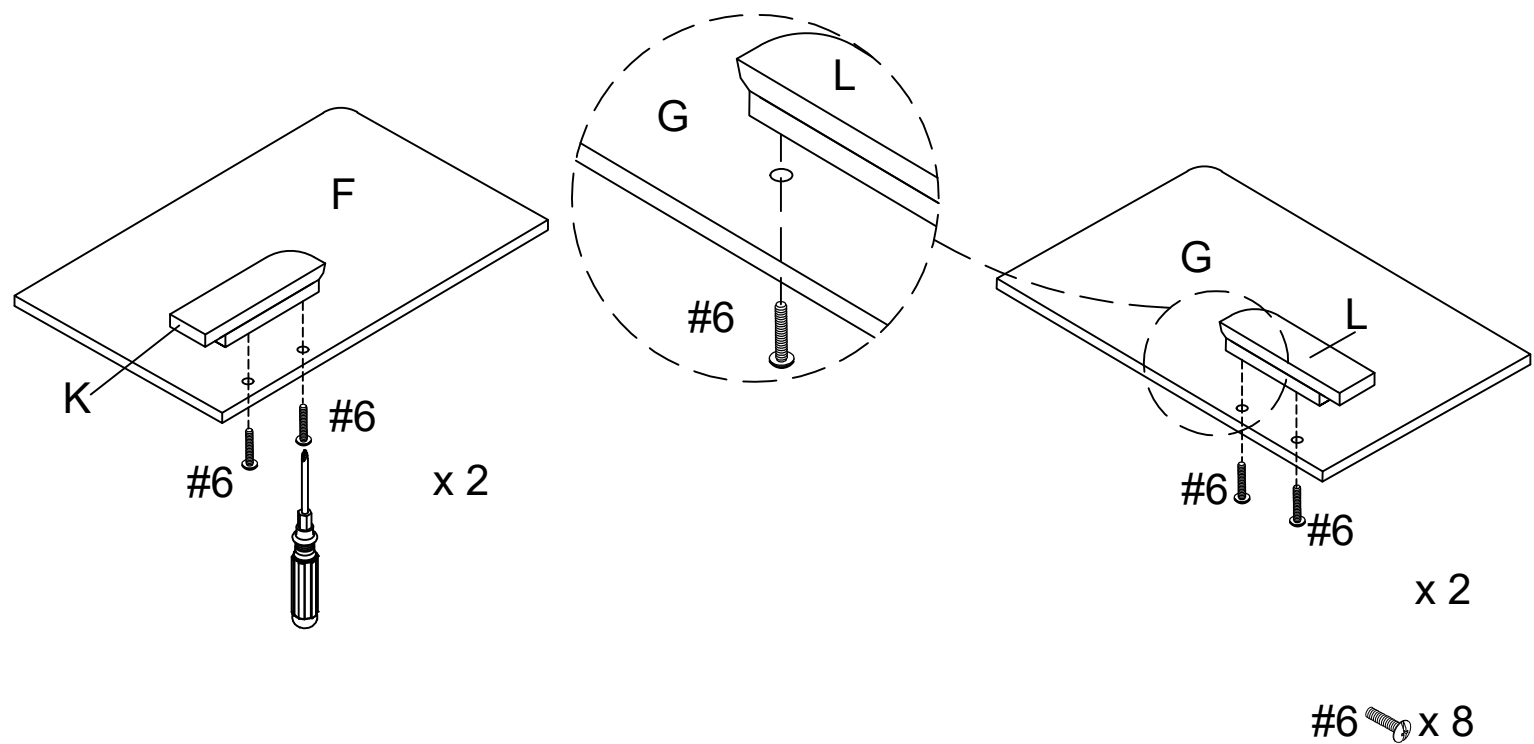

Step 4. Attach handles (parts K & L) to door panels (parts F & G) using round head bolts (part #6) and phillips head screwdriver.



#6  x 8

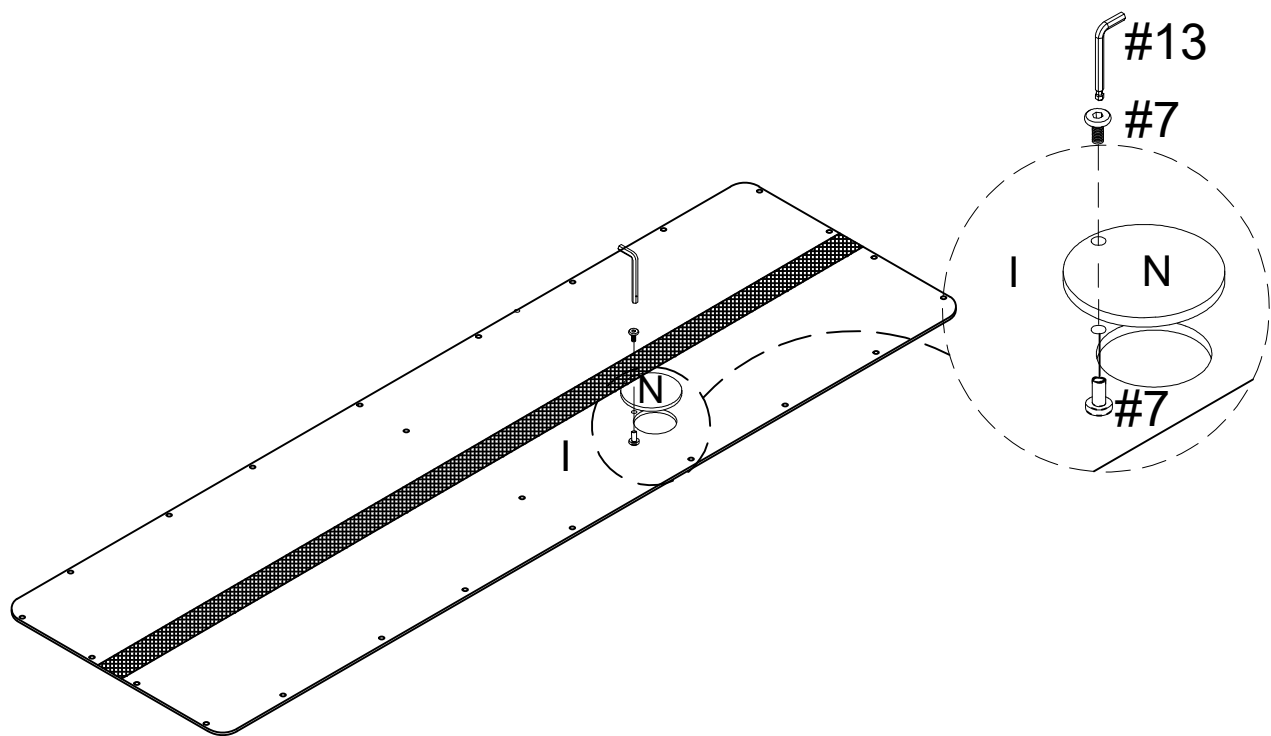
Step 5. Attach cover (part N) to back panel (part I) using binding post (part #7) and small allen wrench (part #13).





#7  x 1  
 #13  x 1

Step 6 . Attach panels (parts A, D & E) to assembled unit (parts C & J) using wood dowels (part #1), cam locks (part #3) and phillips head screwdriver.

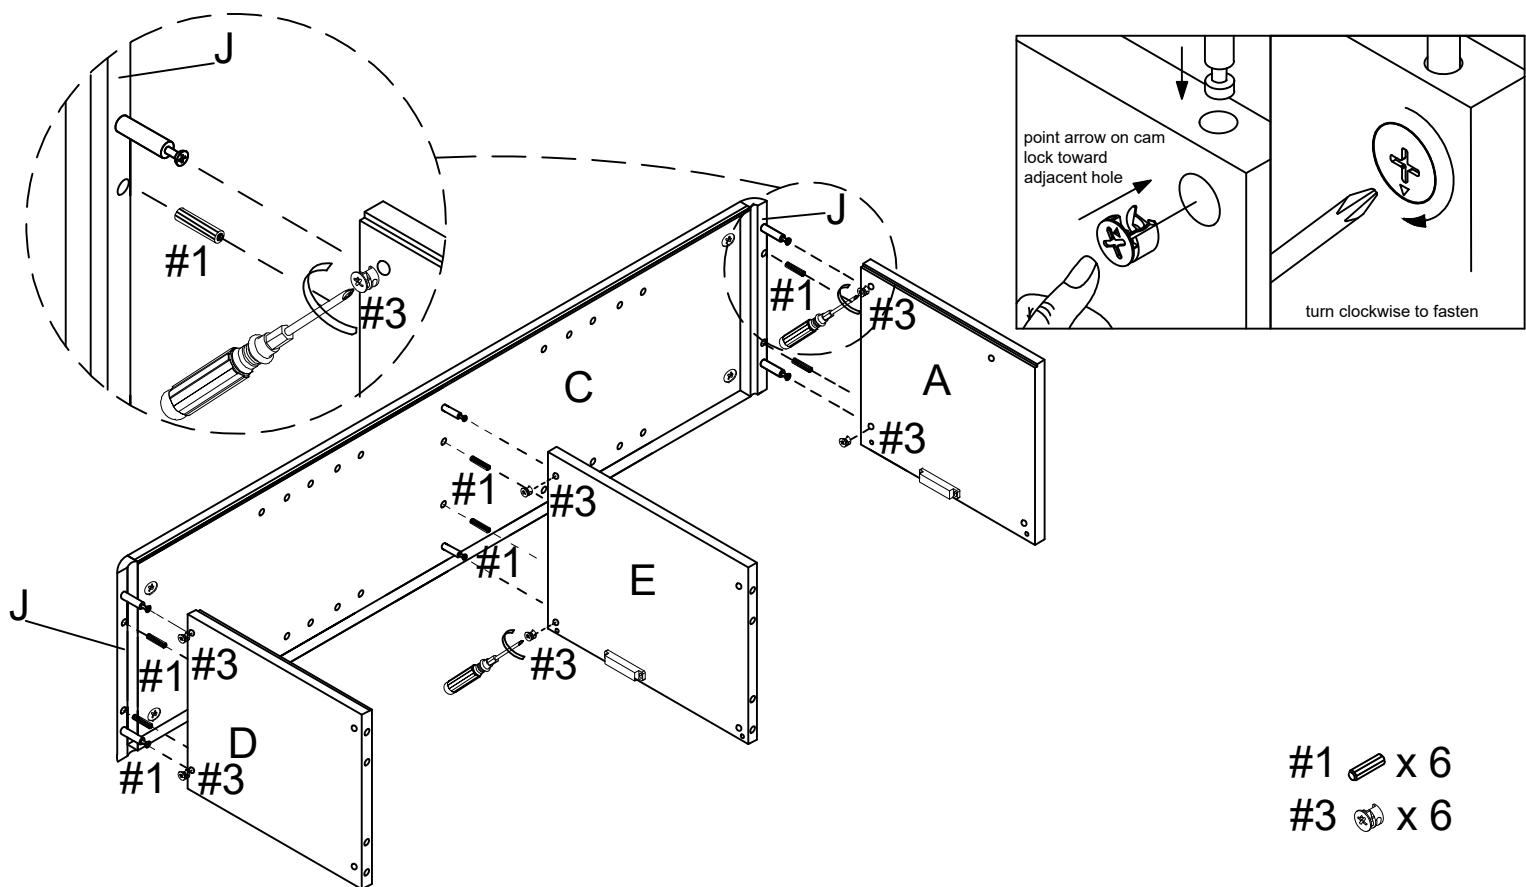
Note : Cam locks must rotate a full 180°. See pictured insert.




#1  x 6  
 #3  x 6

Step 7 . Attach assembled unit (parts B & J) to assembled unit (parts A, D & E) using wood dowels (part #1), cam locks (part #3) and phillips head screwdriver.


Note : Cam locks must rotate a full 180°. See pictured insert.

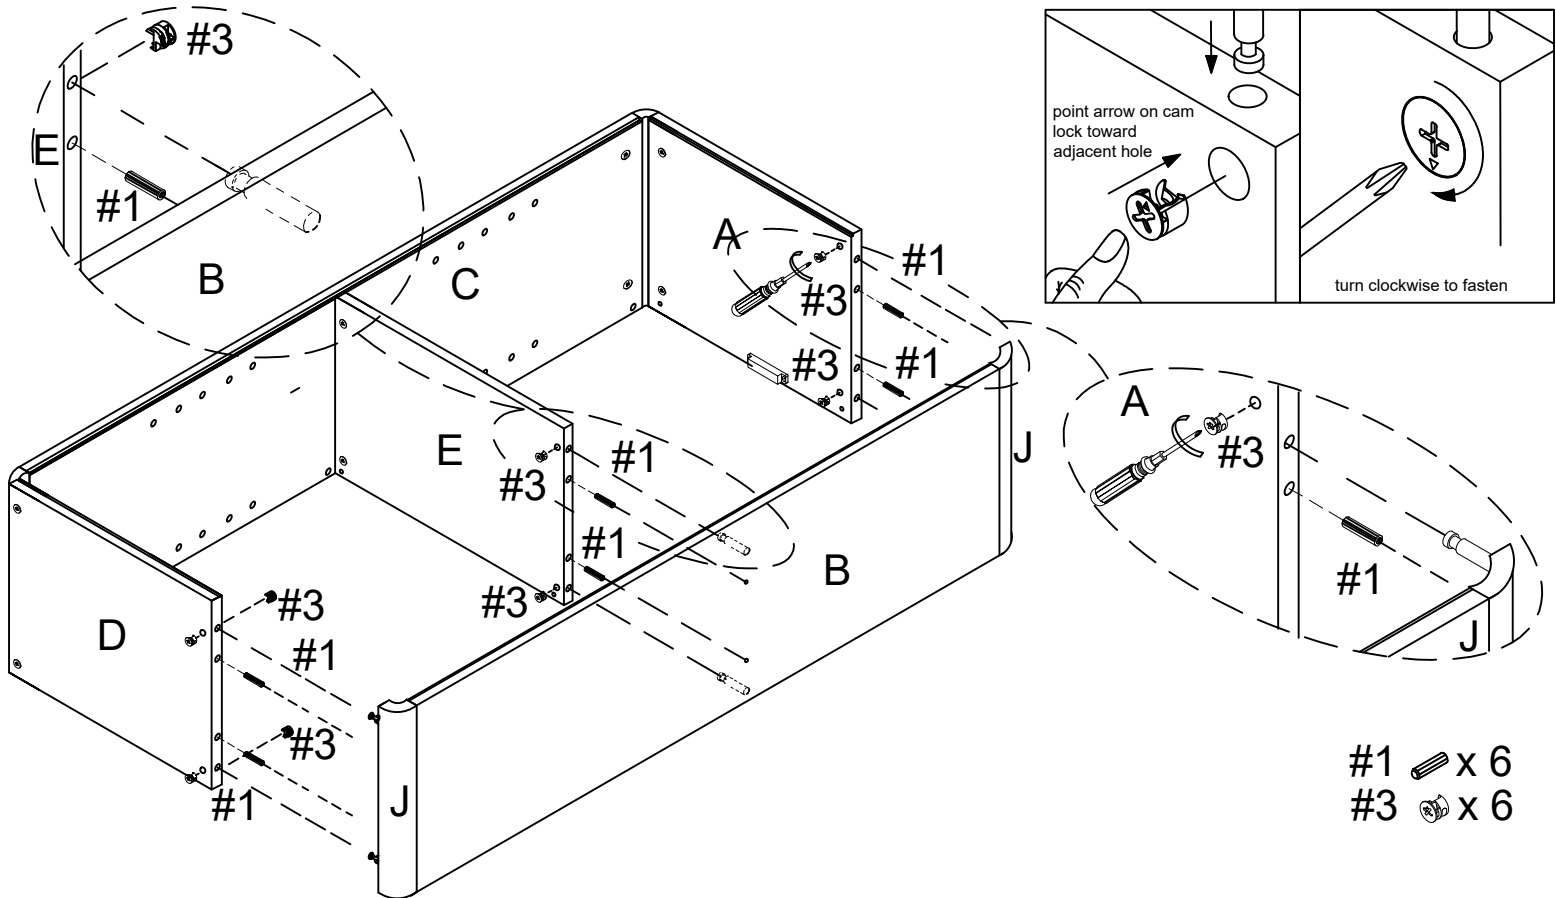


Step 8 . Attach metal plates (part #9) to bottom panel (part D) using bolts (part #8) and allen wrench (part #14).

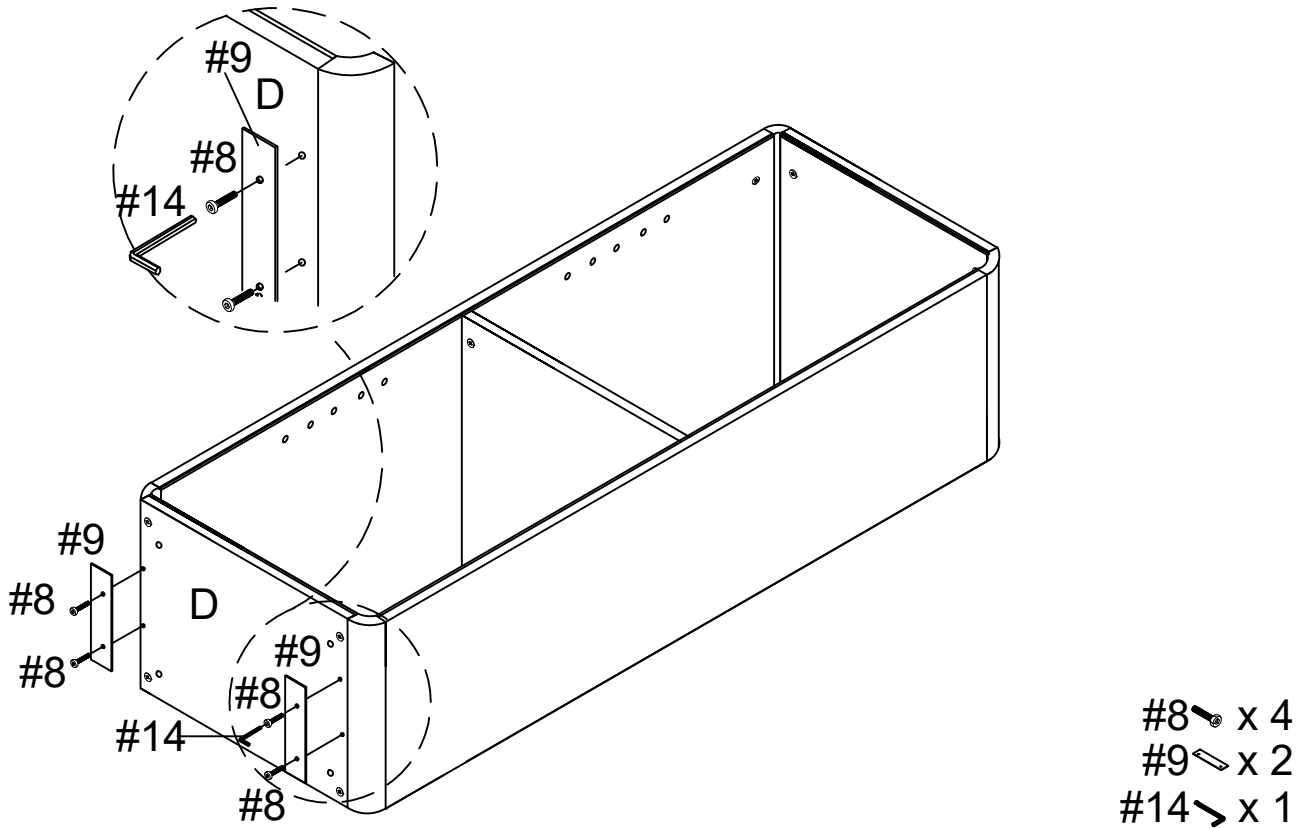


Step 9 . Attach legs (part M) to bottom panel (part D). Attach adjustable levelers (part #10) to legs (part M).

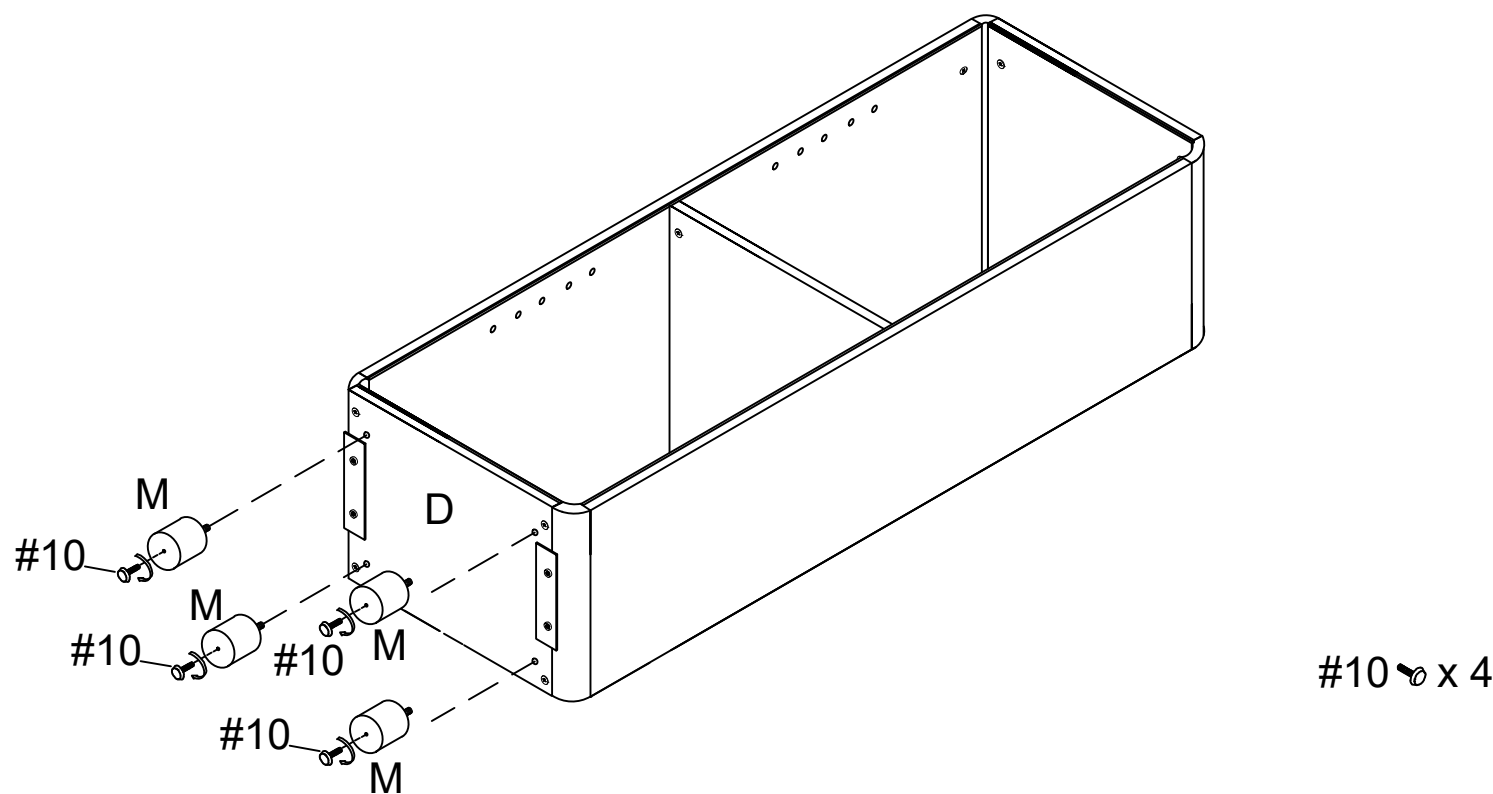
 


Step 10. Attach back panel (part I) to assembled unit (parts A, B, C, D & E) using round head screws (part #11) and phillips head screwdriver.

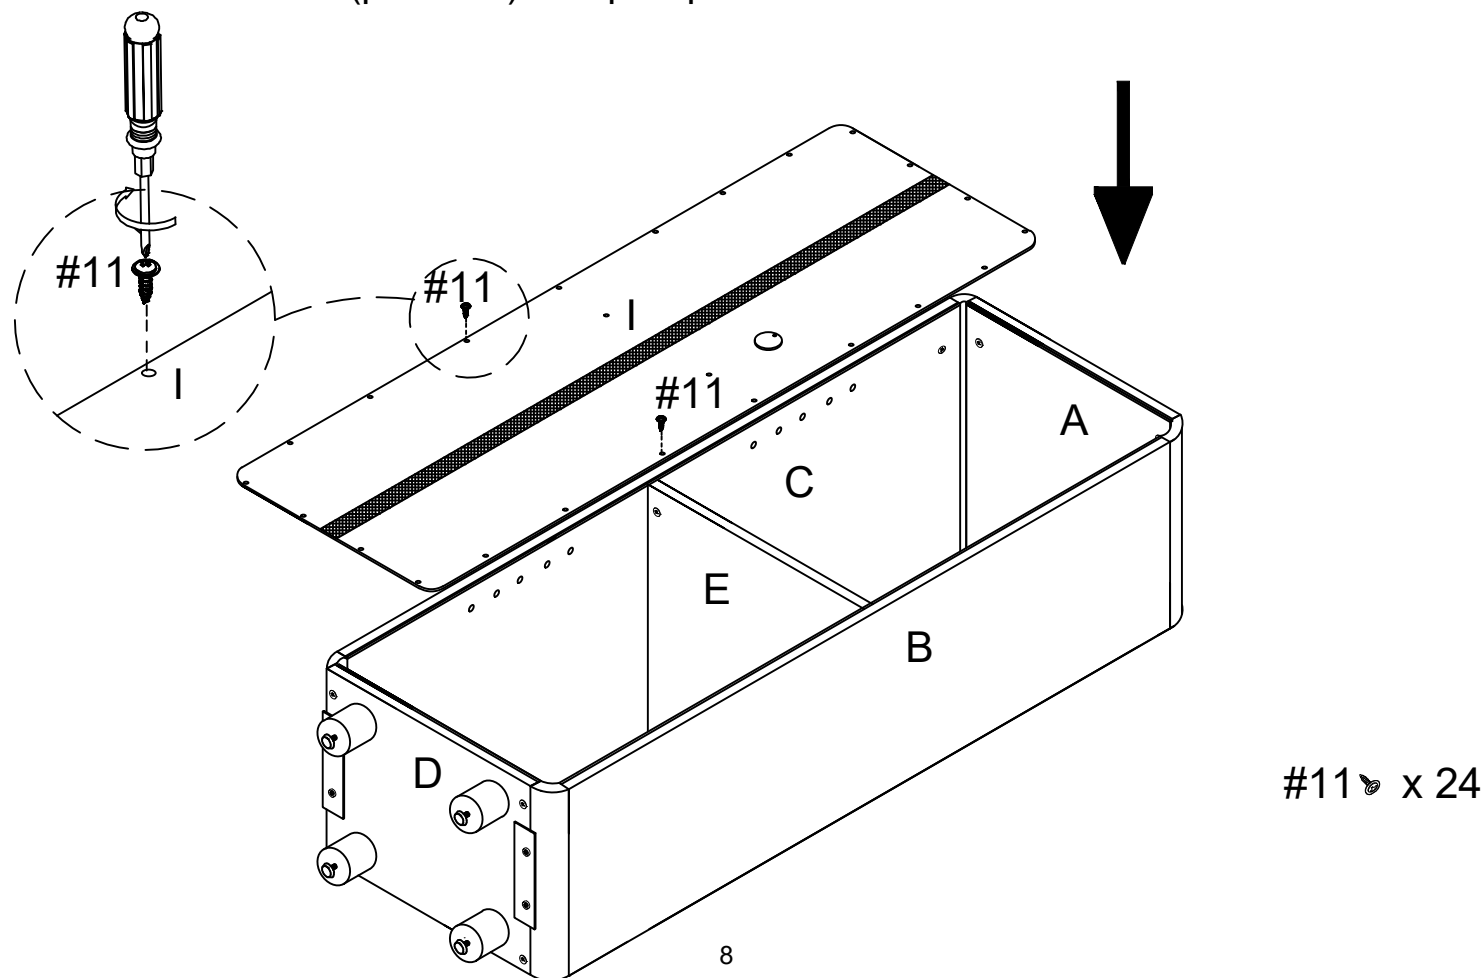

Step 11. Carefully turn unit upright. Attach covers (part #12) to the hole of cam locks (part #3). Place shelf holders (part #15) into desired position and then slide adjustable shelves (part H) into place.

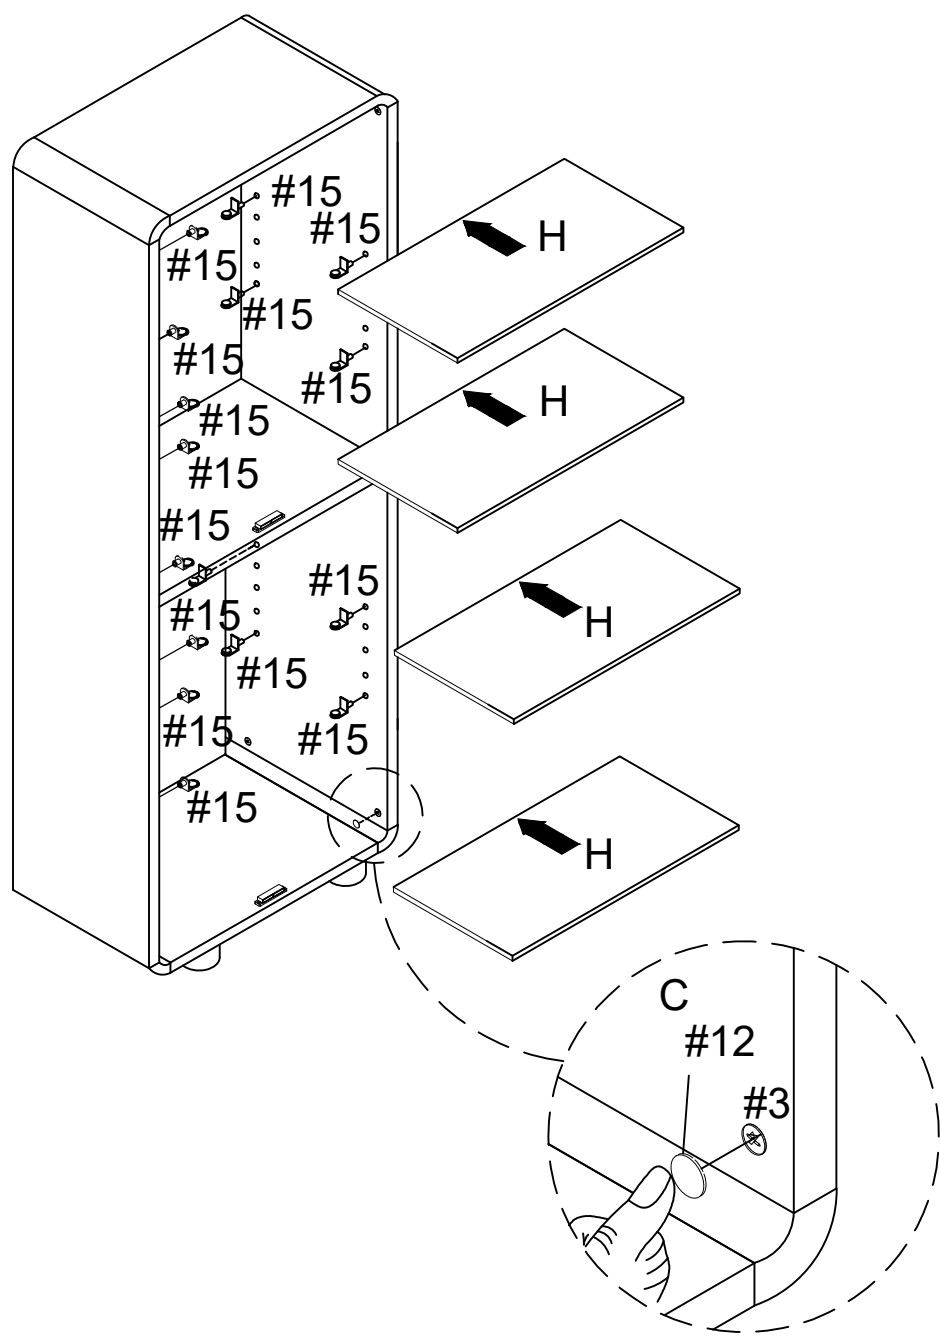



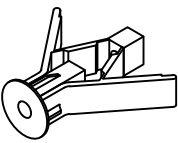



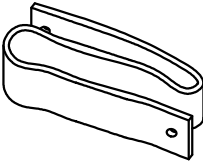
#12  x 12  
#15  x 16

Step 12. Attach door panels (parts F & G) by placing bottom pin hinge (pre-installed in door) in the pre-drilled hole of bottom panel (part D) and fixed shelf (part E). Then depress the top spring-loaded pin hinge so it can be placed in the pre-drilled hole of top panel (part A) and fixed shelf (part E).

NOTE: Be sure top and bottom pin hinges are fully extended to secure doors in place.  
NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

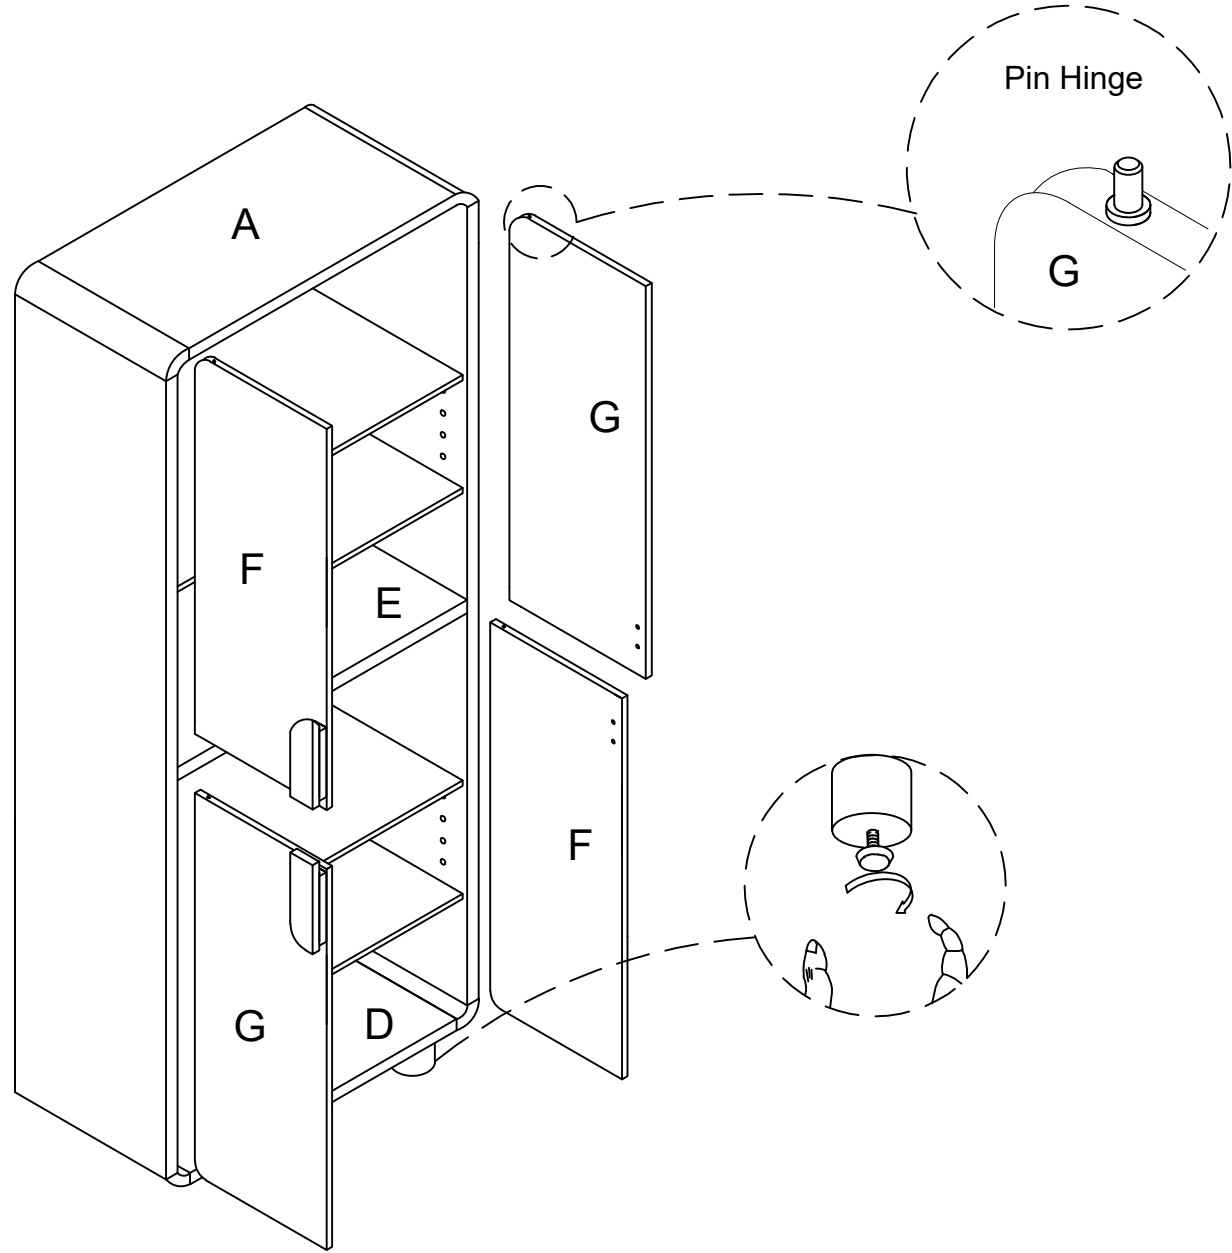Important: Safety strap kit (part #16) must be installed to prevent tipping, damage and/or injury




#16	A	B	C	D	E
			 D8*3/4"	 D8*1-1/2"	
Safety Strap Kit 2 SETS	Wall Anchor 2 PCS	Washer 4 PCS	Short Screw 2 PCS	Long Screw 2 PCS	Safety Wall Strap 2 PCS

### SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

- 1.Insert short screw (C) through washers (B) and safety wall strap (E) and attach to back panel (part I) using phillips head screwdriver.
- 2.Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in back panel (part I) where the safety wall strap (E) is attached. Tap wall anchor (A) into the hole.
- 3.Insert long screw (D) through washers (B) and safety wall strap (E) into wall anchor (A) using phillips head screwdriver.

Note:This item is not intended for clothing storage use.

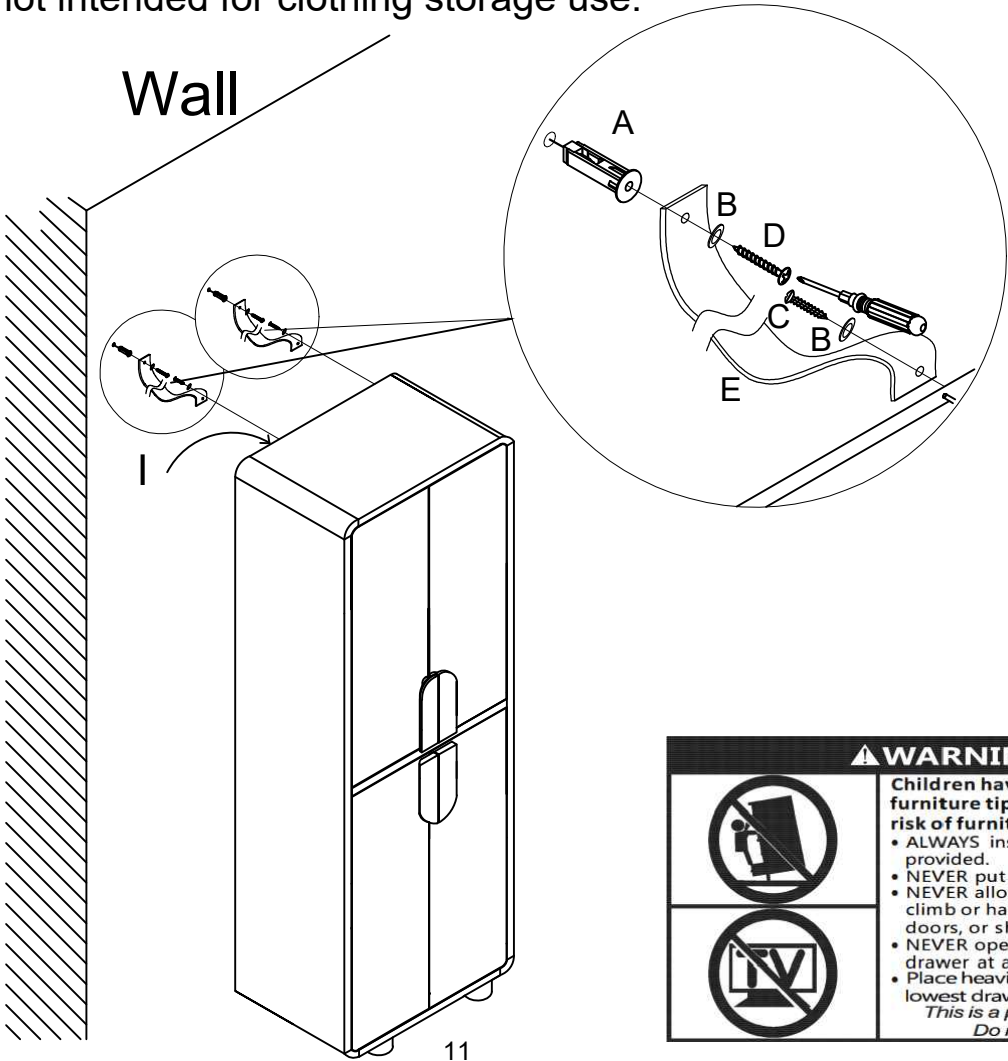




**⚠ WARNING**

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

*This is a permanent label. Do not remove!*