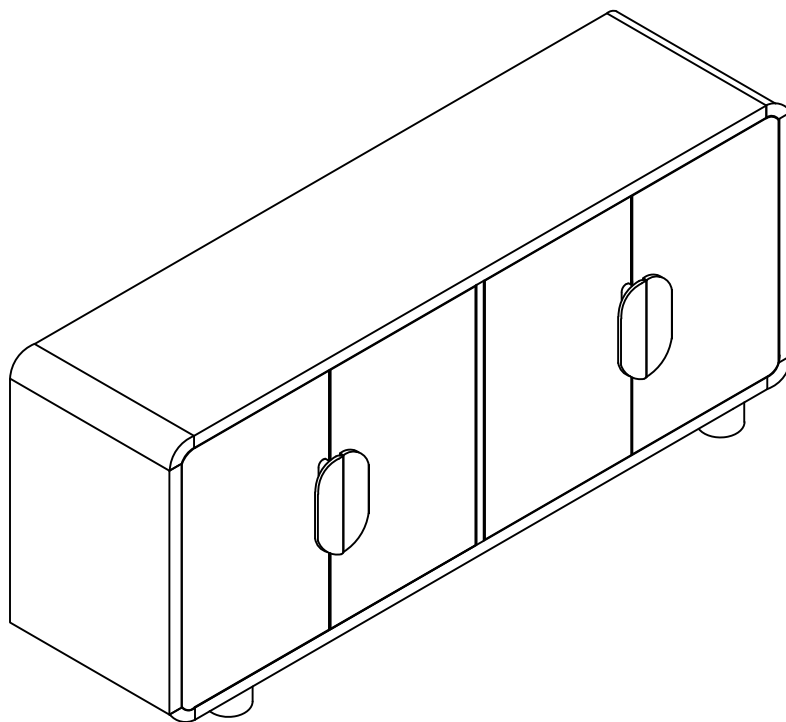

















CROSLEY

FURNITURE

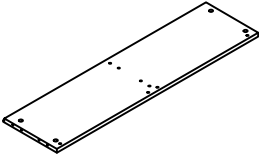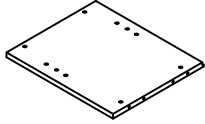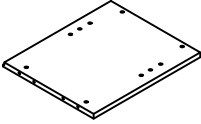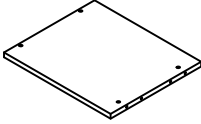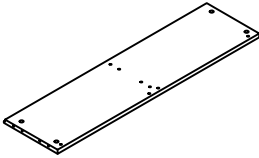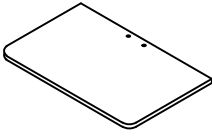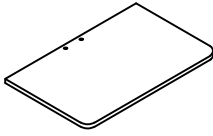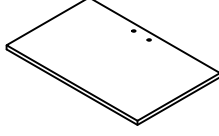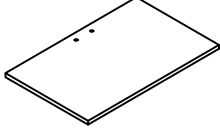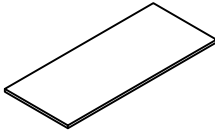
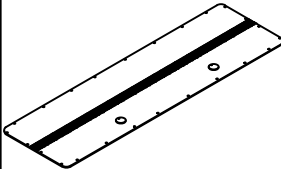
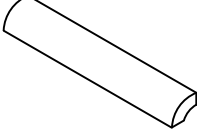
Sideboard
CF4230



PART LIST

 
A 	B 	C 	D 	E 
Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Partition Panel 1 PC	Bottom Panel 1 PC
F 	G 	H 	I 	J 
Left Door 1 PC	Right Door 1 PC	Left Middle Door 1 PC	Right Middle Door 1 PC	Adjustable Shelf 2 PCS
K 	L 	M 	N 	O 
Back Panel 1 PC	Corner 4 PCS	Handle 4 PCS	Leg 5 PCS	Cover 2 PCS

   HARDWARE LIST

#1  $\varnothing 10 \times 50 \text{mm}$ Long Wood Dowel 16 PCS (Extra 1)	#2  $\varnothing 8 \times 30 \text{mm}$ Short Wood Dowel 4 PCS (Extra 1)	#3  Cam Bolt 20 PCS (Extra 1)	#4  Cam Lock 20 PCS (Extra 1)	#5  Magnet 2 PCS
#6  $12 \times \varnothing 3 \times D6 \text{mm}$ Screw 4 PCS (Extra 1)	#7  $3/4 \times \varnothing 5/32 \times D9 \text{mm}$ Round Head Bolt 8 PCS (Extra 1)	#8  Binding Post 2 SETS (Extra 1)	#9  $1/2 \times \varnothing 1/4$ Bolt 4 PCS (Extra 1)	#10  Metal Plate 2 PCS
#11  Adjustable Leveler 5 PCS	#12  Round Head Screw 22 PCS (Extra 1)	#13  Shelf Holder 8 PCS (Extra 1)	#14  Cover 12 PCS (Extra 4)	#15  $\varnothing M2$ Small Allen Wrench 1 PC
#16  $\varnothing M4$ Allen Wrench 1 PC	#17  Safety Strap Kit 1 SET			

ADDITIONAL TOOLS (Not Provided)

 Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.


Step 1. Insert cam bolts (parts #3) into pre-drilled holes of panels (parts A & E) and corners (part L) using phillips head screwdriver.

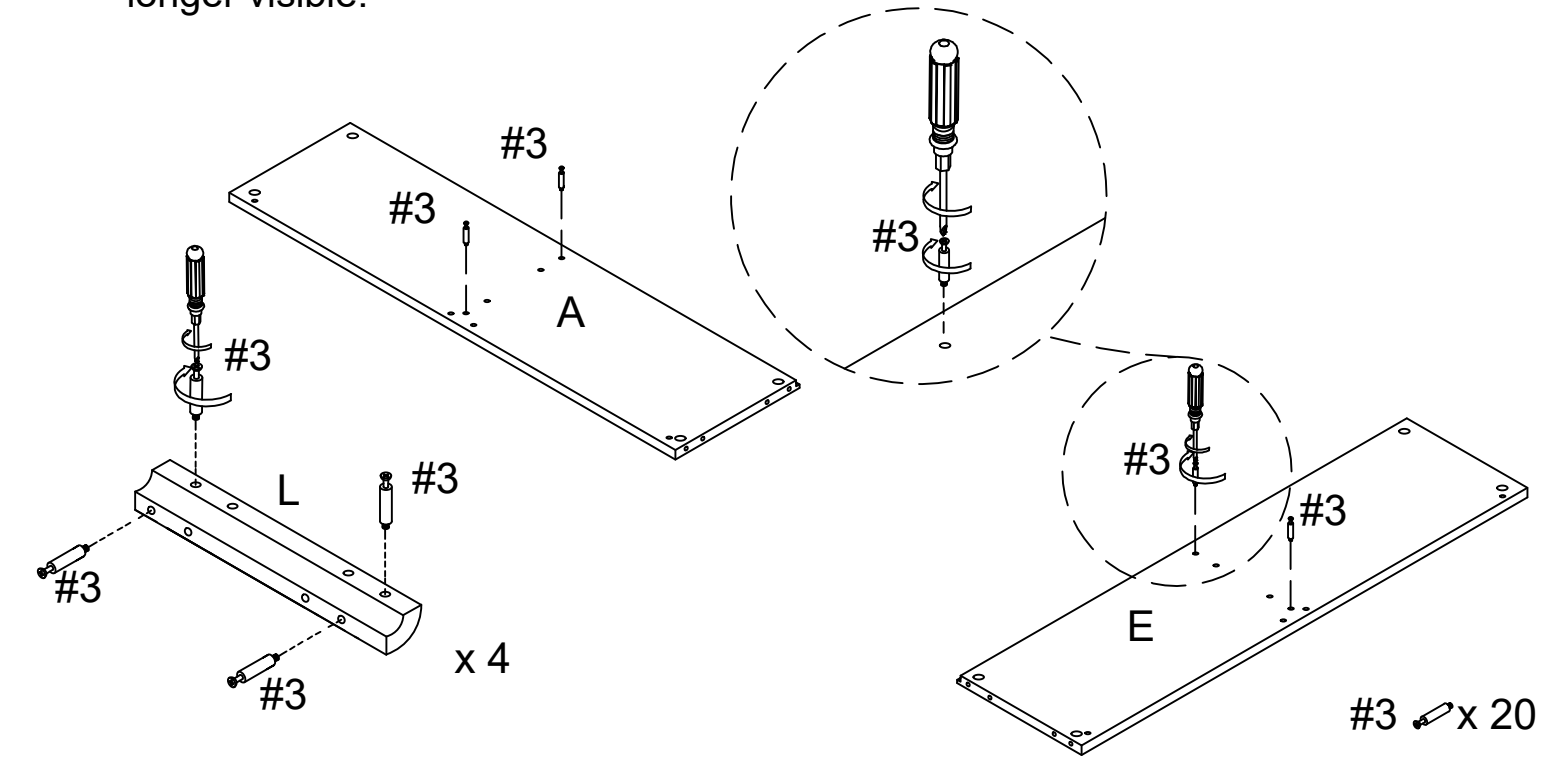Note : Do not over tighten cam bolts. Stop tightening once threads on cam bolts are no longer visible.




Step 2. Attach corners (part L) to panels (parts A & E) using long wood dowels (part #1), cam locks (part #4) and phillips head screwdriver. Attach magnets (part #5) to top panel (part A) using screws (part #6) and phillips head screwdriver.

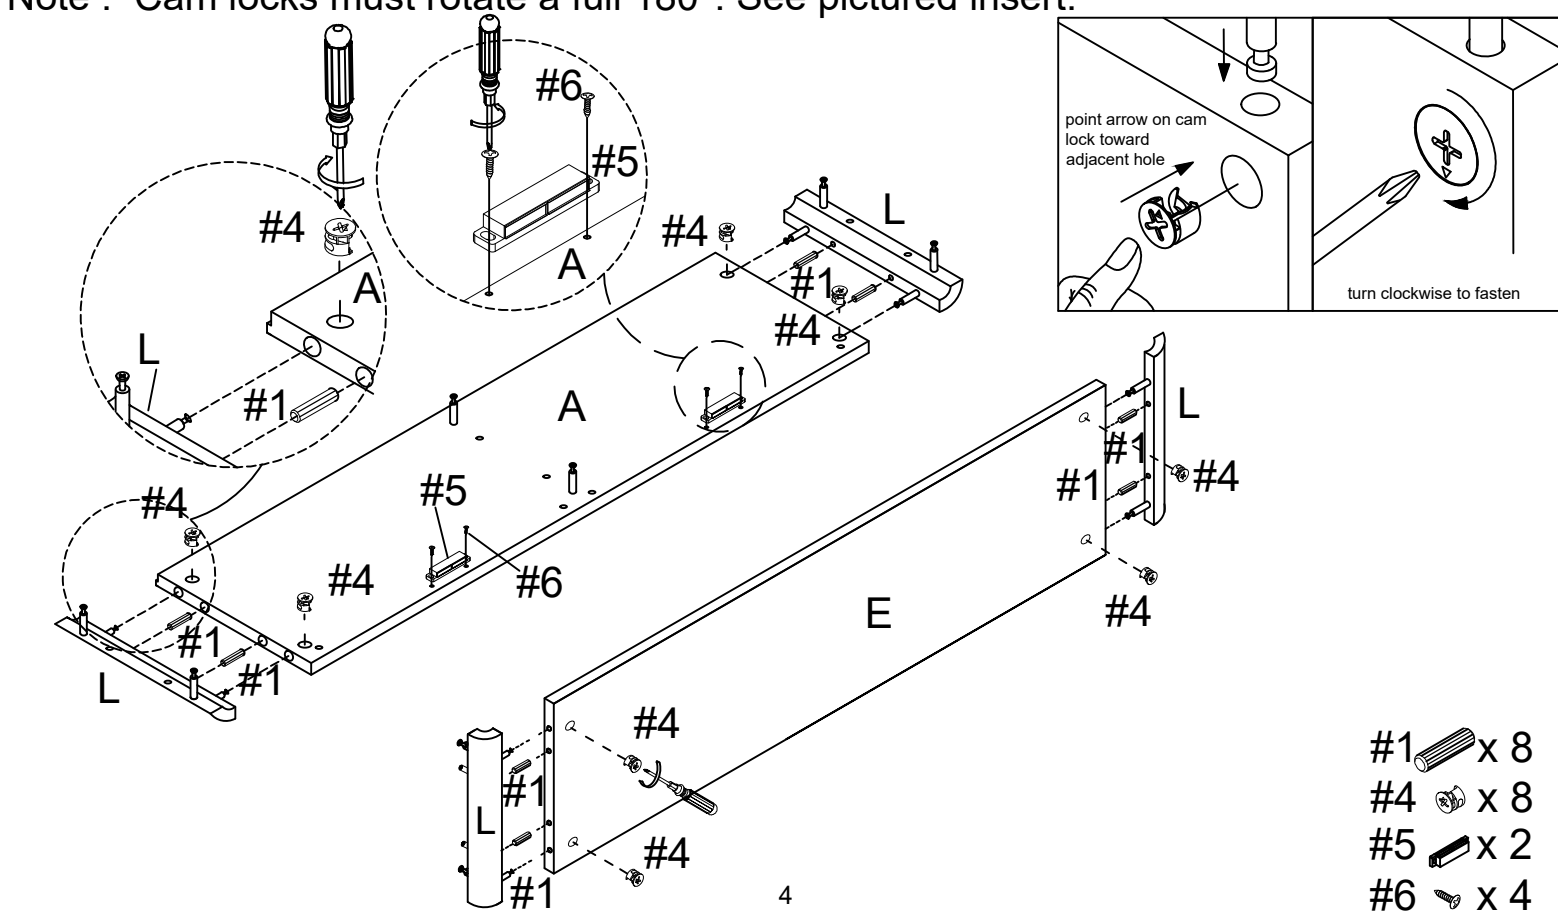
Note : Cam locks must rotate a full 180°. See pictured insert.



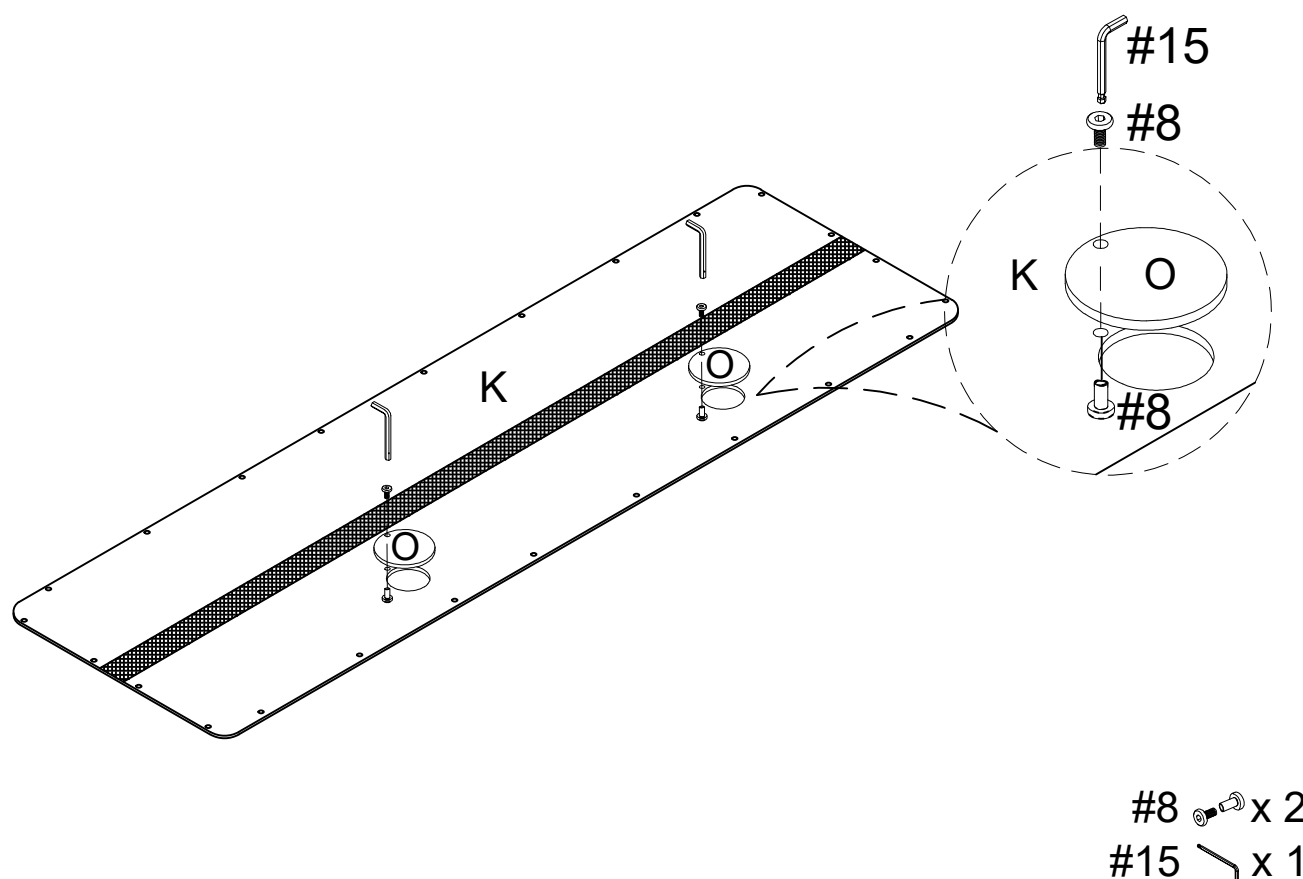Step 3. Attach covers (part O) to back panel (part K) using binding posts (part #8) and small allen wrench (part #15).




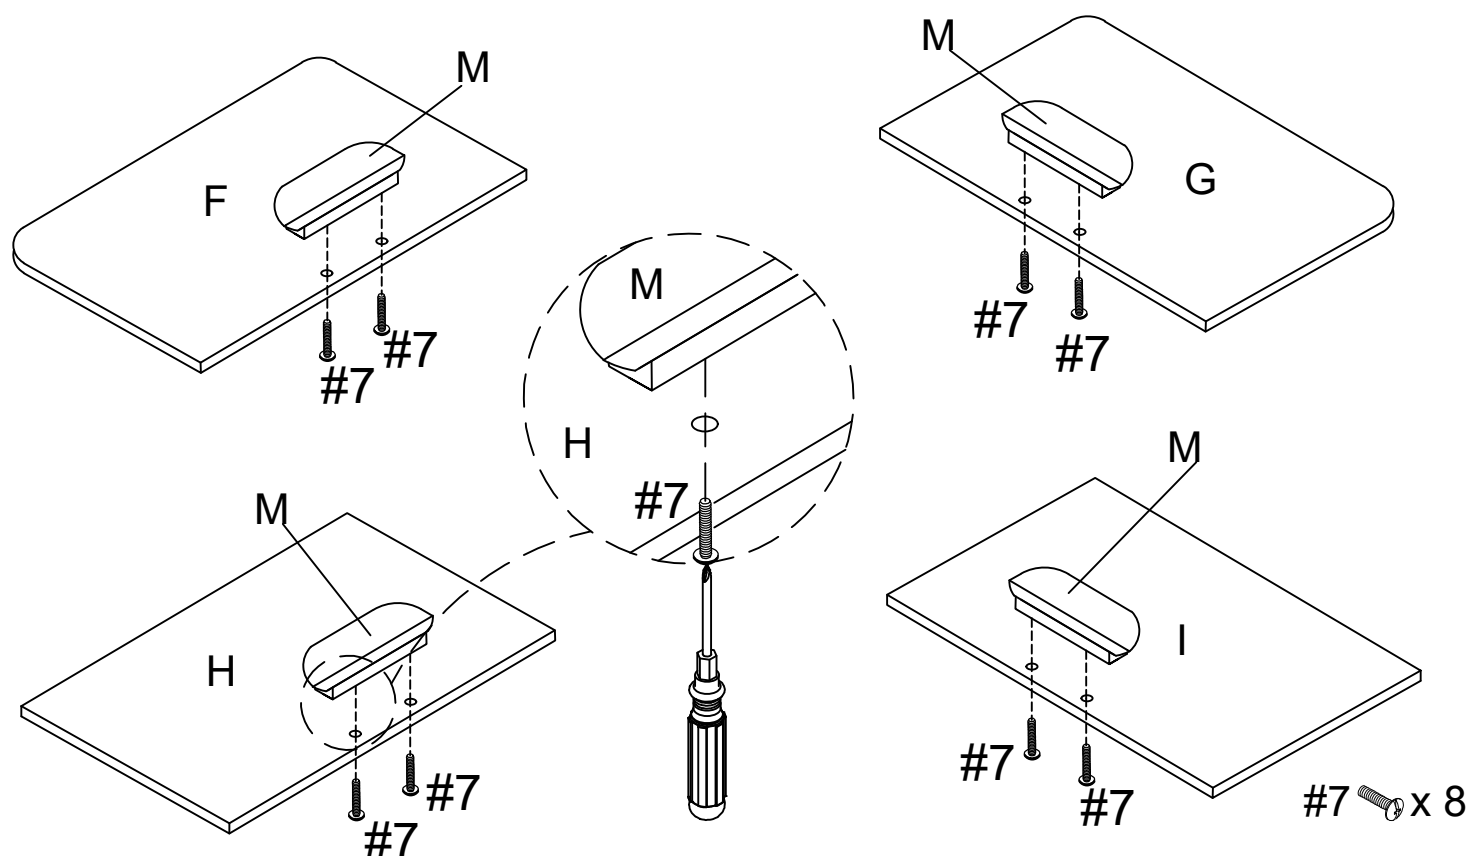Step 4. Attach handles (part M) to doors (parts F, G, H & I) using round head bolts (part #7) and phillips head screwdriver.




Step 5 . Attach panels (parts B, C & D) to assembled unit (parts A & L) using long wood dowels (part #1), short wood dowels (part #2), cam locks (part #4) and phillips head screwdriver.

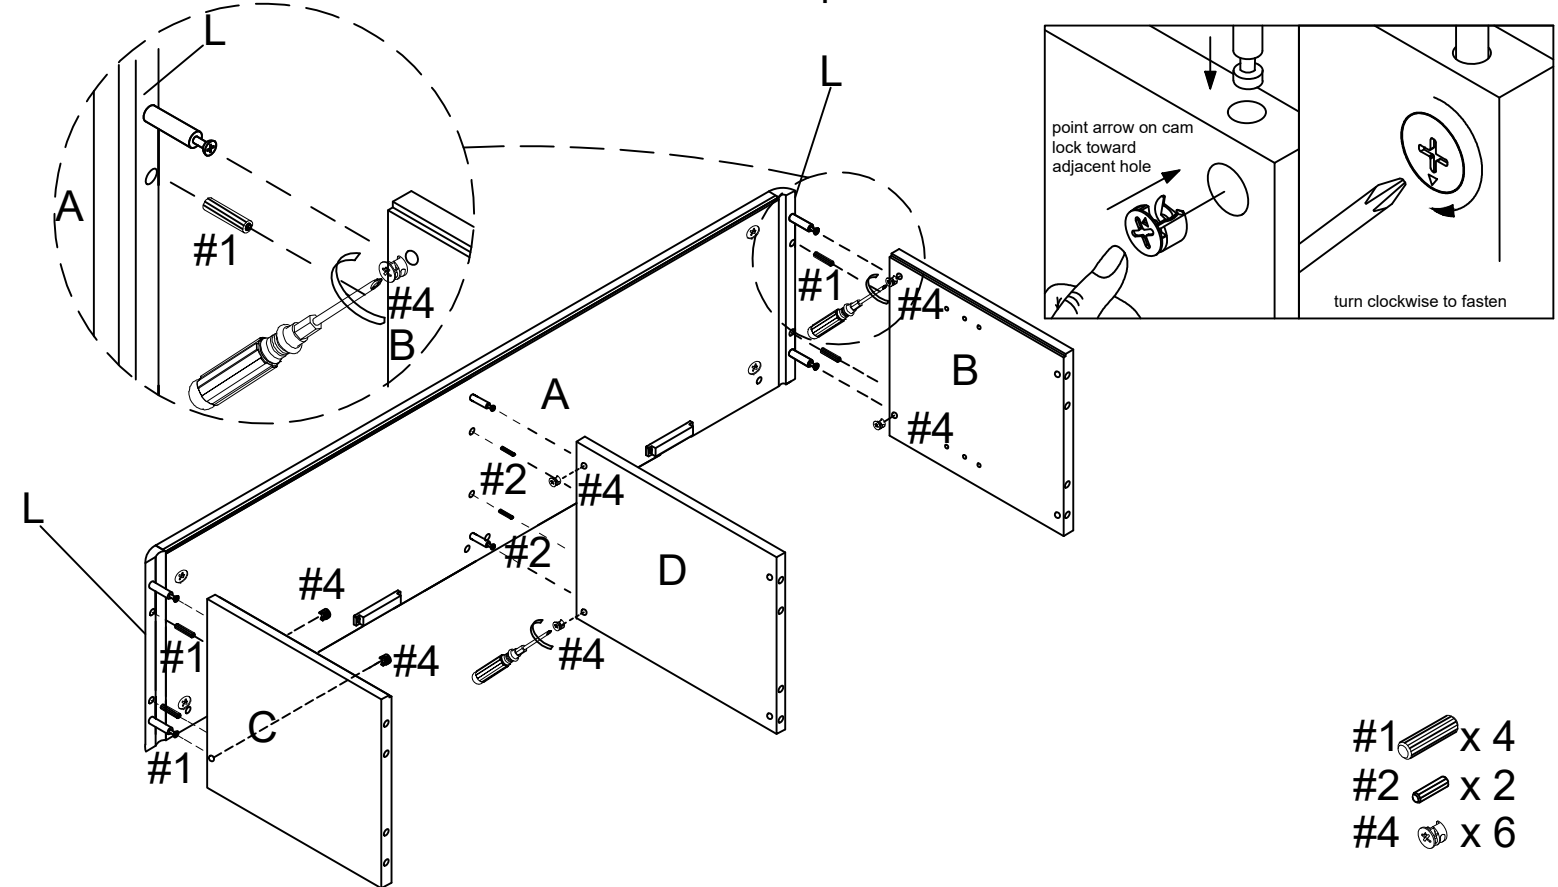Note : Cam locks must rotate a full 180°. See pictured insert.




Step 6 . Attach assembled unit (parts E & L) to assembled unit (parts B, C & D) using long wood dowels (part #1), short wood dowels (part #2), cam locks (part #4) and phillips head screwdriver.

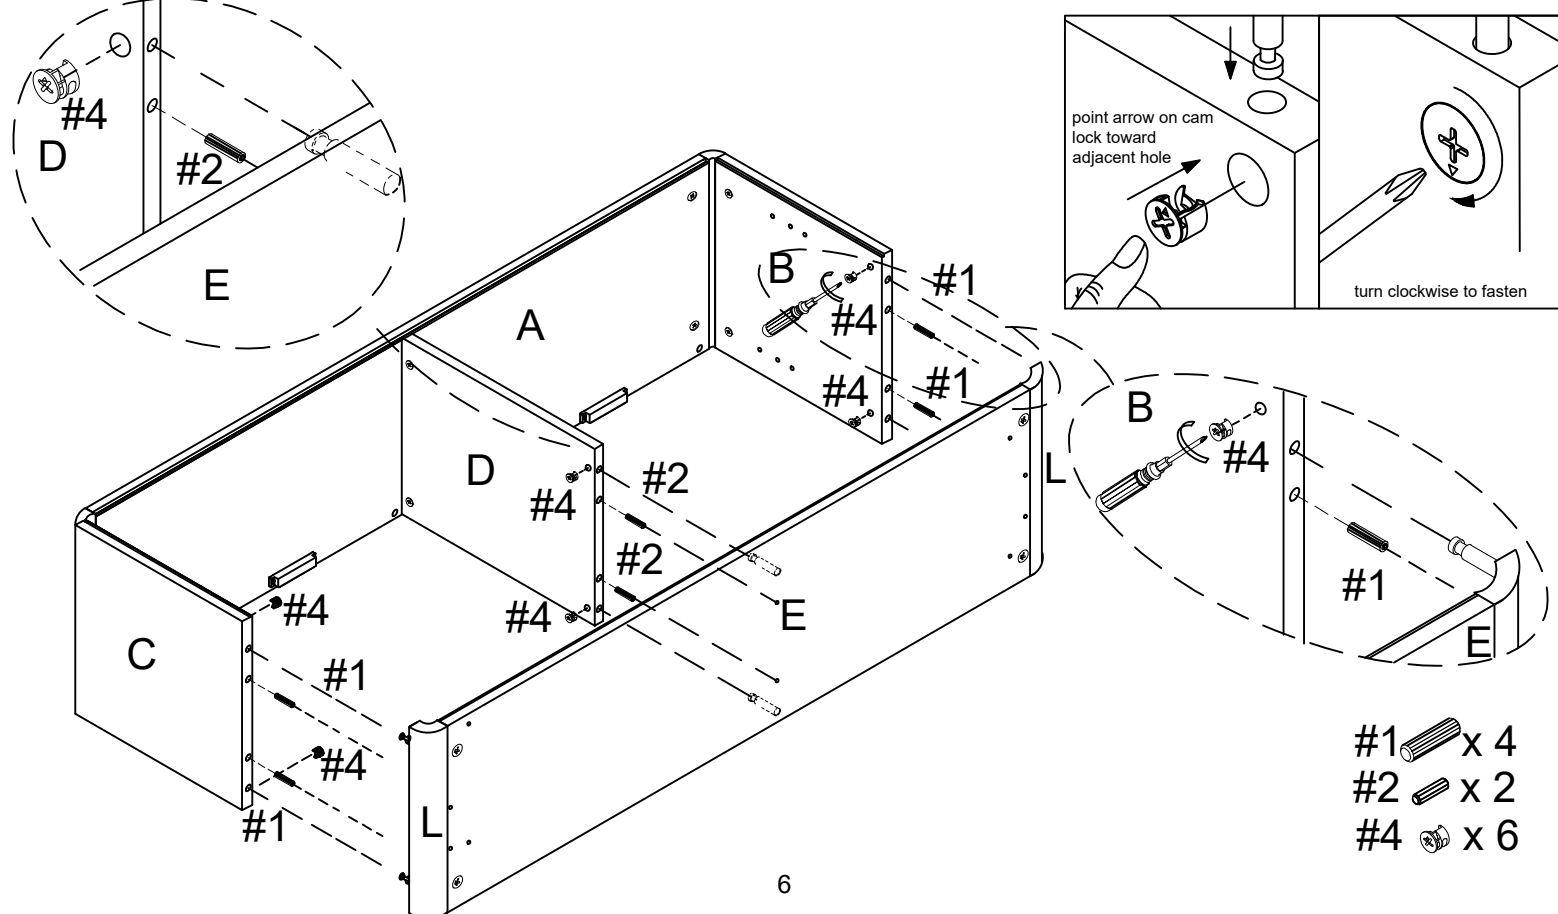
Note : Cam locks must rotate a full 180°. See pictured insert.



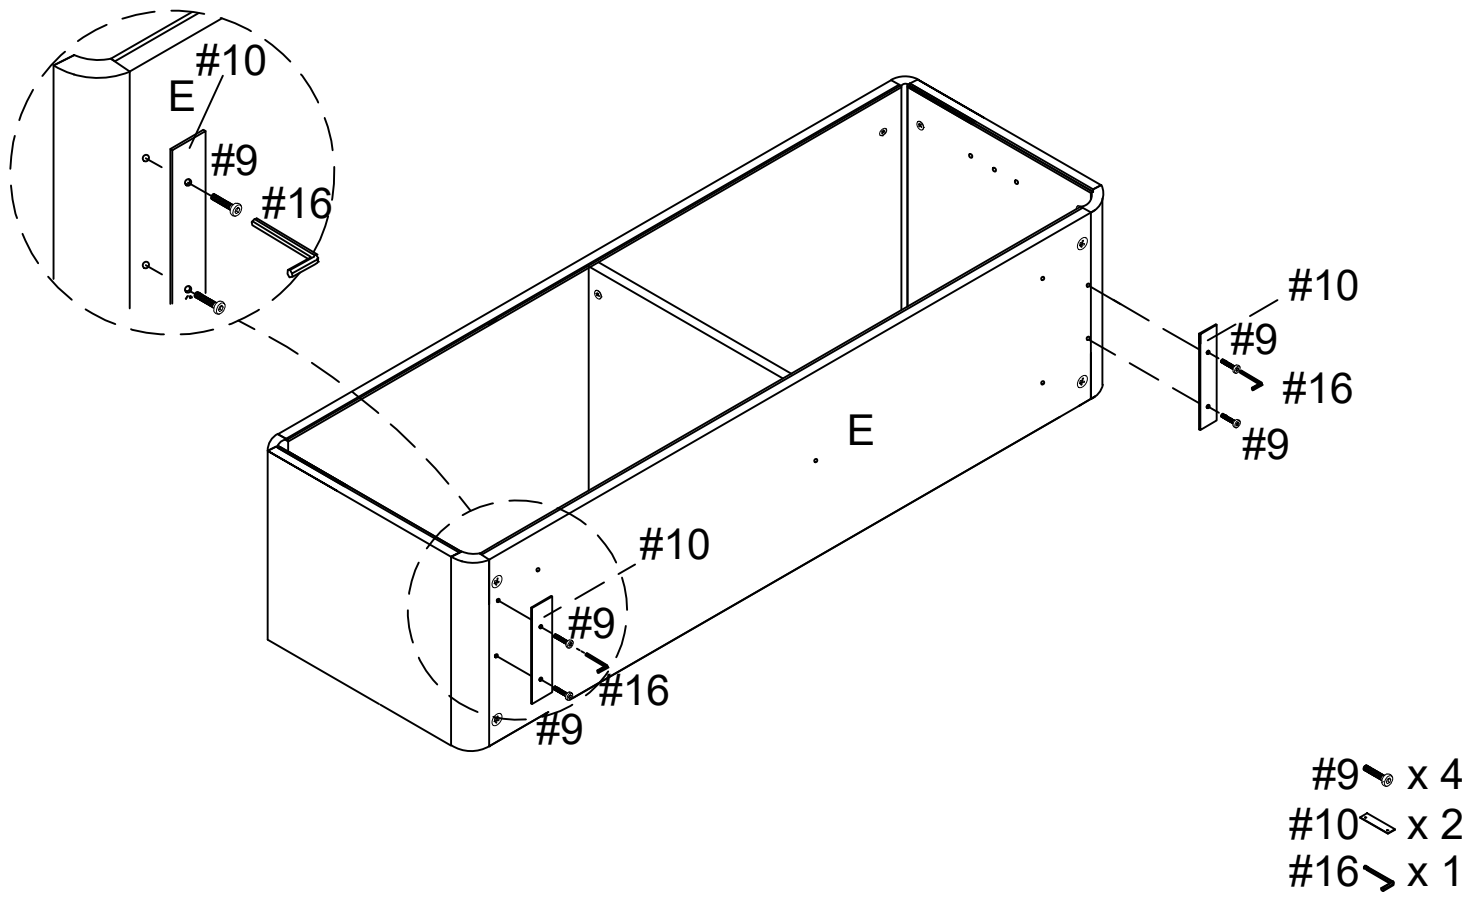
Step 7 . Attach metal plates (part #10) to bottom panel (part E) using bolts (part #9) and allen wrench (part #16).



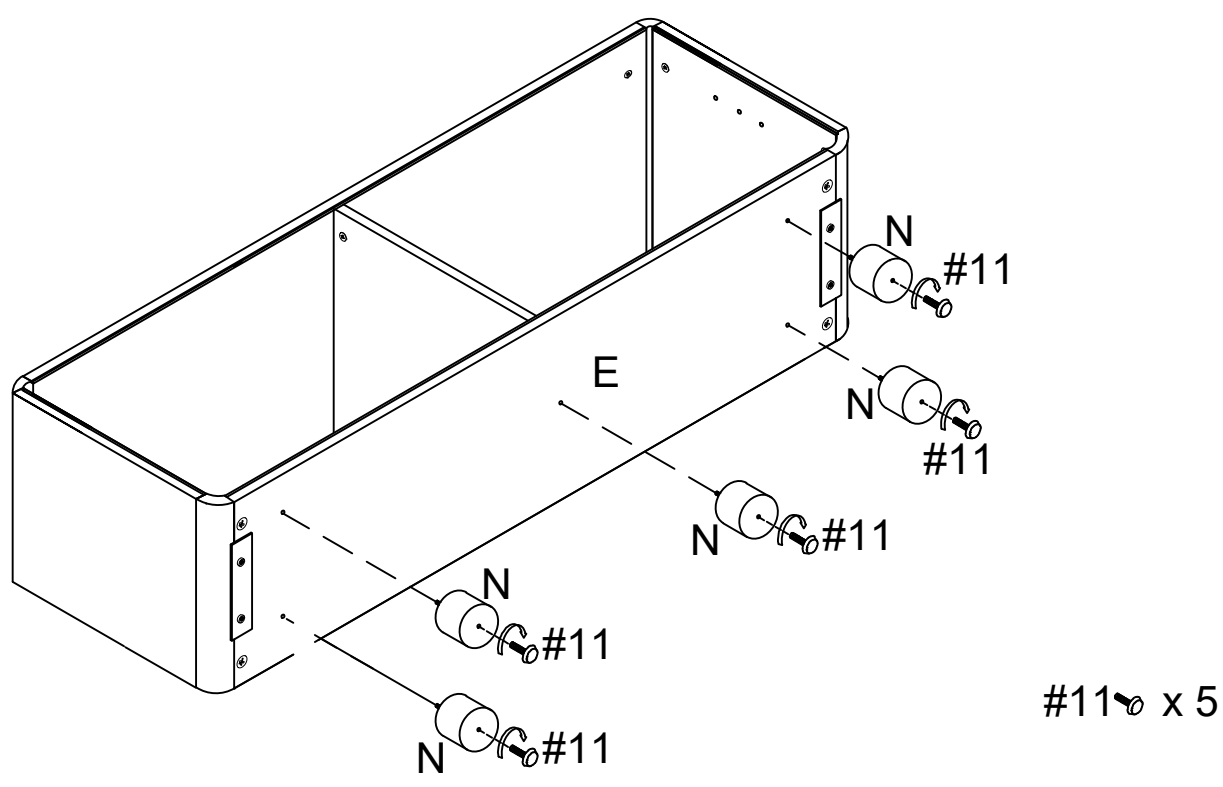Step 8 . Attach legs (part N) to bottom panel (part E). Attach adjustable levelers (part #11) to legs (part N).




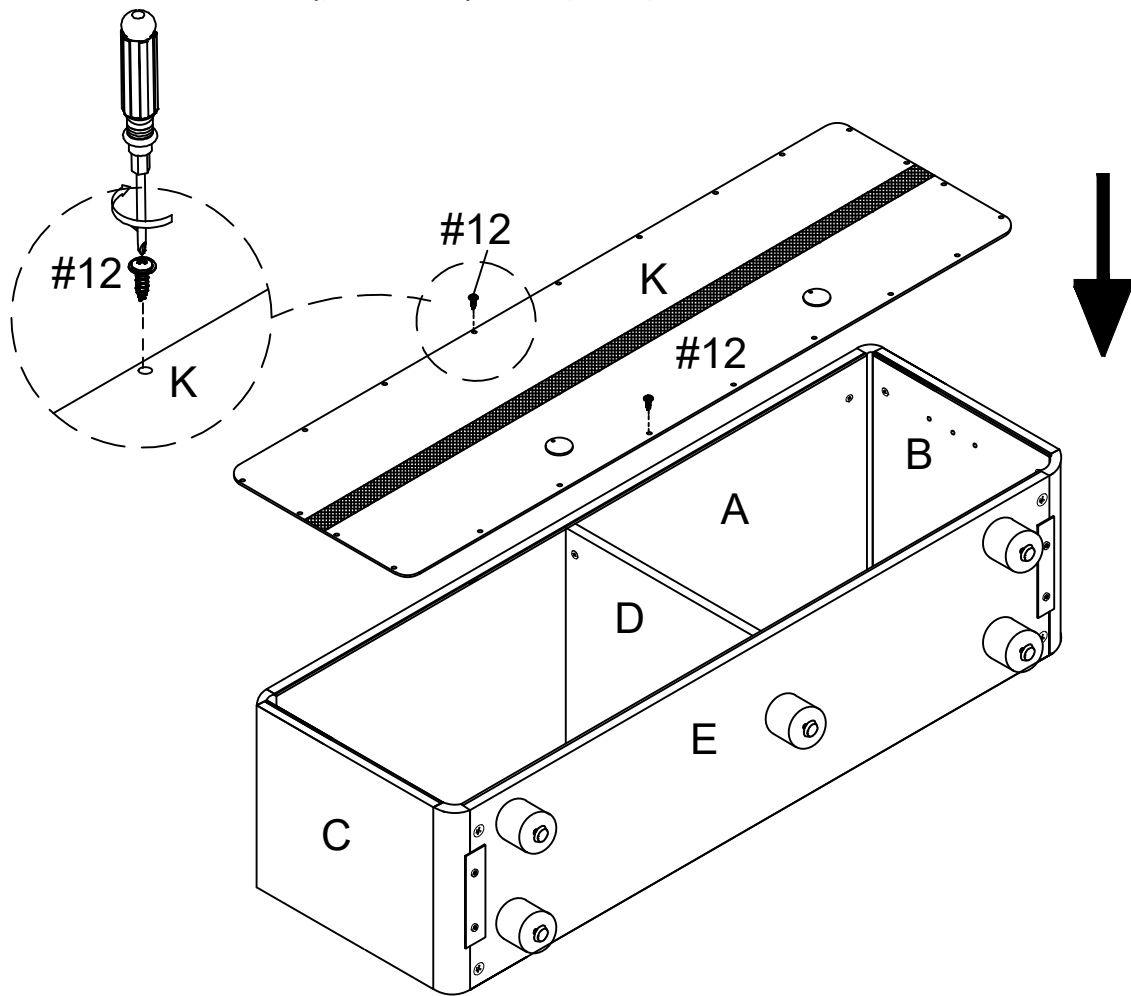Step 9. Attach back panel (part K) to assembled unit (parts A, B, C, D & E) using round head screws (part #12) and phillips head screwdriver.



#12 x 22

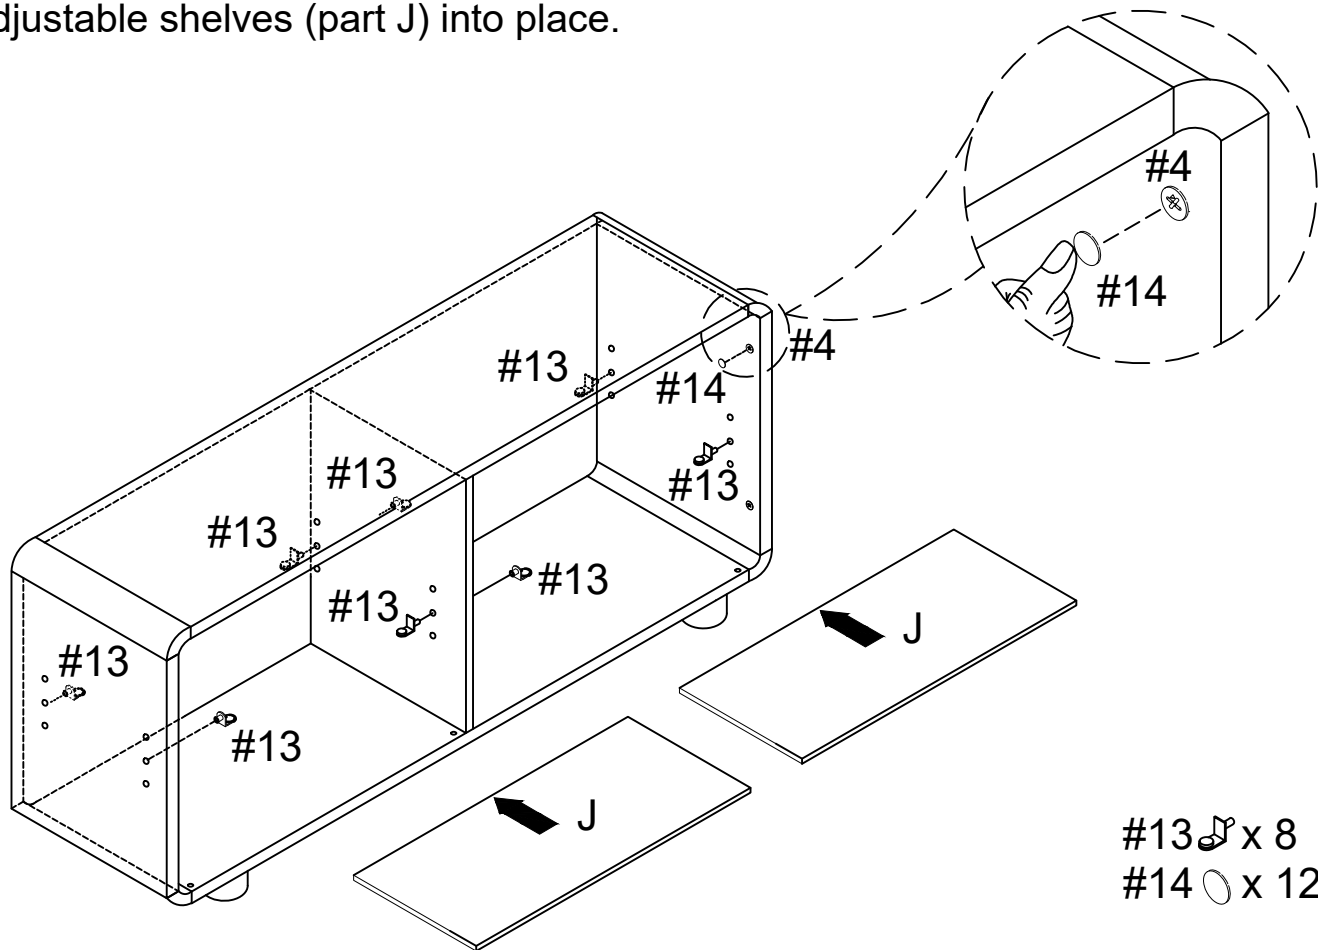Step 10. Carefully turn unit upright. Attach covers (part #14) to the hole of cam locks (part #4). Place shelf holders (part #13) into desired position and then slide adjustable shelves (part J) into place.

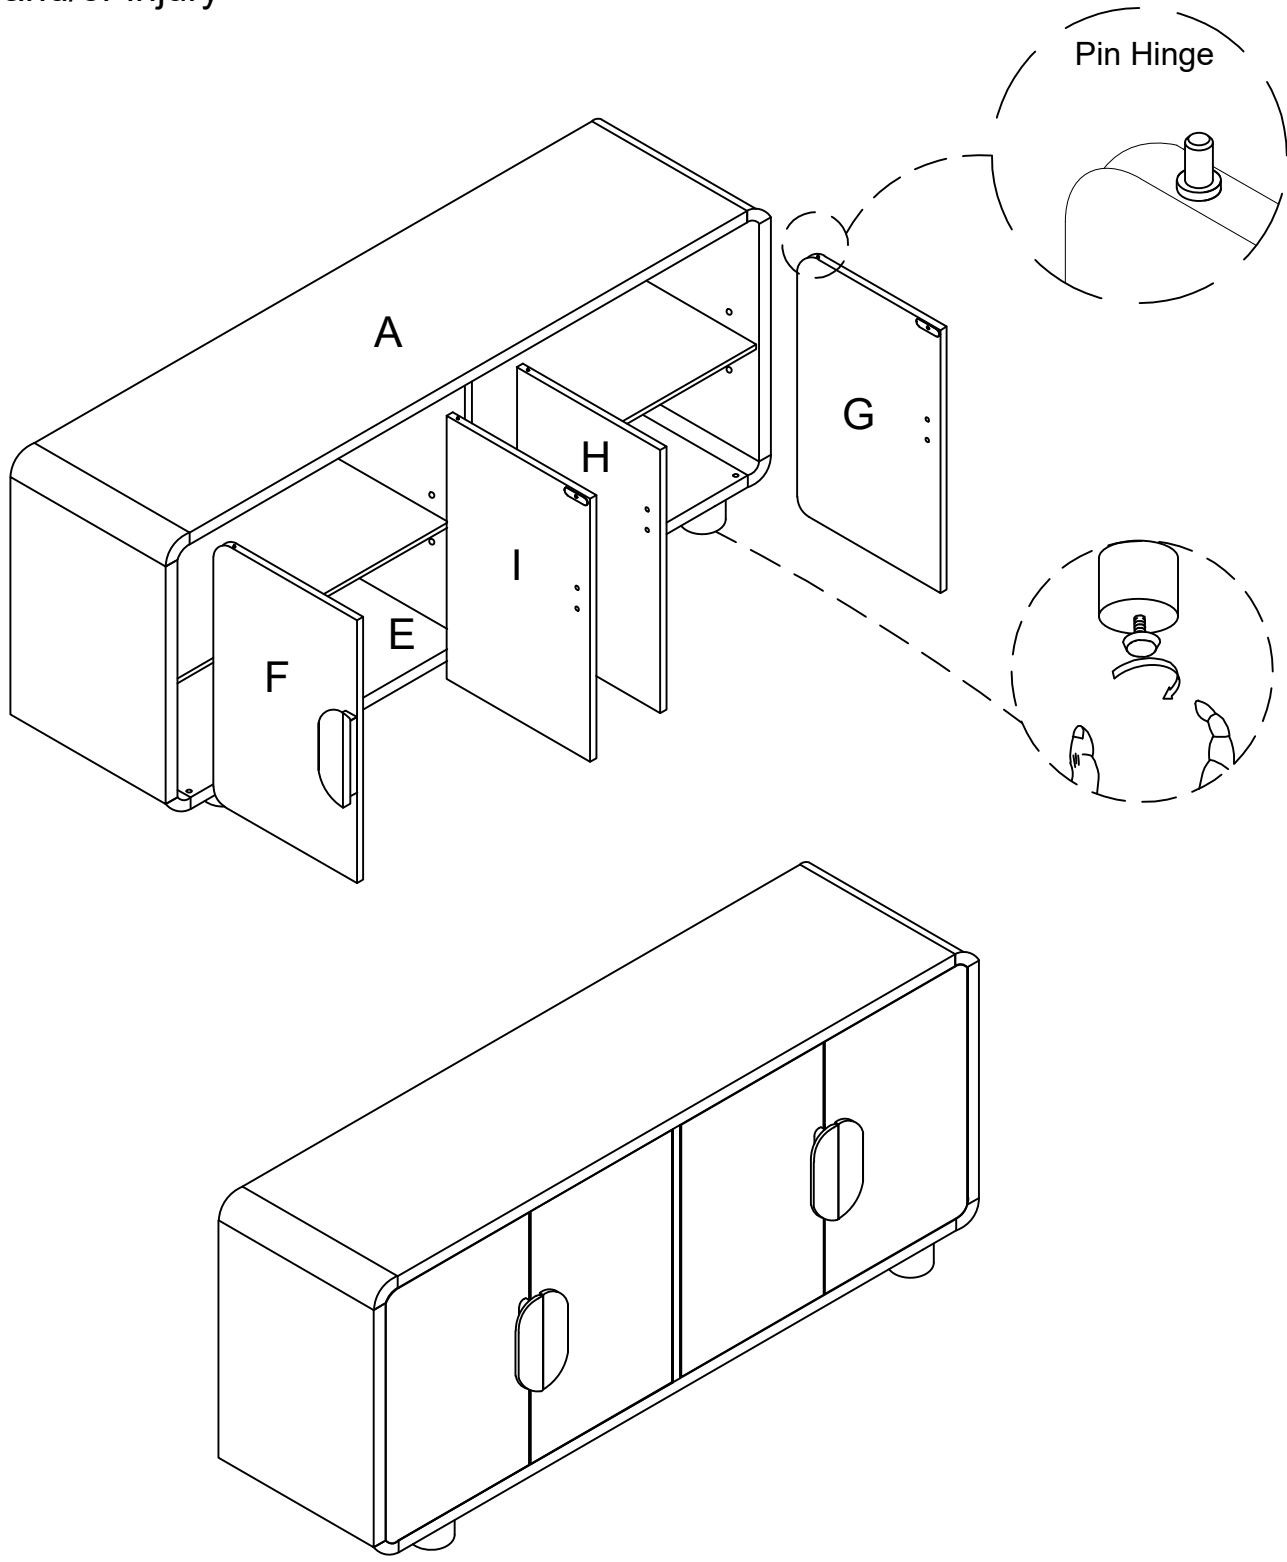



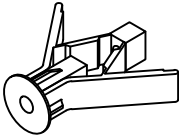



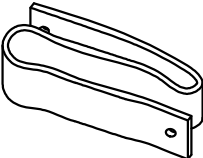
#13 x 8
#14 x 12

Step 11. Attach doors (parts F, G ,H & I) by placing bottom pin hinge (pre-installed in door) in the pre-drilled hole of bottom panel (part E). Then depress the top spring-loaded pin hinge so it can be placed in the pre-drilled hole of top panel (part A) .

NOTE: Be sure top and bottom pin hinges are fully extended to secure doors in place.
NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

Important: Safety strap kit (part #17) must be installed to prevent tipping, damage and/or injury





#17	A	B	C	D	E
			 D8*3/4"	 D8*1-1/2"	
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Washer 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) through washers (B) and safety wall strap (E) and attach to back panel (part K) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in back panel (part K) where the safety wall strap (E) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) through washers (B) and safety wall strap (E) into wall anchor (A) using phillips head screwdriver.

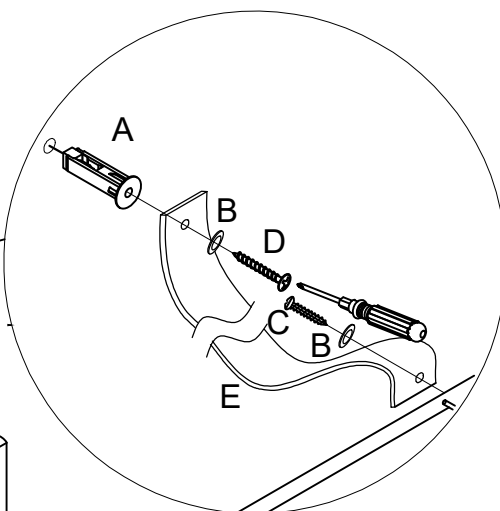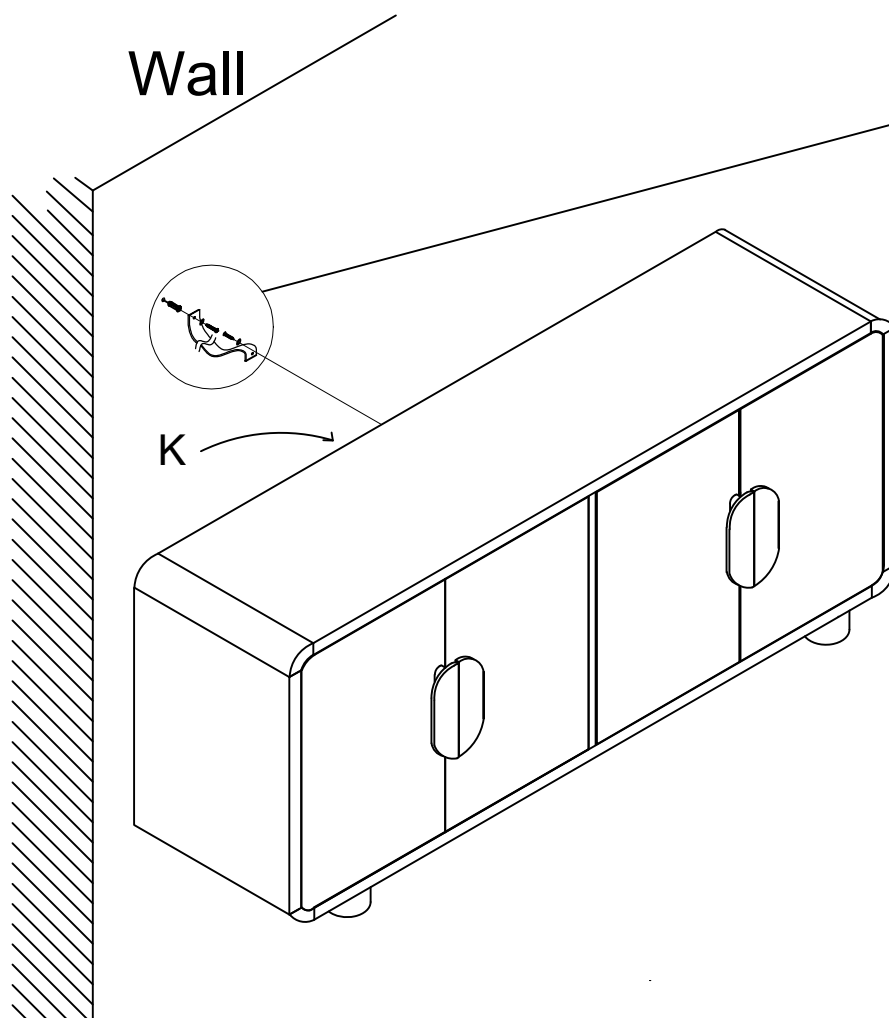Note: This item is not intended for clothing storage use.



⚠ WARNING	
	<p>Children have died from furniture tipover. To reduce the risk of furniture tipover:</p> <p>ALWAYS install tipover restraint provided.</p> <ul style="list-style-type: none"> • For use with televisions weighing 50lbs(23kg) or less. Use with heavier televisions may result in instability causing tip-over resulting in death or serious injury. • NEVER allow children to stand, climb or hang on drawers, doors, or shelves. • NEVER open more than one drawer at a time. Place heaviest items in the lowest drawers. <p><i>This is a permanent label. Do not remove!</i></p>