

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

706307 <u>End Table</u>



1PC

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

TOP

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



Α

ASSEMBLY TIME

15 MINUTES


PARTS IDENTIFICATION

В	LEG		4PCS
С	SHELF		1PC
HARDWARE IDENTIFICATION			
1	ALLEN WRENCH (M4 x 100mm - BLK)		1PC
2	BOLT (M6 x 70mm - RBW)		8PCS
3	LOCK WASHER (M6 - RBW)		8PCS
4	FLAT WASHER (M6 - RBW)		8PCS
5	CAM BOLT (I100 BR.B24/5/11-SR)		4PCS
6	CAM NUT (15/15+16 Z1 BRIGH - SR)		4PCS
7	LEVELER (23mm - BLK)		4PCS


COASTER

ASSEMBLY INSTRUCTIONS

STEP 1

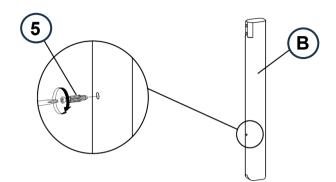


STEP 2

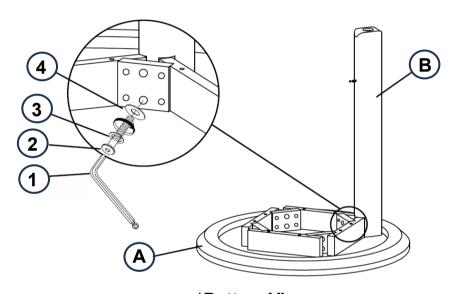

*Bottom View

STEP 3

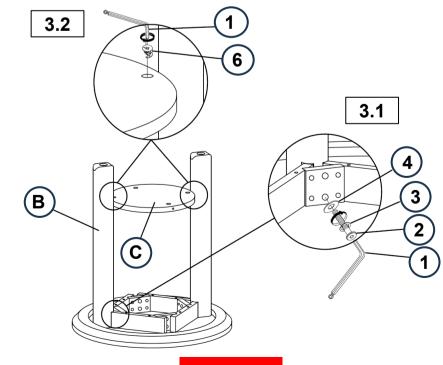


PAGE 3 OF 4

COASTERFURNITURE.COM


COASTER

ASSEMBLY INSTRUCTIONS

STEP 4

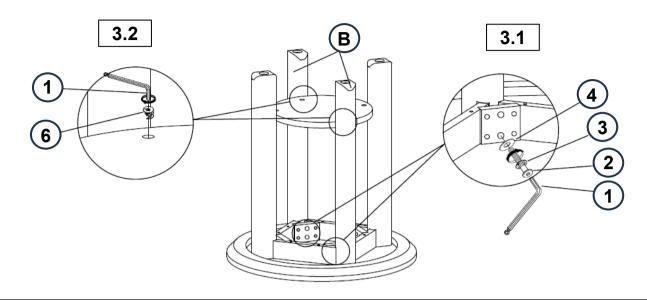

STEP 5

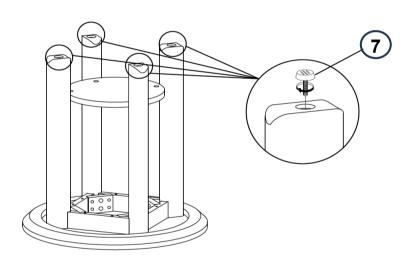

STEP 6 COMPLETE






PAGE 4 OF 4

COASTERFURNITURE.COM



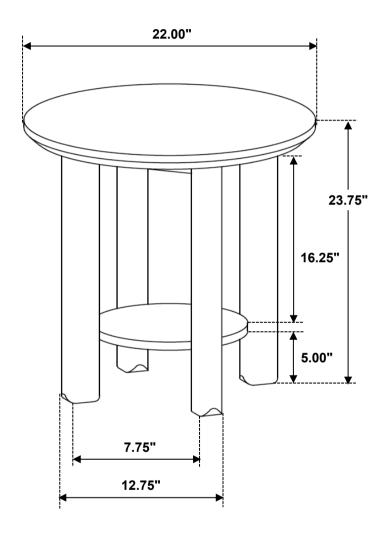

Note: Dimension tolerance ±5%