



ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE



Fine Furniture for every stage of life

722088
Lift Top Coffee Table

ITEM: 722088



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!


 
 
- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

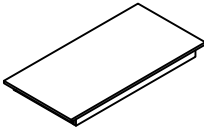A	TOP		1PC
B	LEG FRAME		2PCS
C	SHELF		1PC

HARDWARE IDENTIFICATION


1	BOLT (1/4" x 35mm - RBW)		8PCS
2	LOCK WASHER (1/4" x 14mm - RBW)		8PCS
3	FLAT WASHER (1/4" x 19mm - RBW)		8PCS
4	ALLEN WRENCH (4mm - RBW)		1PC
5	WOOD DOWEL (Ø10 x 30mm)		4PCS

ITEM: **722088**




ASSEMBLY INSTRUCTIONS

STEP 1

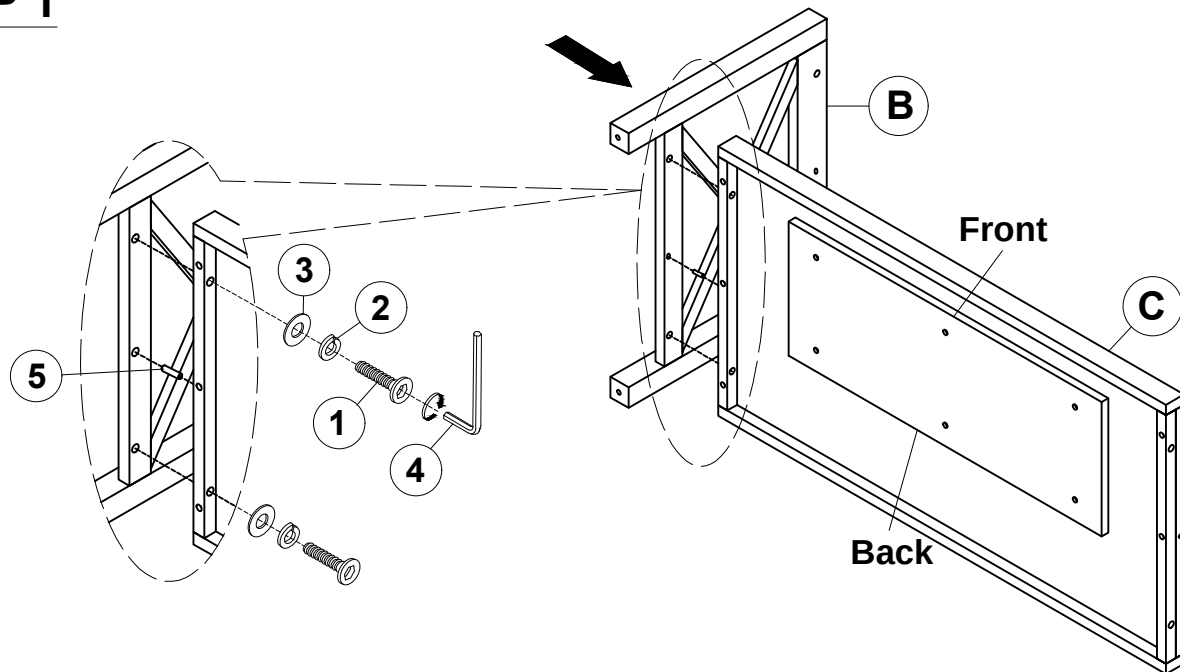


STEP 2

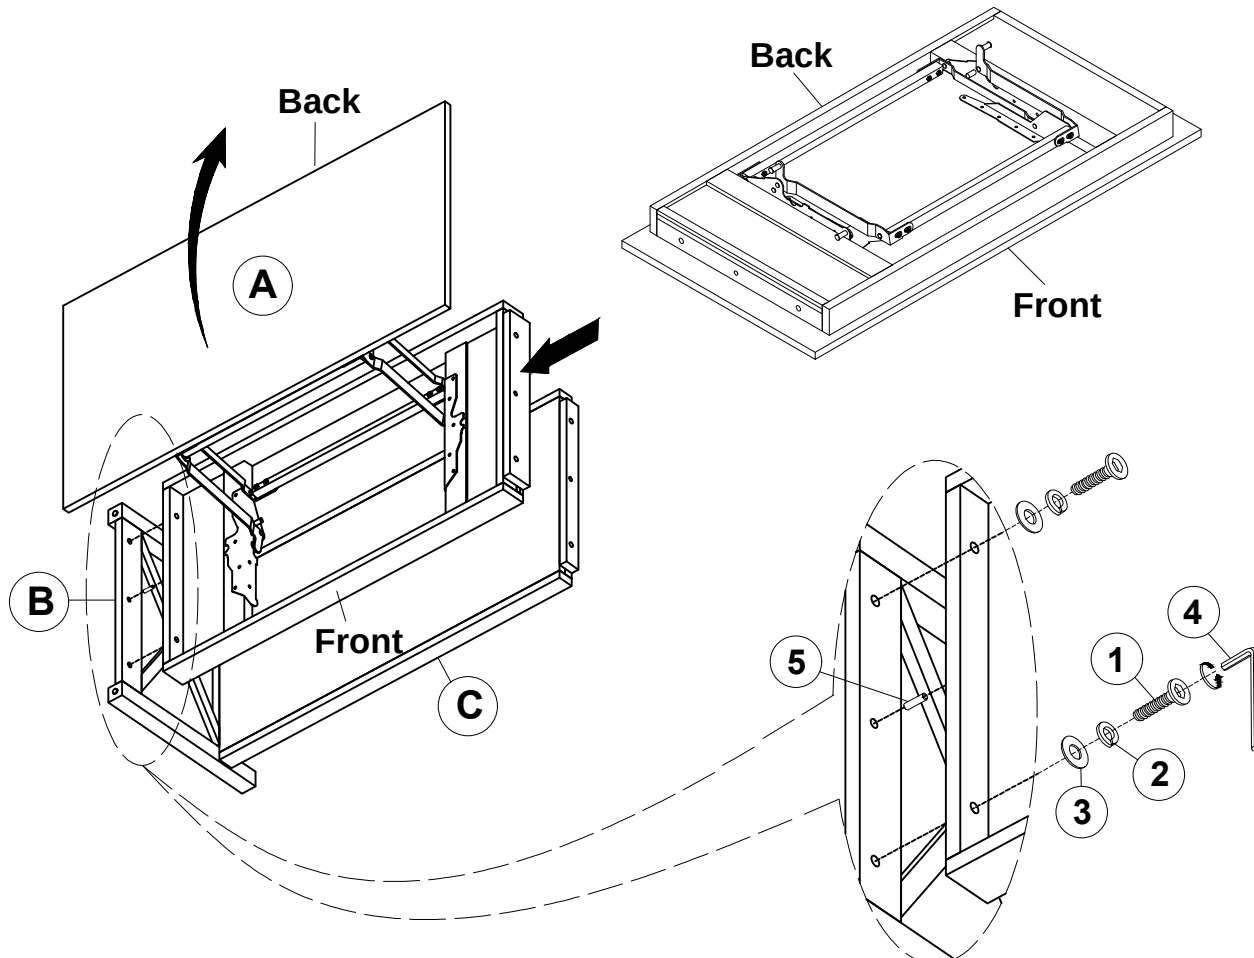

ITEM: **722088**


ASSEMBLY INSTRUCTIONS

STEP 3

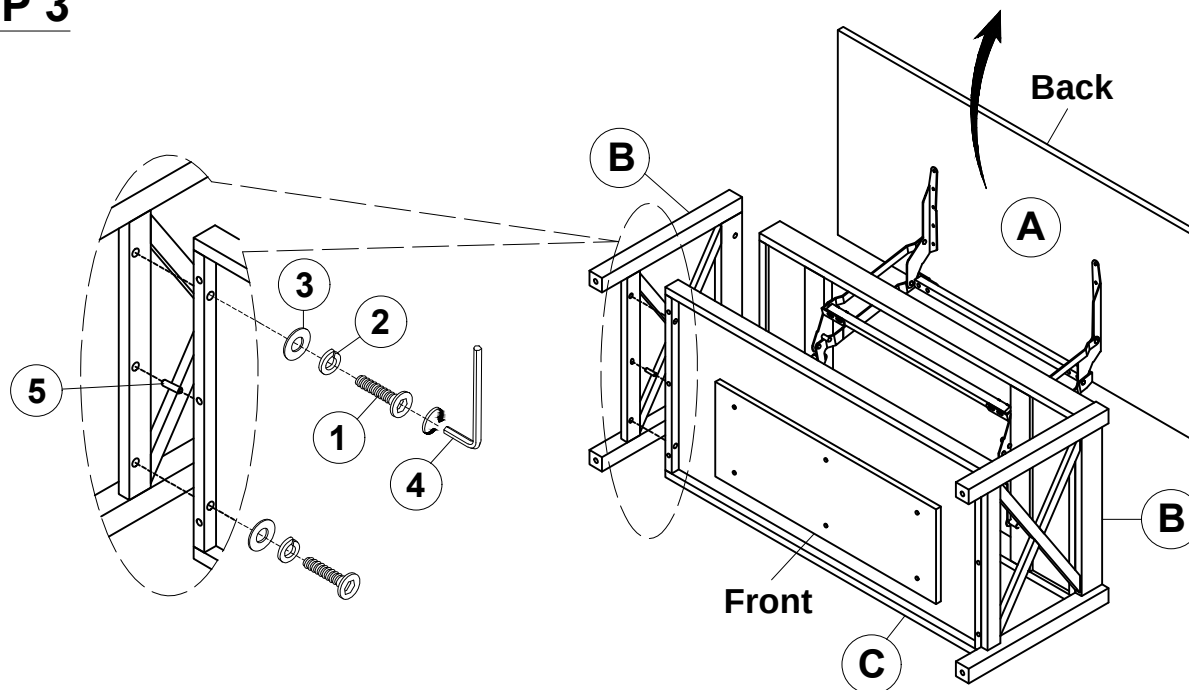

STEP 4

Note: Lowering belt, need to be cut out before installing shelf


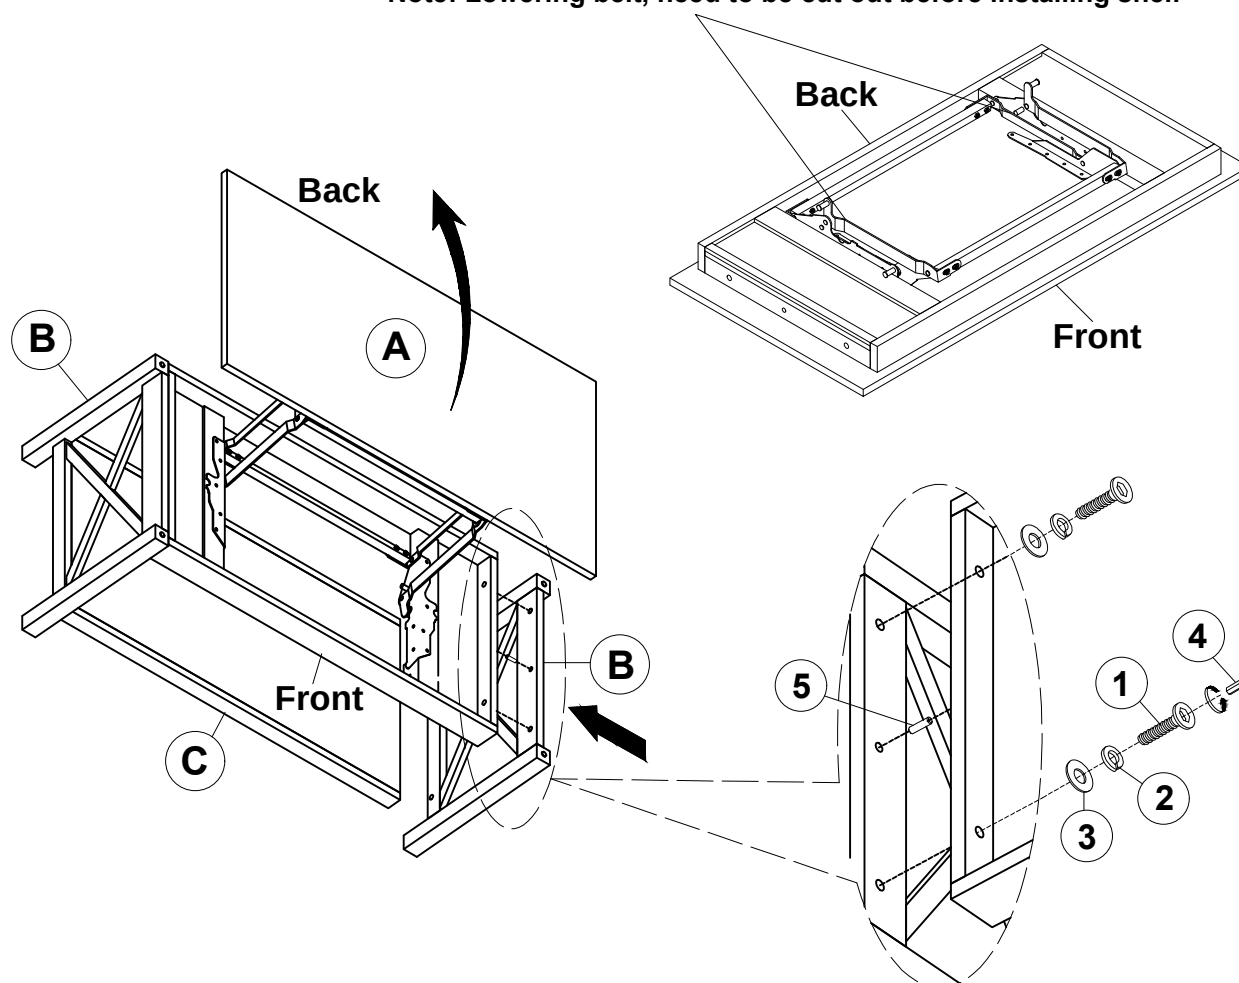


ITEM: **722088**


ASSEMBLY INSTRUCTIONS

STEP 5

COMPLETE

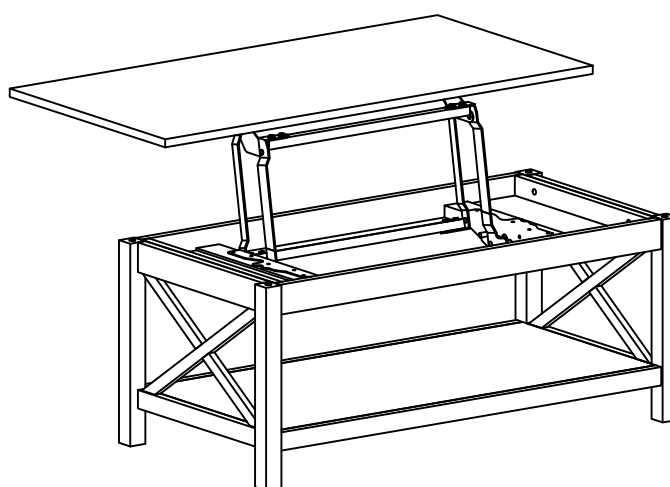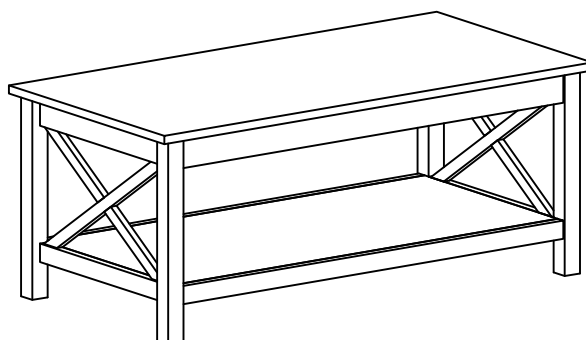

ITEM: **722088**

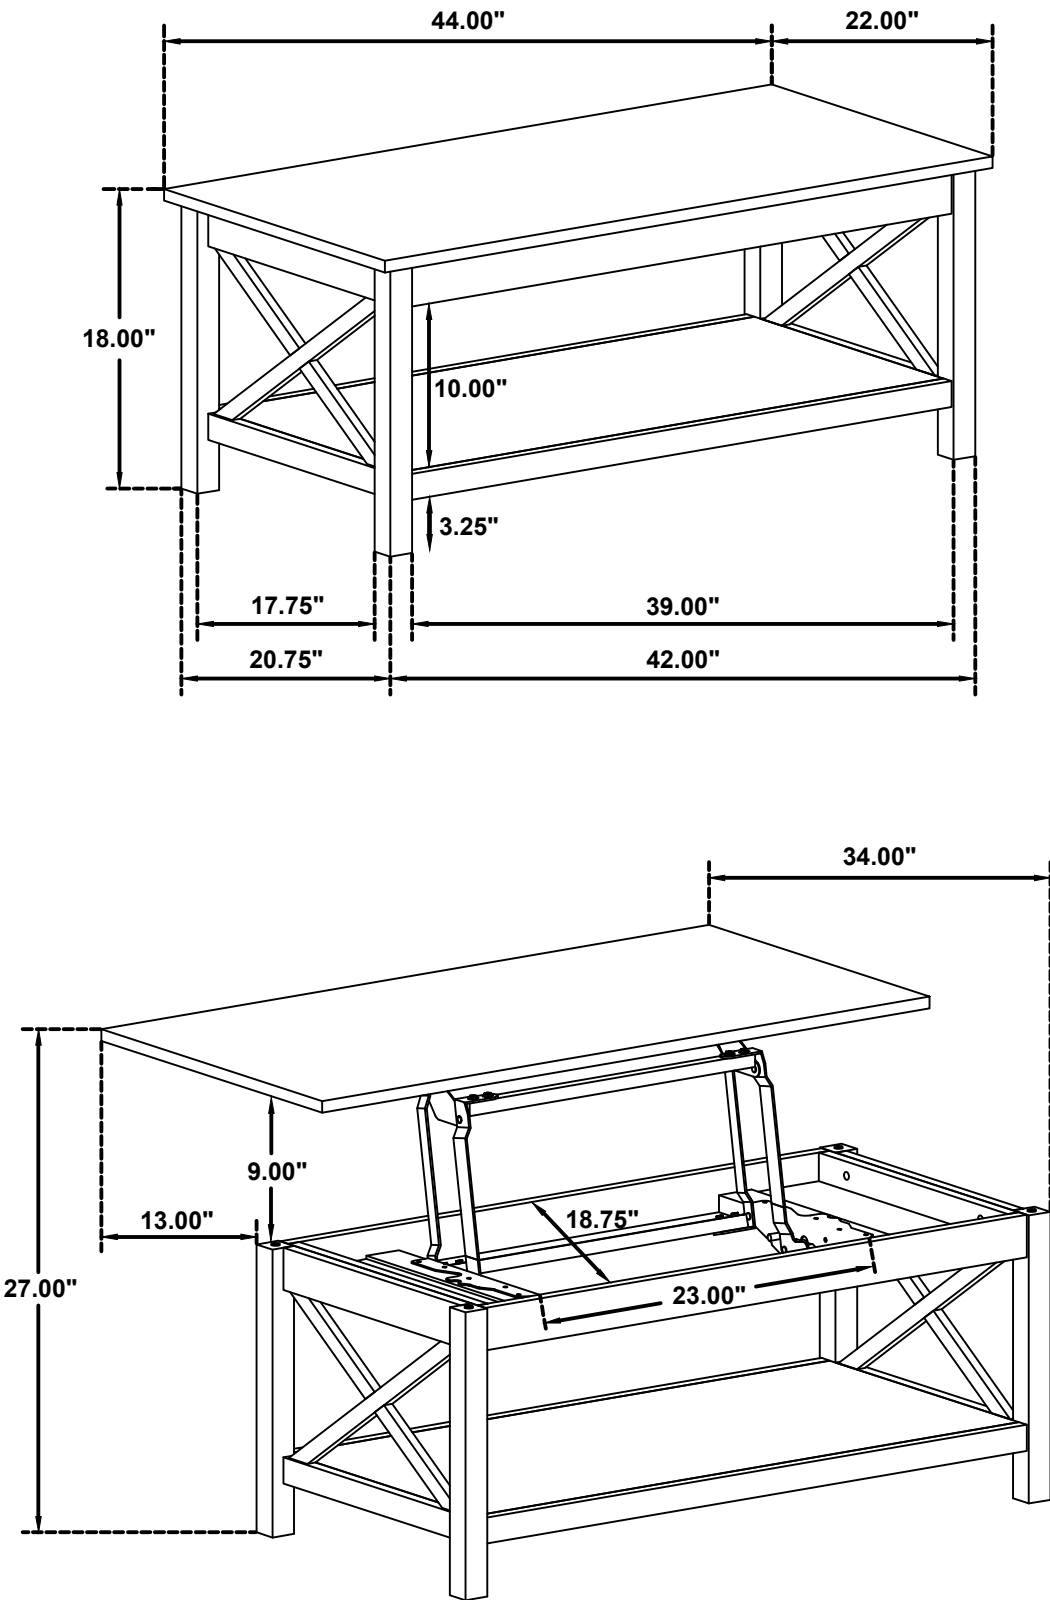

Note: Dimension tolerance $\pm 5\%$