



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

192921
Dining Table

ITEM: **192921**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A TOP

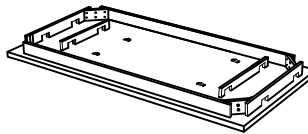


1PC

B LEG



4PCS

 C LEAF



2PCS

HARDWARE IDENTIFICATION

1 BOLT
(M8 x 70mm - BLK)



8PCS

2 LOCK WASHER
(M8 - BLK)



8PCS

3 FLAT WASHER
(M8 - BLK)



 
8PCS

4 ALLEN WRENCH
(M5 x 65MM - BLK)



1PC

5 METAL PLATE
3.5 (2 HOLE)



4PCS

6 PAN HEAD SCREW
(M3.5 x 16mm - BLK)



8PCS

NOTE:


Philips head screw driver is required in the assembly process; however, manufacture does not provide this item.

ITEM: **192921**


ASSEMBLY INSTRUCTIONS




STEP 1

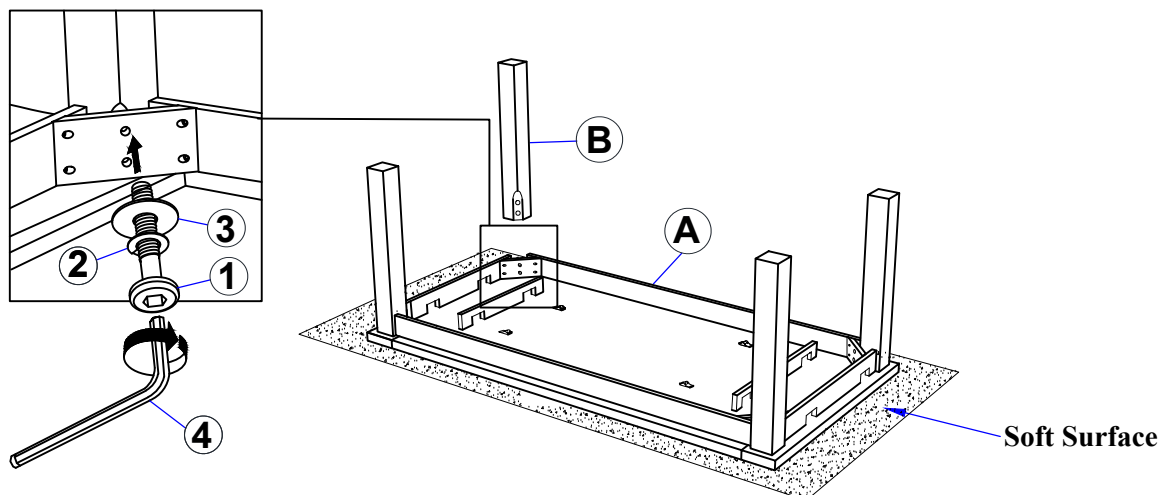


STEP 2

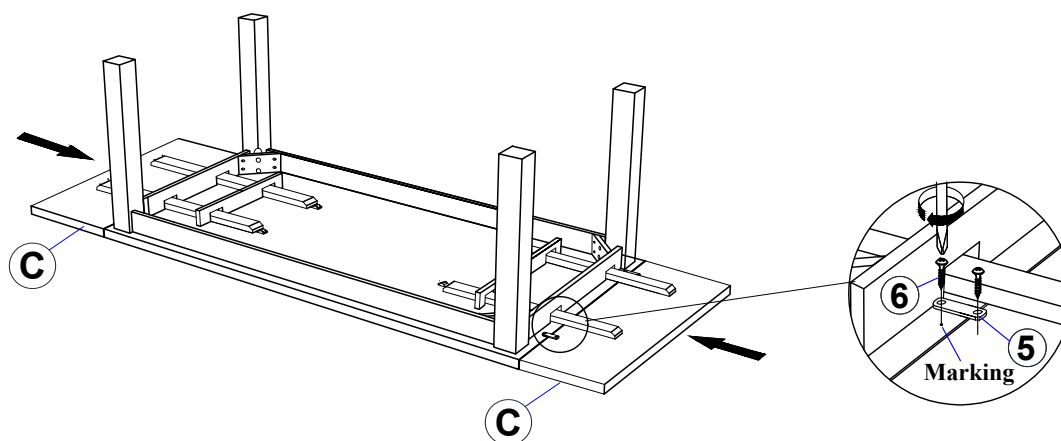

STEP 3

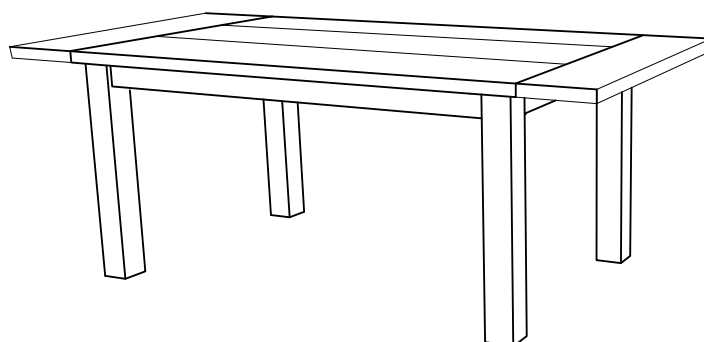

ITEM: **192921**

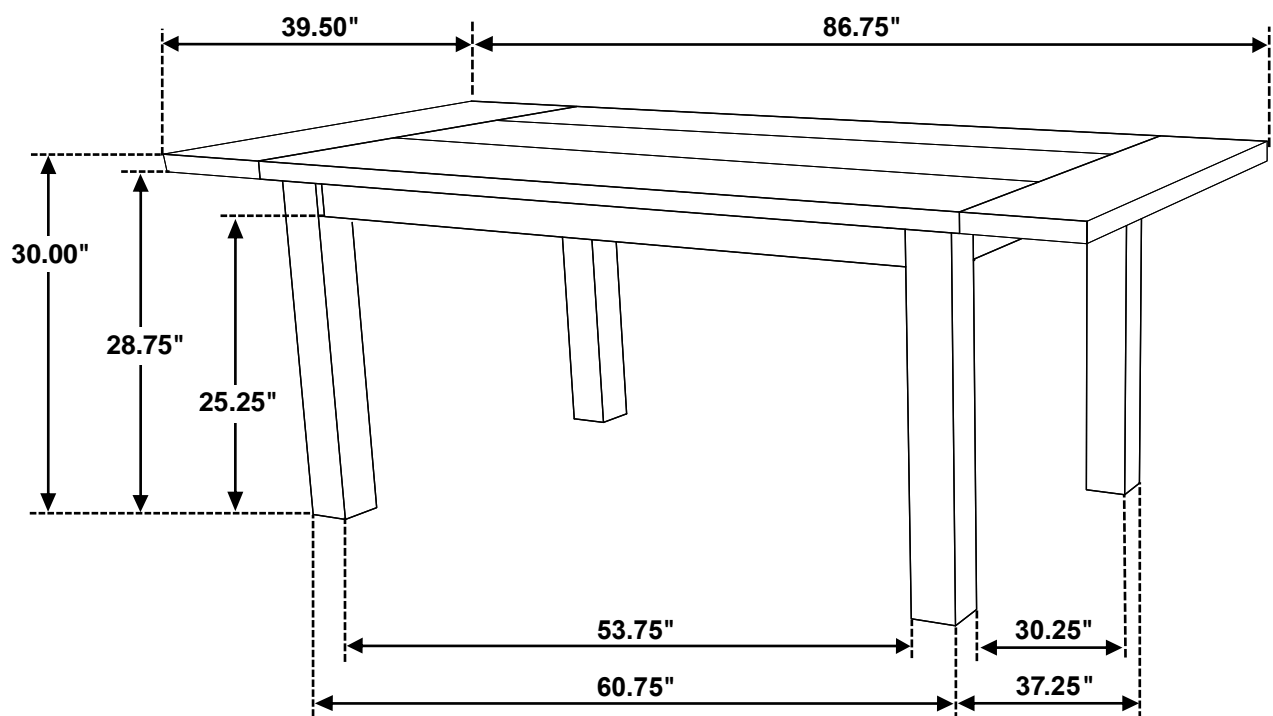

Note : Dimension tolerance $\pm 5\%$