

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

360113 <u>Dresser</u>

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

 




15 MINUTES

PARTS IDENTIFICATION

A DRESSER



1PC

B FEET



4PCS

C GLASS TOP



1PC

HARDWARE IDENTIFICATION

1 FLAT HEAD SCREW (Φ4 X 32mm - RBW)



4PCS


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


COASTER

ASSEMBLY INSTRUCTIONS

STEP 1

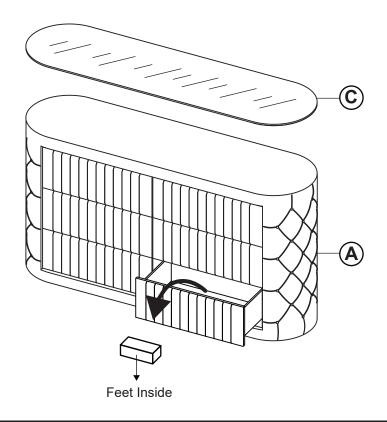

STEP 2

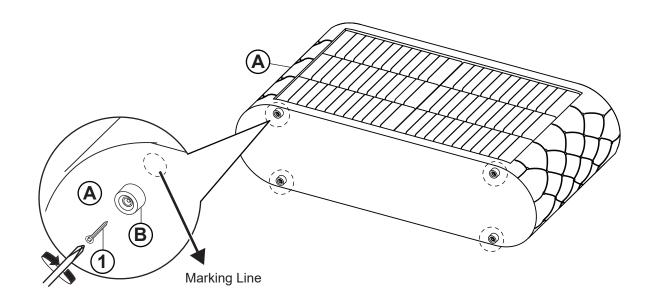


PAGE 3 OF 5

COASTERFURNITURE.COM




ASSEMBLY INSTRUCTIONS

STEP 3

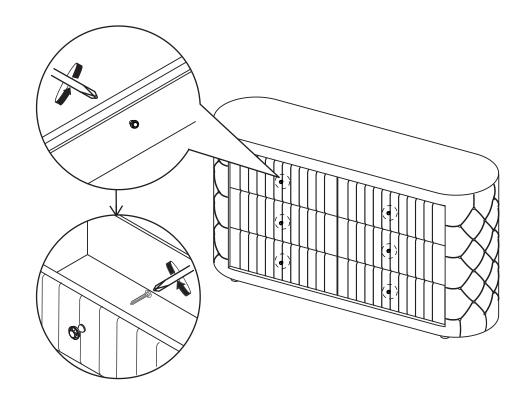

STEP 4 COMPLETE

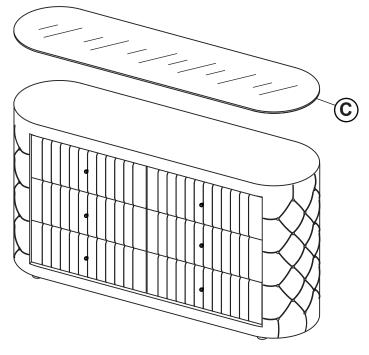

PAGE 4 OF 5

COASTERFURNITURE.COM



ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.

This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.


This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

This restraint must be screwed to a wood stud on the wall, using the long screw provided.


STEP 1

Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

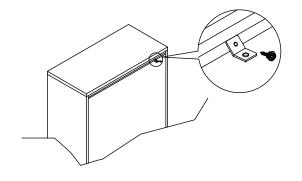


STEP 2

Locate the wood stud on the wall and secure the other bracket 2 inches below the back of the unit, using the long screw.

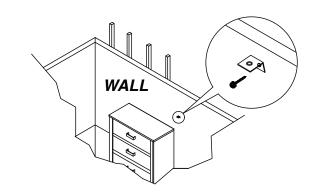


STEP 3

Place the furniture into position so both mounting brackets are vertically in line. Lace the threaded end of the restraint strap through the hole in each mounting bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight. Ensure that the restraint strap is securely laced and locked.

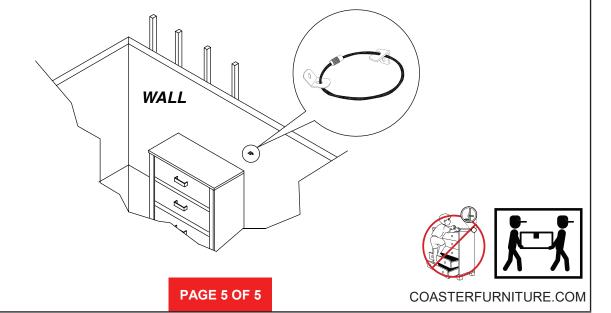



Inner Size of Drawer : 23.25"W x 12.50"D x 6.25"H x 0.25"T

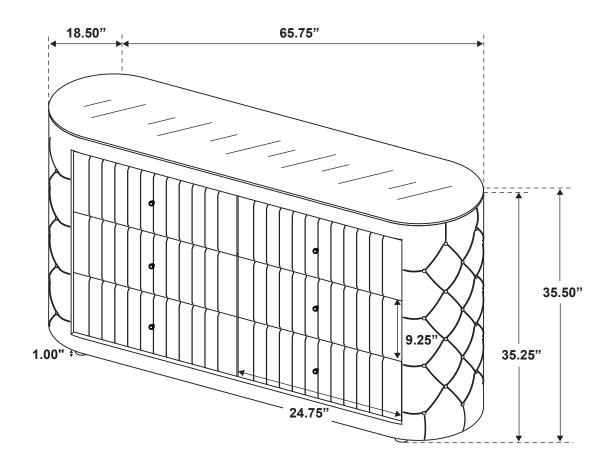

Note: Dimension tolerance ±5%



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

360113 <u>Dresser</u>

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

 




15 MINUTES

PARTS IDENTIFICATION

A DRESSER



1PC

B FEET



4PCS

C GLASS TOP



1PC

HARDWARE IDENTIFICATION

1 FLAT HEAD SCREW (Φ4 X 32mm - RBW)



4PCS


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


COASTER

ASSEMBLY INSTRUCTIONS

STEP 1

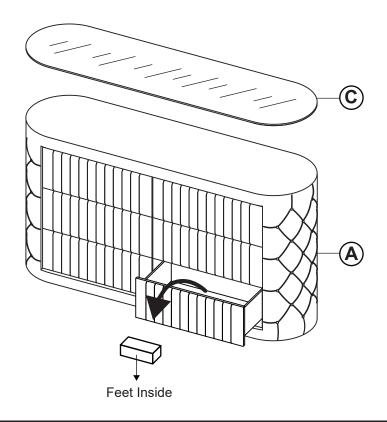

STEP 2

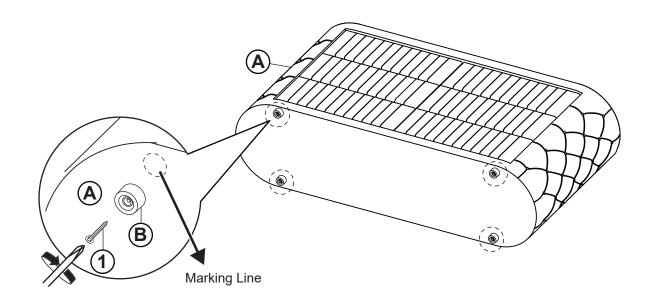


PAGE 3 OF 5

COASTERFURNITURE.COM




ASSEMBLY INSTRUCTIONS

STEP 3

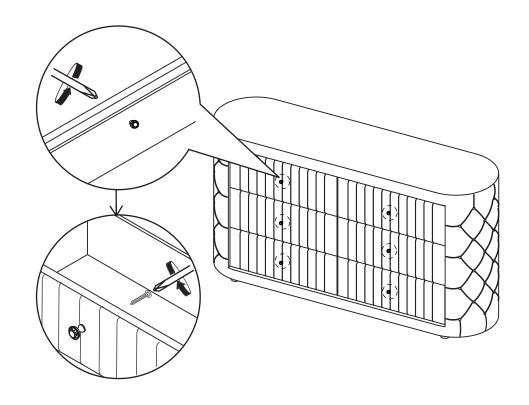

STEP 4 COMPLETE

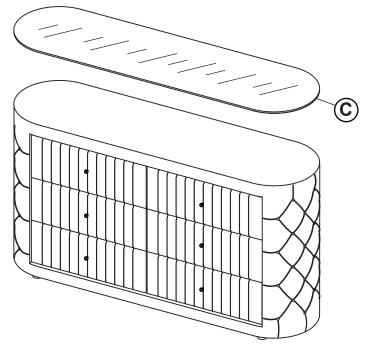

PAGE 4 OF 5

COASTERFURNITURE.COM



ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.

This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.


This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

This restraint must be screwed to a wood stud on the wall, using the long screw provided.


STEP 1

Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

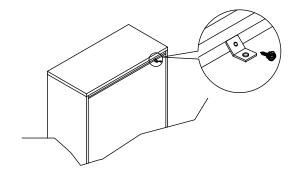


STEP 2

Locate the wood stud on the wall and secure the other bracket 2 inches below the back of the unit, using the long screw.

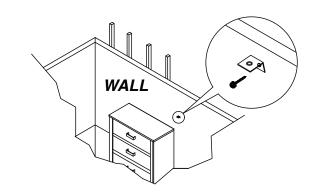


STEP 3

Place the furniture into position so both mounting brackets are vertically in line. Lace the threaded end of the restraint strap through the hole in each mounting bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight. Ensure that the restraint strap is securely laced and locked.

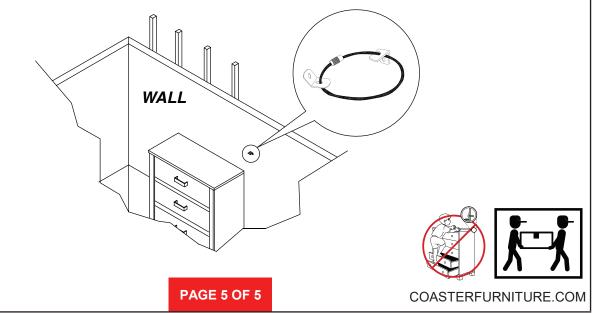



Inner Size of Drawer : 23.25"W x 12.50"D x 6.25"H x 0.25"T

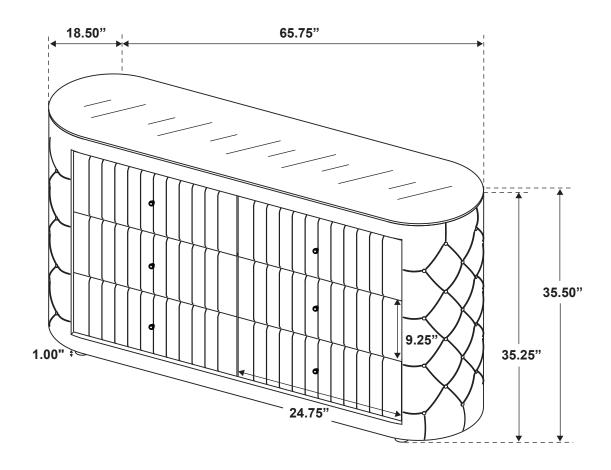

Note: Dimension tolerance ±5%



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

360114 *Mirror*



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.





15 MINUTES

PARTS IDENTIFICATION

A MIRROR 1PC

B MIRROR SUPPORT (PACKED WITH MIRROR)

C DRESSER *FROM BOX ITEM # 360113

HARDWARE IDENTIFICATION

1	ALLEN WRENCH (Φ4 X 95mm - ZINC)	1PC
2	BOLT (Φ6 X 40mm - RBW)	8PCS
3	LOCK WASHER (Φ6 - RBW)	8PCS
4	FLAT WASHER (Φ7 X 19mm X 2.0 - RBW)	8PCS


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

COASTER

ASSEMBLY INSTRUCTIONS

STEP 1

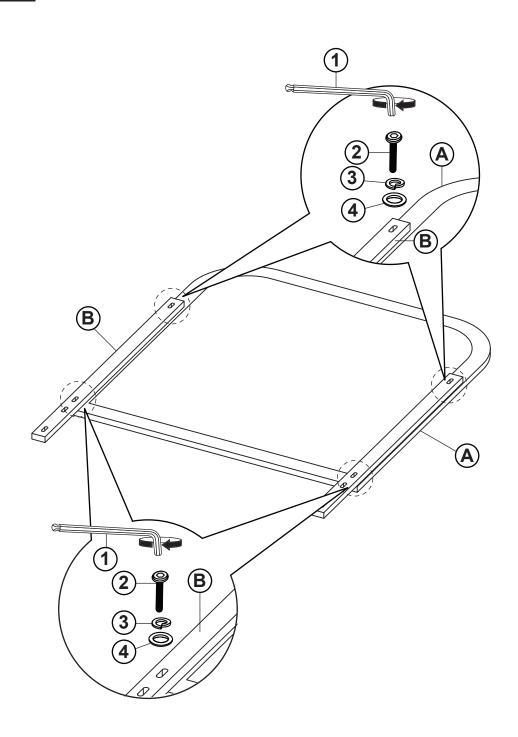


*Back View


COASTER

ASSEMBLY INSTRUCTIONS

STEP 2

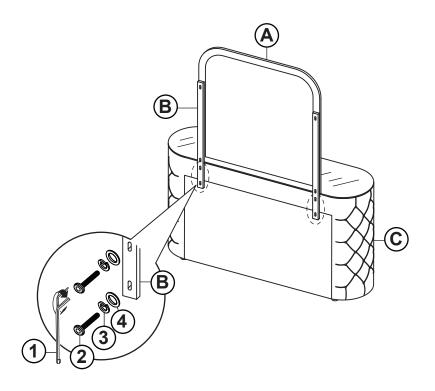


STEP 3 COMPLETE

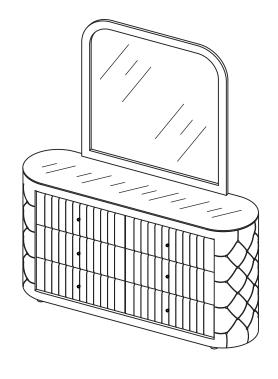





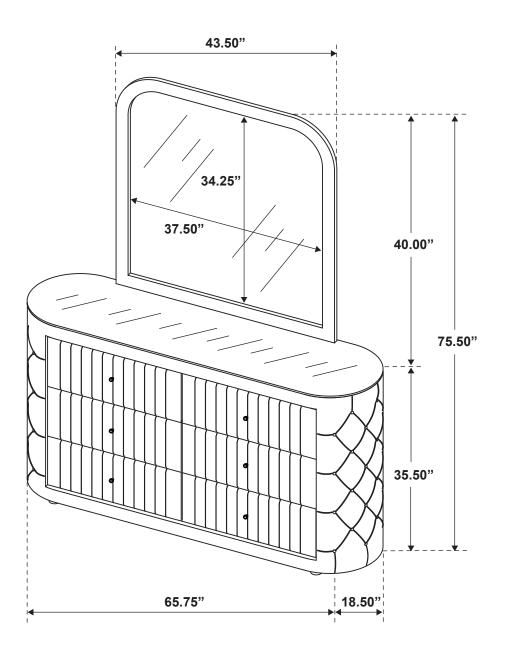

Note: Dimension tolerance ±5%



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

360114 *Mirror*



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.





15 MINUTES

PARTS IDENTIFICATION

A MIRROR 1PC

B MIRROR SUPPORT (PACKED WITH MIRROR)

C DRESSER *FROM BOX ITEM # 360113

HARDWARE IDENTIFICATION

1	ALLEN WRENCH (Φ4 X 95mm - ZINC)	1PC
2	BOLT (Φ6 X 40mm - RBW)	8PCS
3	LOCK WASHER (Φ6 - RBW)	8PCS
4	FLAT WASHER (Φ7 X 19mm X 2.0 - RBW)	8PCS


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

COASTER

ASSEMBLY INSTRUCTIONS

STEP 1

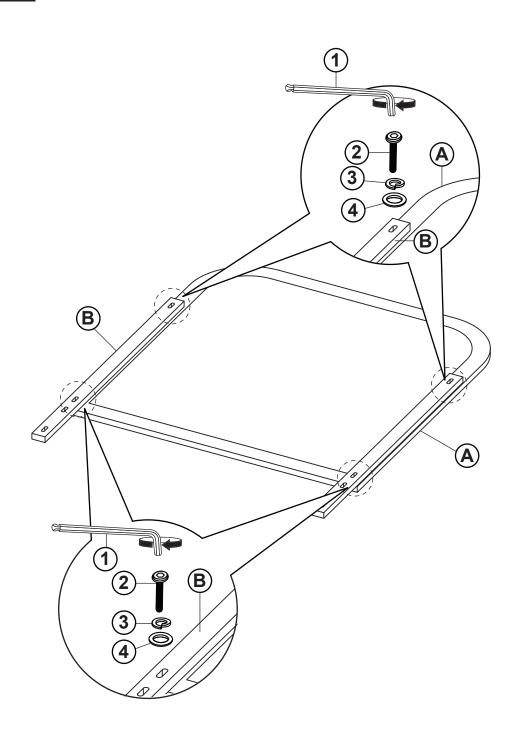


*Back View


COASTER

ASSEMBLY INSTRUCTIONS

STEP 2

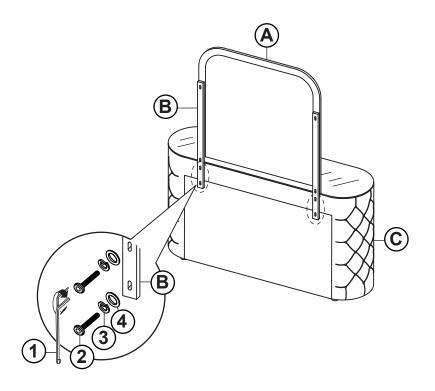


STEP 3 COMPLETE

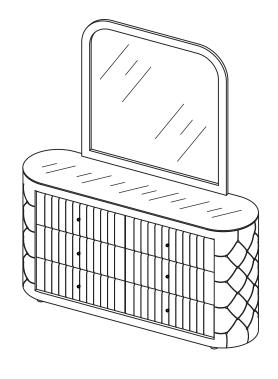





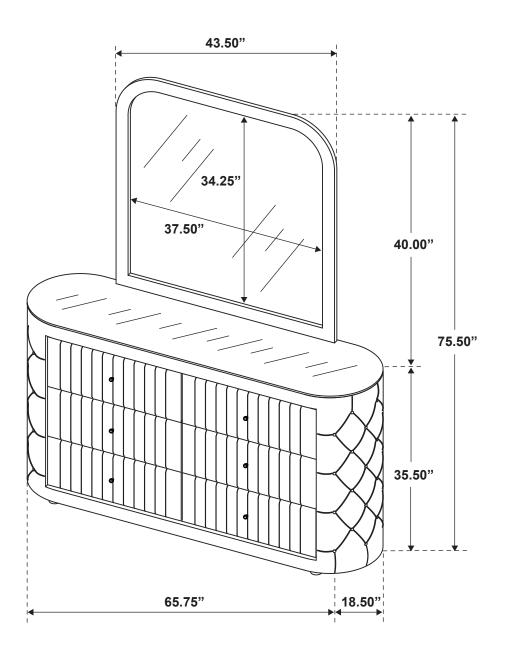

Note: Dimension tolerance ±5%