



 

CROSLEY

F U R N I T U R E

 

 

 

Dining Chair
CF503219

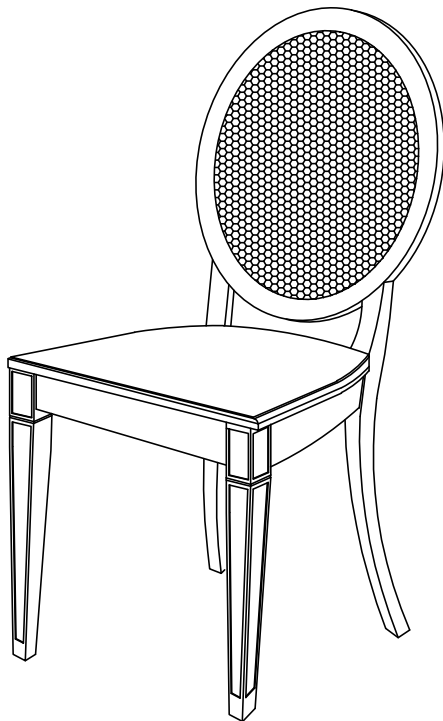

PART LIST

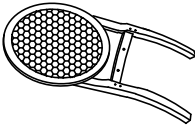
A	B	C
		
Back Frame 2 PCS	Seat Frame 2 PCS	Front Leg 4 PCS

HARDWARE LIST

#1	#2	#3	#4	#5
				
M6 x 70mm	M6 x 50mm	M6 x 40mm	M6	M6
Long Bolt 8 PCS (Extra 1)	Medium Bolt 8 PCS (Extra 1)	Short Bolt 6 PCS (Extra 1)	Spring Washer 22 PCS (Extra 1)	Flat Washer 22 PCS (Extra 1)
#6				
				
M4				
Allen Wrench 1 PC				


Step 1. Attach seat frame (part B) to back frame (part A) using long bolts (part #1), short bolts (part #3), spring washers (part #4), flat washers (part #5) and allen wrench (part #6).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

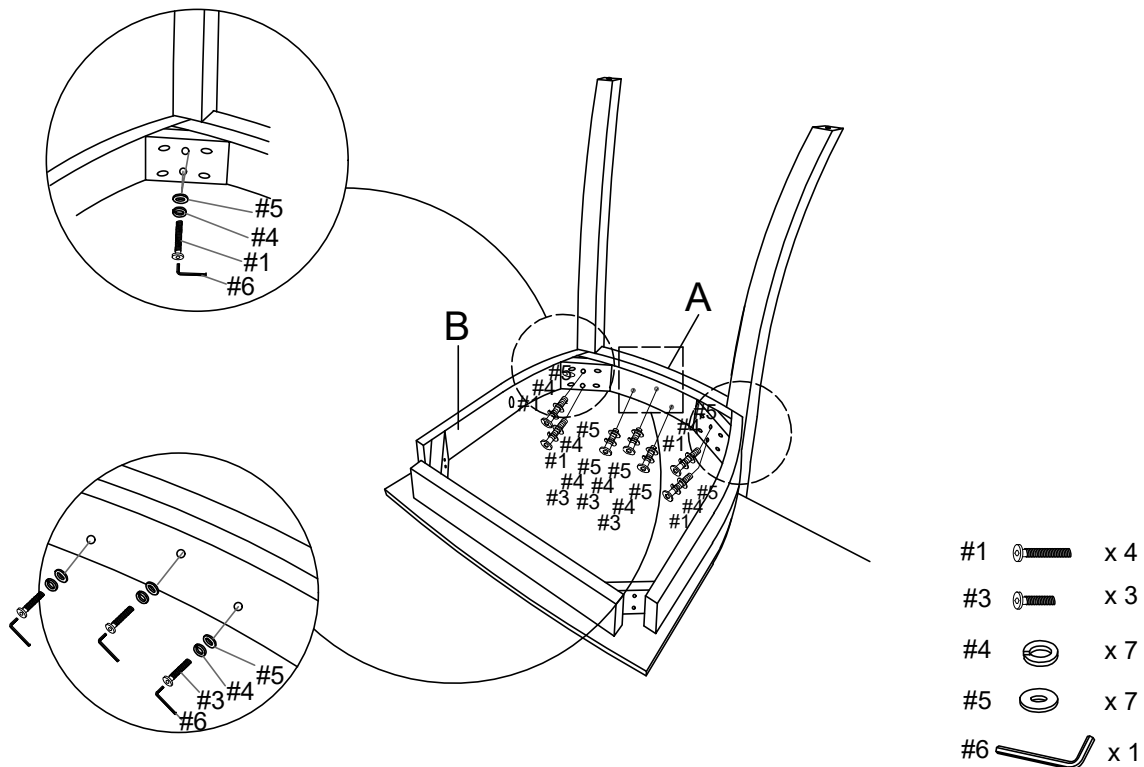

Step 2. Attach front legs (parts C) to seat frame (part B) using medium bolts (part #2), spring washers (part #4), flat washers (part #5) and allen wrench (part #6).

NOTE: Please fully tighten all bolts at this time.

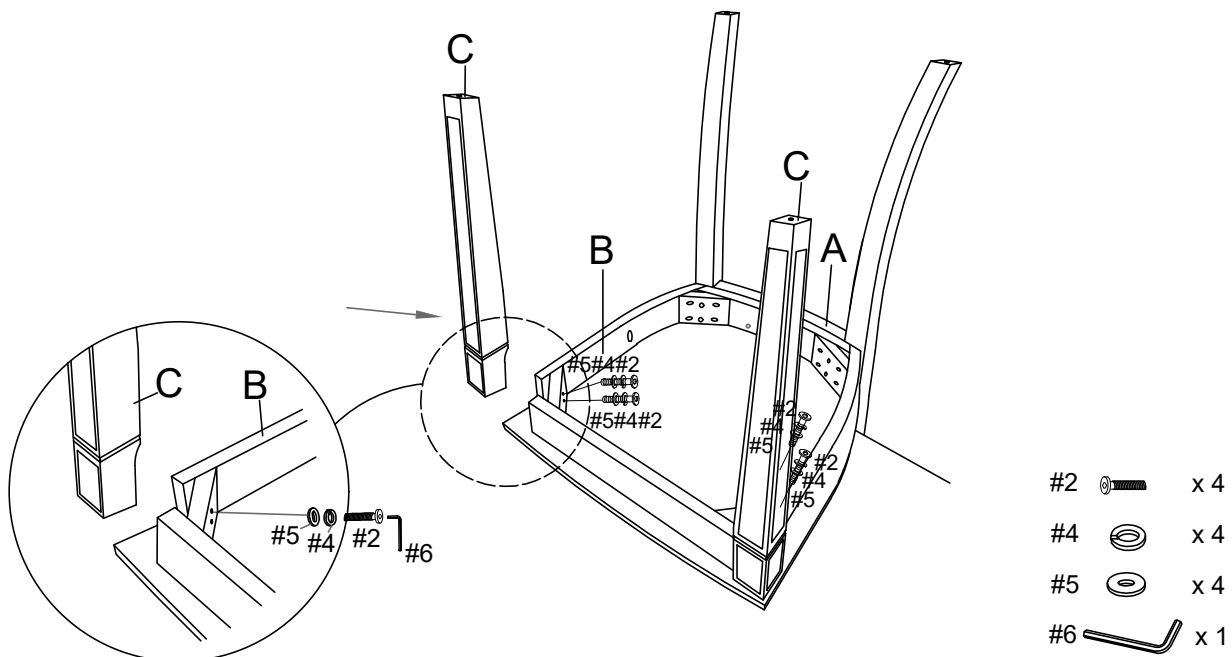

Step 3. Carefully turn unit upright. Repeat steps 1-2 to assemble remaining chair.

