

CROSLEY

FURNITURE


Counter Stool CF503326

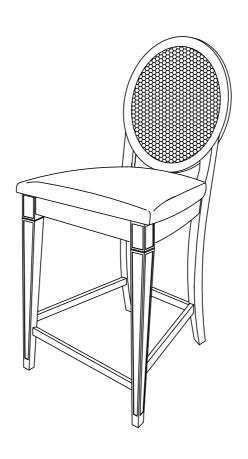

PART LIST

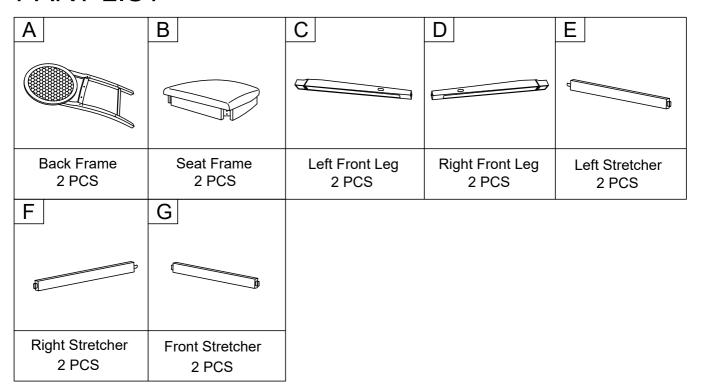

HARDWARE LIST

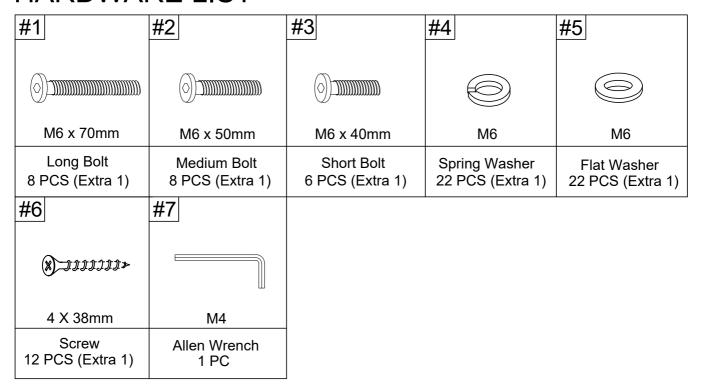

ADDITIONAL TOOLS (Not Provided)


Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver


Step 1. Carefully turn seat frame (part B) upside down on a flat, soft surface, such as carpet. Attach left front leg (part C), front stretcher (part G) and right front leg (part D) to seat frame (part B) using medium bolts (part #2), spring washers (part #4), flat washers (part #5) and allen wrench (part #7).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

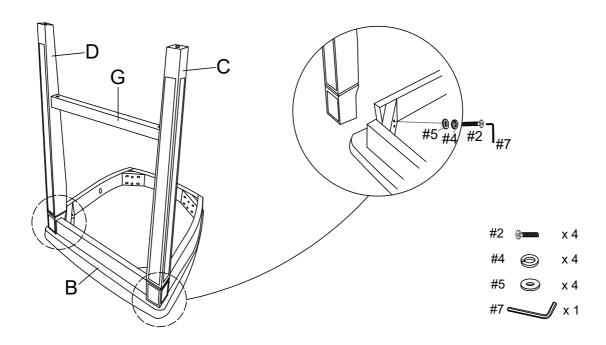


Step 2. Attach seat frame (part B), left stretcher (part E) and right stretcher (part F) to back frame (part A) using short bolts (part #3), spring washers (part #4), flat washers (part #5) and allen wrench (part #7).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

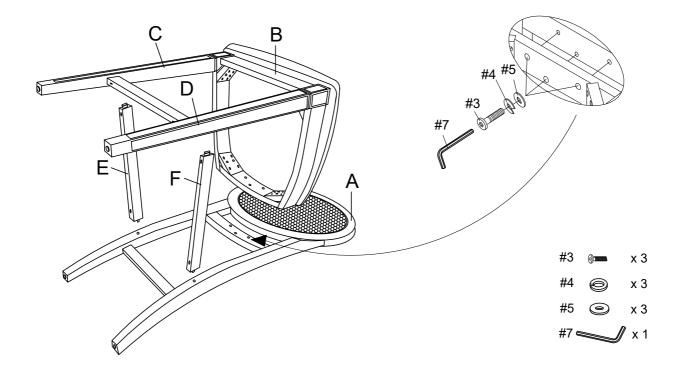


Step 3. Secure corners on seat frame (part B) to back frame (part A) using long bolts (part #1), spring washers (part #4), flat washers (part #5) and allen wrench (part #7).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

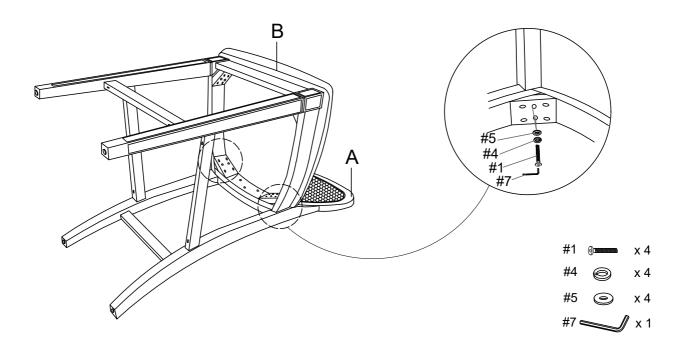

Step 4. Insert screws (part #6) into the holes of front stretcher (part G), left stretcher (part E) and right stretcher (part F) then tighten using phillips head screwdriver.

NOTE: Please fully tighten all bolts at this time.

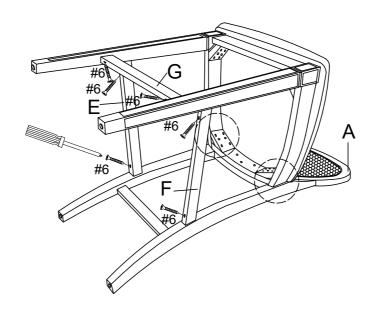

#6 **@:::::**> x i

Step 5. Carefully turn unit upright. Repeat steps 1-4 to assemble remaining chair.

5