



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

192921
Dining Table

ITEM: **192921**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A	TOP		1PC
B	LEG		4PCS
C	LEAF		2PCS

HARDWARE IDENTIFICATION

1	BOLT (M8 x 70mm - BLK)		8PCS
2	LOCK WASHER (M8 - BLK)		8PCS
3	FLAT WASHER (M8 - BLK)		8PCS
4	ALLEN WRENCH (M5 x 65MM - BLK)		1PC
5	METAL PLATE 3.5 (2 HOLE)		4PCS
6	PAN HEAD SCREW (M3.5 x 16mm - BLK)		8PCS

NOTE:


Philips head screw driver is required in the assembly process; however, manufacture does not provide this item.

ITEM: **192921**


ASSEMBLY INSTRUCTIONS




STEP 1

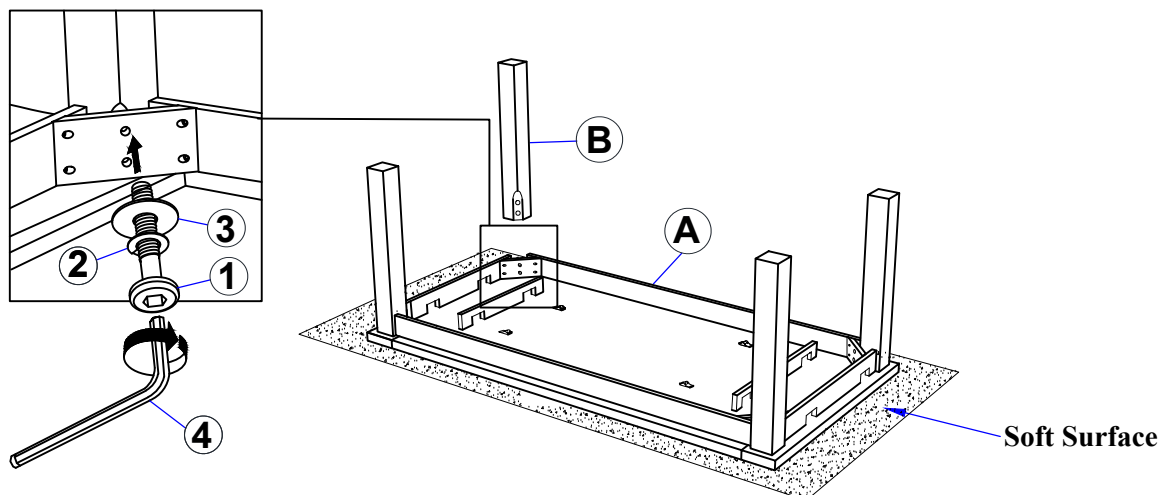


STEP 2

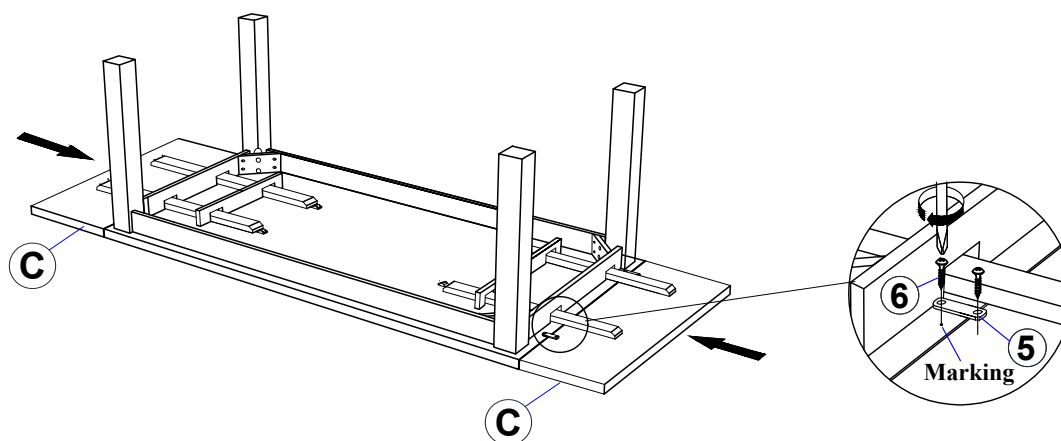

STEP 3

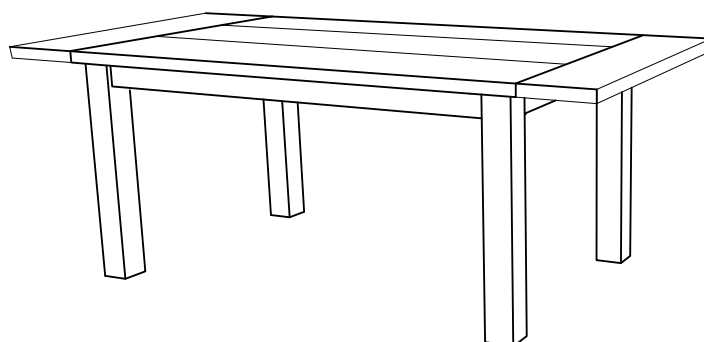

ITEM: **192921**

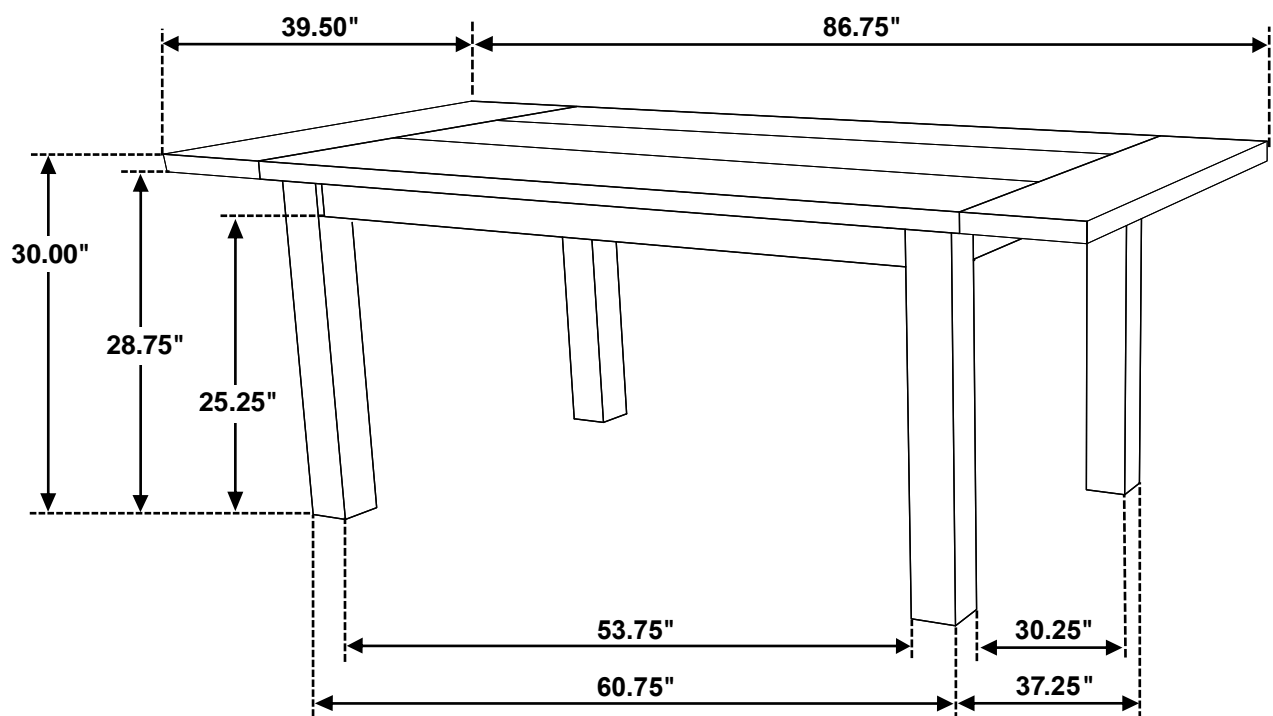

Note : Dimension tolerance $\pm 5\%$



ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE



Fine Furniture for every stage of life

192922
Side Chair

ITEM:192922



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

 


 
 

 
 
1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

A	BACK FRAME		1PC
B	RIGHT FRONT LEG		1PC
C	LEFT FRONT LEG		1PC
D	RIGHT SIDE STRETCHER		1PC
E	LEFT SIDE STRETCHER		1PC
F	MIDDLE STRETCHER		1PC
G	SEAT FRAME		1PC
H	WOODEN SEAT		1PC

NOTE:

Quantities shown are for one chair.

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **192922**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:



 





1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

1	SHORT FLAT HEAD SCREW (M4 x 32mm - RBW)		6PCS
2	LONG FLAT HEAD SCREW (M4 x 35mm - RBW)		6PCS
3	SHORT BOLT (M6 x 35mm - BLK)		1PC
4	MEDIUM BOLT (M6 x 60mm - BLK)		2PCS
5	LONG BOLT (M6 x 70mm - BLK)		4PCS
6	LOCK WASHER (1/4" - BLK)		7PCS
7	FLAT WASHER (1/4" - BLK)		7PCS
8	ALLEN WRENCH (M4 x 110MM)		1PC

NOTE:

Quantities shown are for one chair.

 
Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **192922**




ASSEMBLY INSTRUCTIONS

STEP 1

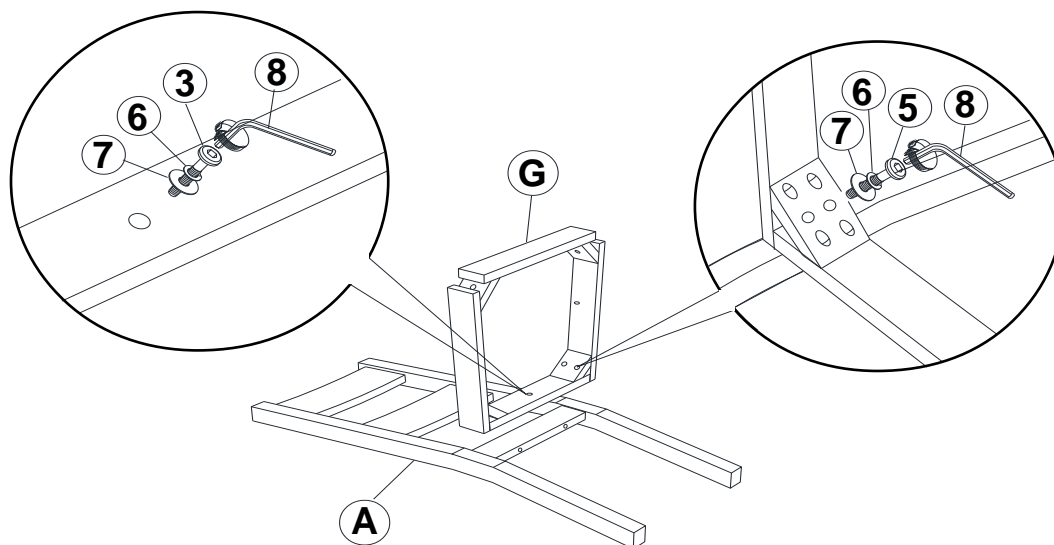

 
STEP 2

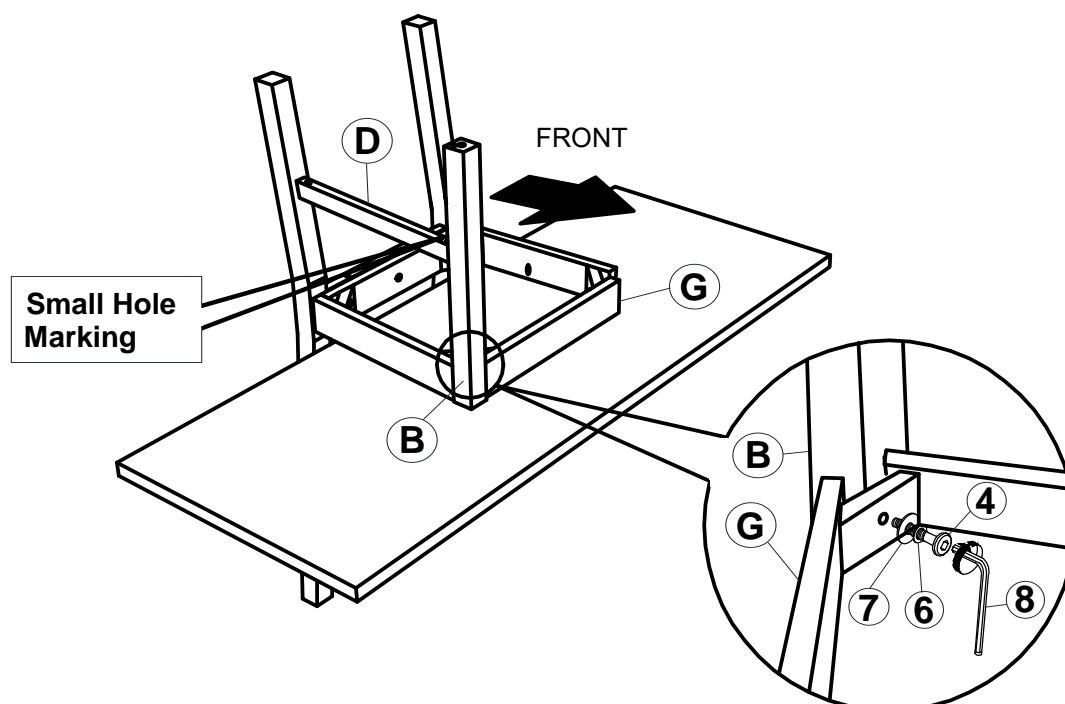


ITEM: **192922**

ASSEMBLY INSTRUCTIONS

 STEP 3

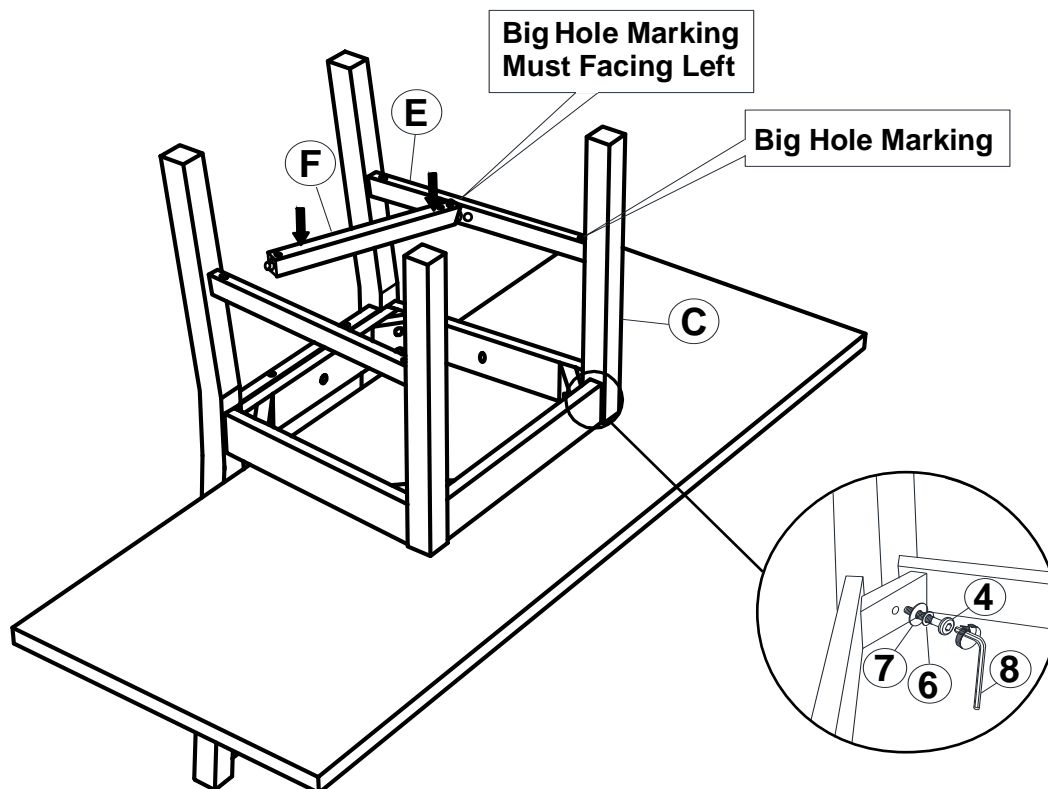

 
STEP 4

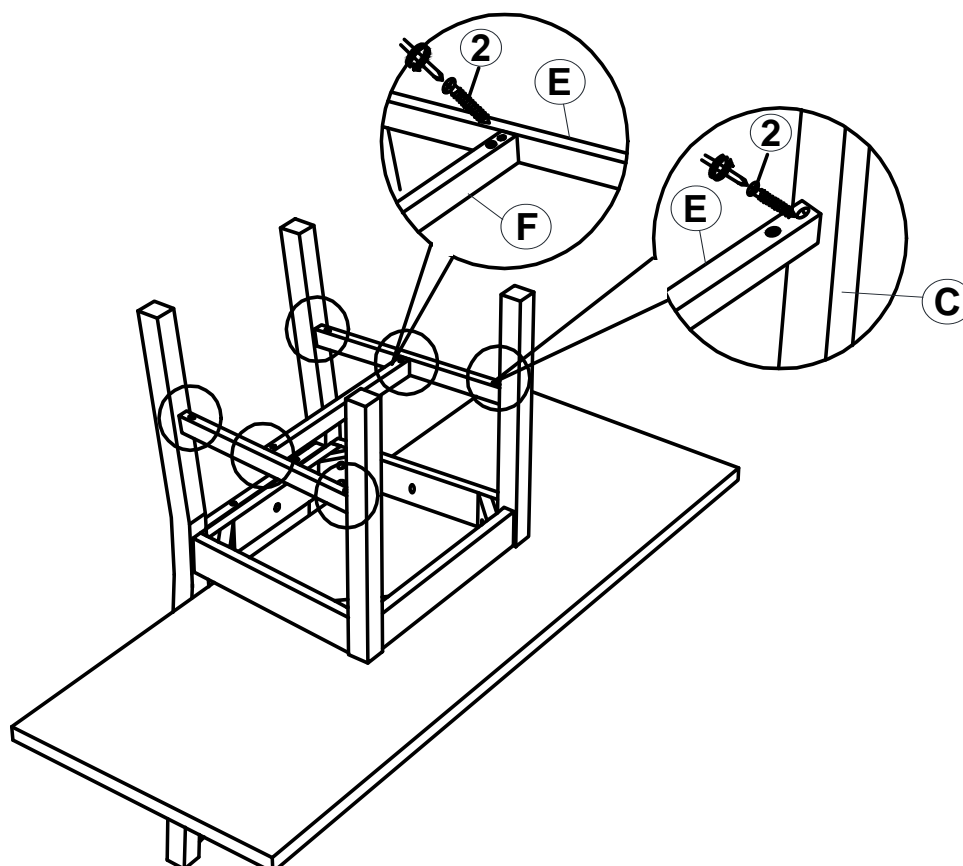


ITEM: **192922**

ASSEMBLY INSTRUCTIONS

 STEP 5

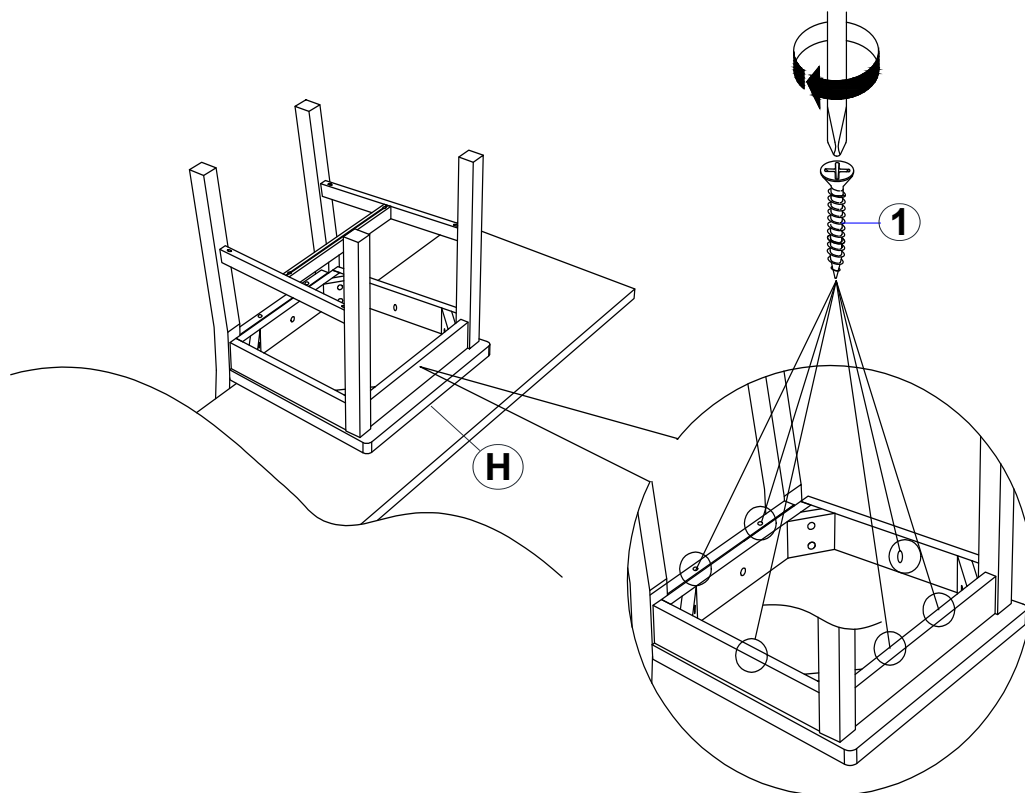


 STEP 6

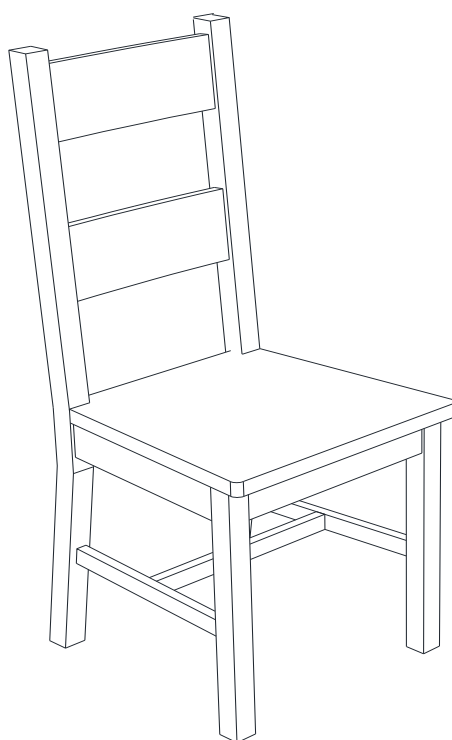

ITEM: **192922**

 COASTER
FINE FURNITURE

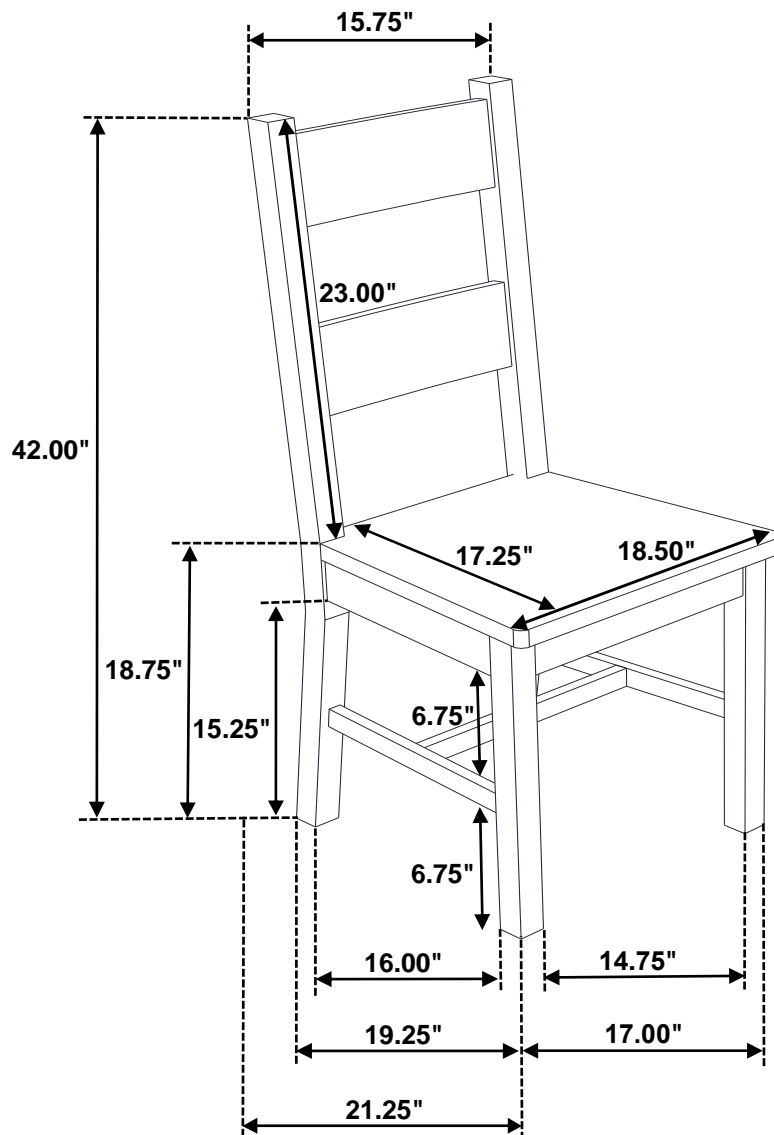

Note : Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

192923
Bench

ITEM:192923



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!



 

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.









ASSEMBLY TIME

15 MINUTES

 PARTS IDENTIFICATION

A	SEAT		1PC
B	APRON		2PCS
C	LEG FRAME		2PCS
D	CROSSBAR		1PC

HARDWARE IDENTIFICATION

1	SHORT BOLT (M6 x 60mm - BLK)		2PCS
2	LONG BOLT (M6 x 100mm - BLK)		4PCS
3	BARREL NUT (M6 x Ø 12mm - Zink)		6PCS
4	WOOD DOWEL (M8 x 30mm)		6PCS
5	ALLEN WRENCH (M4 x 100mm - BLK)		1PC
6	FLAT HEAD SCREW (M4 x 32mm - RBW)		12PCS

 
NOTE:

Philips head screw driver is required in the assembly process; however, manufacture does not provide this item.


ITEM: **192923**

ASSEMBLY INSTRUCTIONS

STEP 1

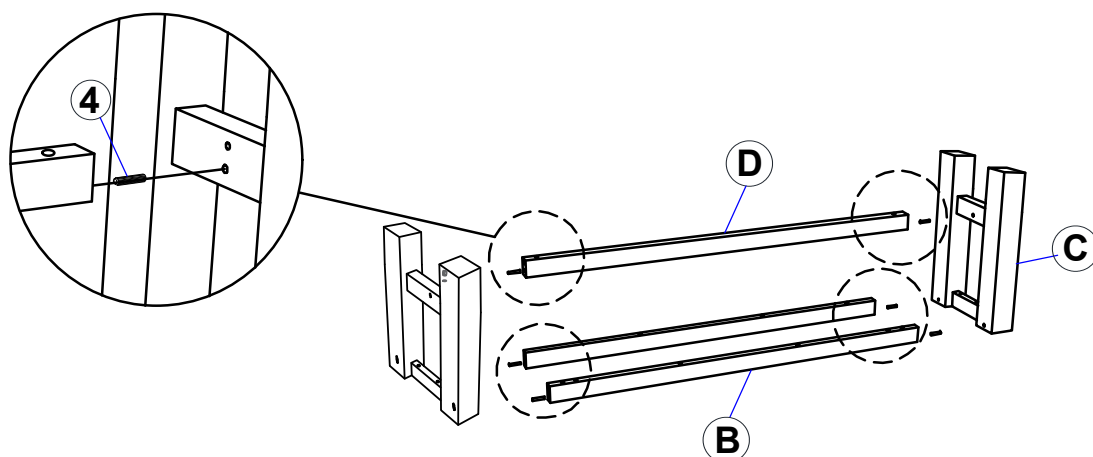


 STEP 2

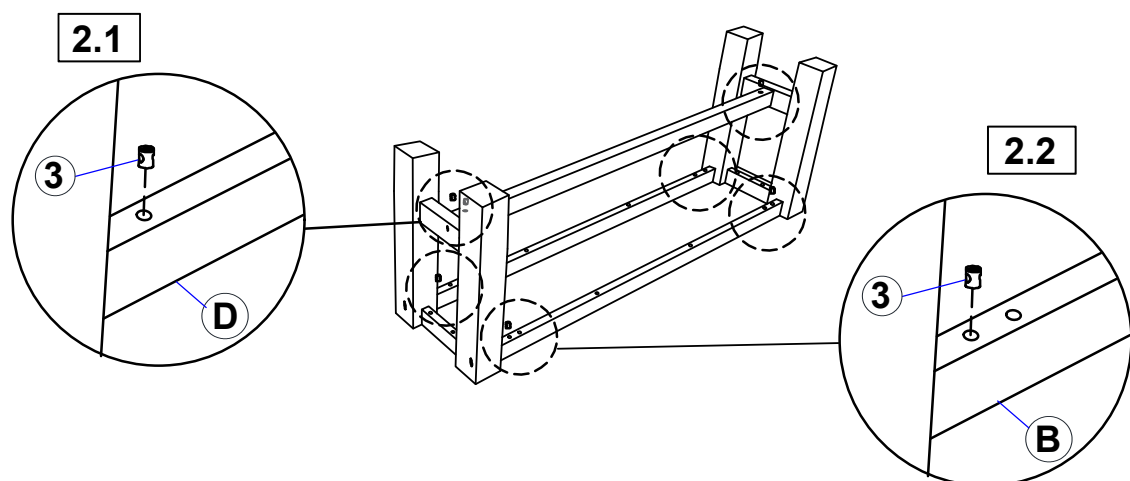

** Place the nut into the end hole

 STEP 3

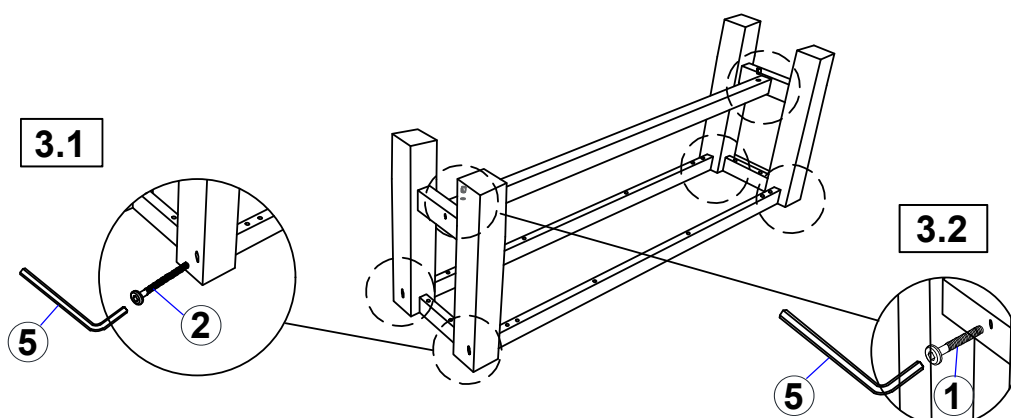


ITEM: **192923**



ASSEMBLY INSTRUCTIONS

STEP 4

 
COASTER
FINE FURNITURE

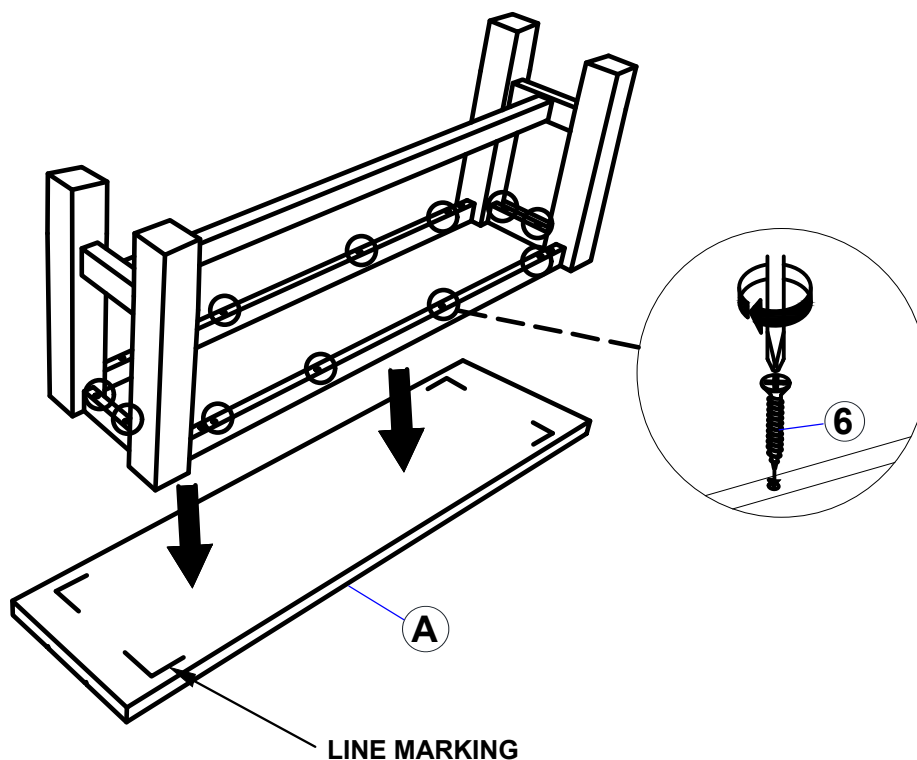

  STEP 5 COMPLETE

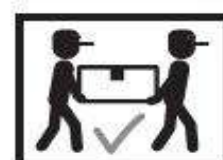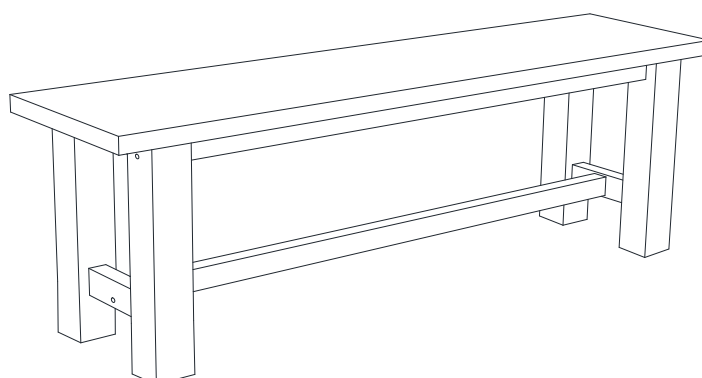

ITEM:192923

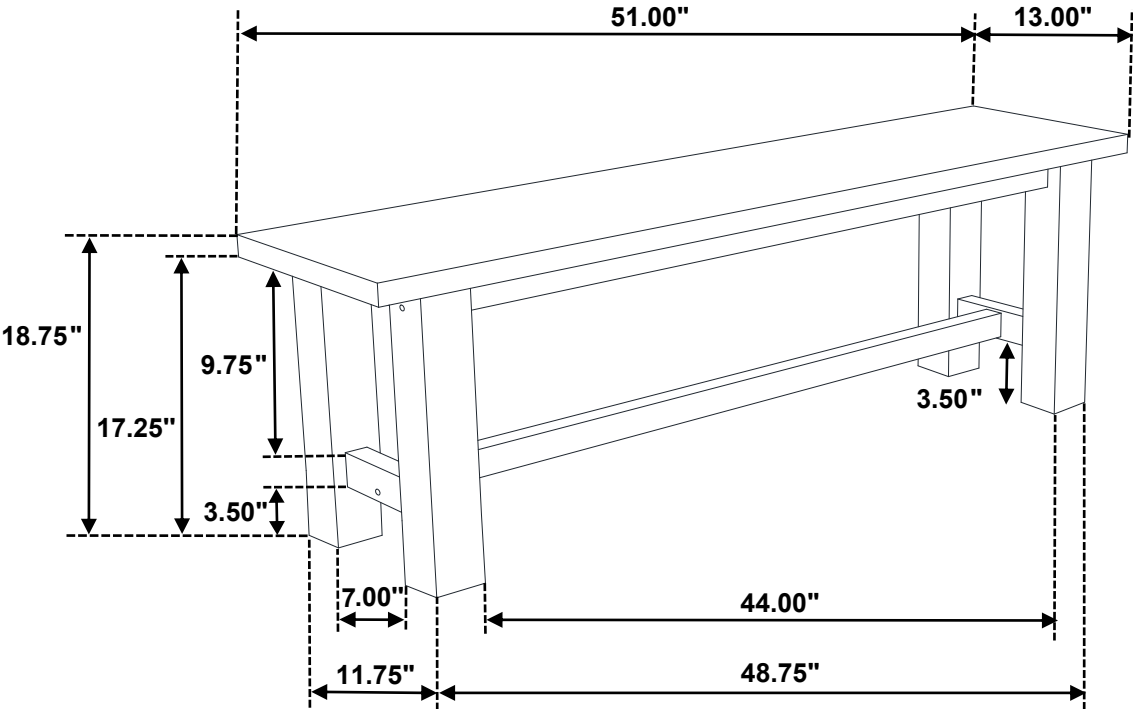 

Note : Dimension tolerance $\pm 5\%$