


# TV STAND

## *USER MANUAL*

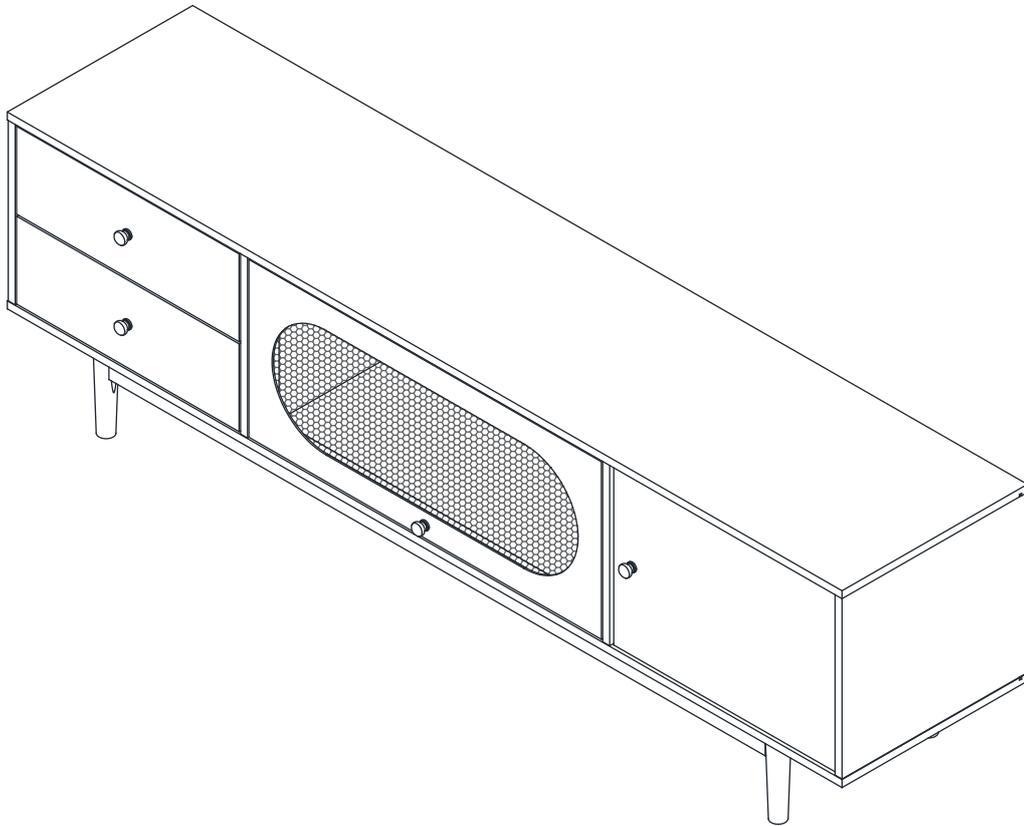

**SAVE THESE INSTRUCTIONS FOR FUTURE USE**

**PLEASE DO NOT RETURN TO STORE**



**Please do not return this product to the retailer!!  
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.










# Before Installation


Important – Please read these instructions fully before starting assembly









Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

## Cam Lock Assembly Instructions

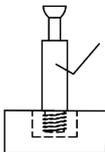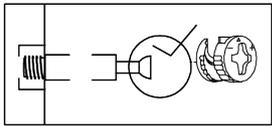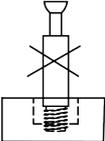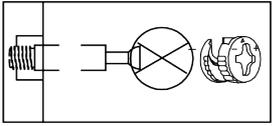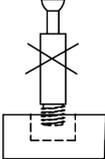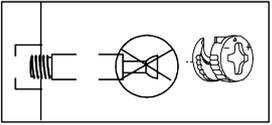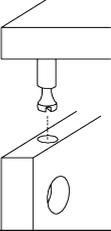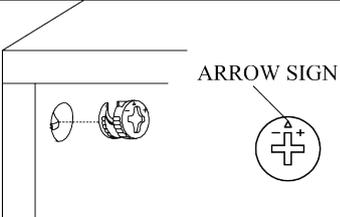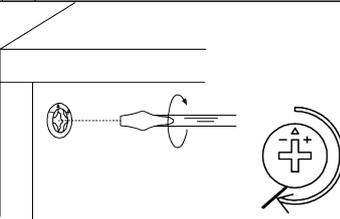		Diagram A Insert Cam Bolt into hole as shown in diagram A.
		Diagram B Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.
		Diagram C Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.
		Connect the panels together.
	ARROW SIGN	Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
		To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>

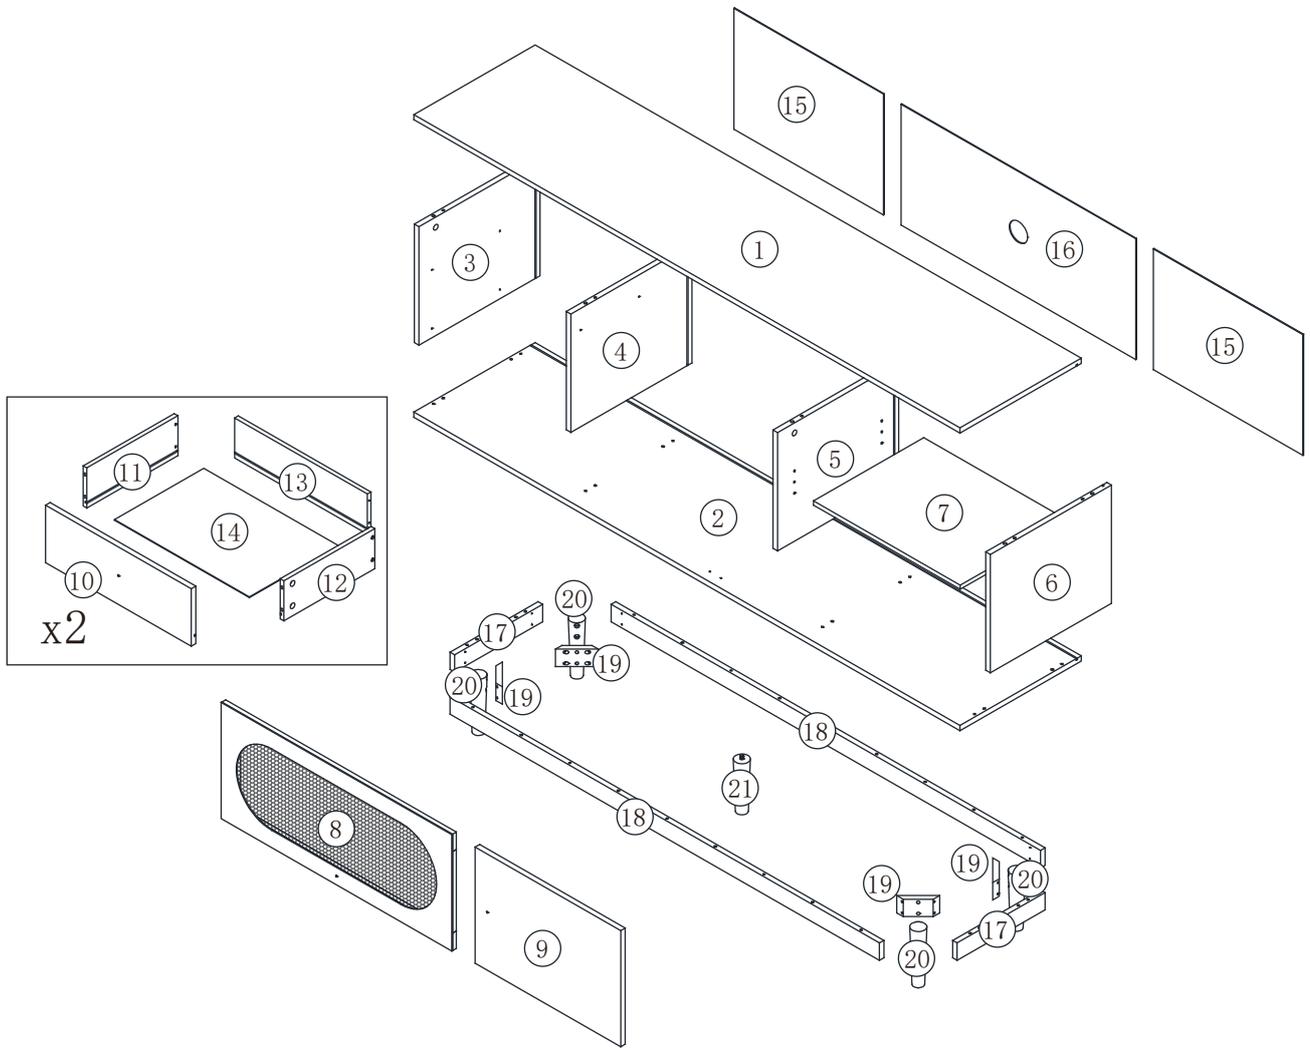

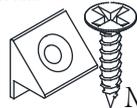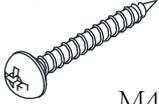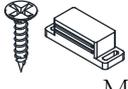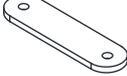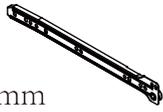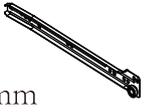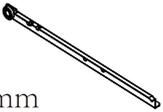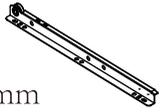Ax16 	Bx16 	Cx28  M6x30	Dx8  M4x40	Ex 8  M4x30	Fx27  M3x12
Gx6  M4x12	Hx12  M3x14	Ix4  M4x20	Jx4 	Kx 2  M4x35	Lx14  M4x40
Mx 4 	Nx8  M6x60	Ox2 	Px2  M3x14	Qx2 	Rx2 
Sx12  M4x14	Tx16  M4x25	Ux1 	Vx4 	Wx1 	Xx2 
Zx2 	Yx1 	Y1x1 	Y2x1 	CLx2  300mm	CRx2  300mm
DLx2  300mm	DRx2  300mm				

# STEP 1

Fx12




CLx2



CRx2



Zx2


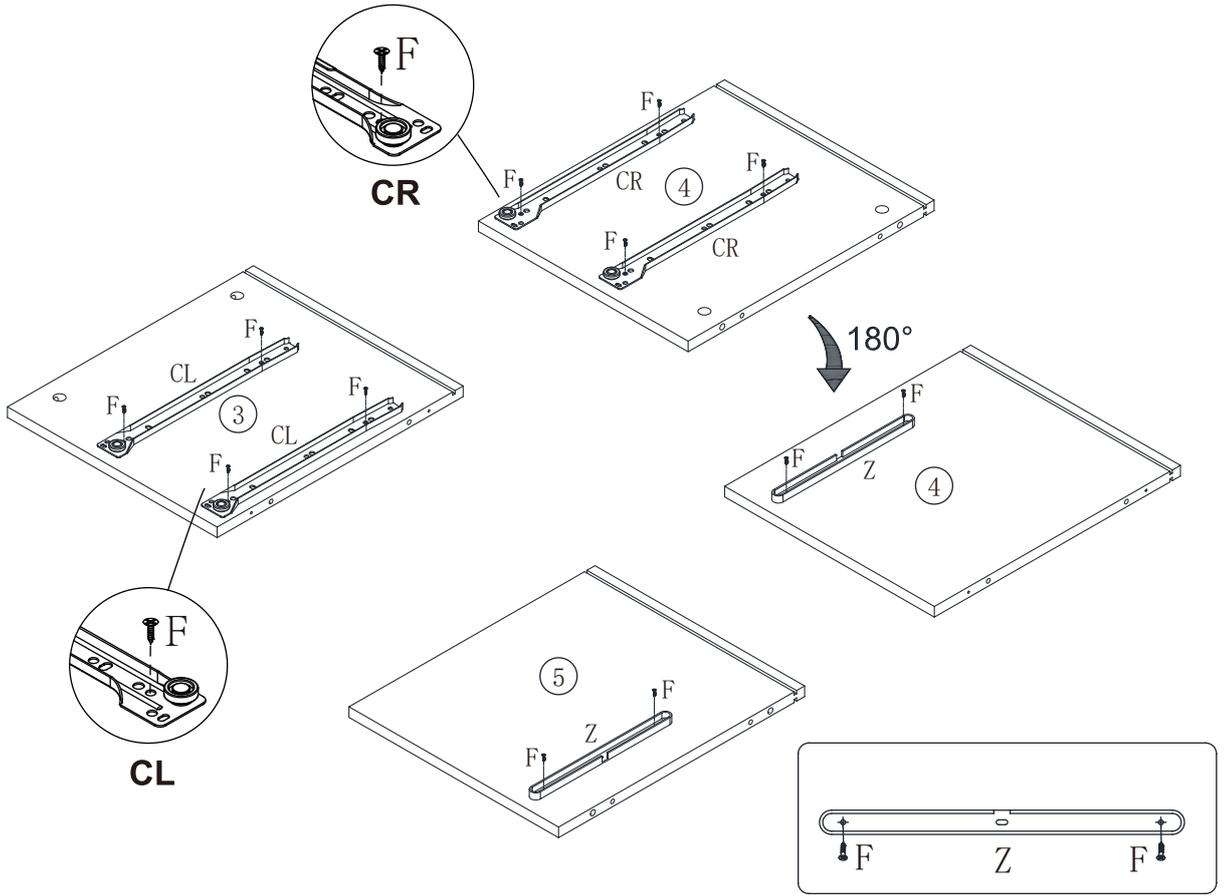


# STEP 2

Ax8



Px2

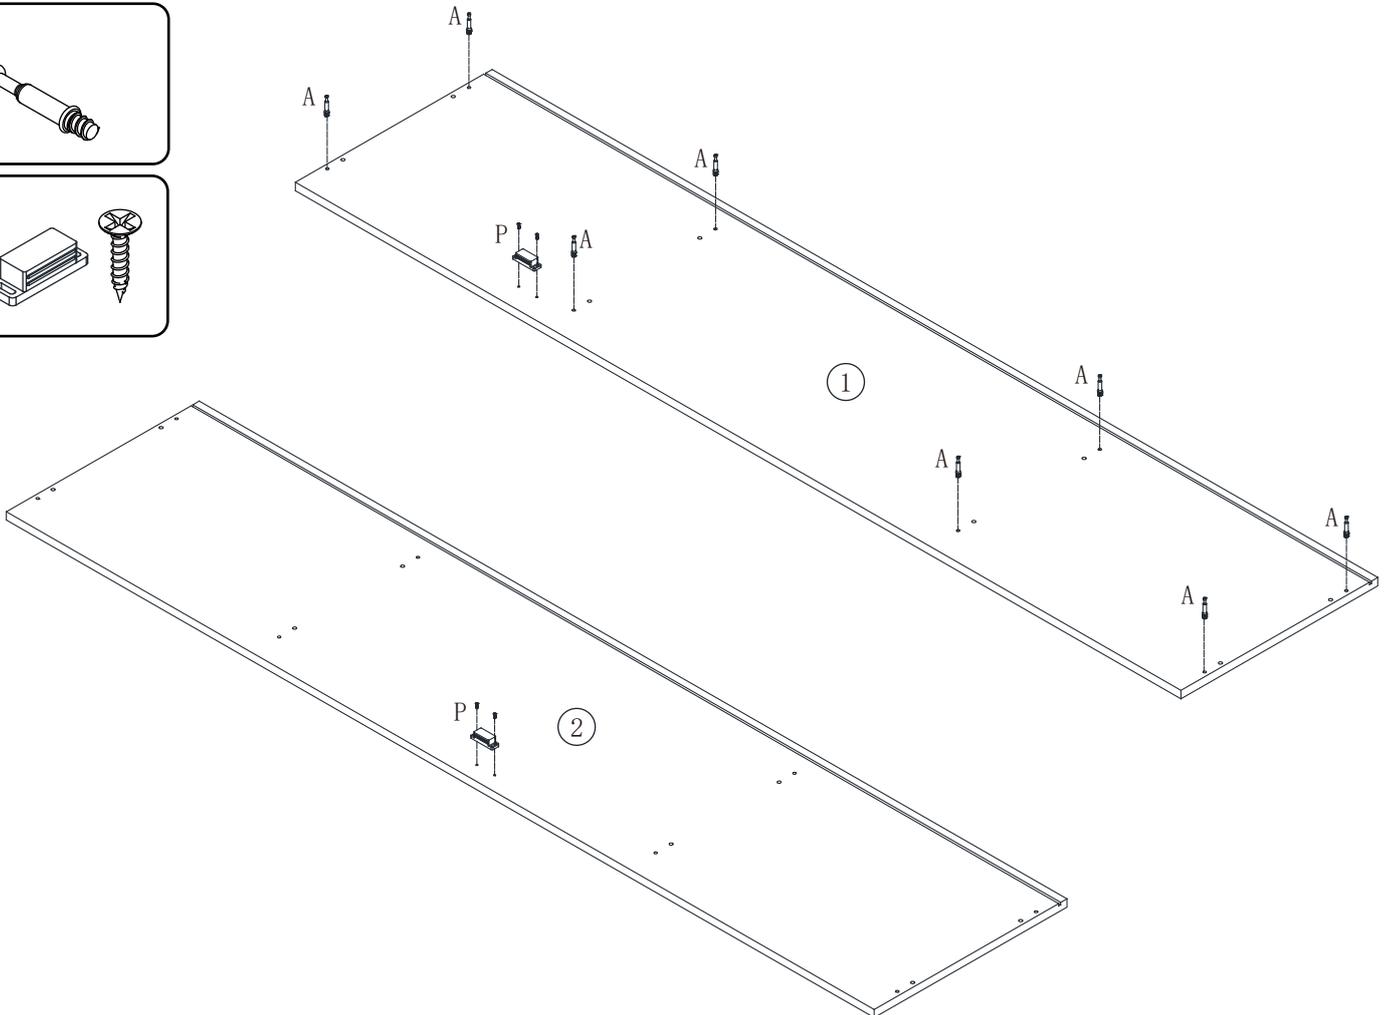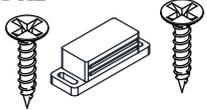


# STEP 3


Bx8



Cx8

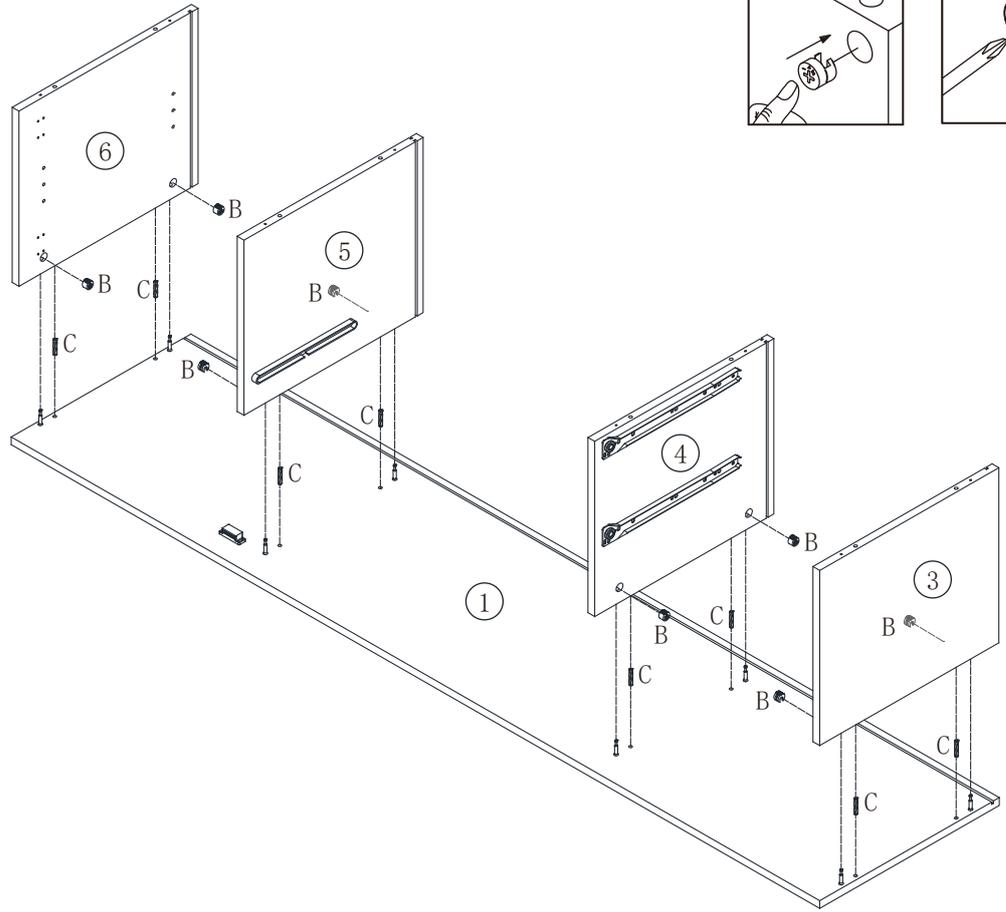

# STEP 4

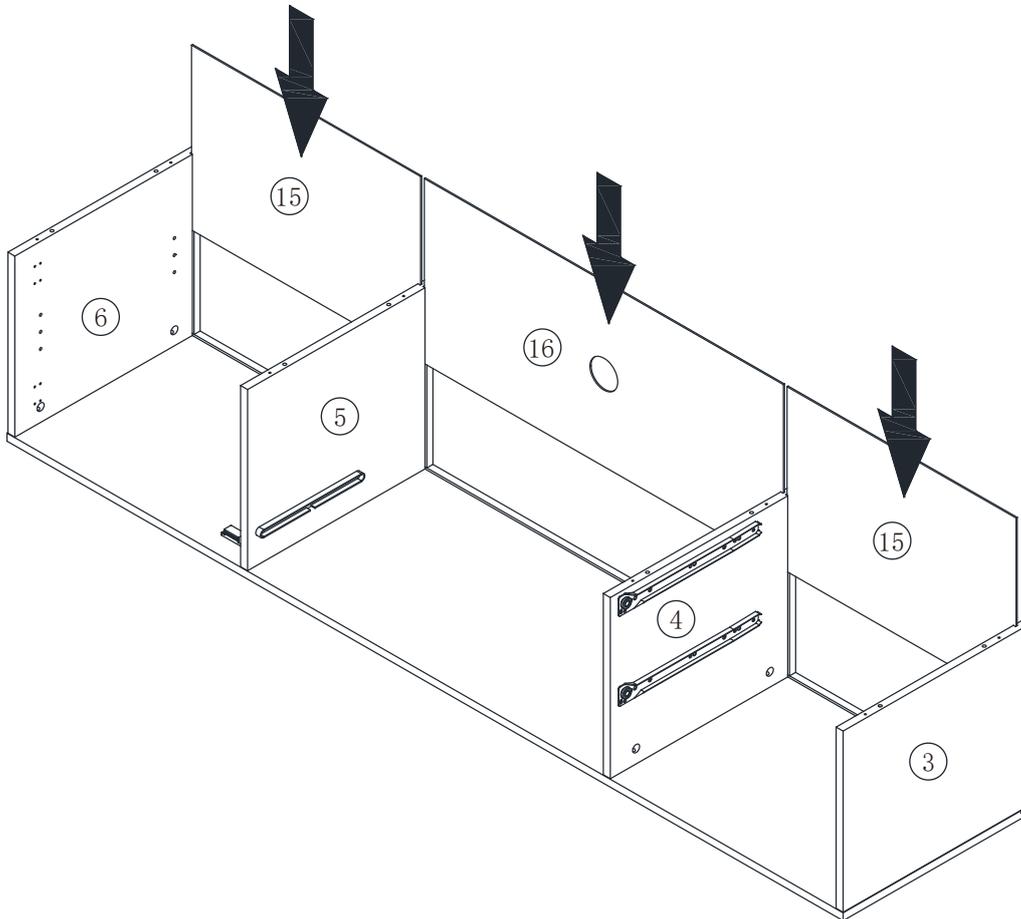


# STEP 5

Dx8




Cx8

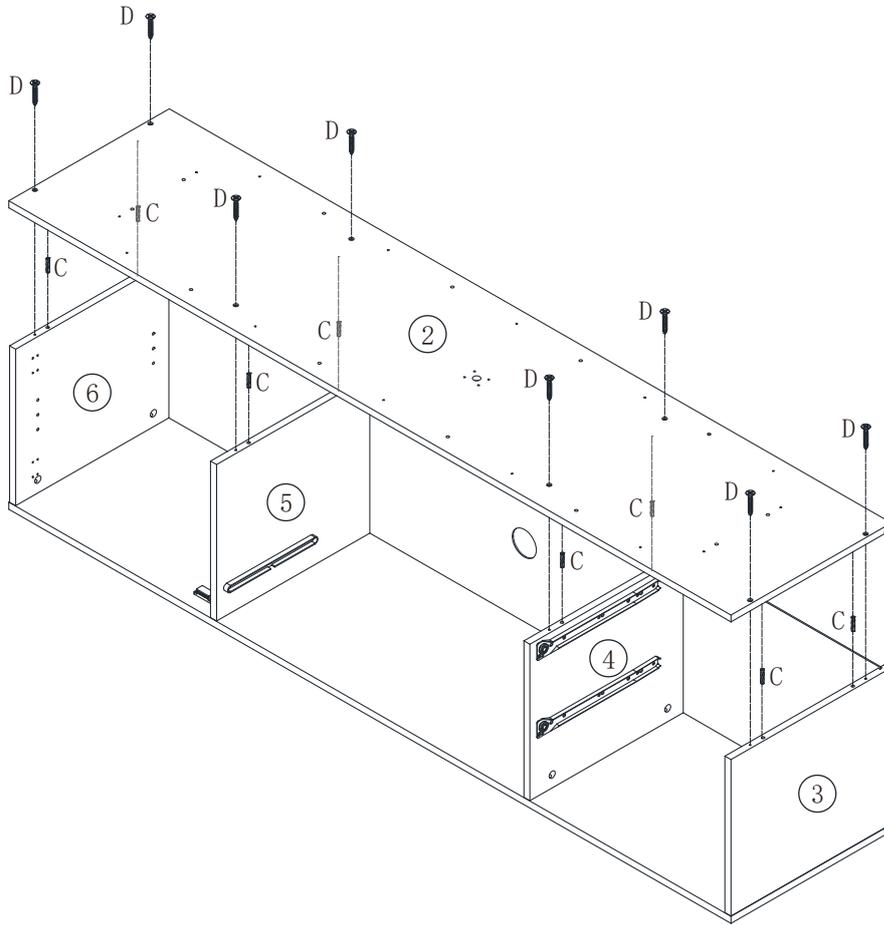


# STEP 6

Tx8

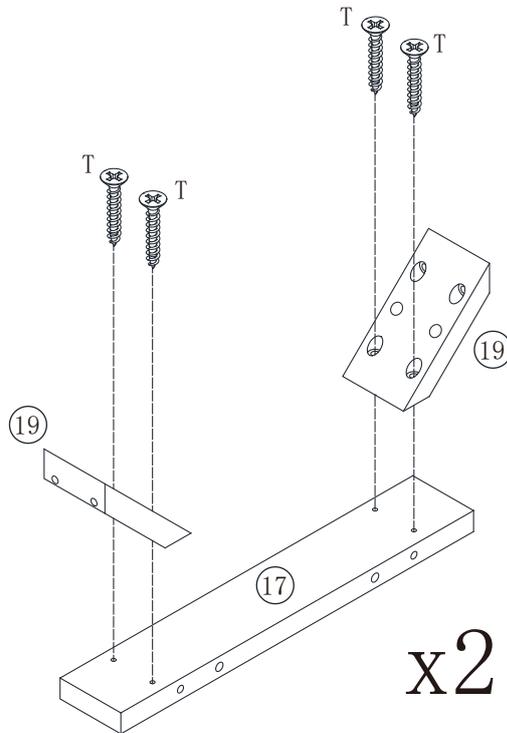

# STEP 7

Tx8

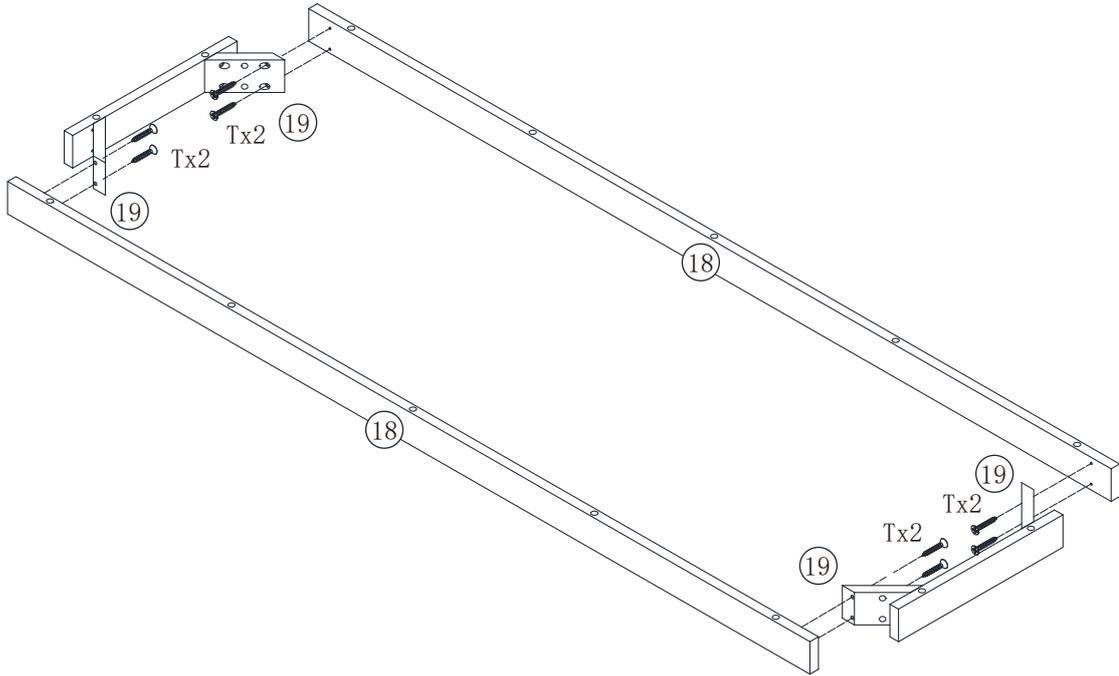


# STEP 8




Nx8










Ux1

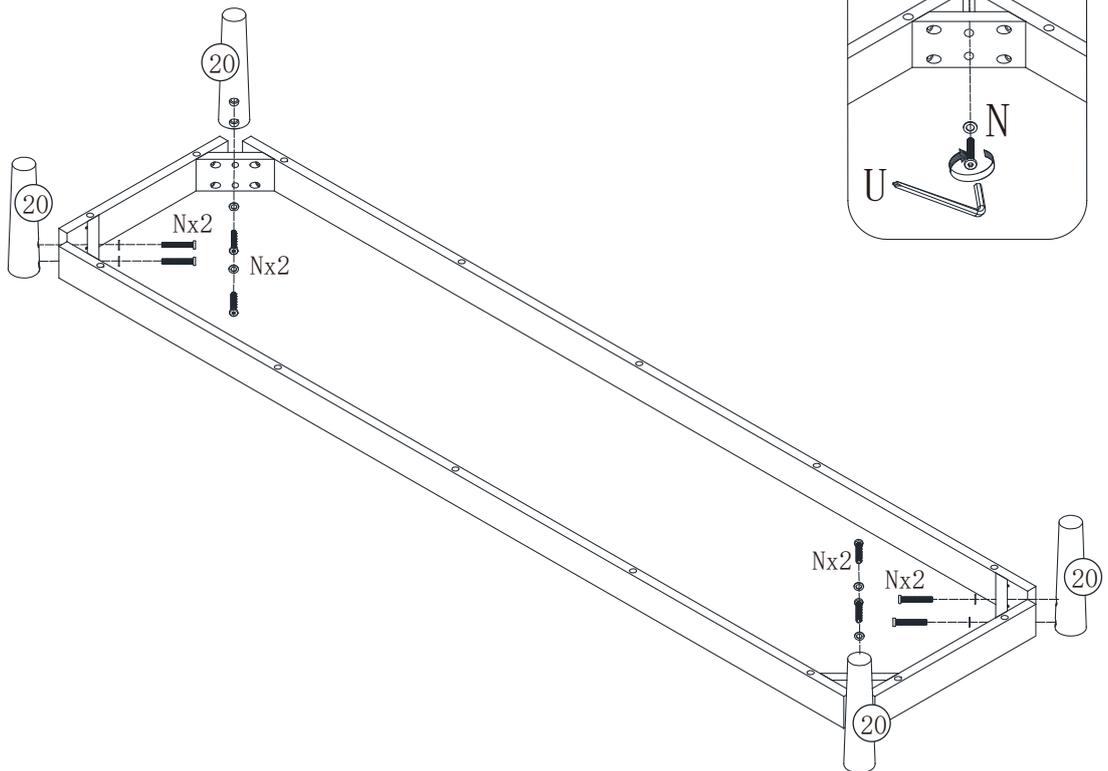







# STEP 9

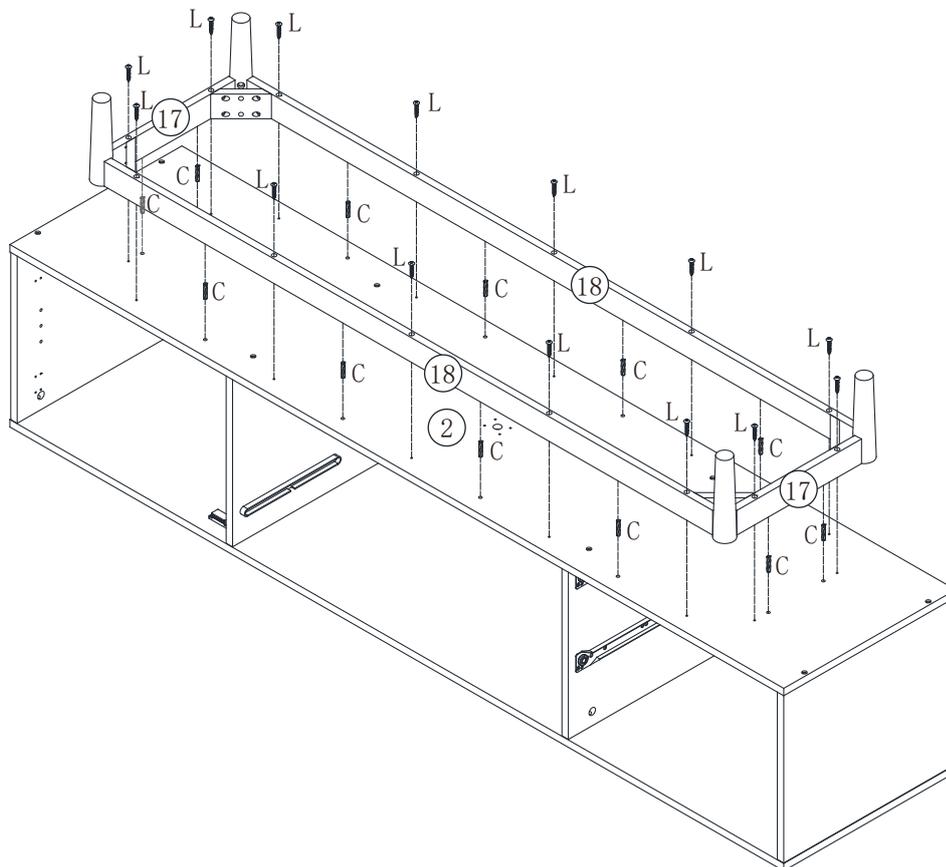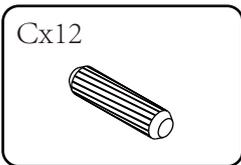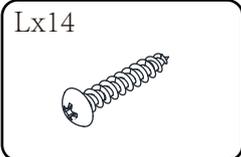


# STEP 10

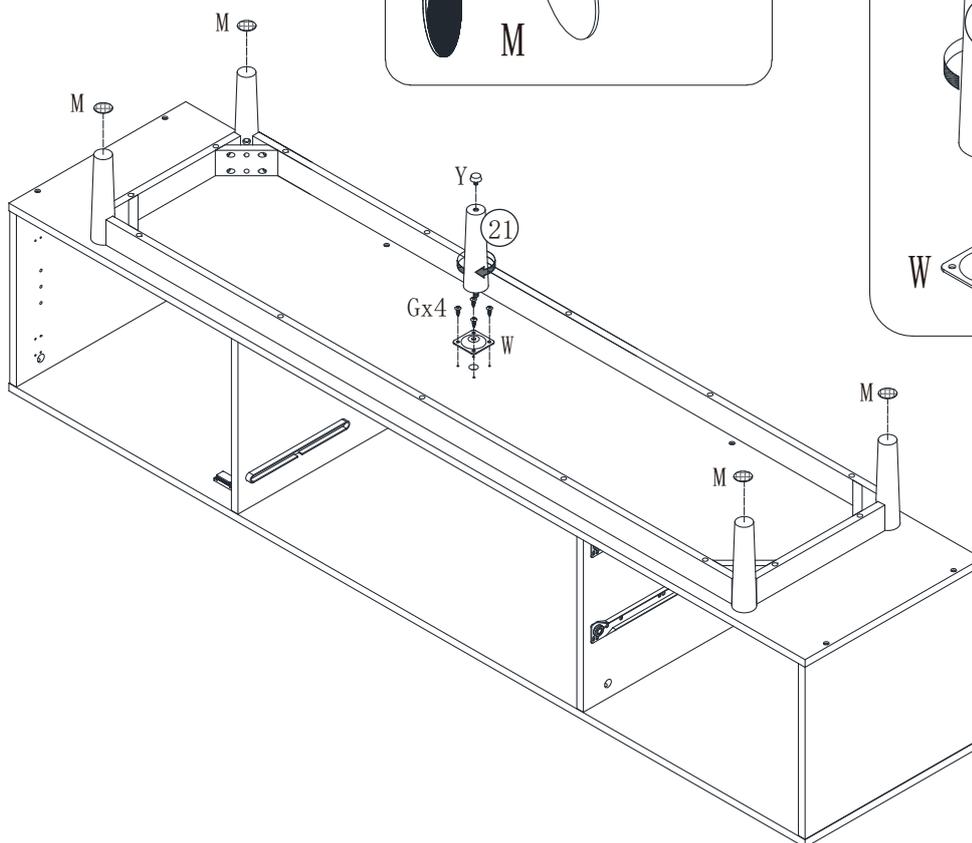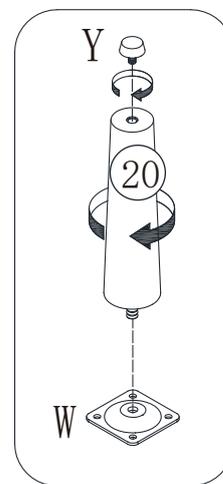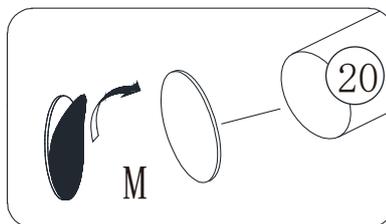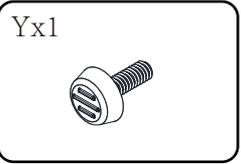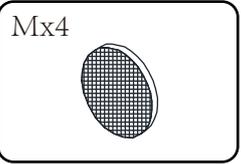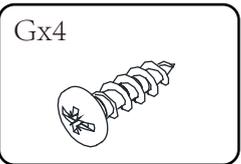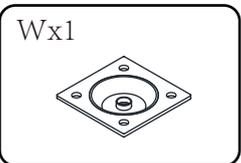

# STEP 11

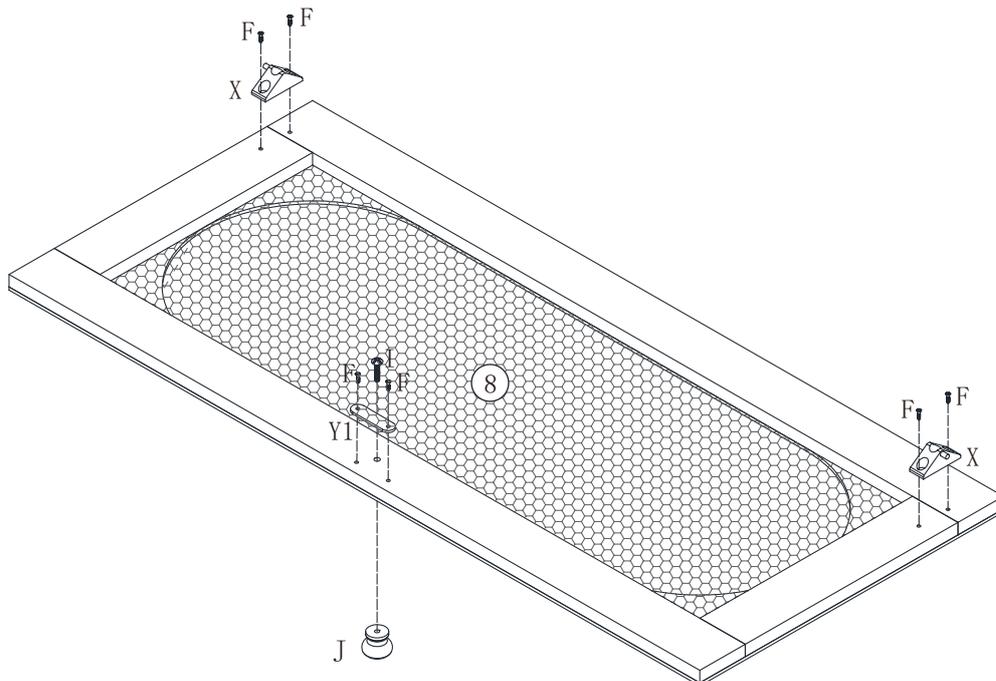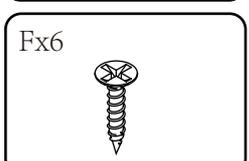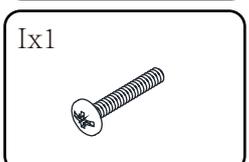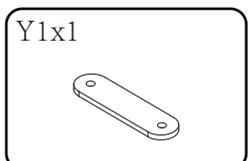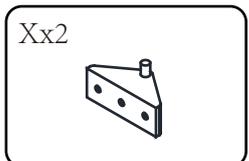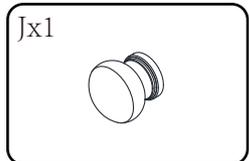


# STEP 12

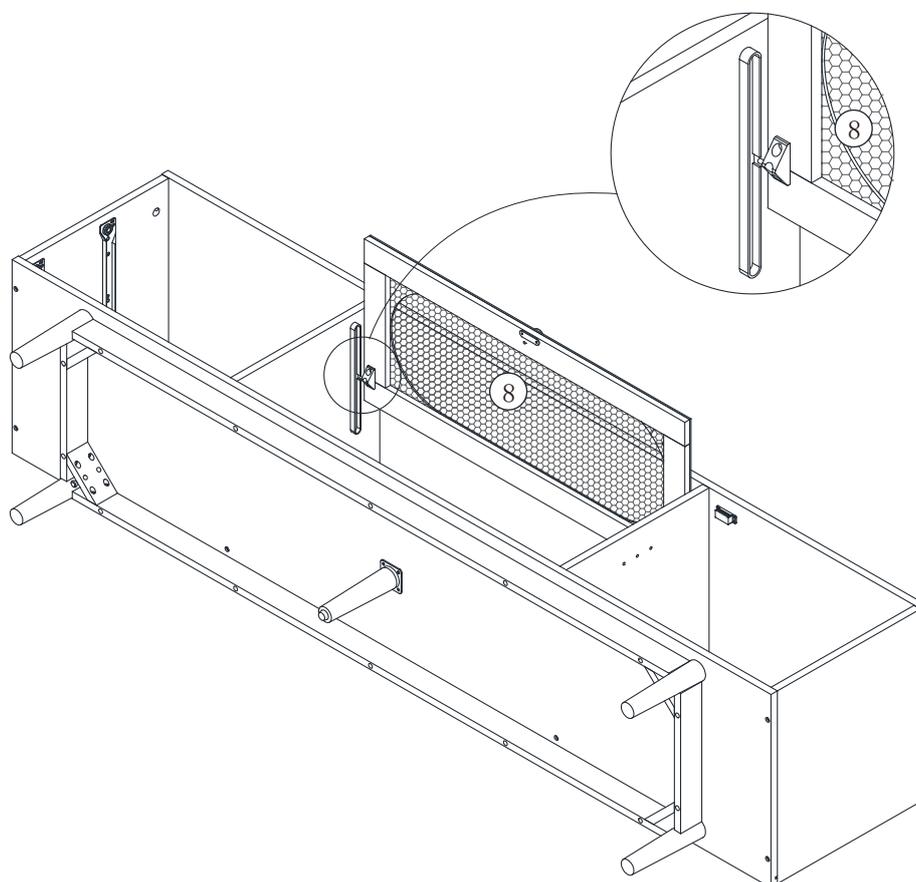

# STEP 13

Vx4

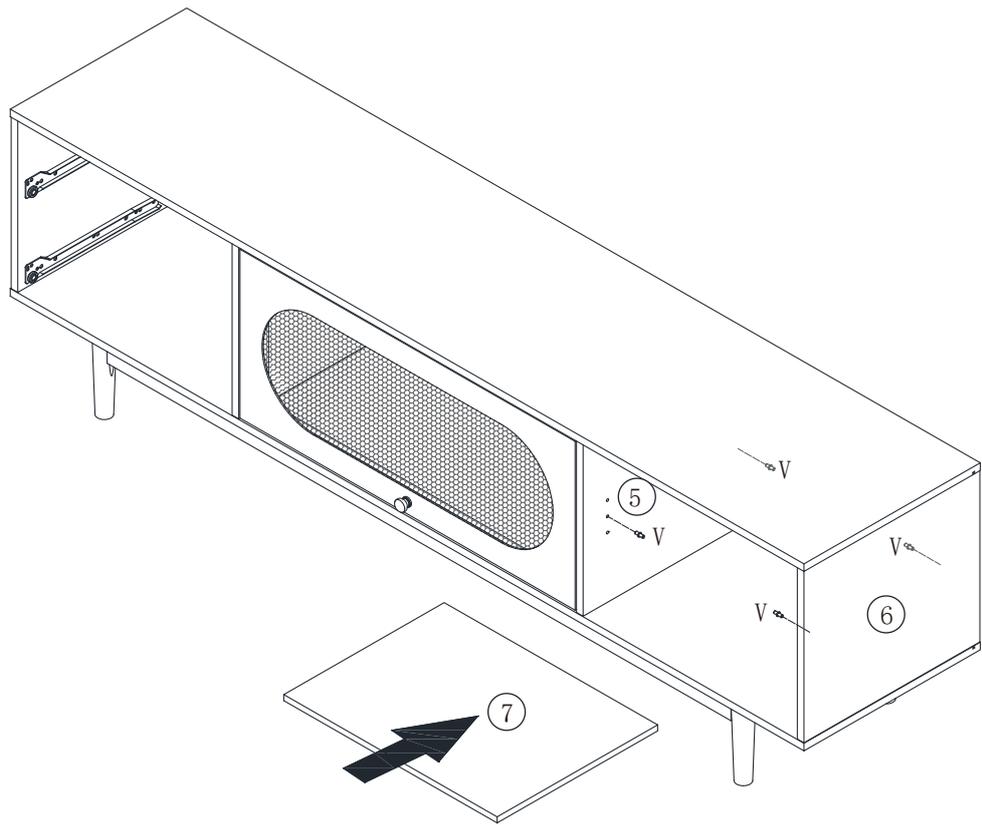

# STEP 14

Sx4



Fx1



Rx2




Y2x1



Jx1





Ix1

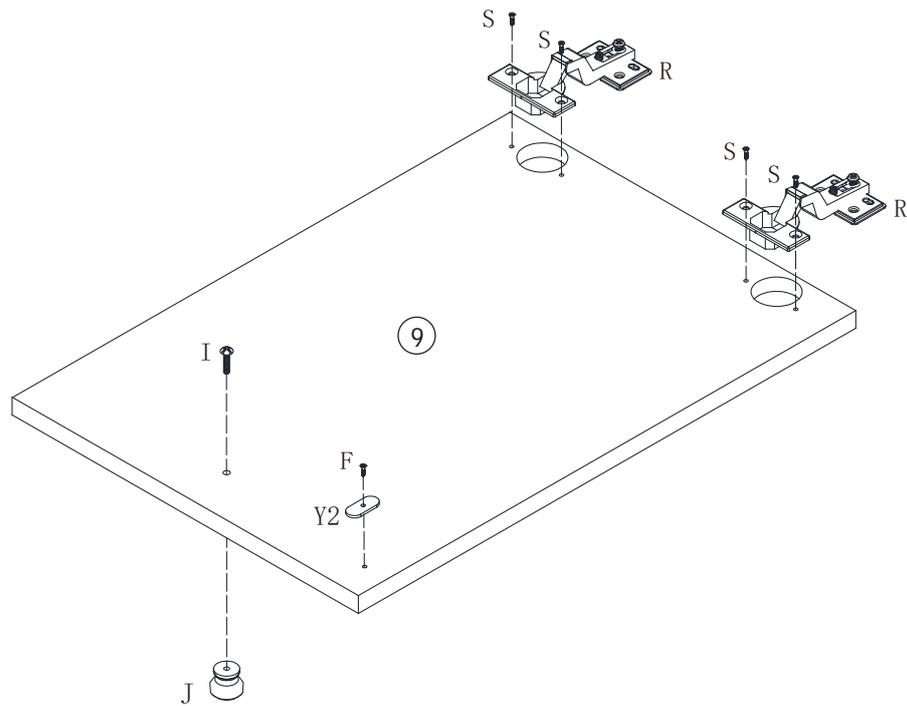

# STEP 15



Sx8

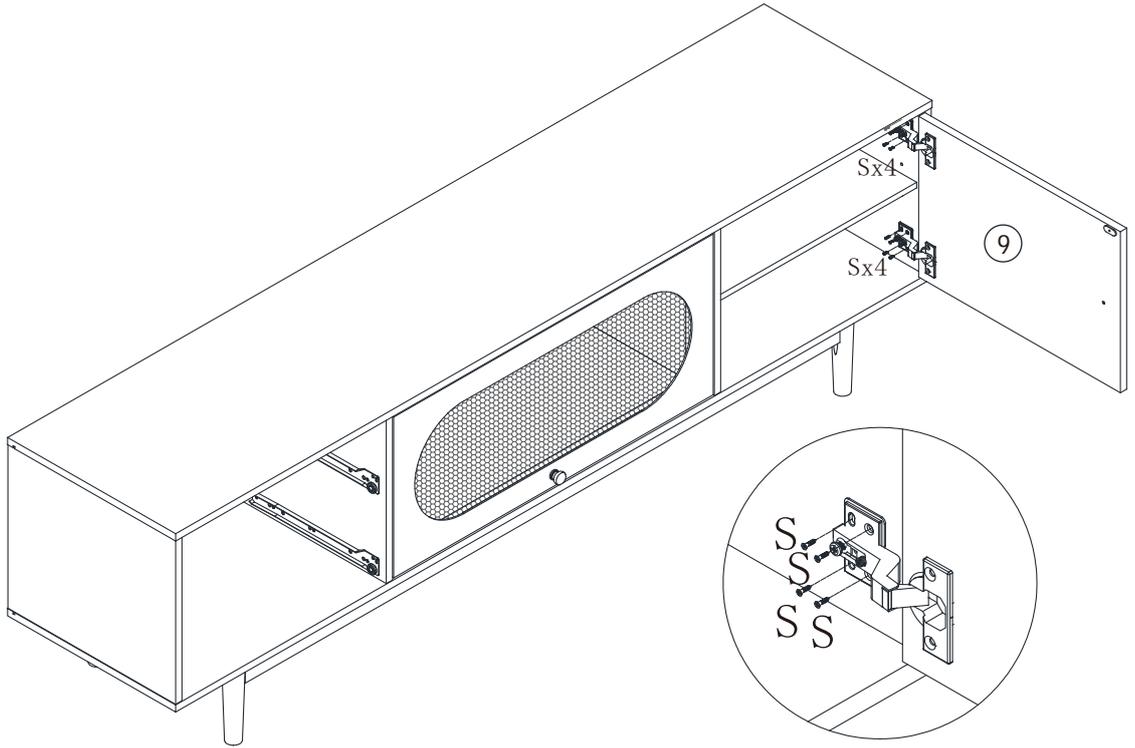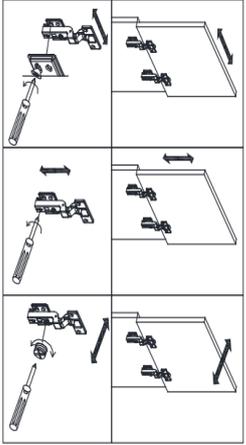

(For detailed hinge adjustment instructions, please refer to the last page.)

# STEP 16

Ex8

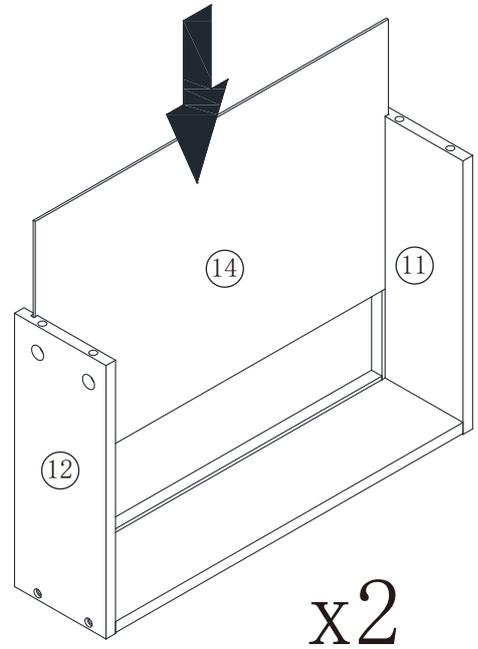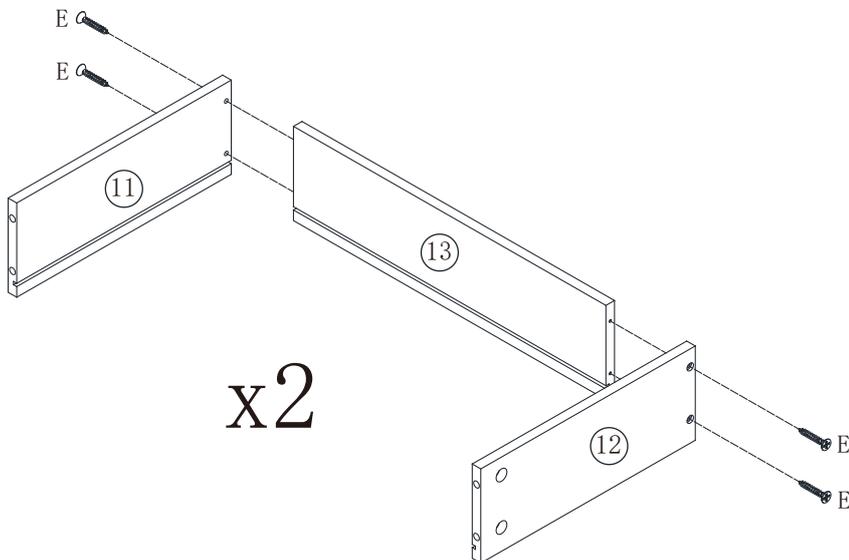

# STEP 17

Bx8







Ax8



Jx2




Ix2

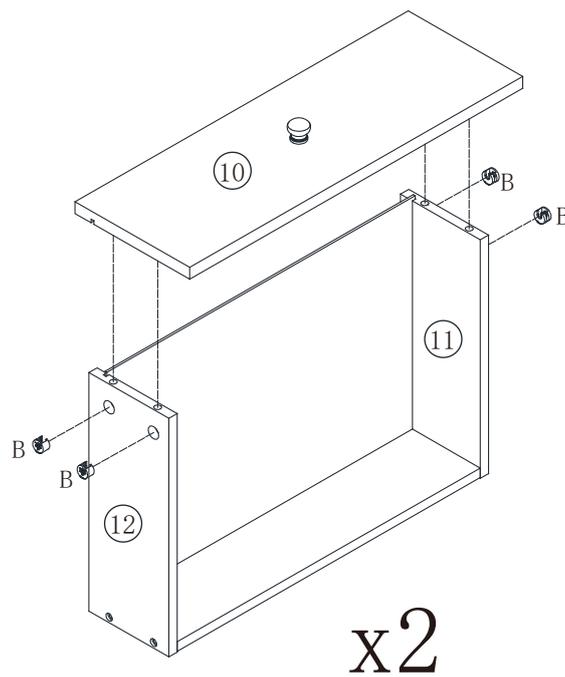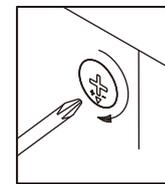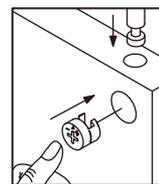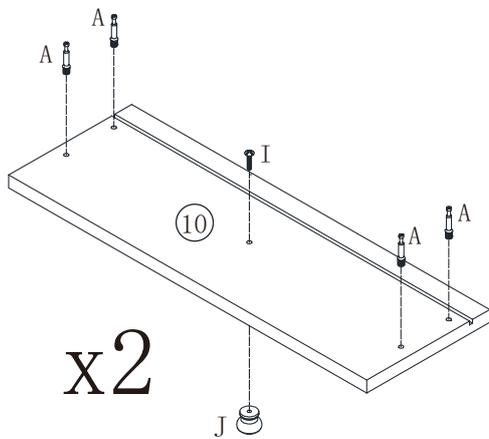


# STEP 18


DRx2

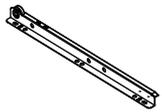


DLx2

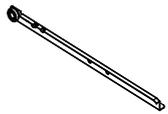

Fx8

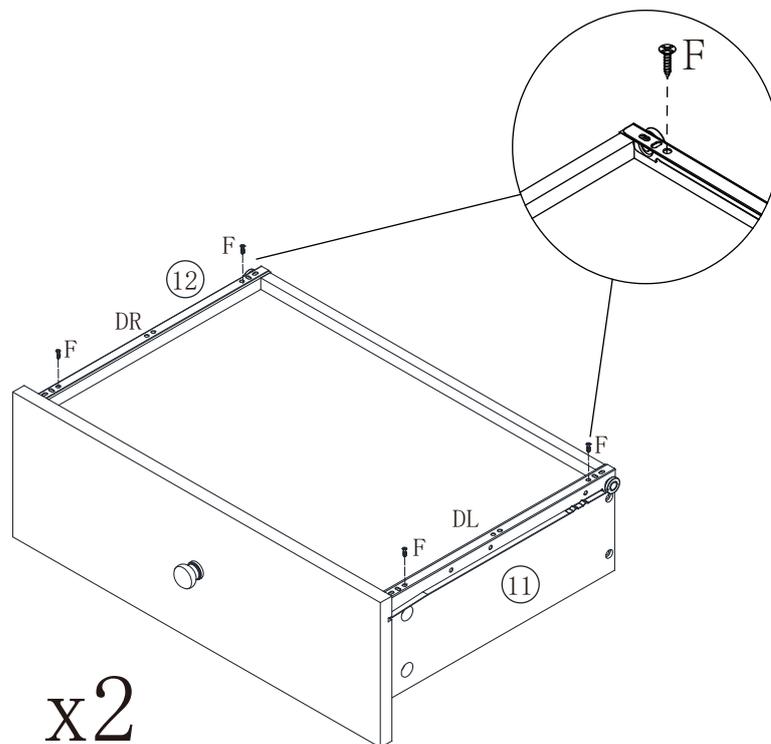


# STEP 19

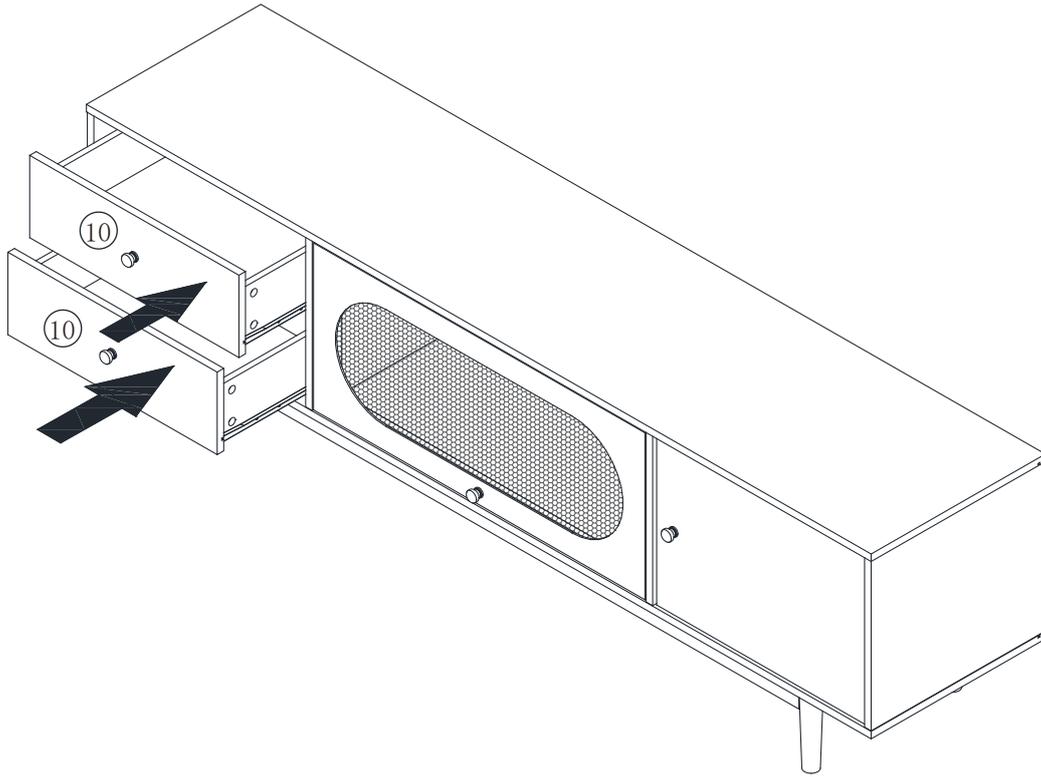


# STEP 20


Hx12

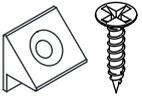

Gx2

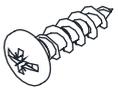

Ox2

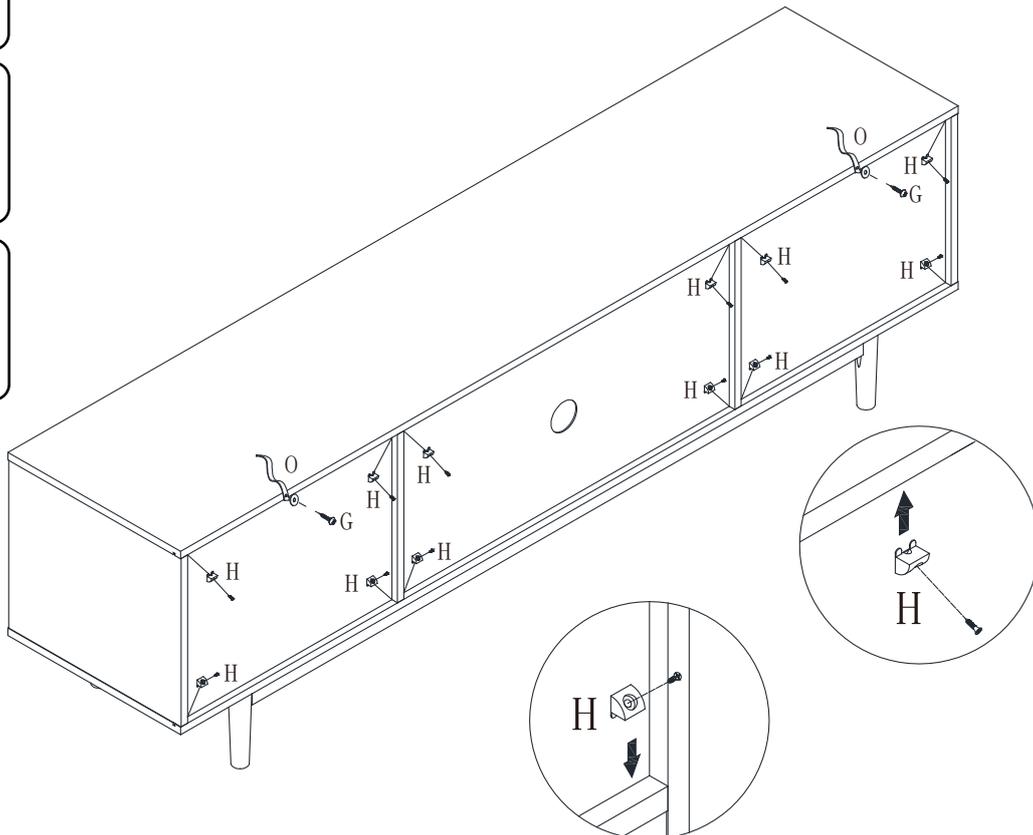


## STEP 21


Kx2




Qx2

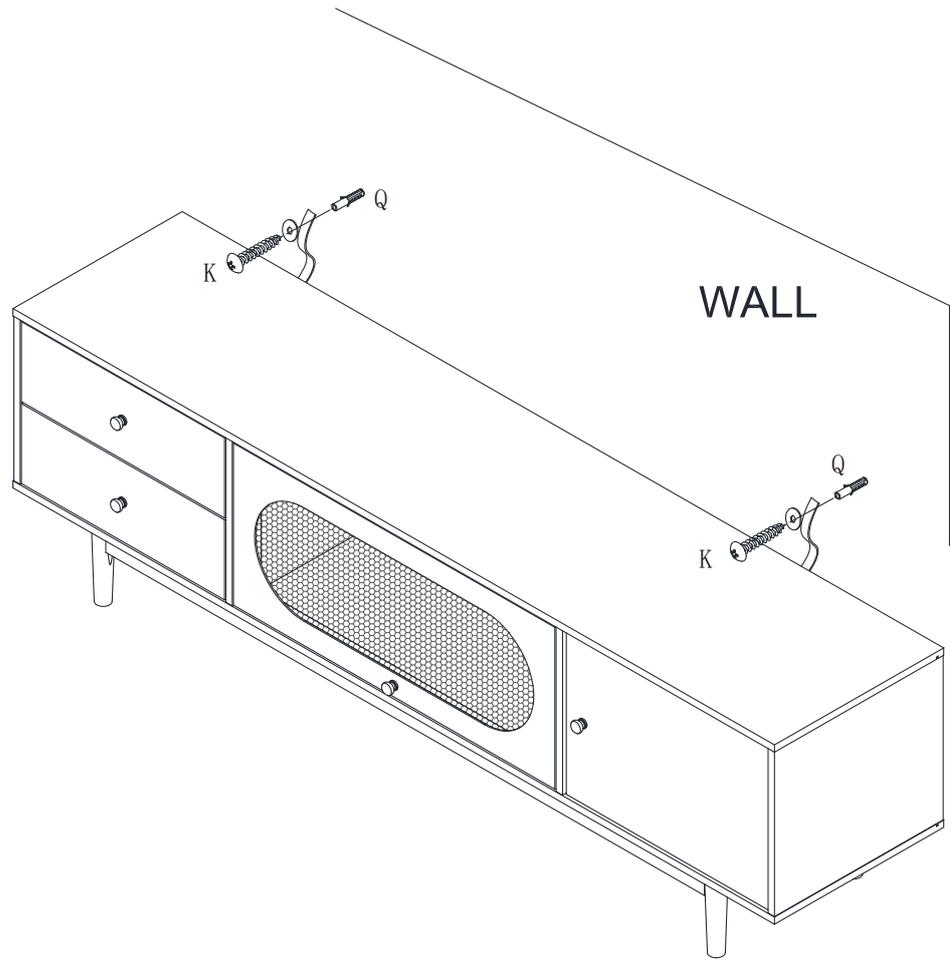

## STEP 22

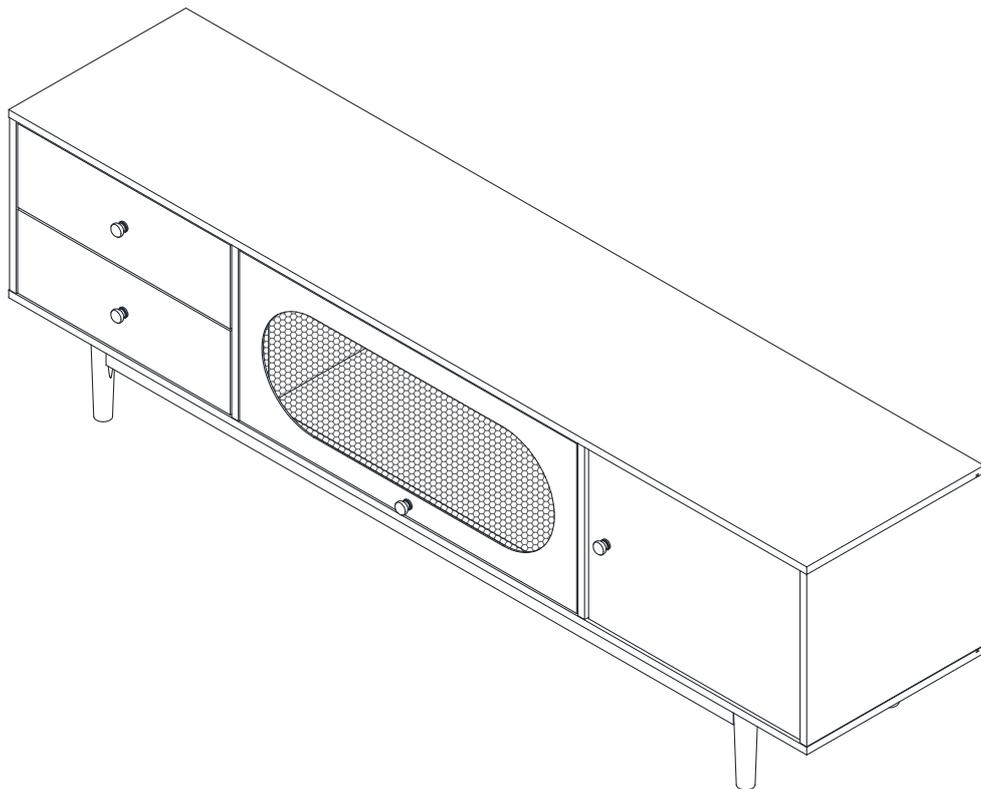


# HINGE ADJUSTMENTS

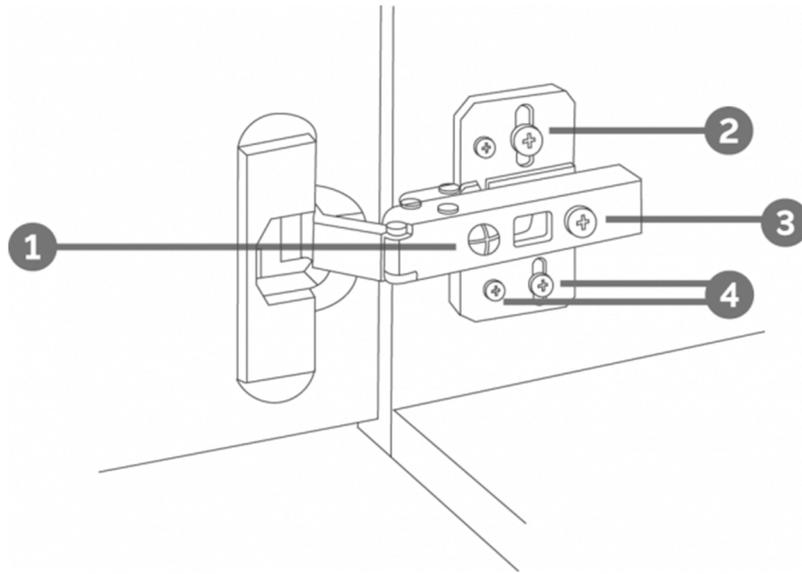


## 1 Sideways / Tilt adjustment

Turn the screw  
**clockwise** to move the door further away from  
the side of the cabinet  
**anticlockwise** to move the door closer to the  
side of the cabinet

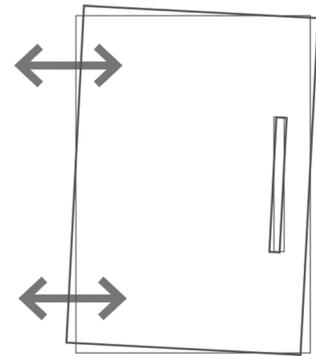

## 2 4 Height adjustment

While supporting the weight of the door, turn the  
screws  
**clockwise** to move the door up  
**anticlockwise** to move the door down

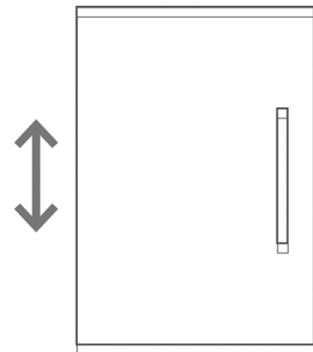

## 3 Forward and back adjustment

If the gap between the back of the door and the  
cabinet is too small, and the door may not close  
fully. Turn the screw  
**clockwise** to decrease the gap between the  
door and the cabinet  
**anticlockwise** to increase the gap between the  
door and the cabinet

