 


TV STAND

USER MANUAL

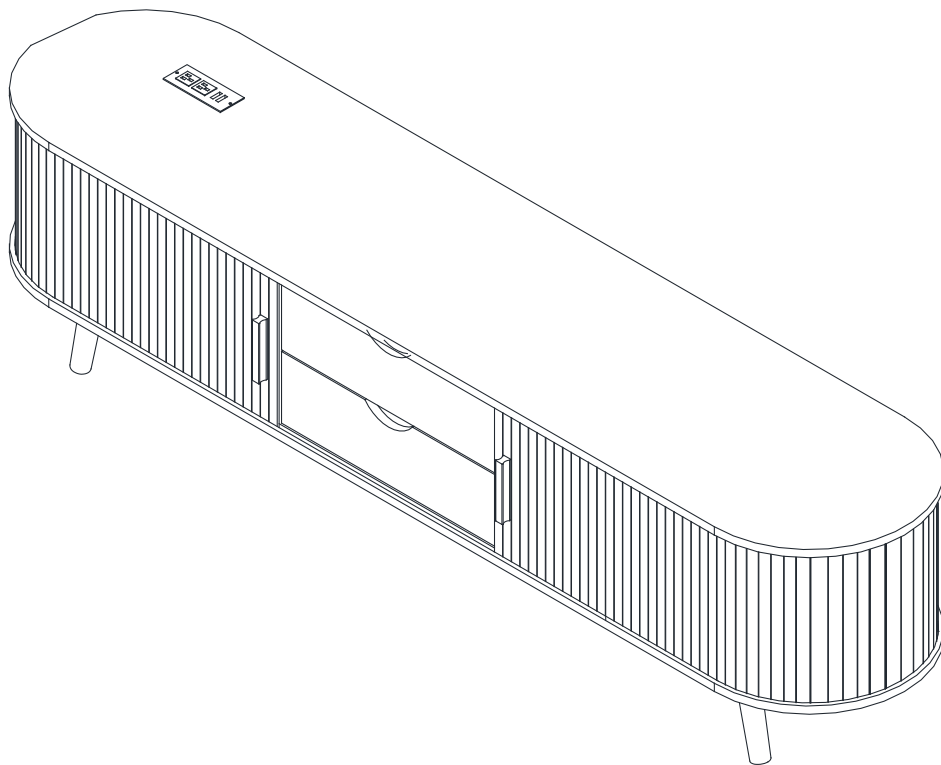

SAVE THESE INSTRUCTIONS FOR FUTURE USE

PLEASE DO NOT RETURN TO STORE



**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

 
 
 
 
 
 
Before Installation

 
Important – Please read these instructions fully before starting assembly



 


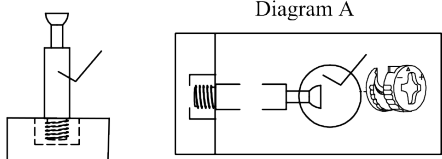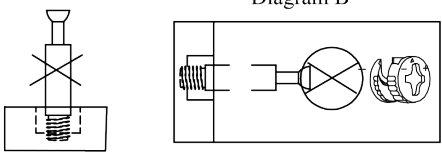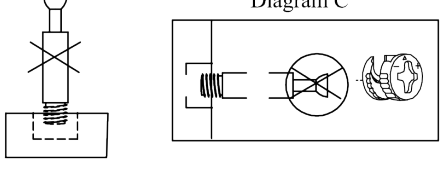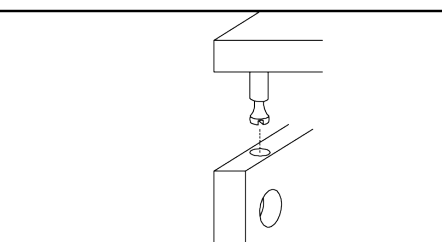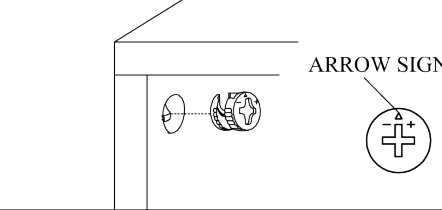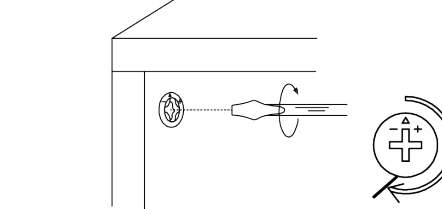

 

 
 
 


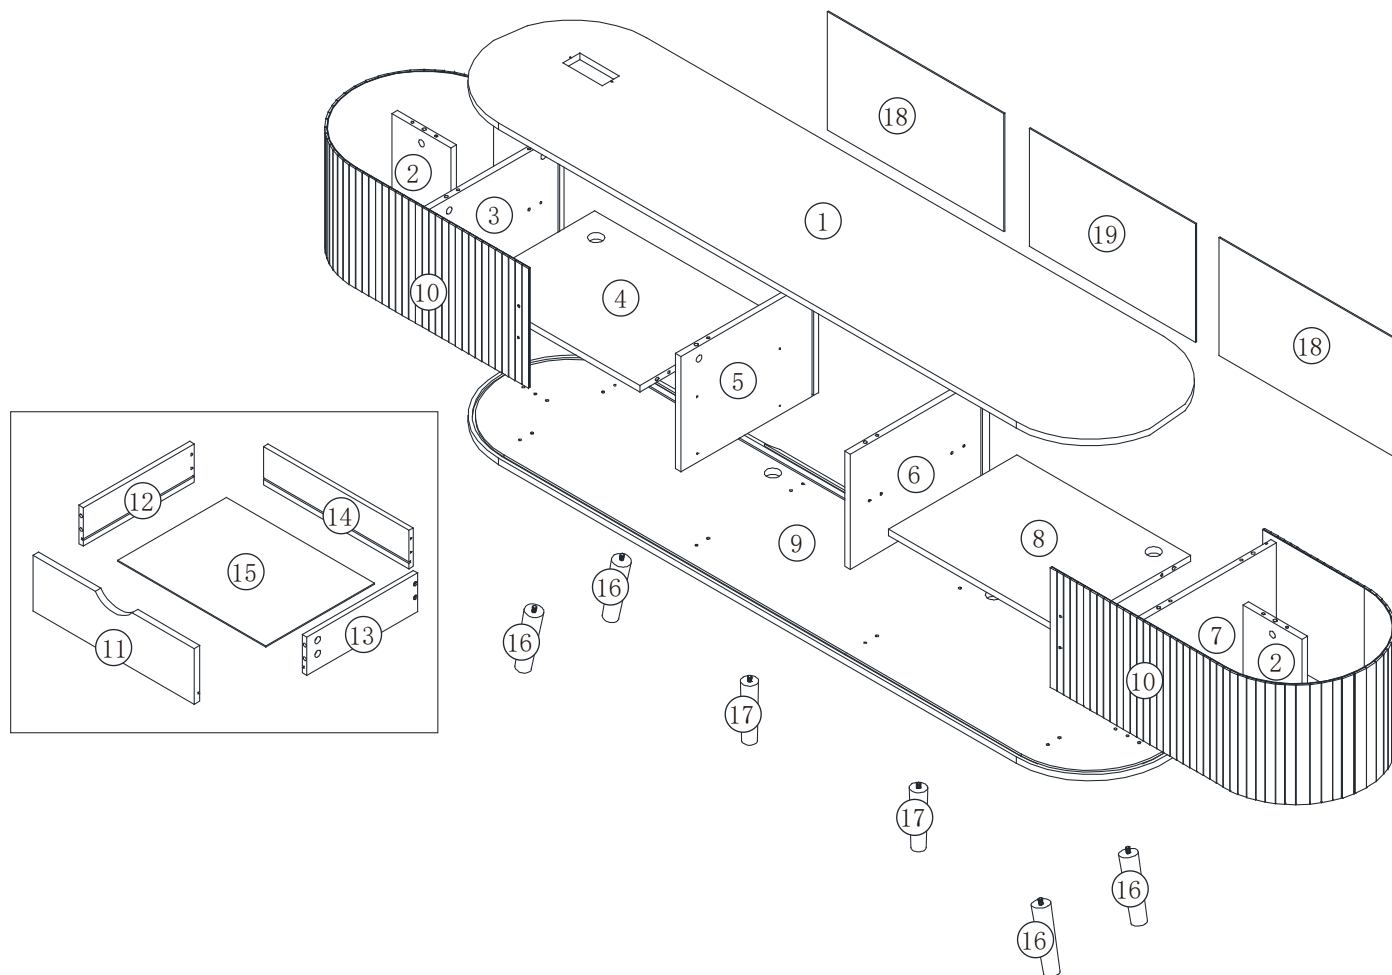 

 

 
 
 
 
 
Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions



| | |
|---|---|
|  | <p>Diagram A</p> <p>Insert Cam Bolt into hole as shown in diagram A.</p> |
|  | <p>Diagram B</p> <p>Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.</p> |
|  | <p>Diagram C</p> <p>Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.</p> |
|  | <p>Connect the panels together.</p> |
|  | <p>ARROW SIGN</p> <p>Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.</p> |
|  | <p>To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i></p> |



| | | | | | |
|--|--|--|---|---|--|
| Ax26  | Bx26  | Cx32  M6x30 | Dx10  M4x40 | Ex 8  M4x30 | Fx16  M3x12 |
| Gx30  M4x12 | Hx12  M3x14 | Ix4  M4x10 | Jx2  | Kx 2  | Lx4  |
| Mx 4  | Nx2  | Ox 1  | Px2  M3x14 | Qx2  | Rx2  |
| Sx2  M4x35 | CLx2  300mm | CRx2  300mm | DLx2  300mm | DRx 2  300mm | |


STEP 1

  Ax4

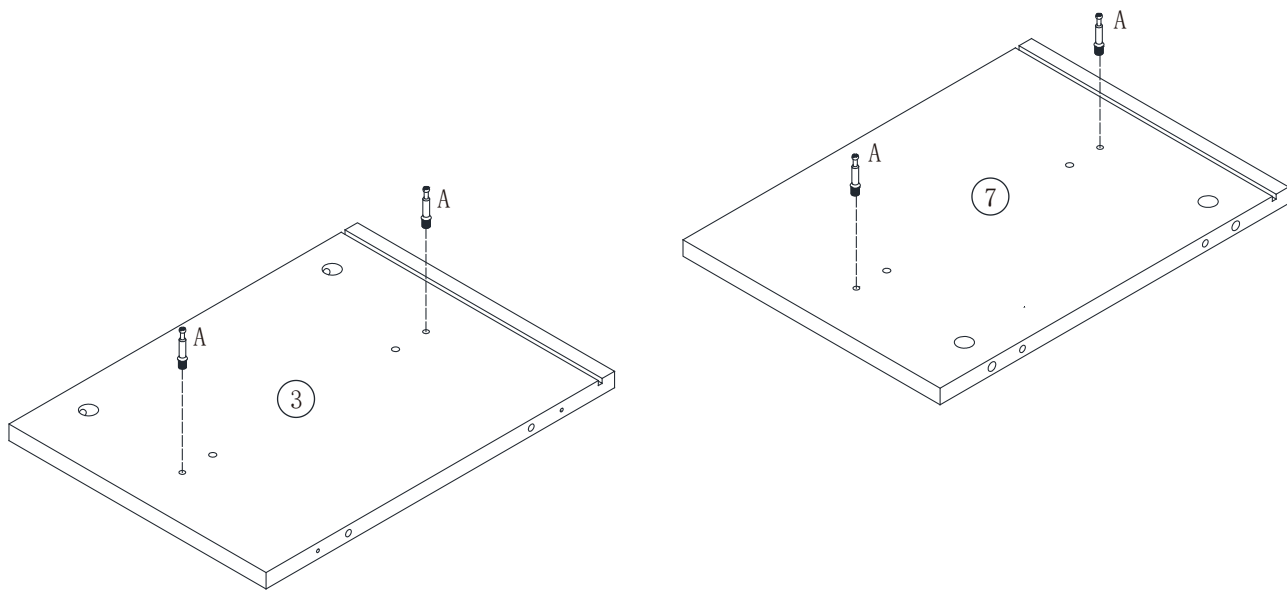

STEP 2

 Ax4





Fx8



CLx2





  CRx2

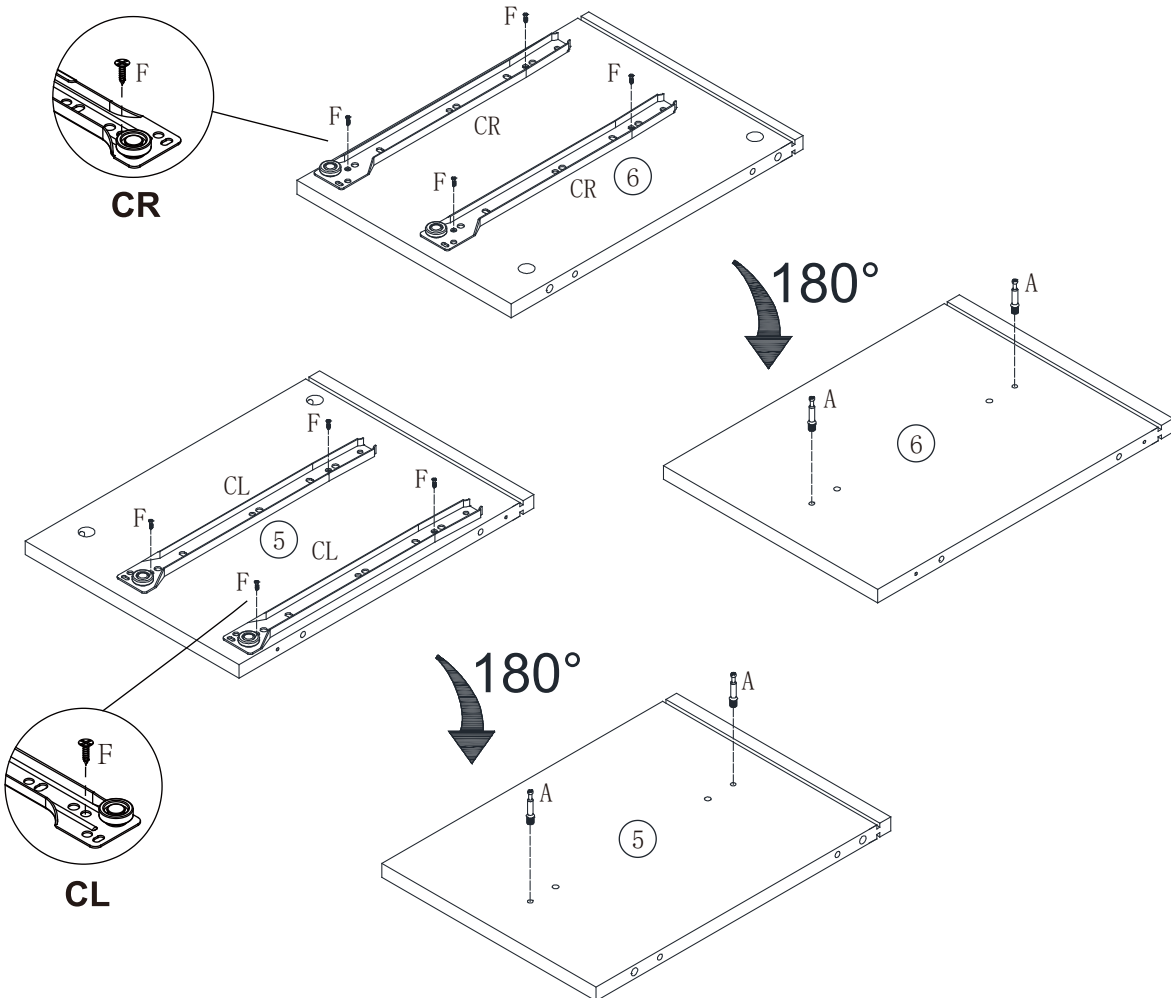

STEP 3

  Ax10


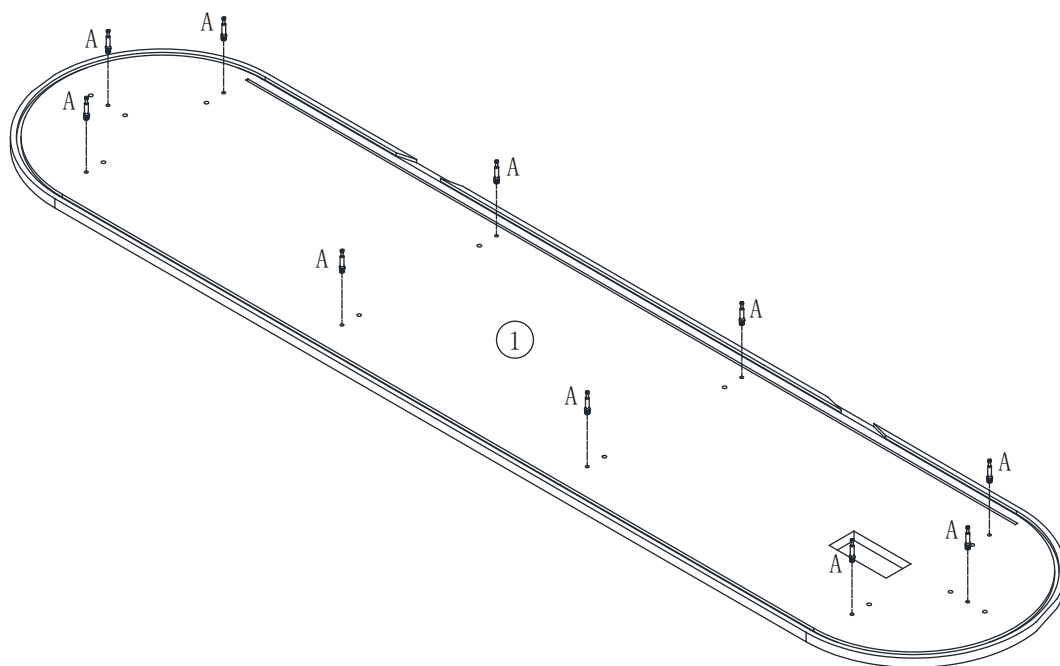



STEP 4

Bx4



   Cx4

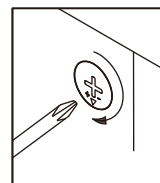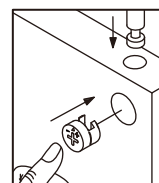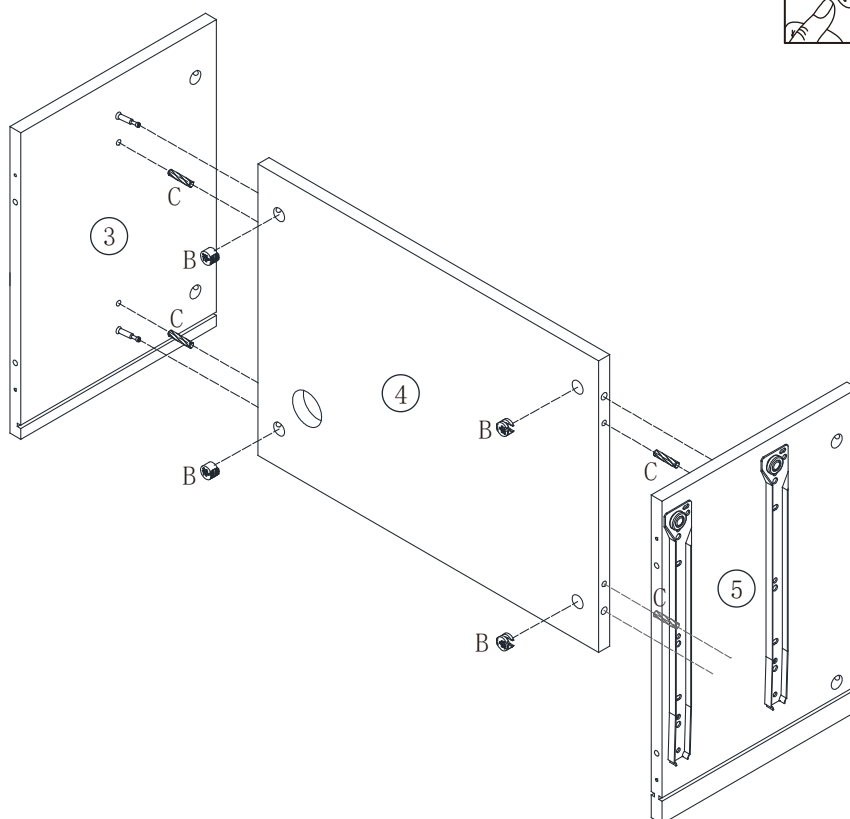


STEP 5

Bx4



 Cx4

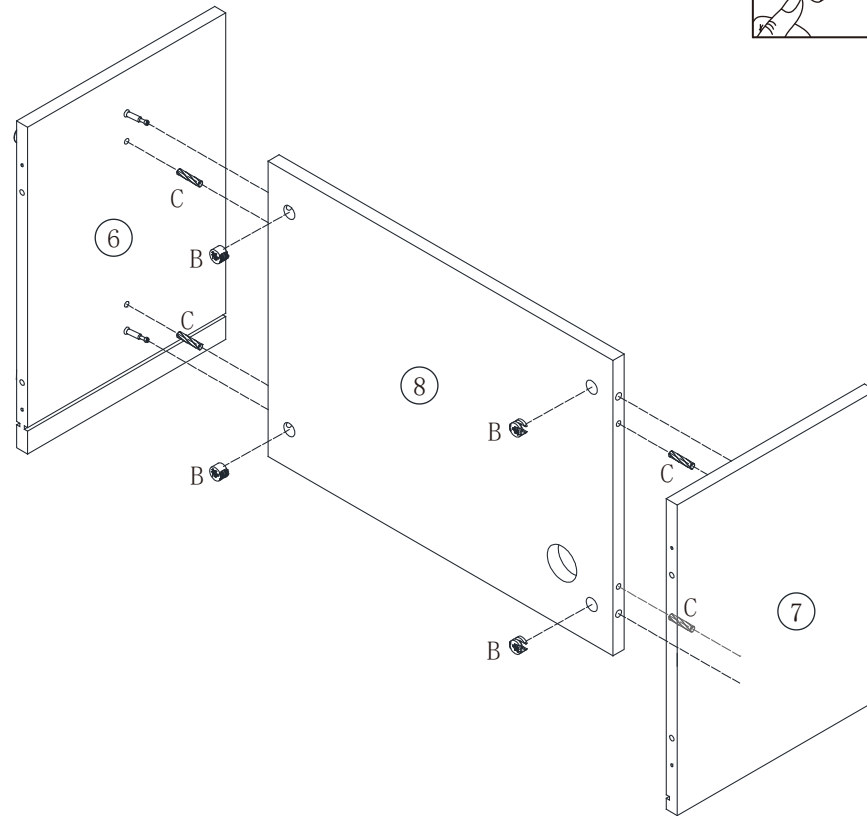


STEP 6


Bx10





 
Cx12

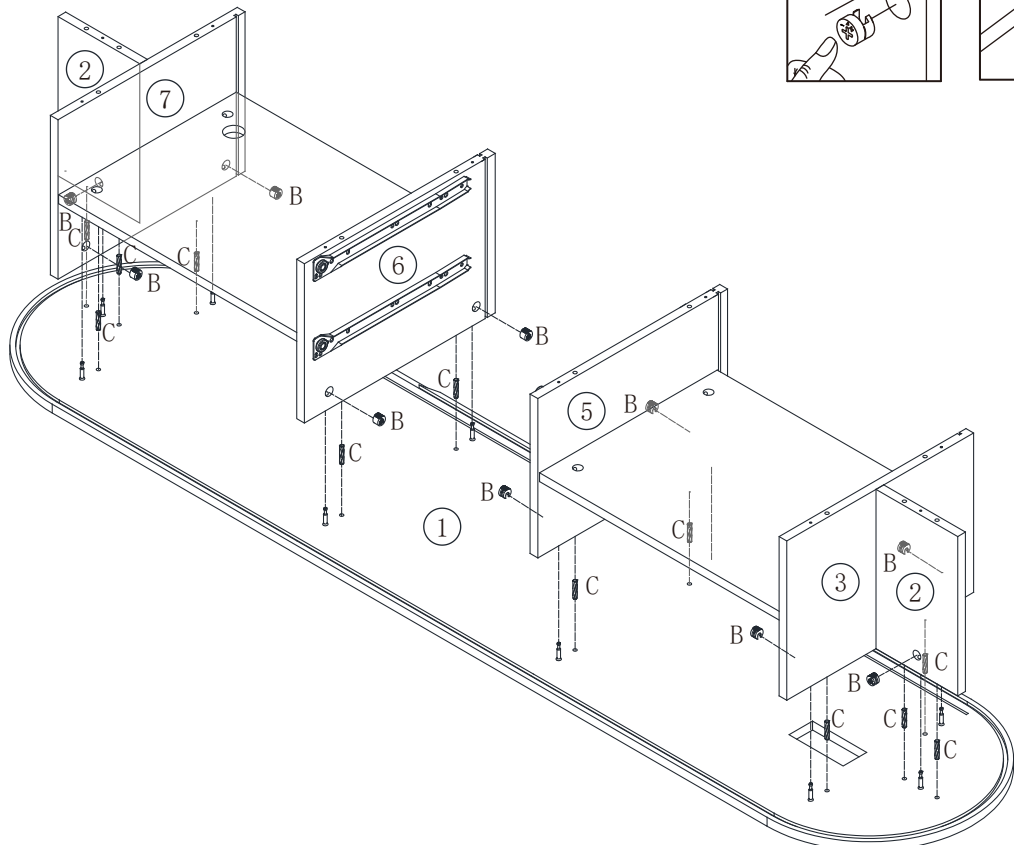

 STEP 7

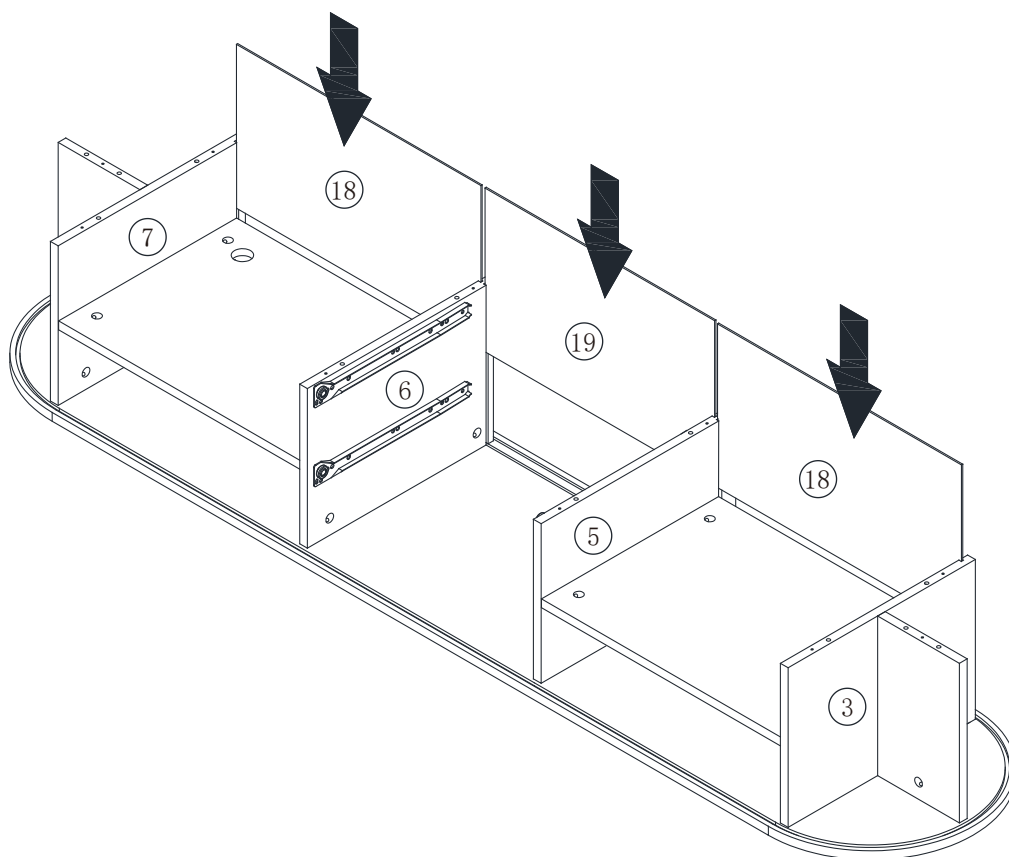


   STEP 8

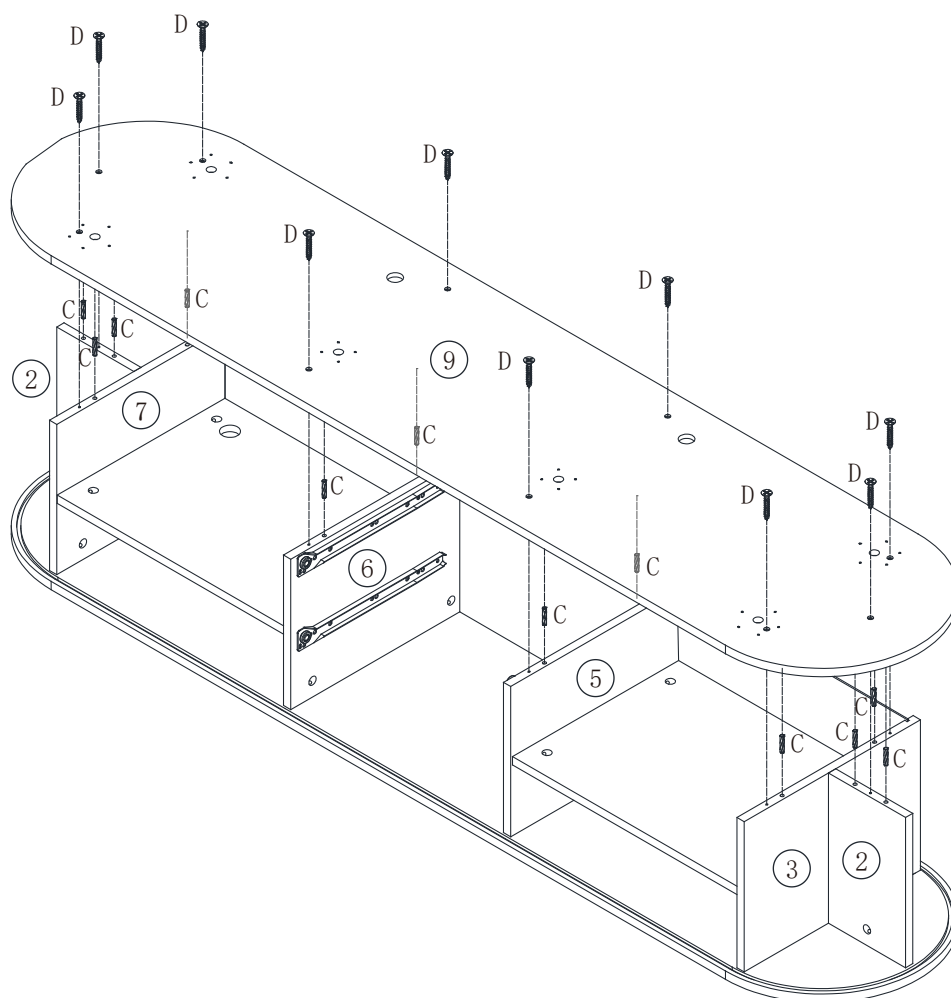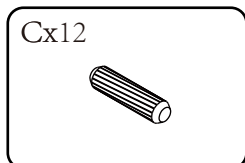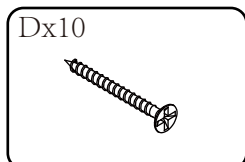


STEP 9

 
Kx2



Gx28

 


Lx4

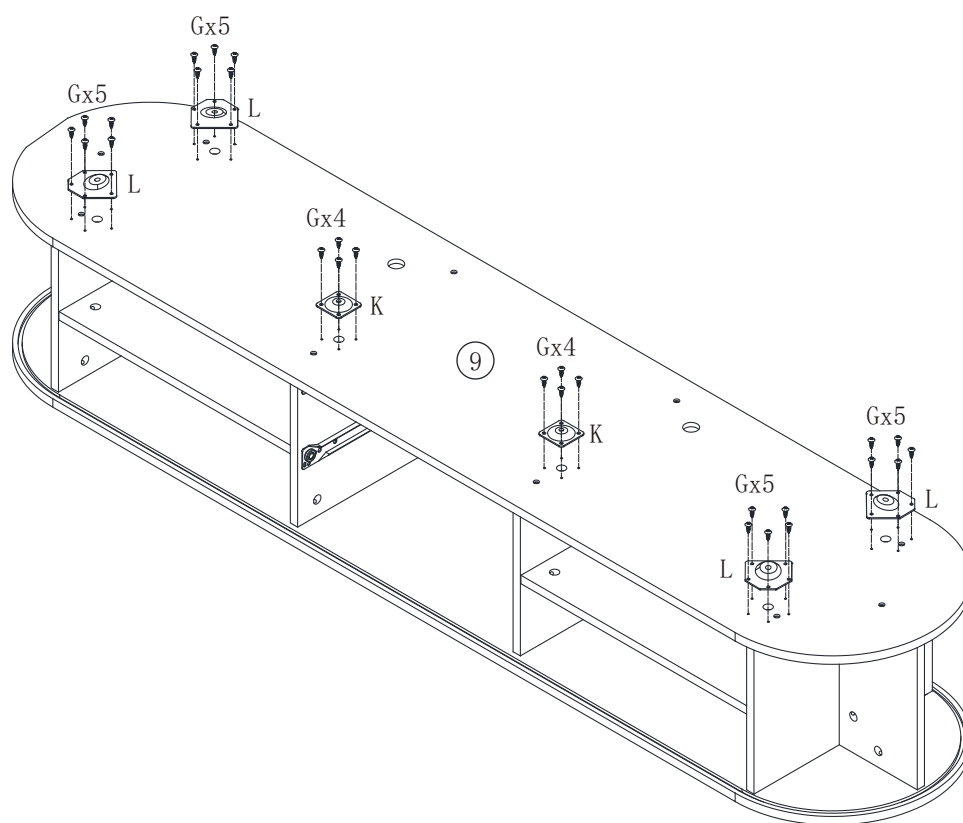 


STEP 10

 Mx4




Nx2

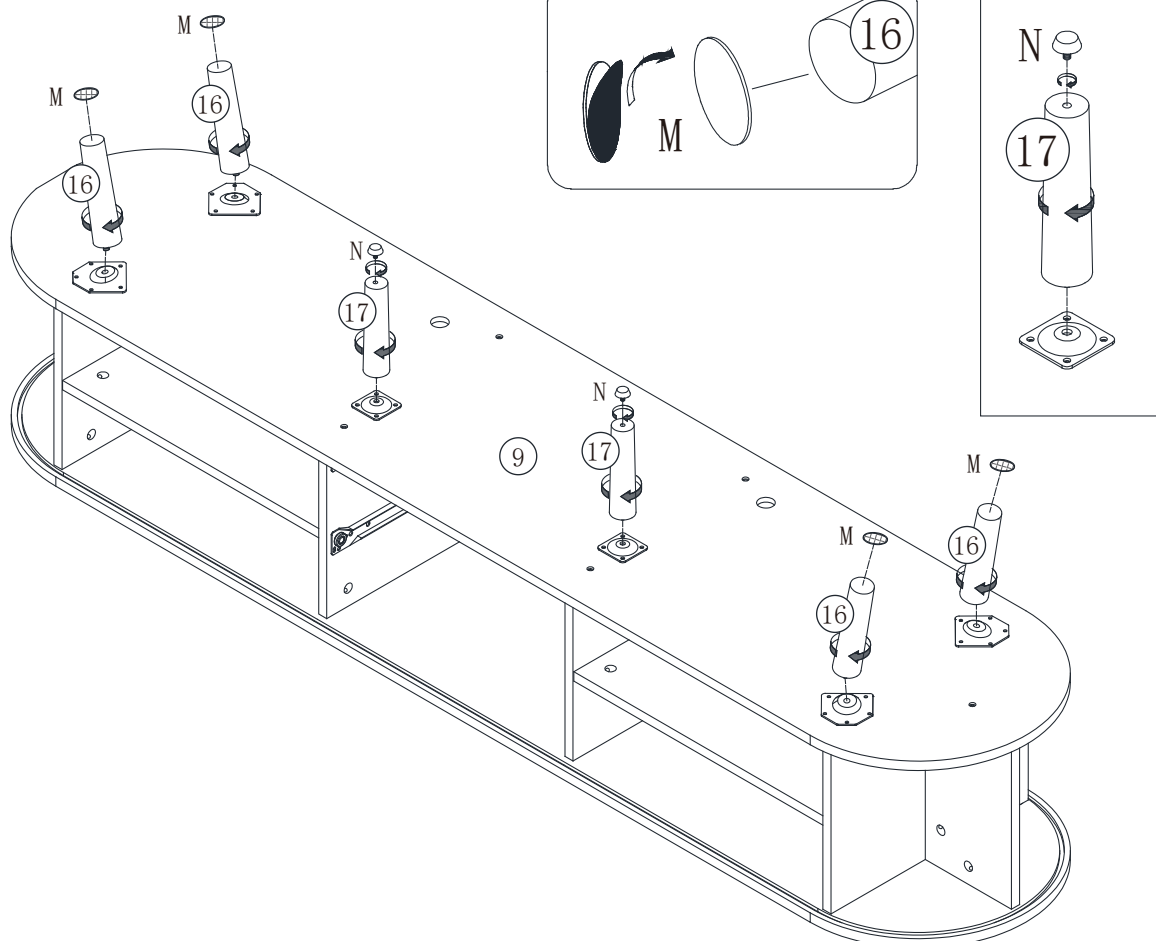 


STEP 11

 
Hx12



Ox1

 


Px2

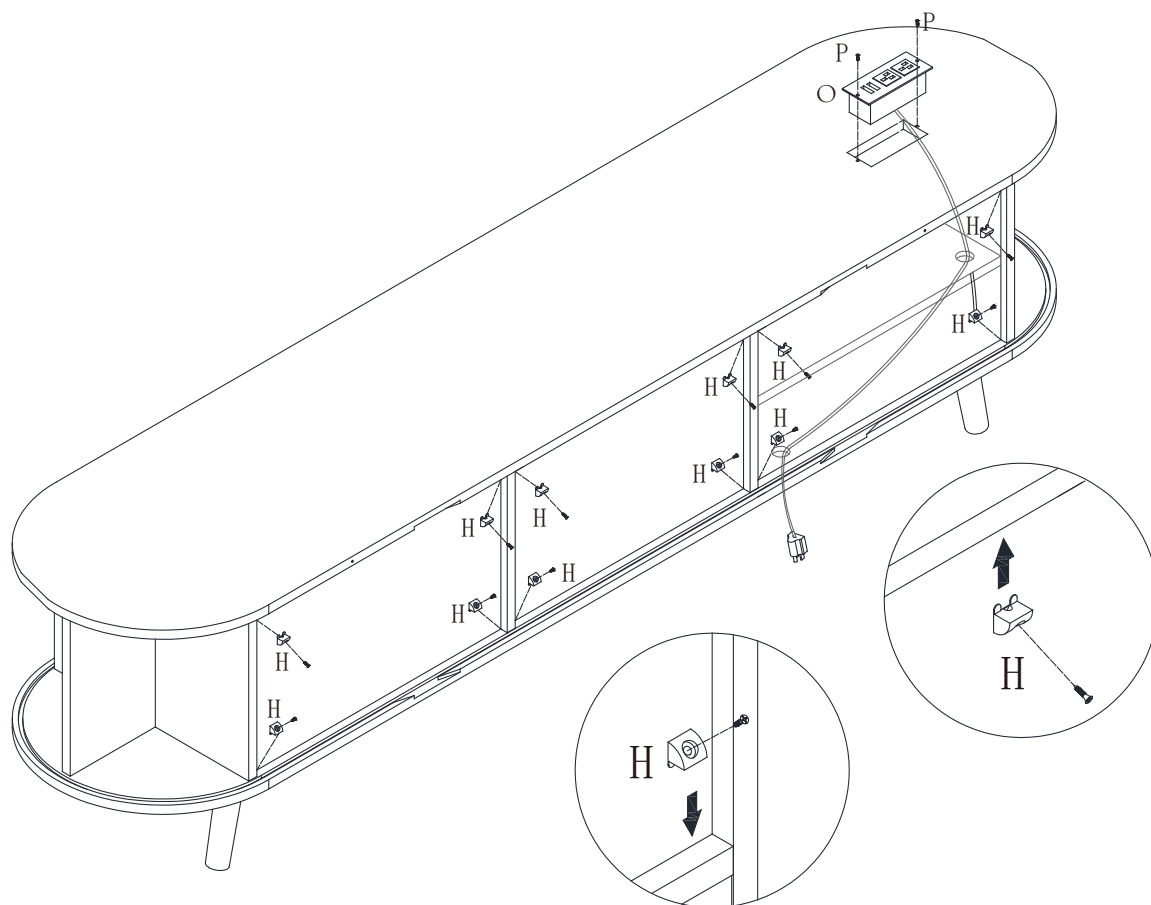 


STEP 12

 
Jx2




Ix4

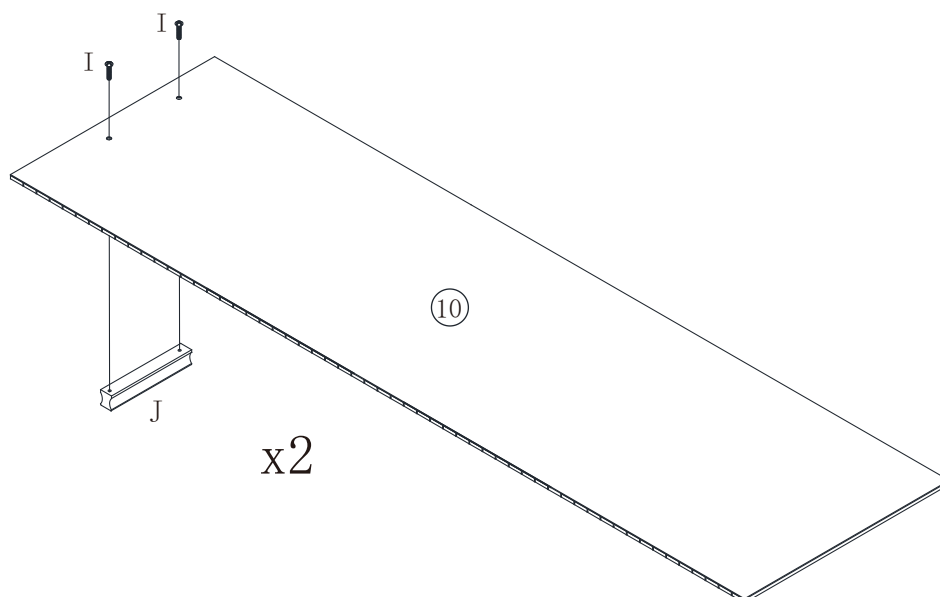 



 
STEP 13

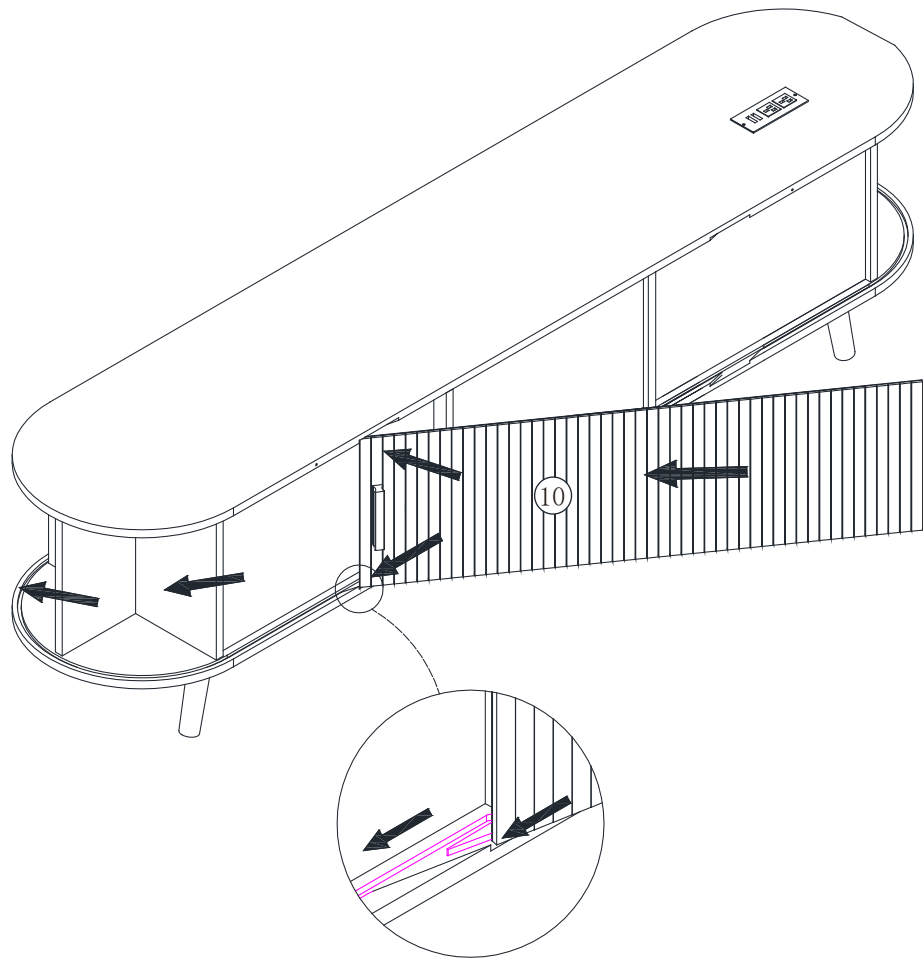





 
STEP 14

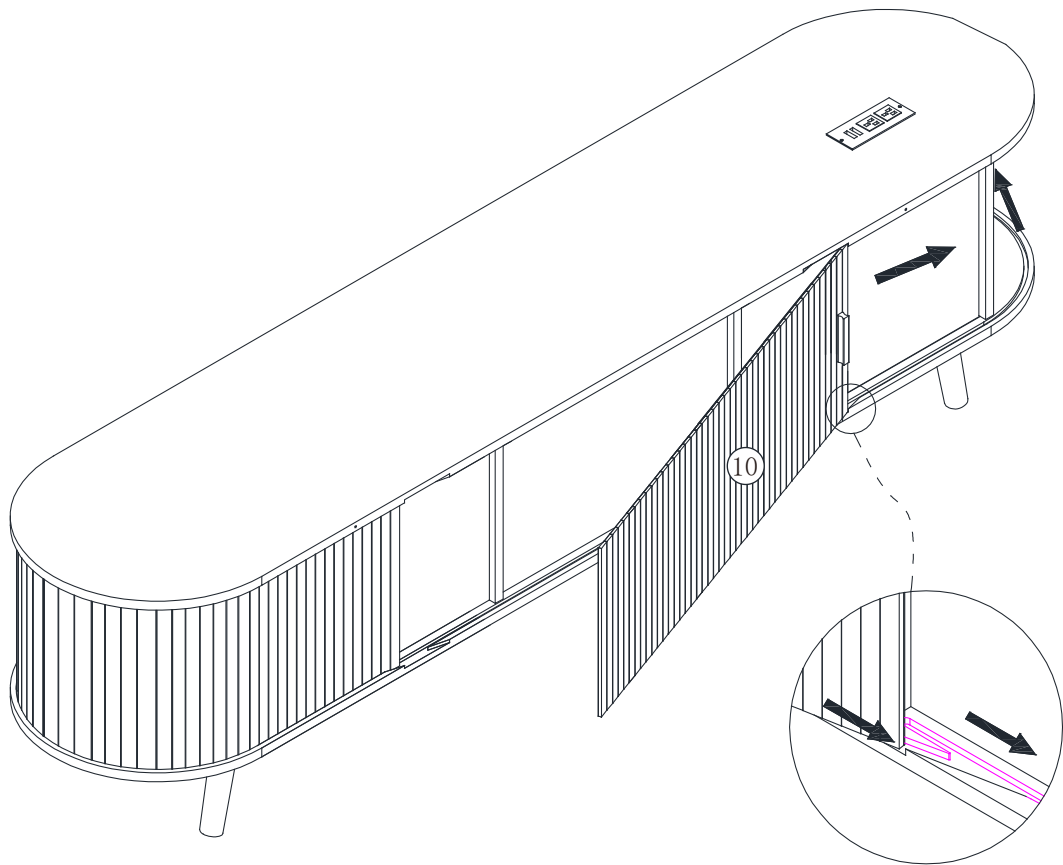


 
 
 
STEP 15

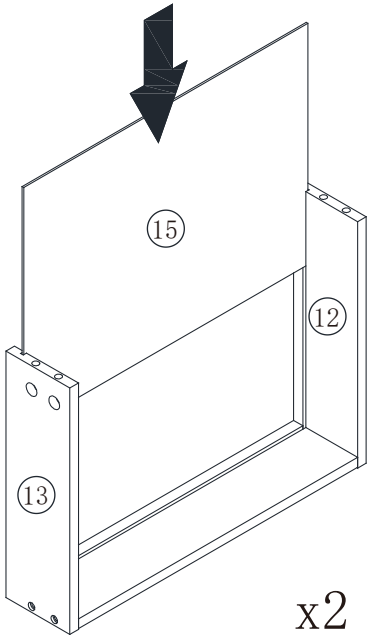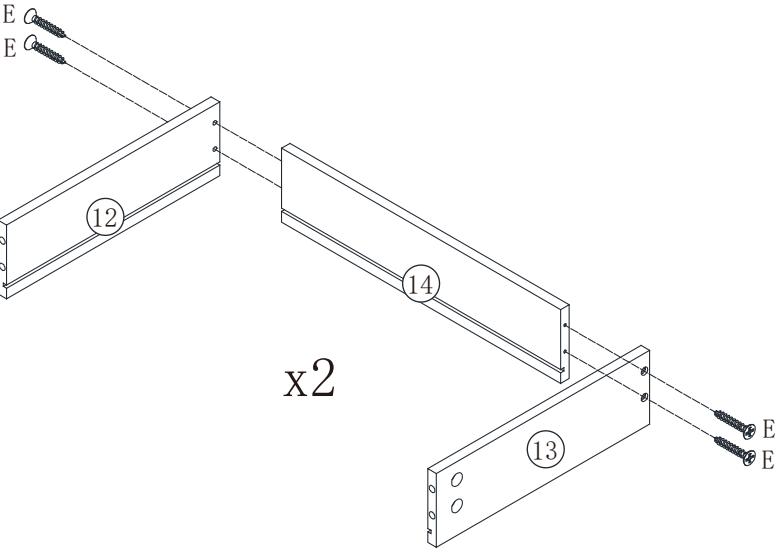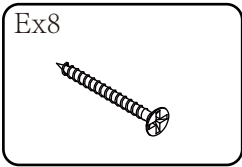

     STEP 16

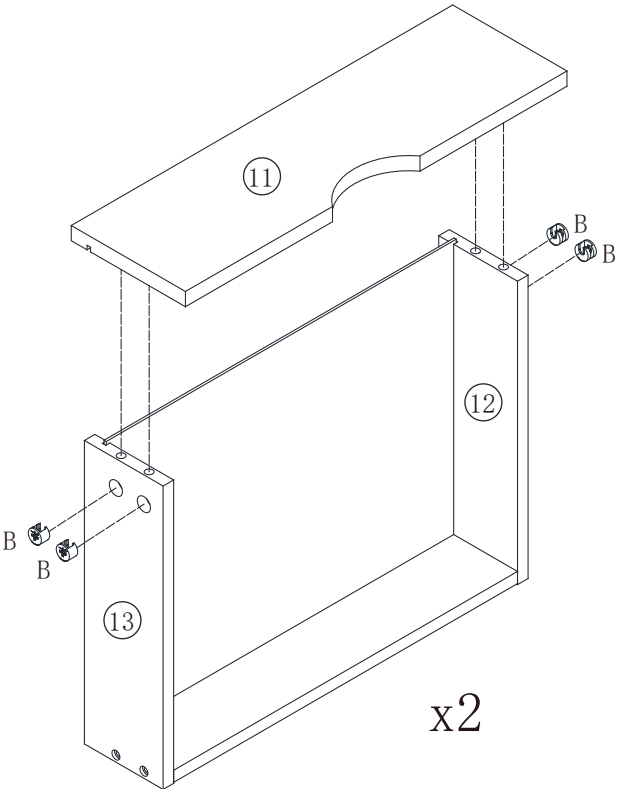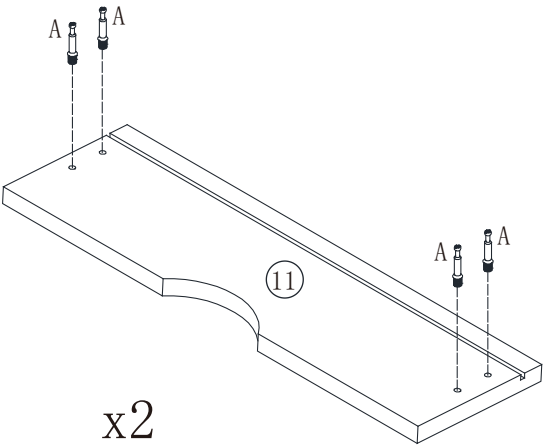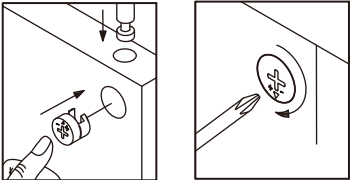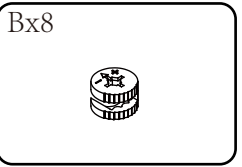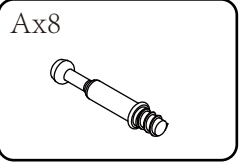


    STEP 17

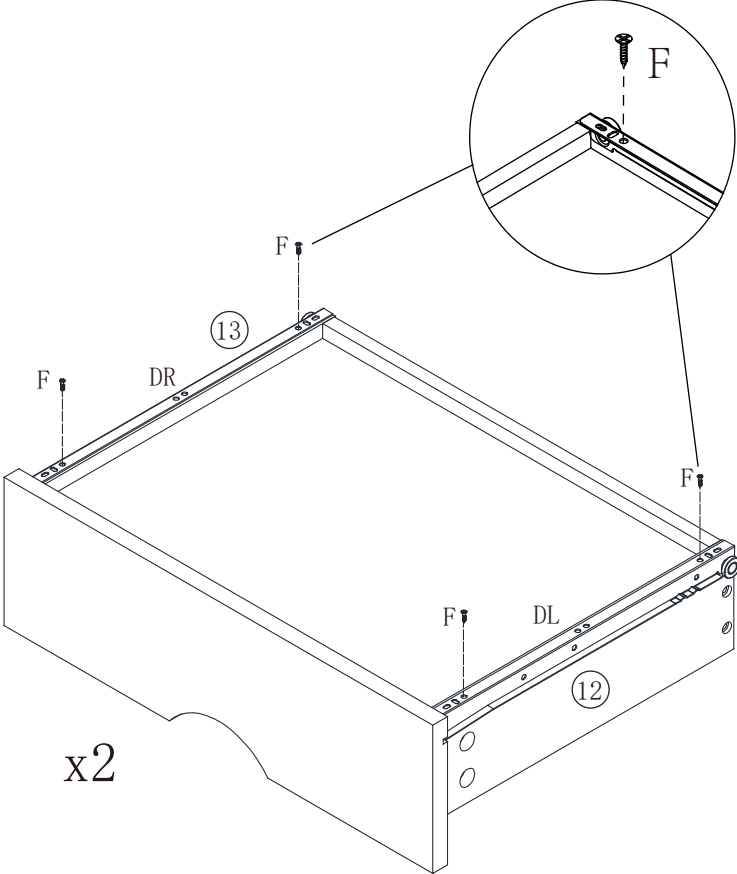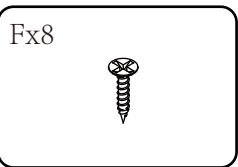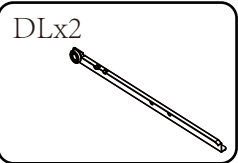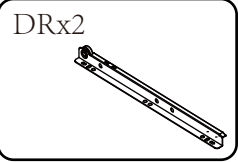


x2

 STEP 18

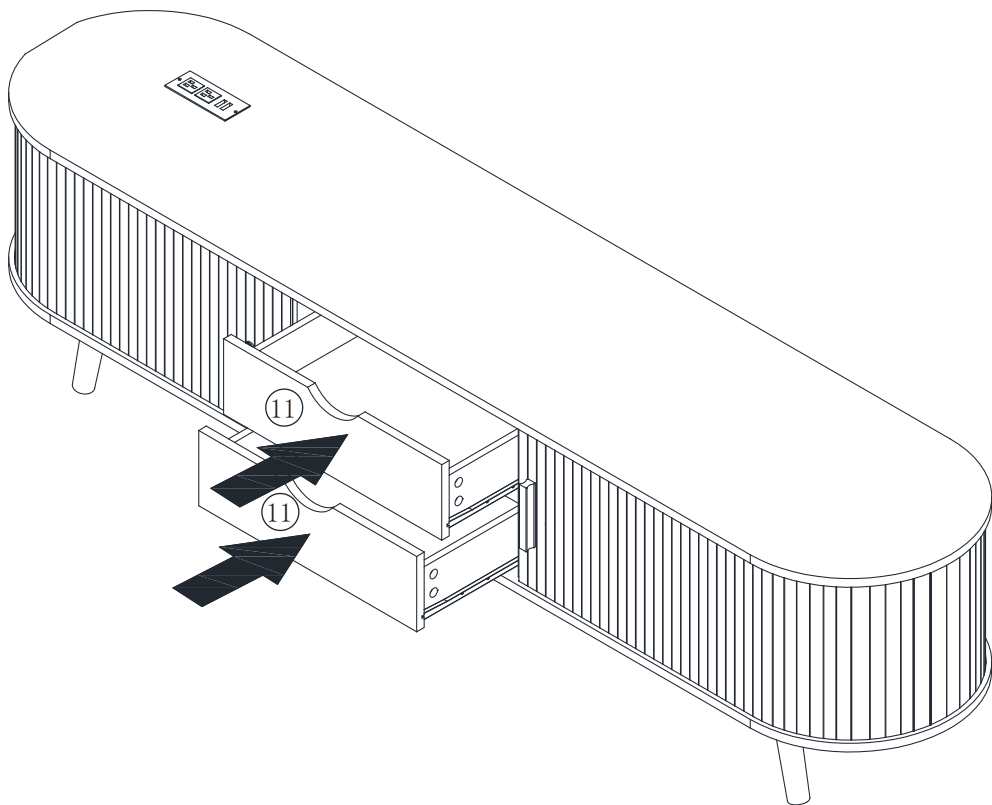


STEP 19

 Gx2



Rx2

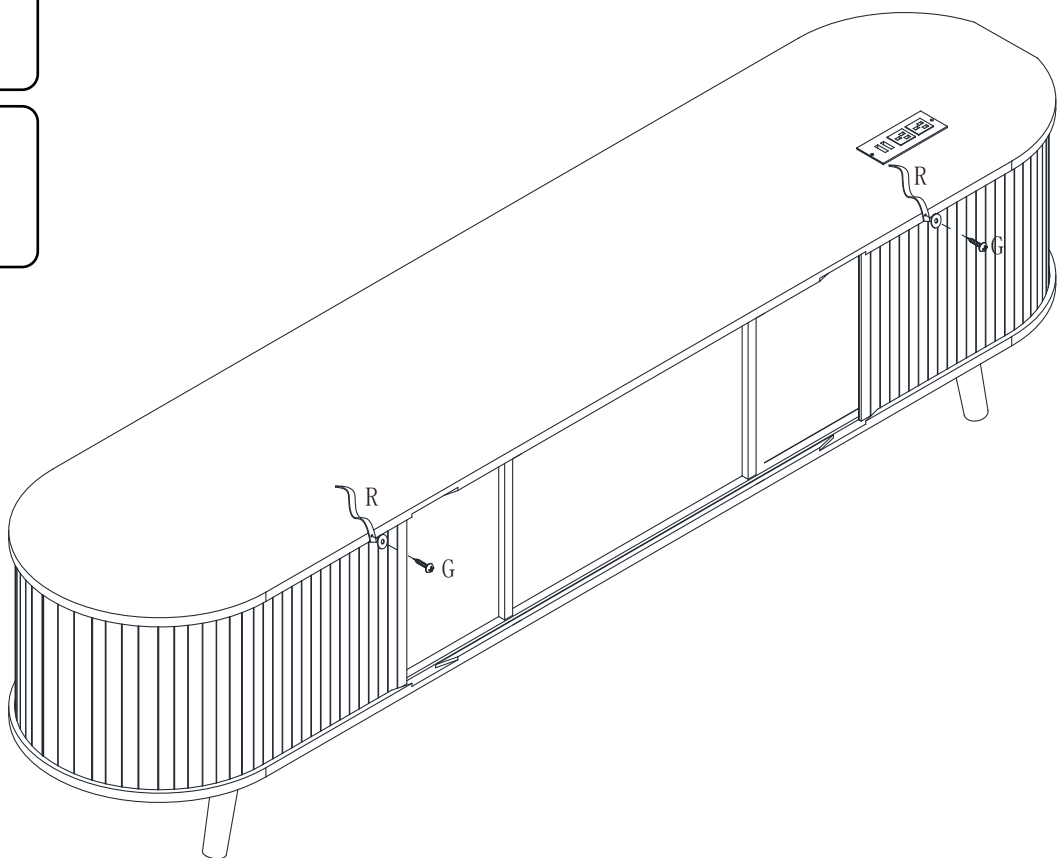 

STEP 20

Sx2



Qx2

