


TV STAND

USER MANUAL

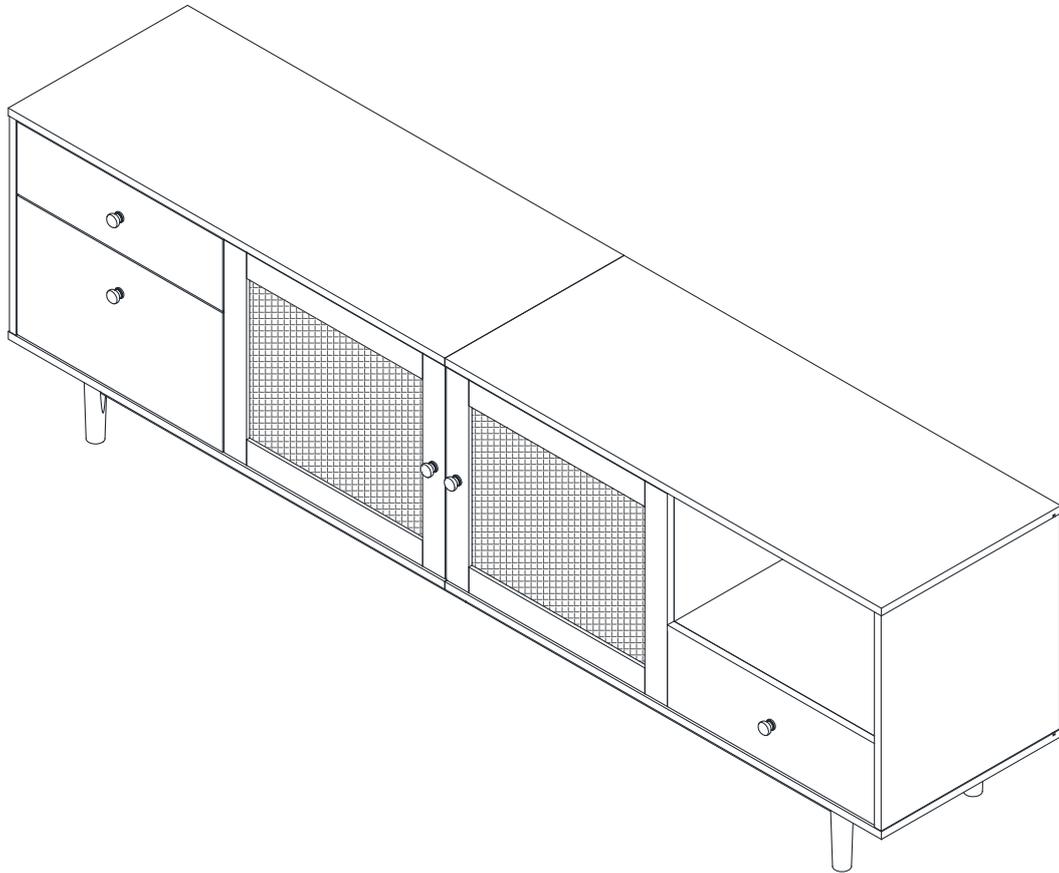

SAVE THESE INSTRUCTIONS FOR FUTURE USE

PLEASE DO NOT RETURN TO STORE



**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.










Before Installation





Important – Please read these instructions fully before starting assembly






Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions

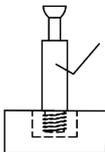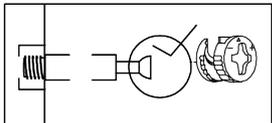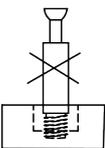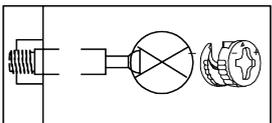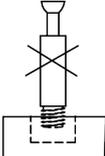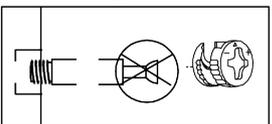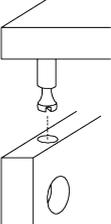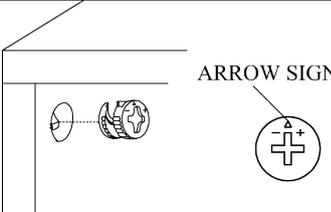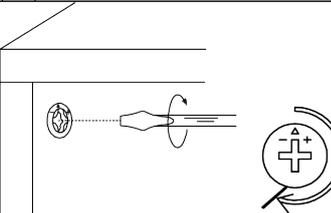
		Diagram A Insert Cam Bolt into hole as shown in diagram A.
		Diagram B Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.
		Diagram C Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.
		Connect the panels together.
		ARROW SIGN Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
		To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>

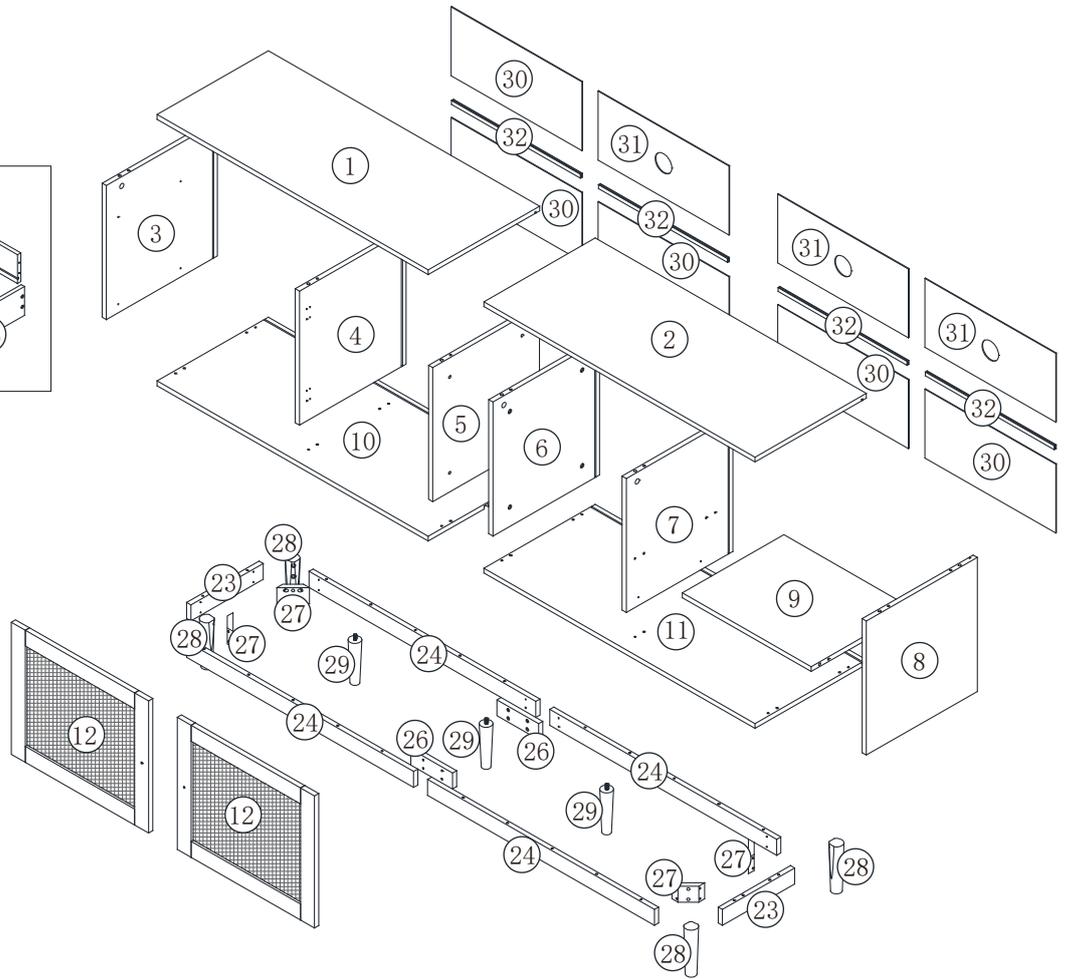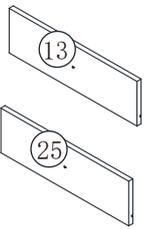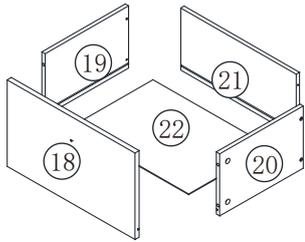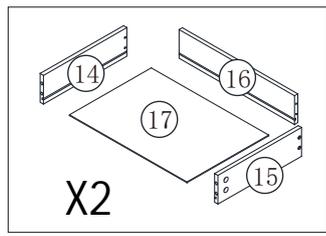

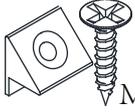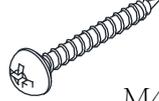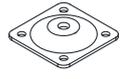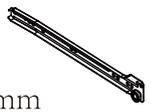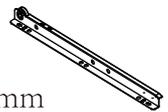Ax28 	Bx28 	Cx40  M6x30	Dx12  M4x40	Ex 12  M4x30	Fx24  M3x12
Gx14  M4x12	Hx16  M3x14	Ix5  M4x20	Jx5 	Kx 2  M4x35	Lx16  M4x40
Mx 4 	Nx8  M6x60	Ox 4 	Px4  M6x18	Qx2 	Rx24  M4x14
Sx8 	Tx24  M4x25	Ux3 	Vx3 	Wx2 	Xx2 
CLx3  300mm	CRx3  300mm	DLx3  300mm	DRx 3  300mm		

STEP 1

Ax6

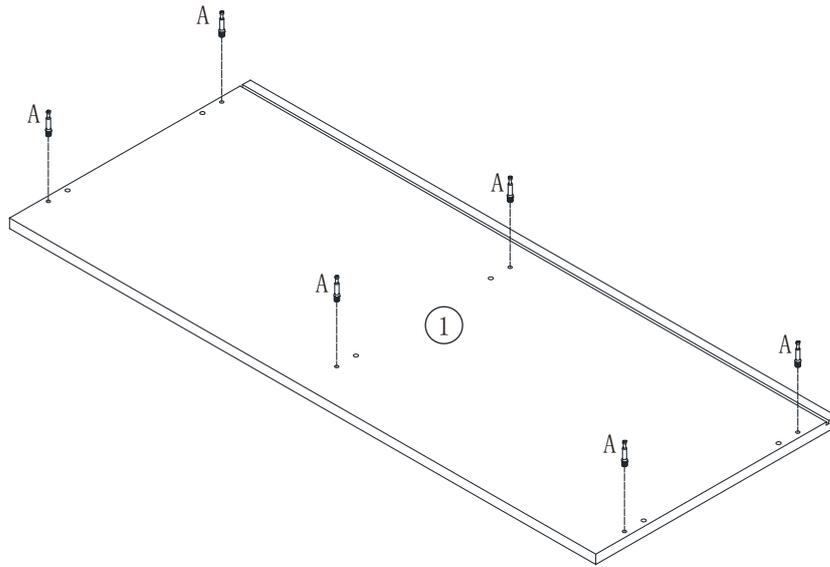

STEP 2


Fx8



CLx2



CRx2



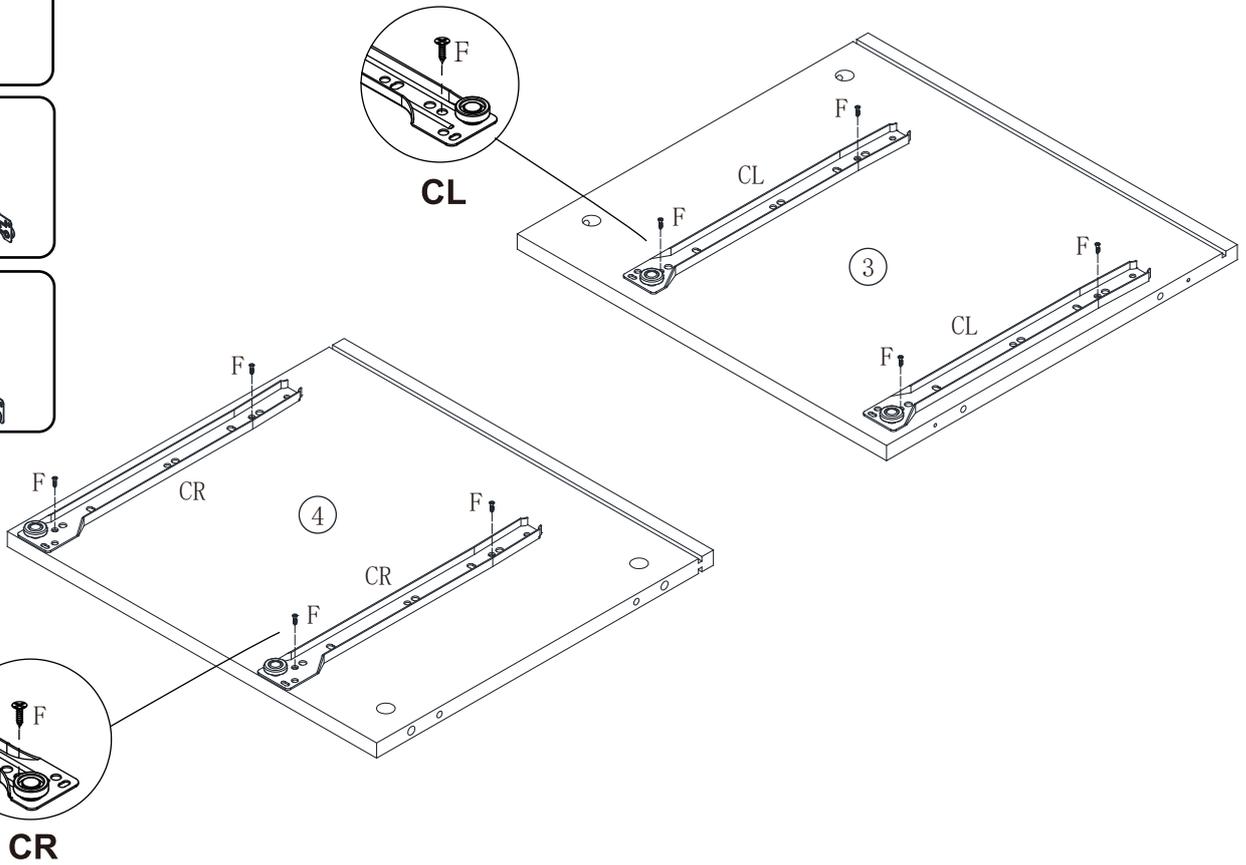


STEP 3


Bx6



Cx6

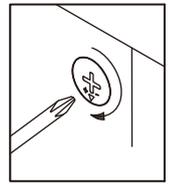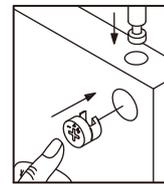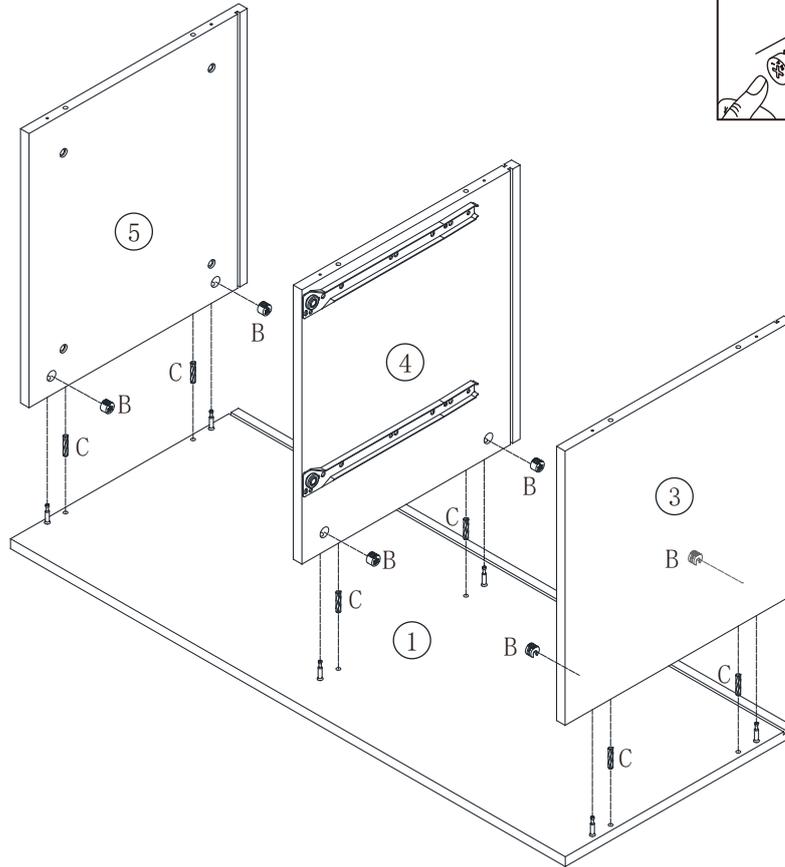

STEP 4

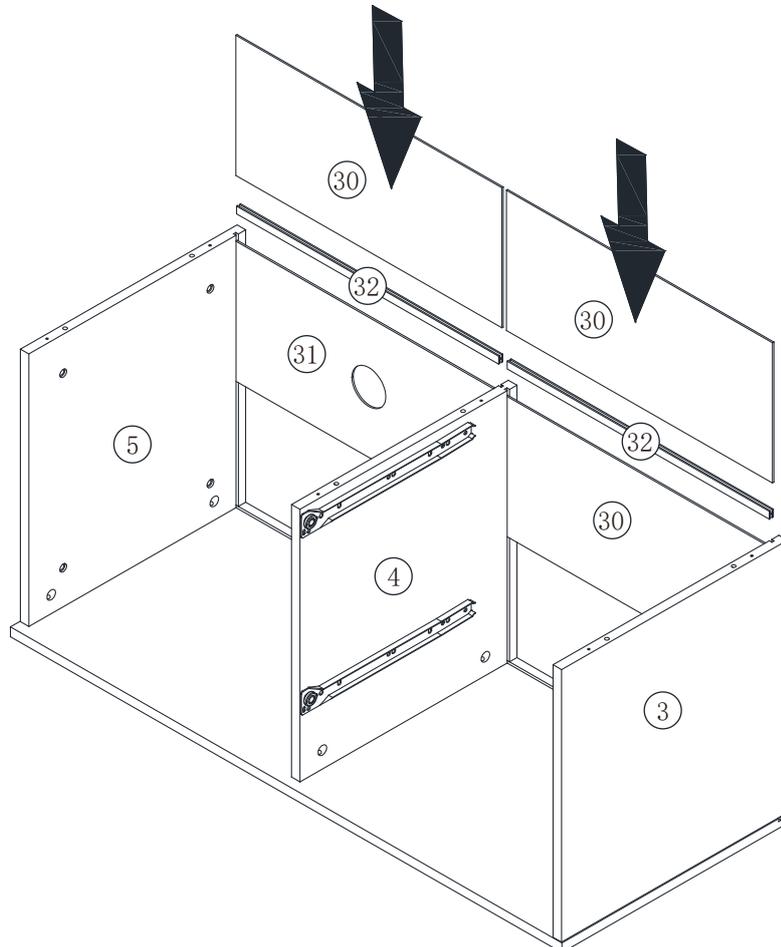


STEP 5

Dx6




Cx6

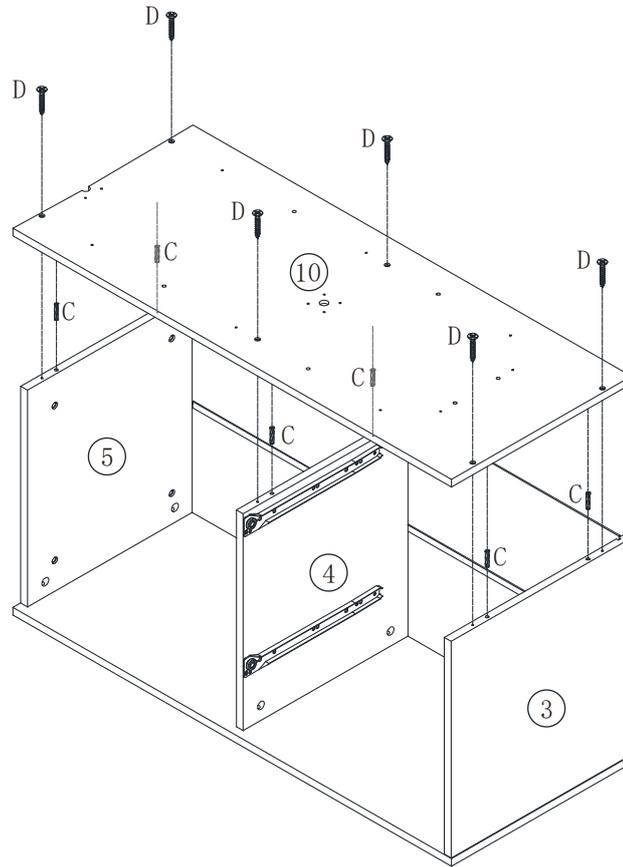

STEP 6

Ax6

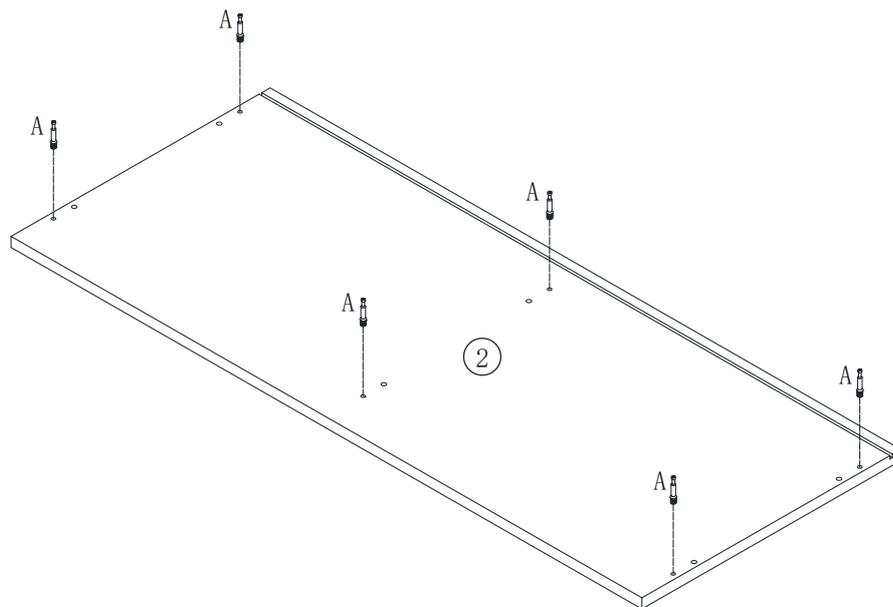

STEP 7

Fx4




CLx1



CRx1



Ax4

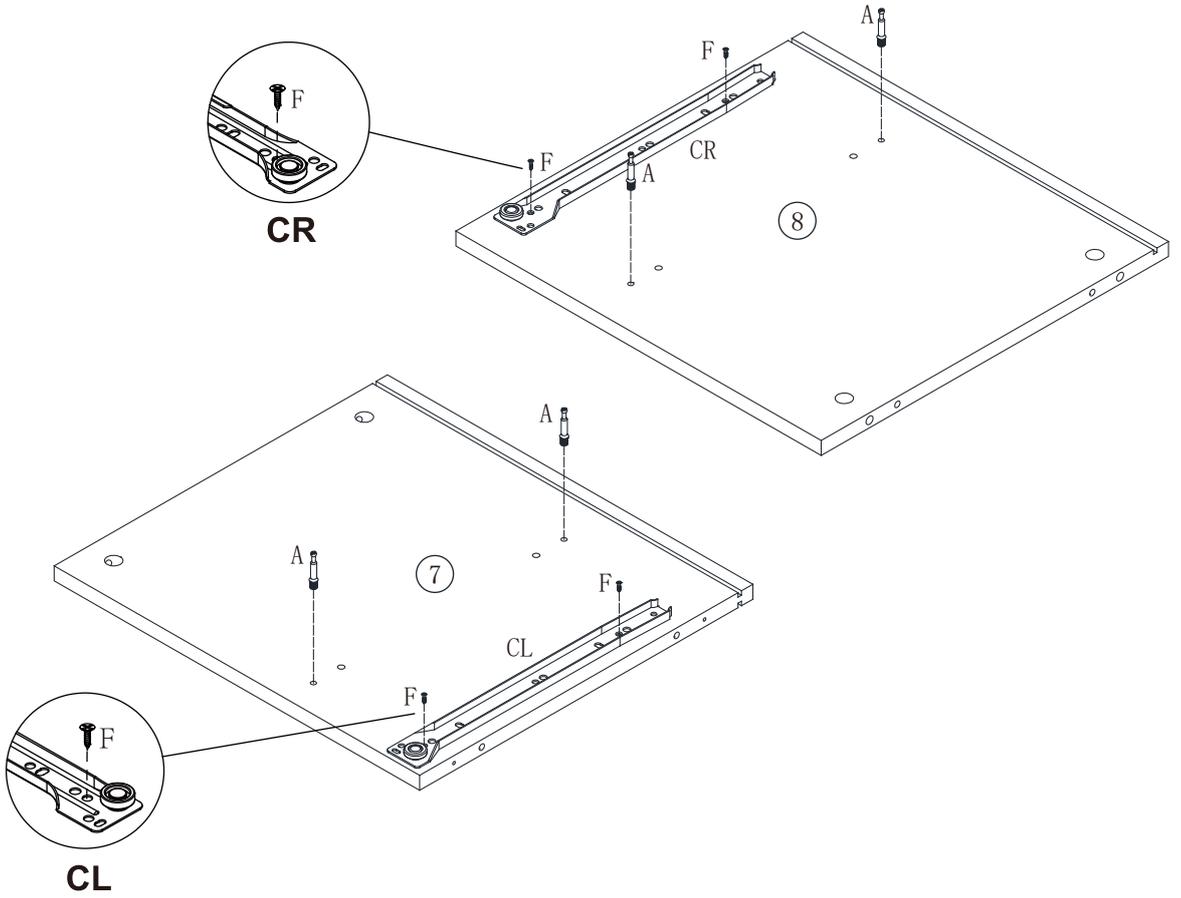


STEP 8

Bx4



Cx4

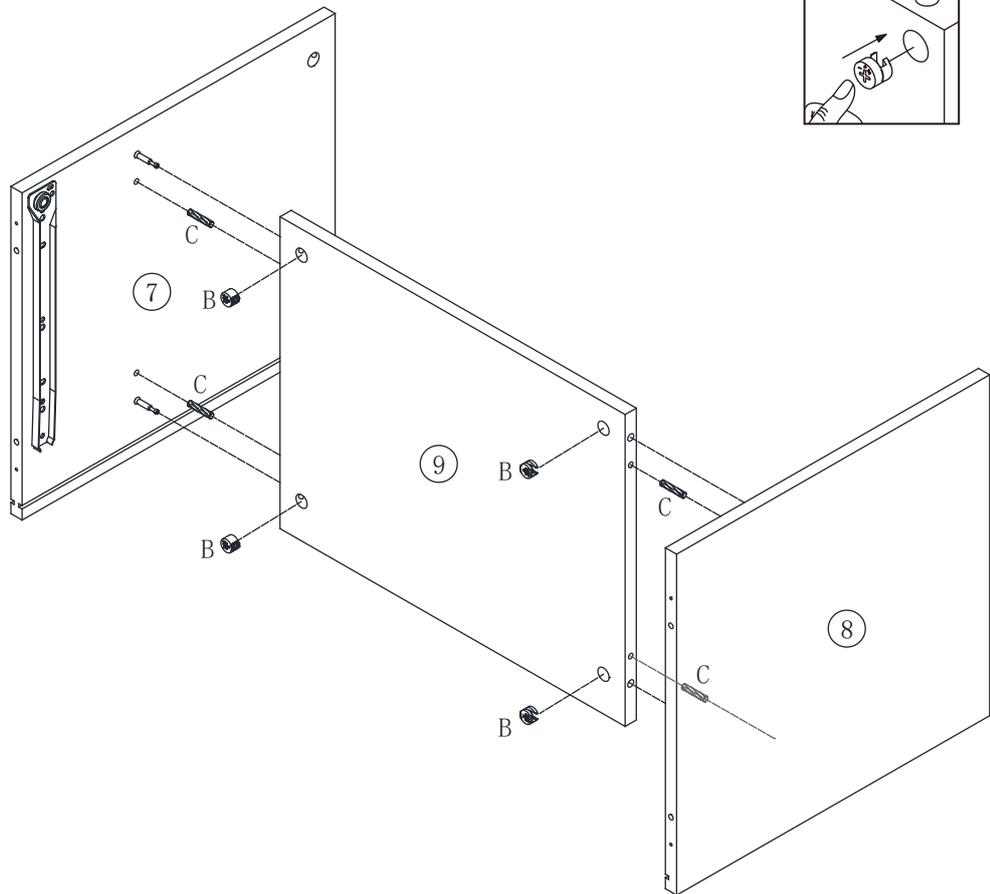


STEP 9


Bx6






Cx6

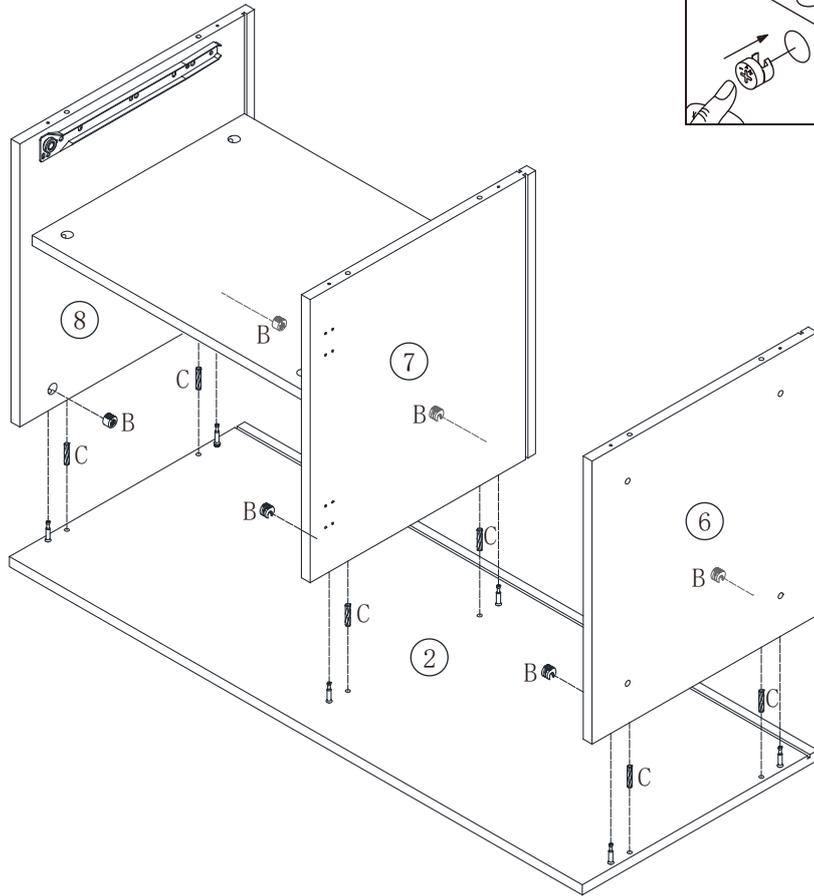







STEP 10

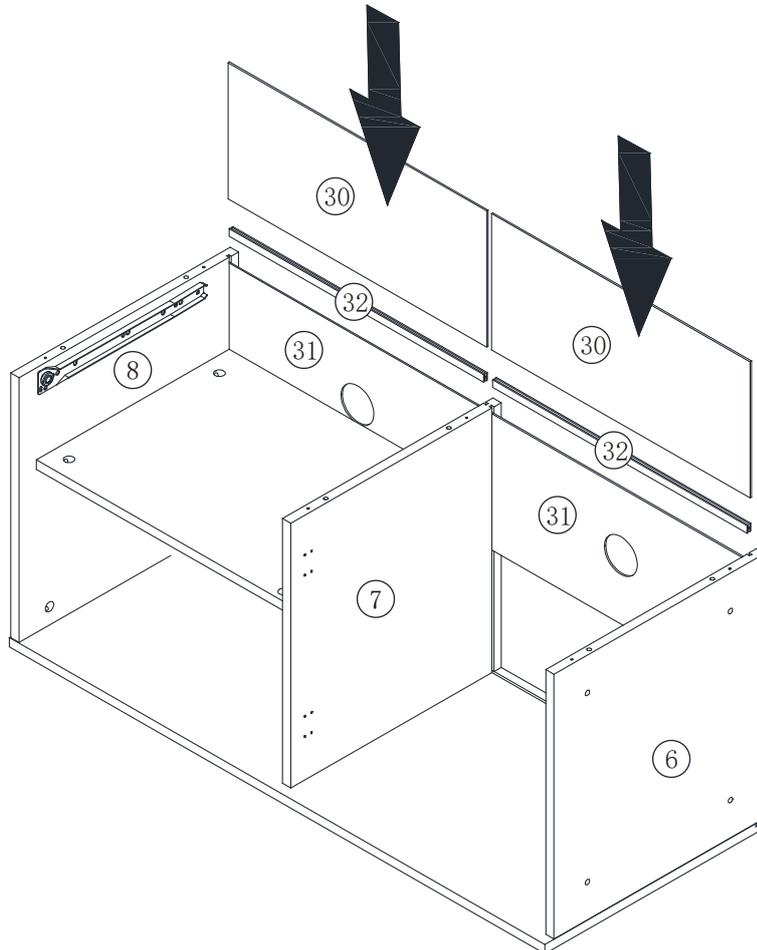

STEP 11

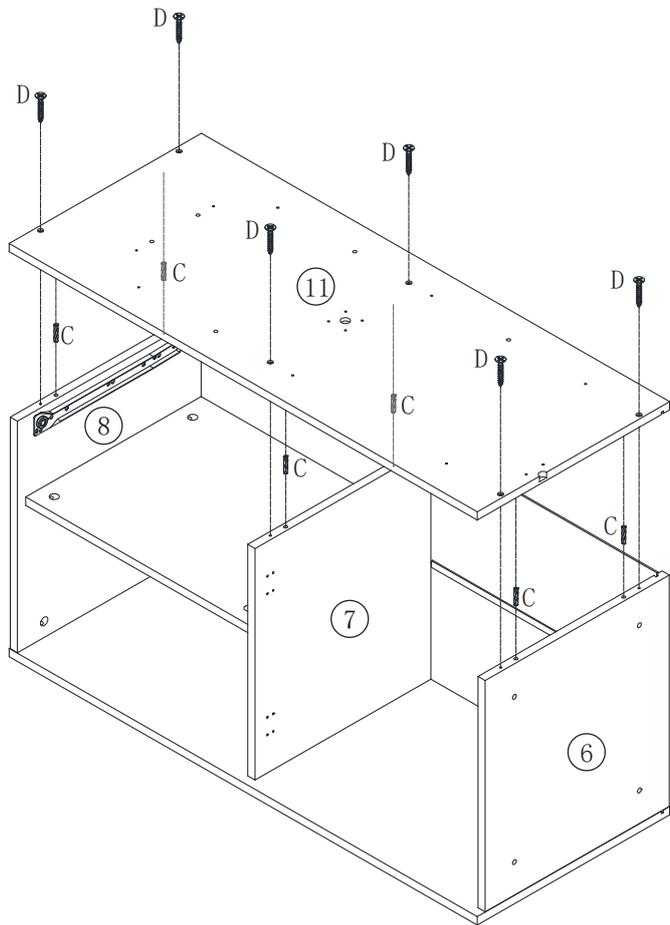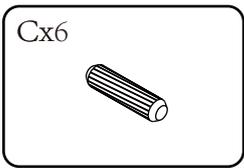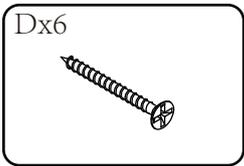


STEP 12

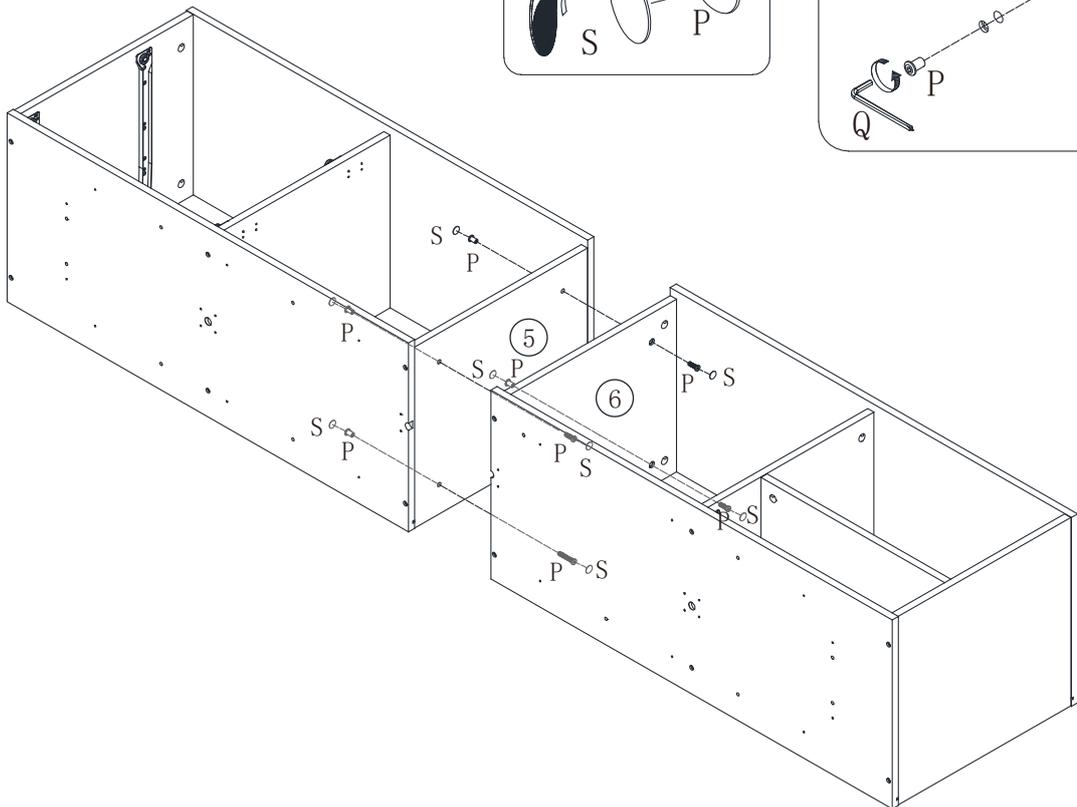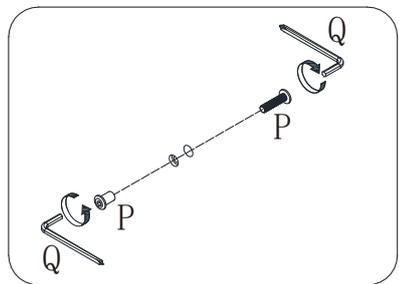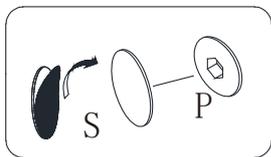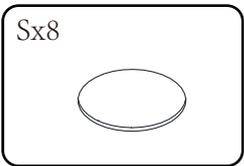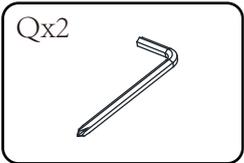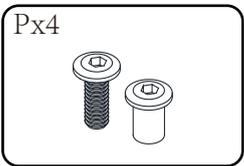


STEP 13

Tx16



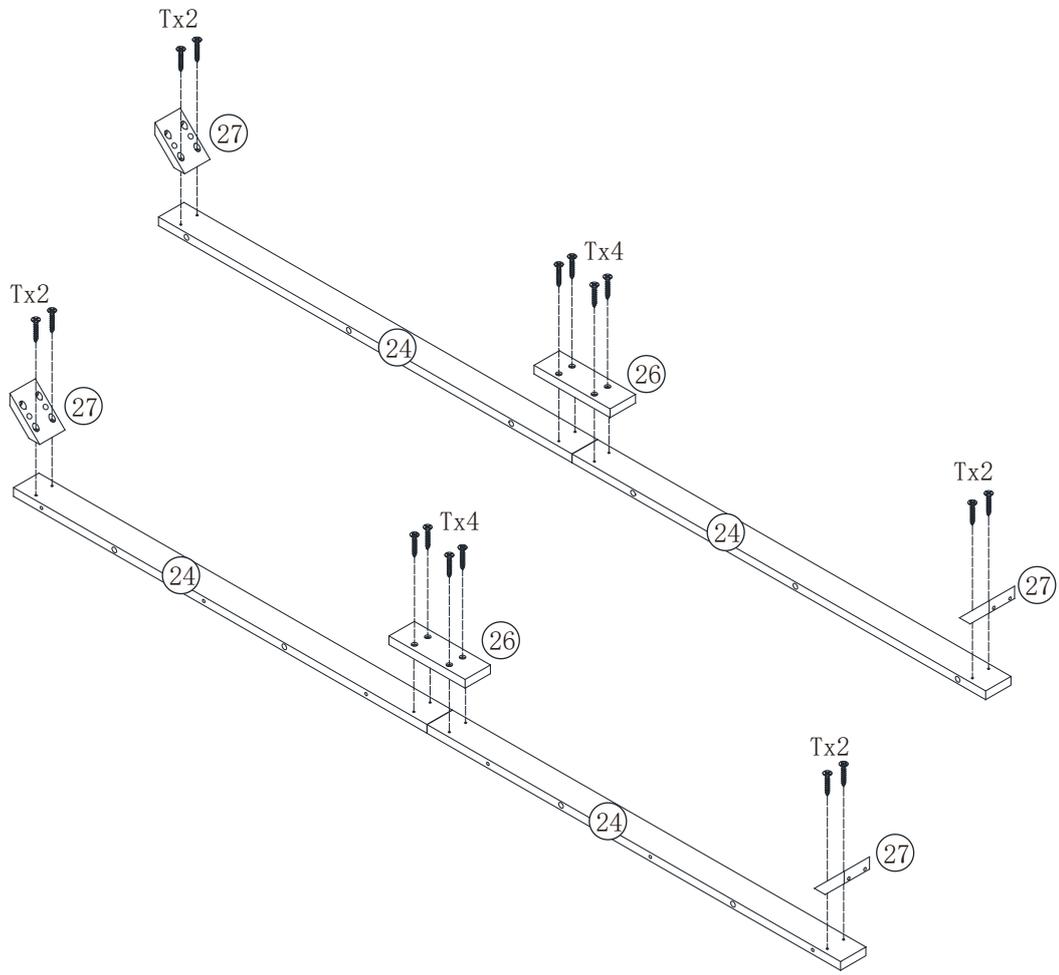


STEP 14




Tx8

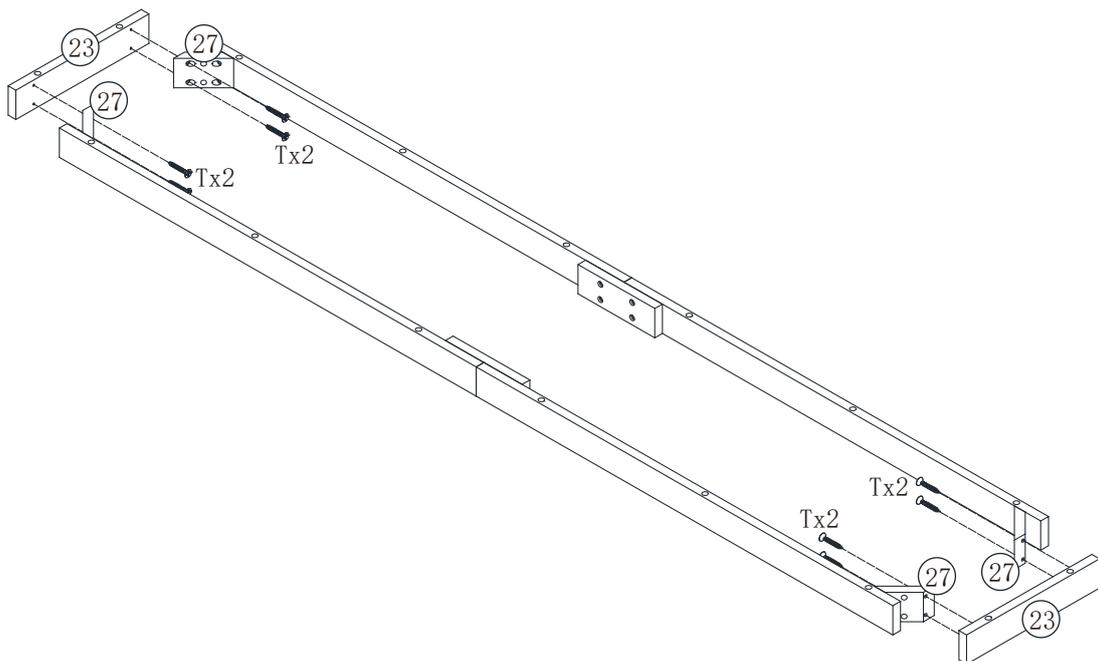






STEP 15

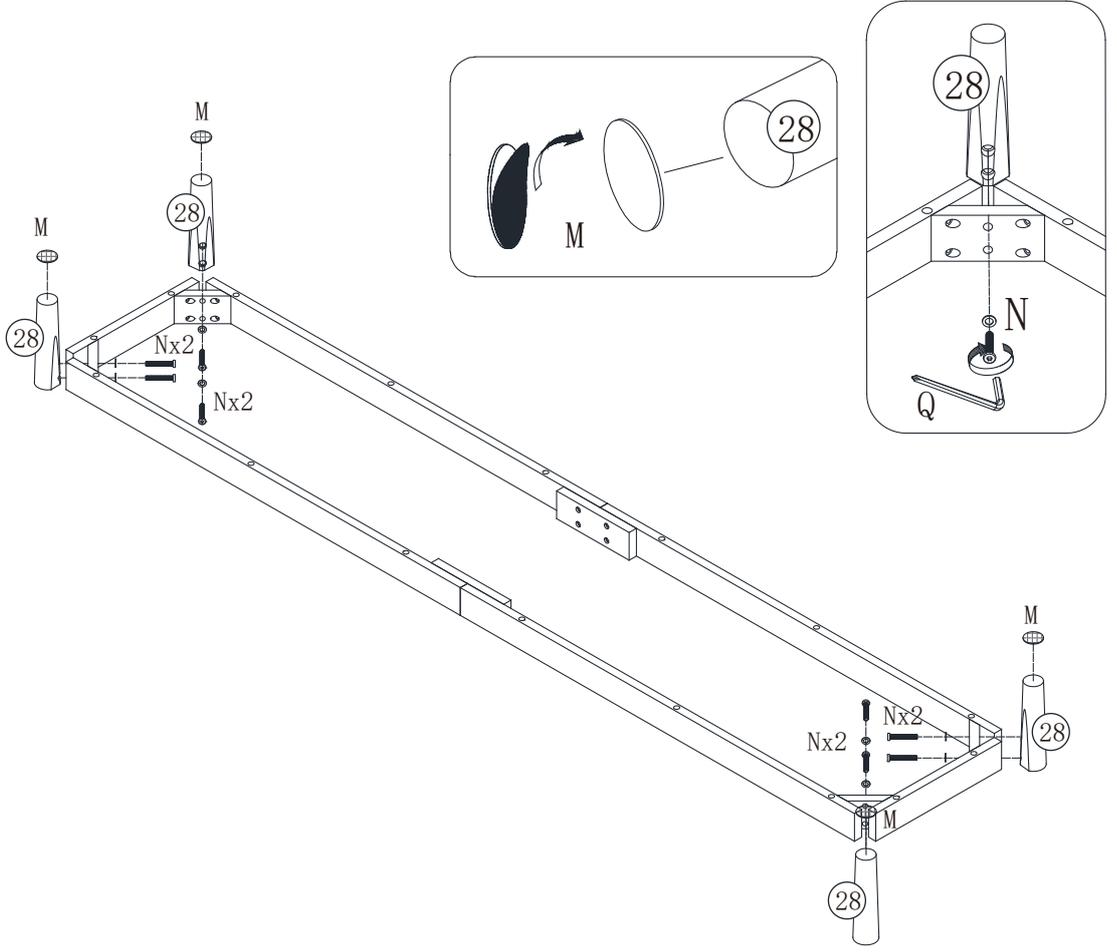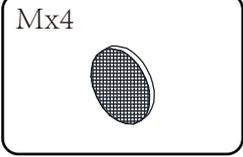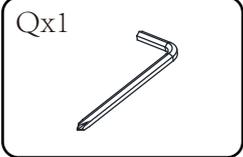






STEP 16

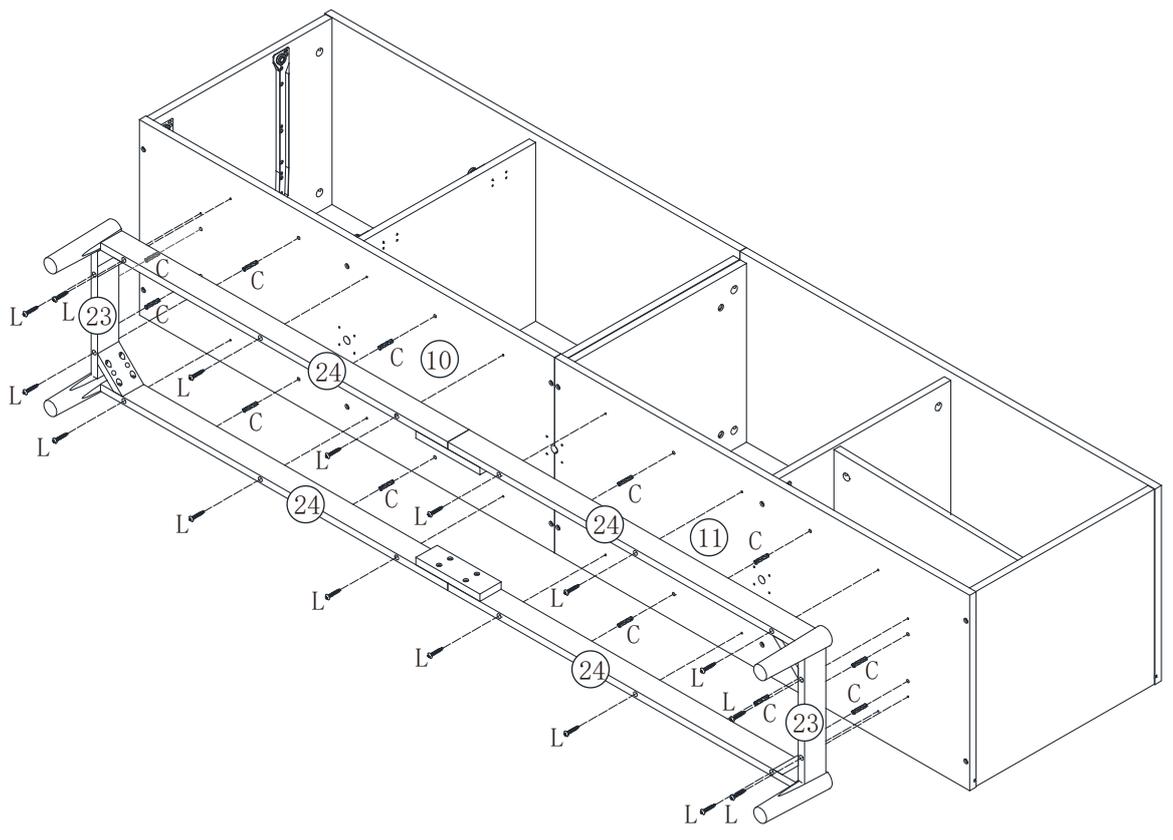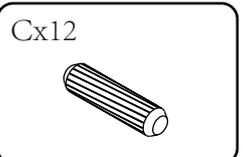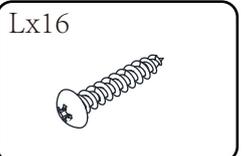

STEP 17

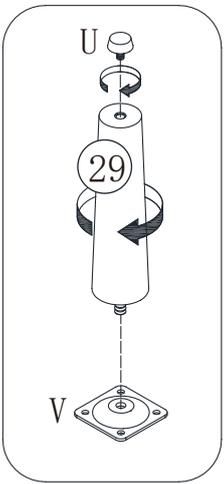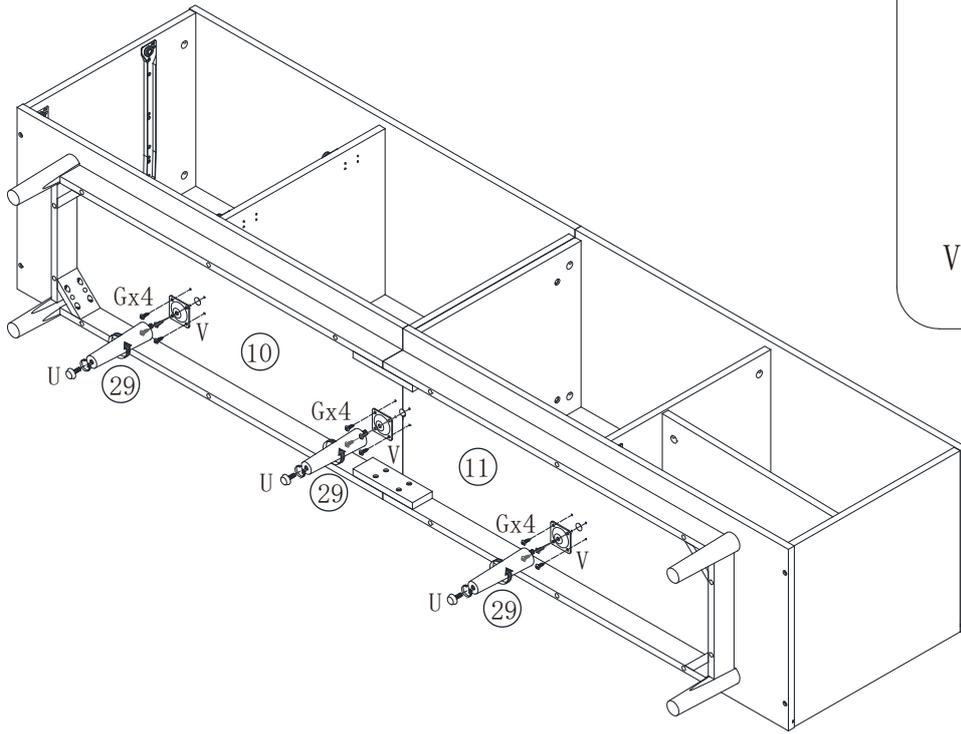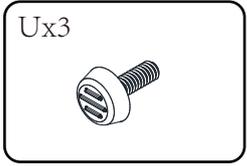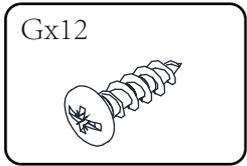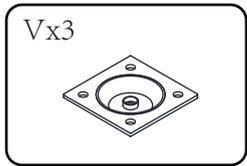

STEP 18

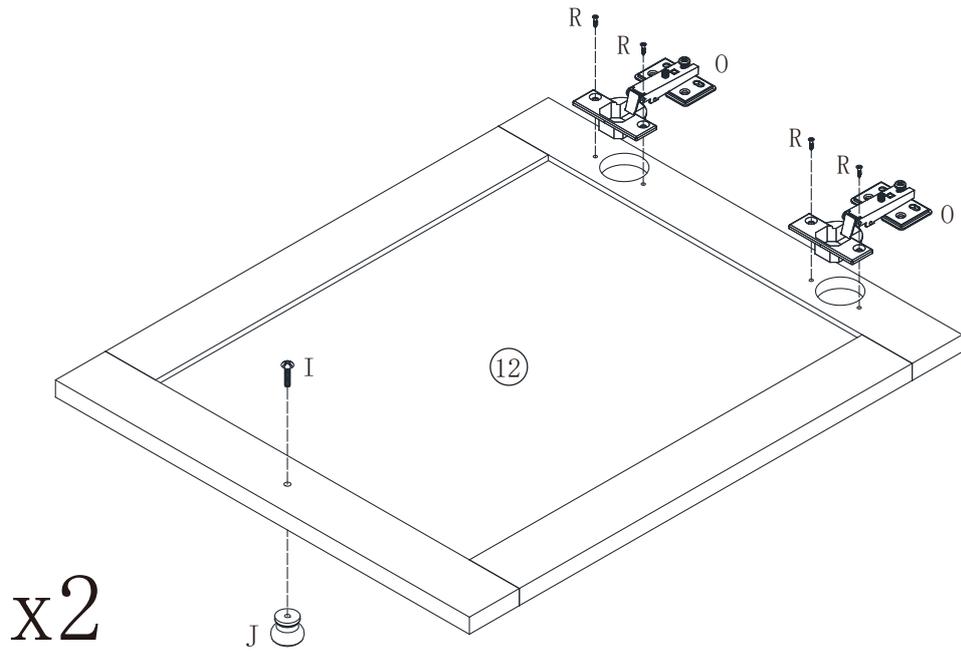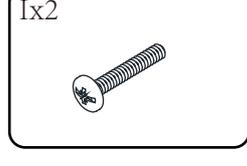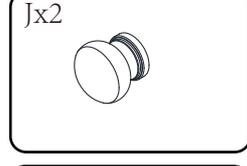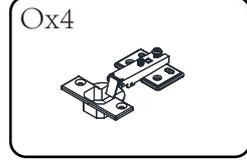
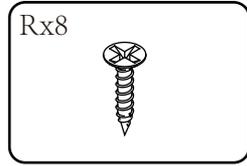


x2



STEP 19

Rx16

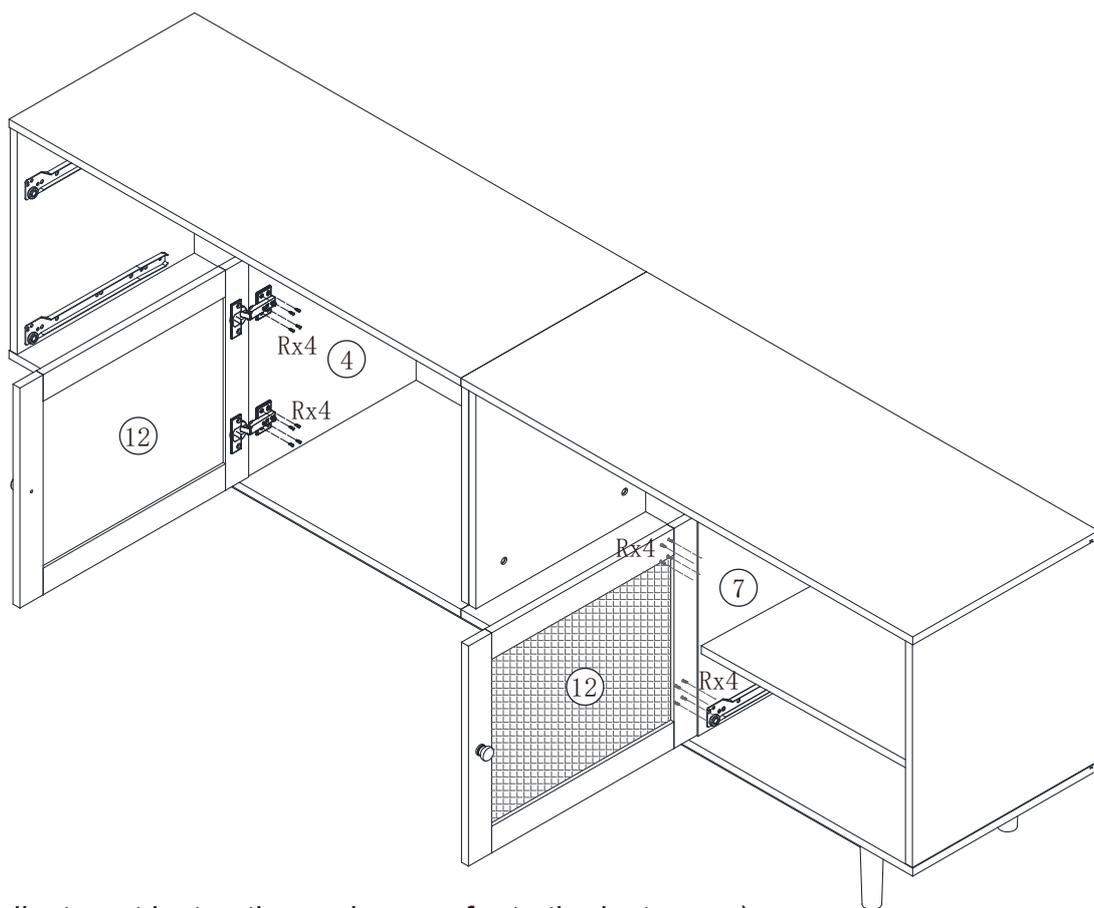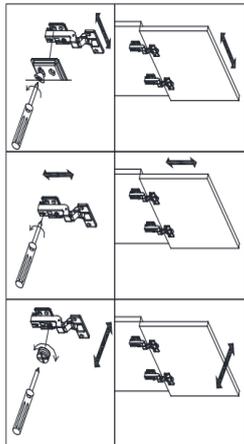

(For detailed hinge adjustment instructions, please refer to the last page.)

STEP 20


Ax12



Jx3





Ix3

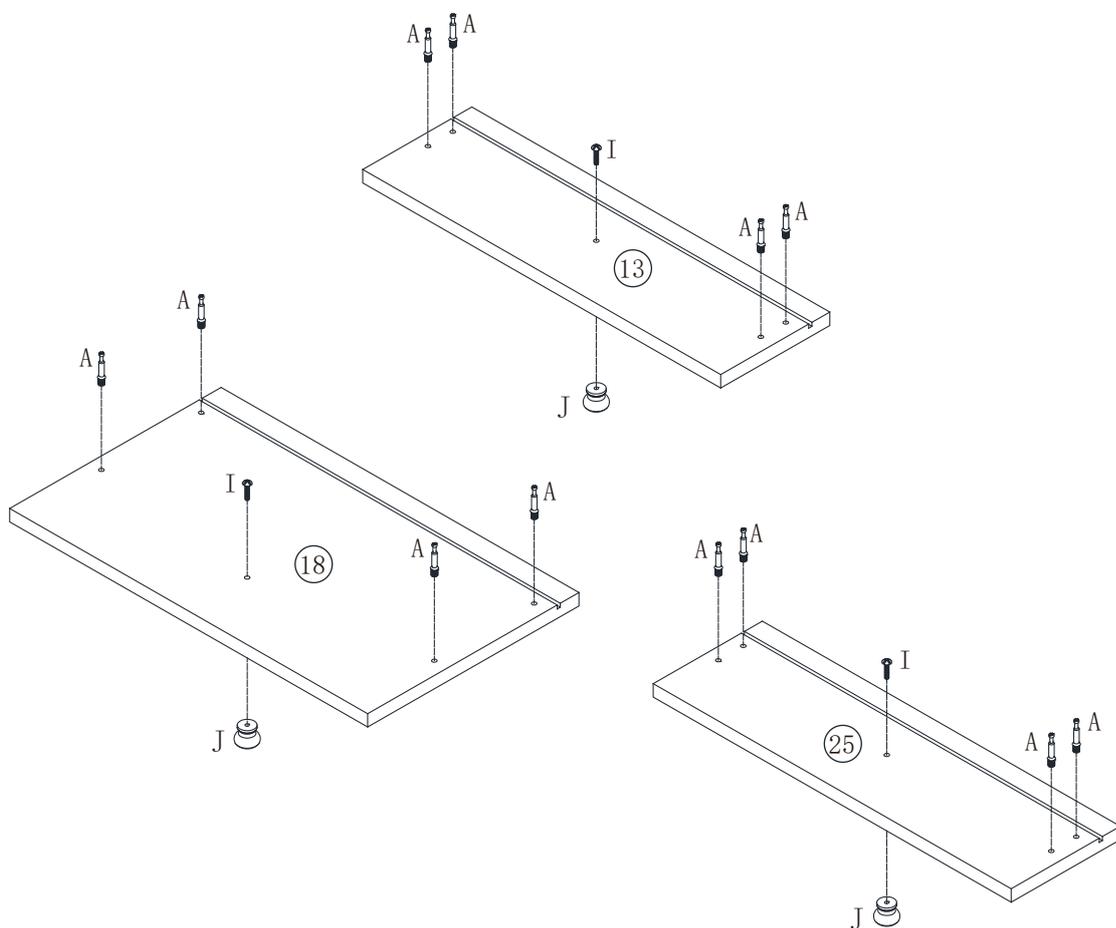

STEP 21

Ex8

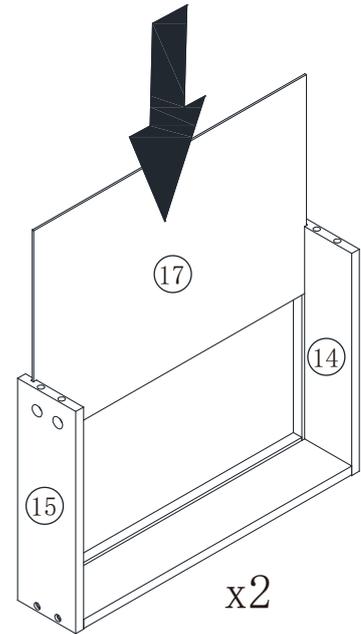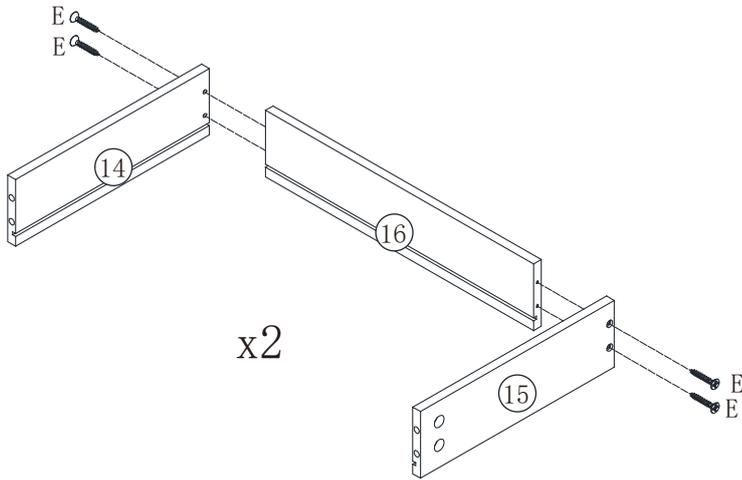

STEP 22

Bx4







DRx1



DLx1




Fx4

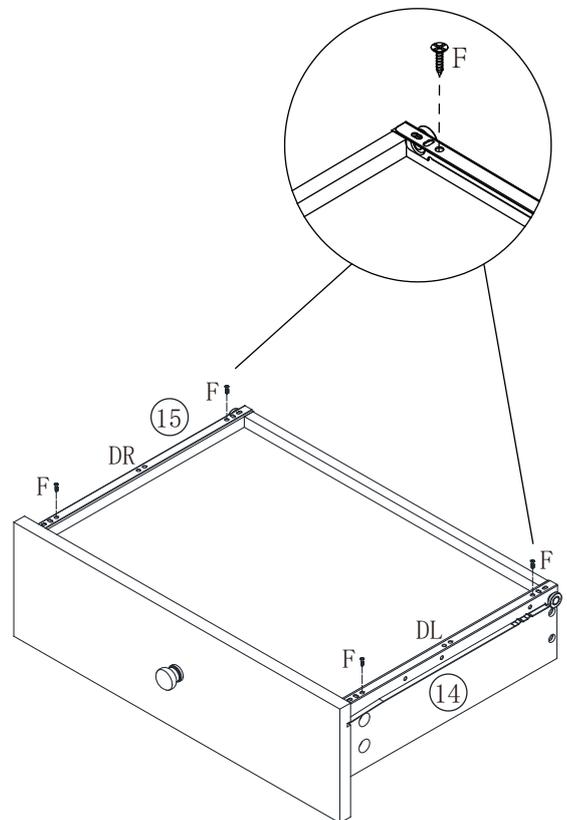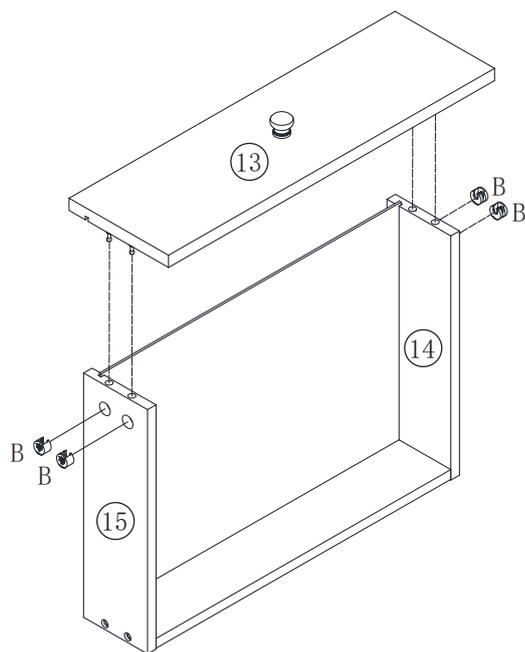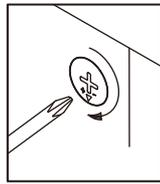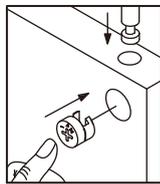

STEP 23


Bx4

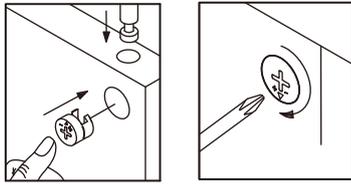



DRx1



DLx1


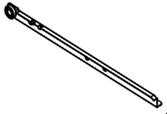


Fx4






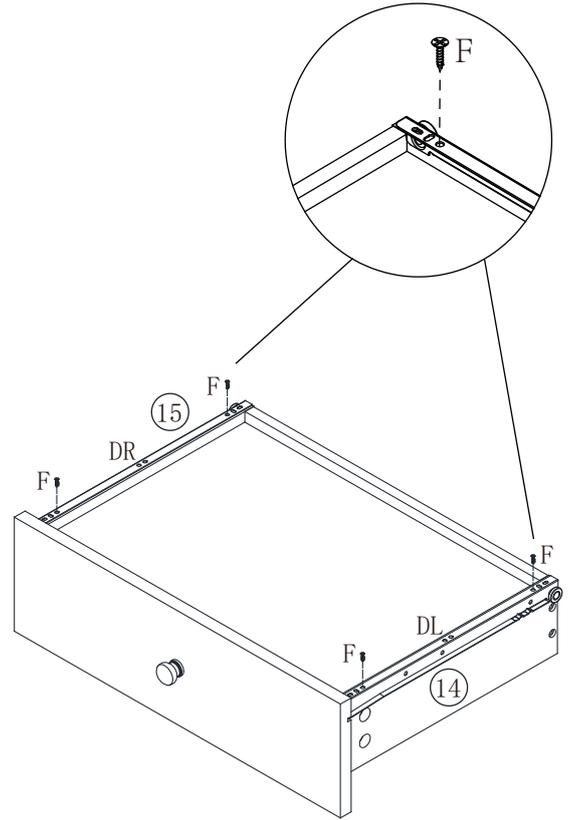
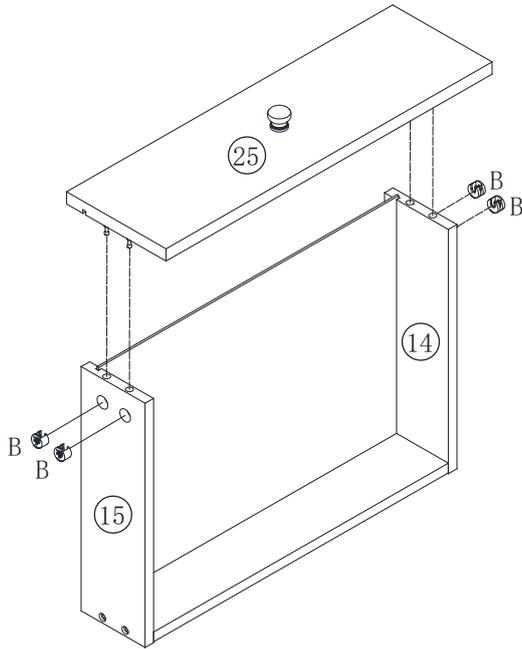


STEP 24


Ex4

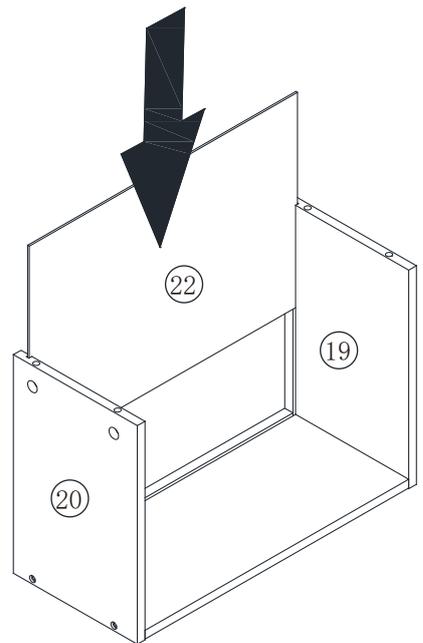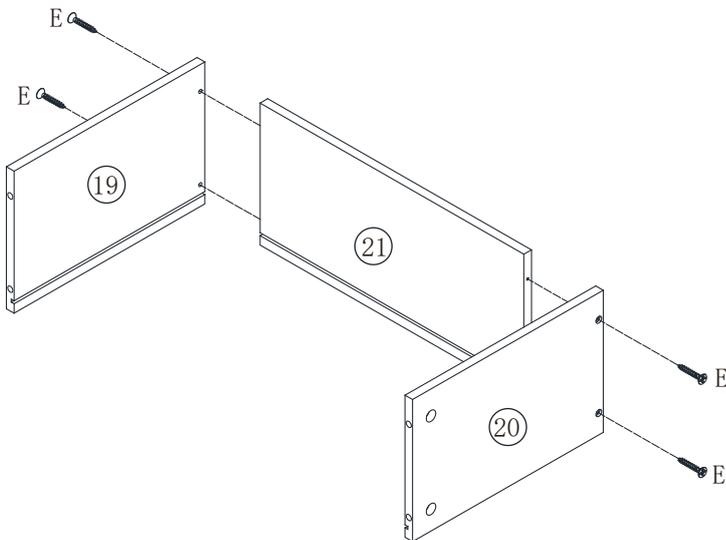

STEP 25

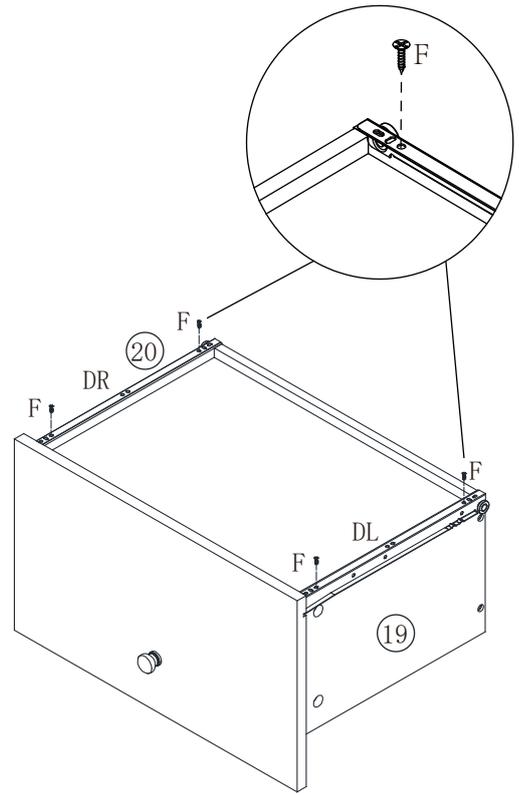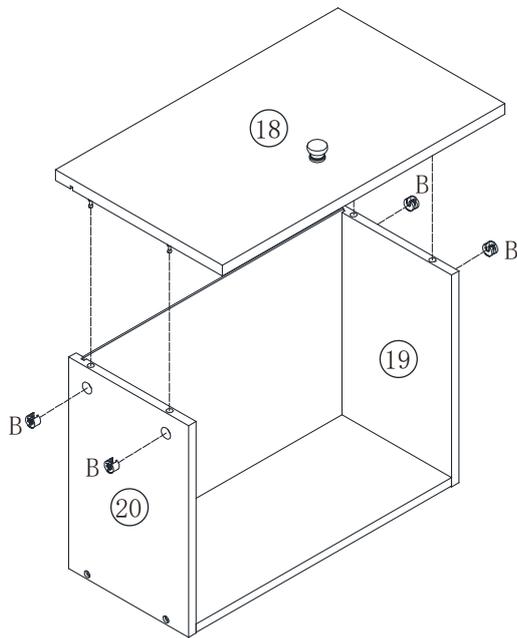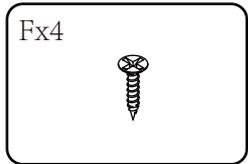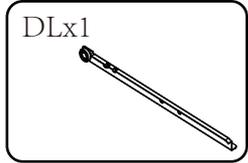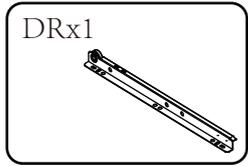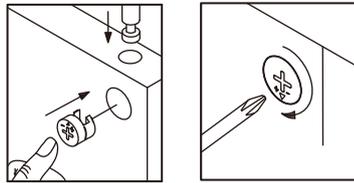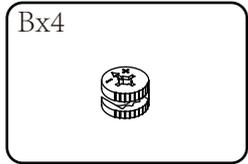


STEP 26

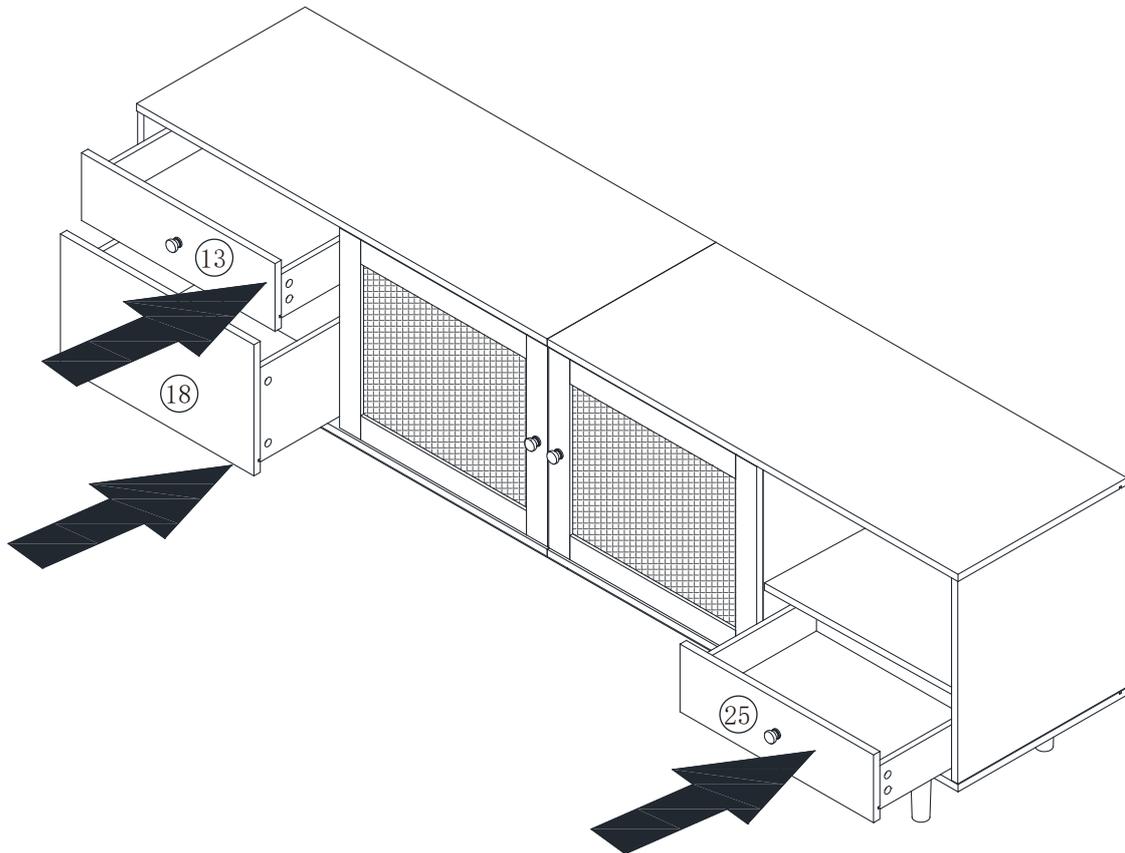

STEP 27


Hx16

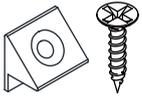

Gx2



Xx2

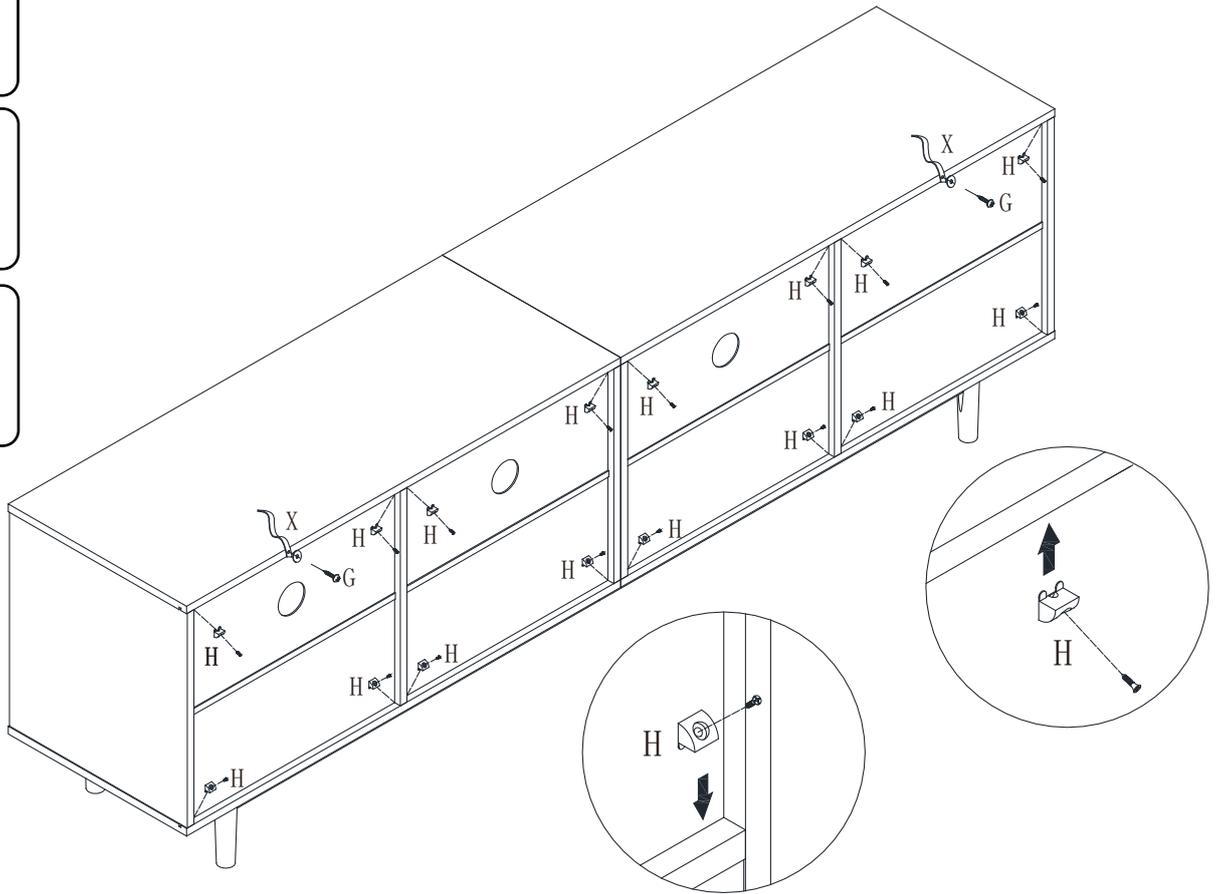


STEP 28


Kx2



Wx2

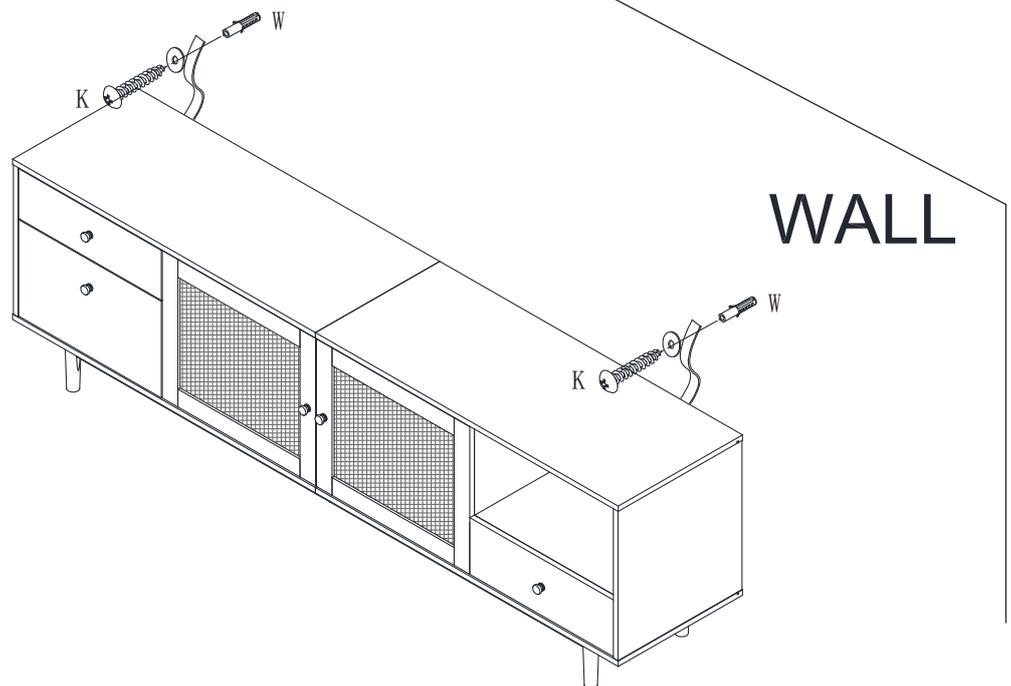


HINGE ADJUSTMENTS

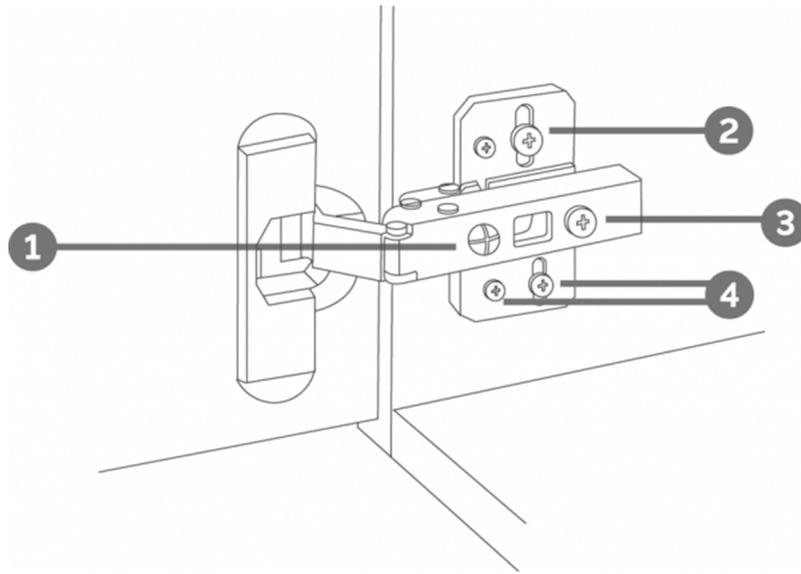


1 Sideways / Tilt adjustment

Turn the screw
clockwise to move the door further away from
the side of the cabinet
anticlockwise to move the door closer to the
side of the cabinet

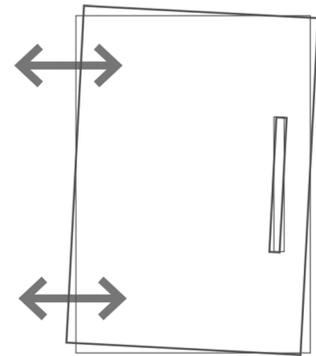

2 4 Height adjustment

While supporting the weight of the door, turn the
screws
clockwise to move the door up
anticlockwise to move the door down

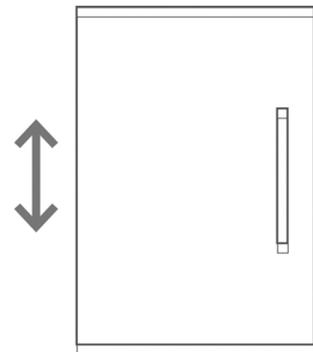

3 Forward and back adjustment

If the gap between the back of the door and the
cabinet is too small, and the door may not close
fully. Turn the screw
clockwise to decrease the gap between the
door and the cabinet
anticlockwise to increase the gap between the
door and the cabinet

