 


TV STAND

USER MANUAL

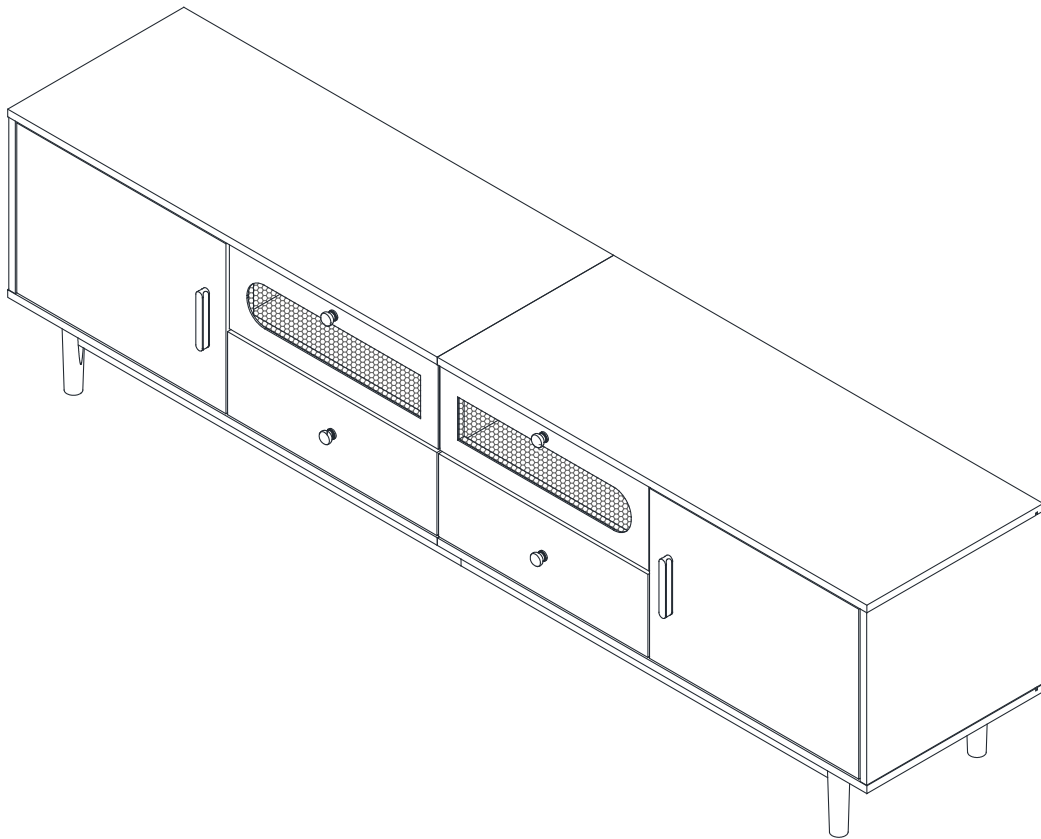

SAVE THESE INSTRUCTIONS FOR FUTURE USE

PLEASE DO NOT RETURN TO STORE



**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.







Before Installation


Important – Please read these instructions fully before starting assembly













Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions

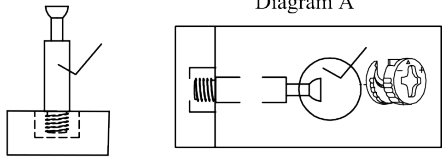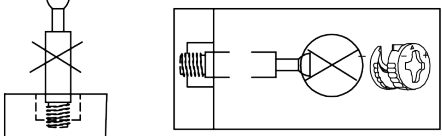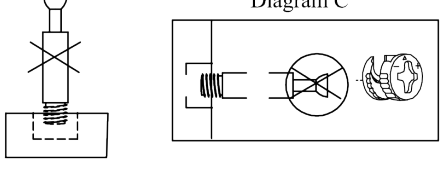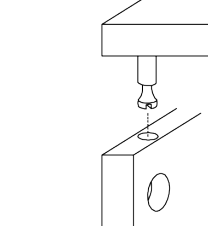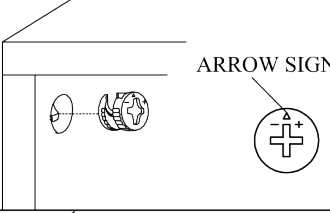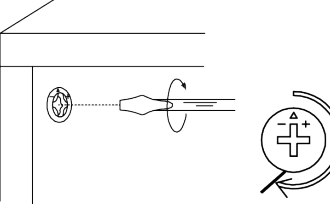      	Diagram A Insert Cam Bolt into hole as shown in diagram A.
	Diagram B Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.
	Diagram C Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.
 Connect the panels together.	
 ARROW SIGN Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.	
 To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>	

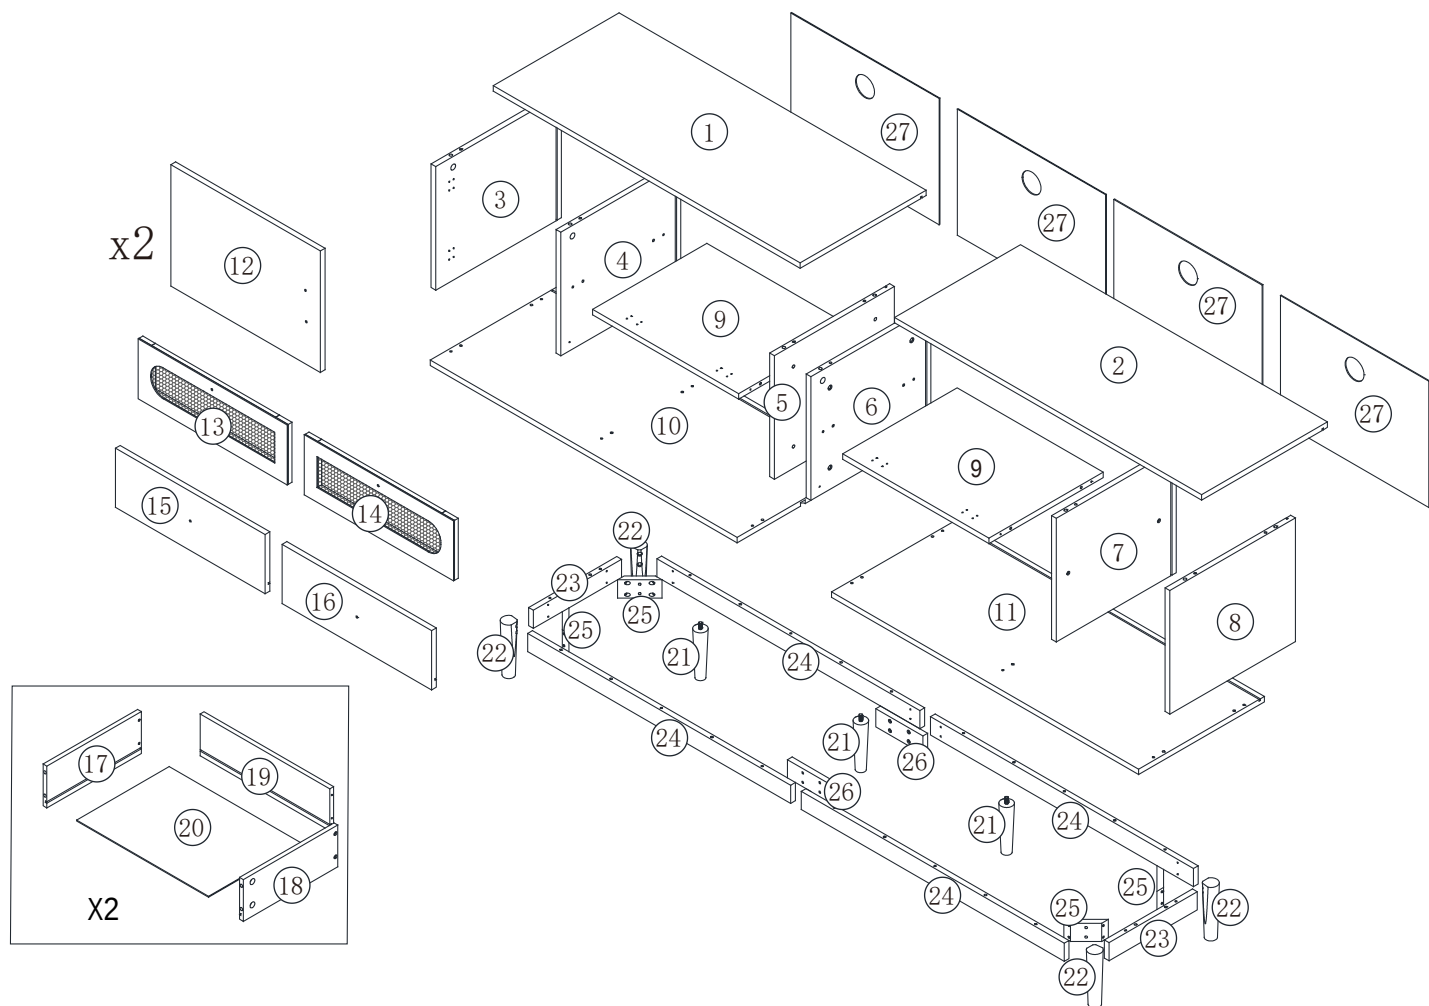 

            Ax20 	Bx20 	Cx44  M6x30	Dx20  M4x40	Ex 8  M4x30	Fx16  M3x12
Gx14  M4x12	Hx16  M3x14	Ix8  M4x20	Jx4 	Kx 2  M4x35	Lx16  M4x40
Mx 4 	Nx8  M6x60	Ox2 	Px3 	Qx2 	Rx4 
Sx4 	Tx24  M4x25	Ux2 	Vx48  M4x14	Wx3 	Xx4  M6x18
Zx2 	Yx8 	CLx2  300mm	CRx2  300mm	DLx2  300mm	DRx2  300mm

STEP 1



Fx4



CLx1



  CRx1

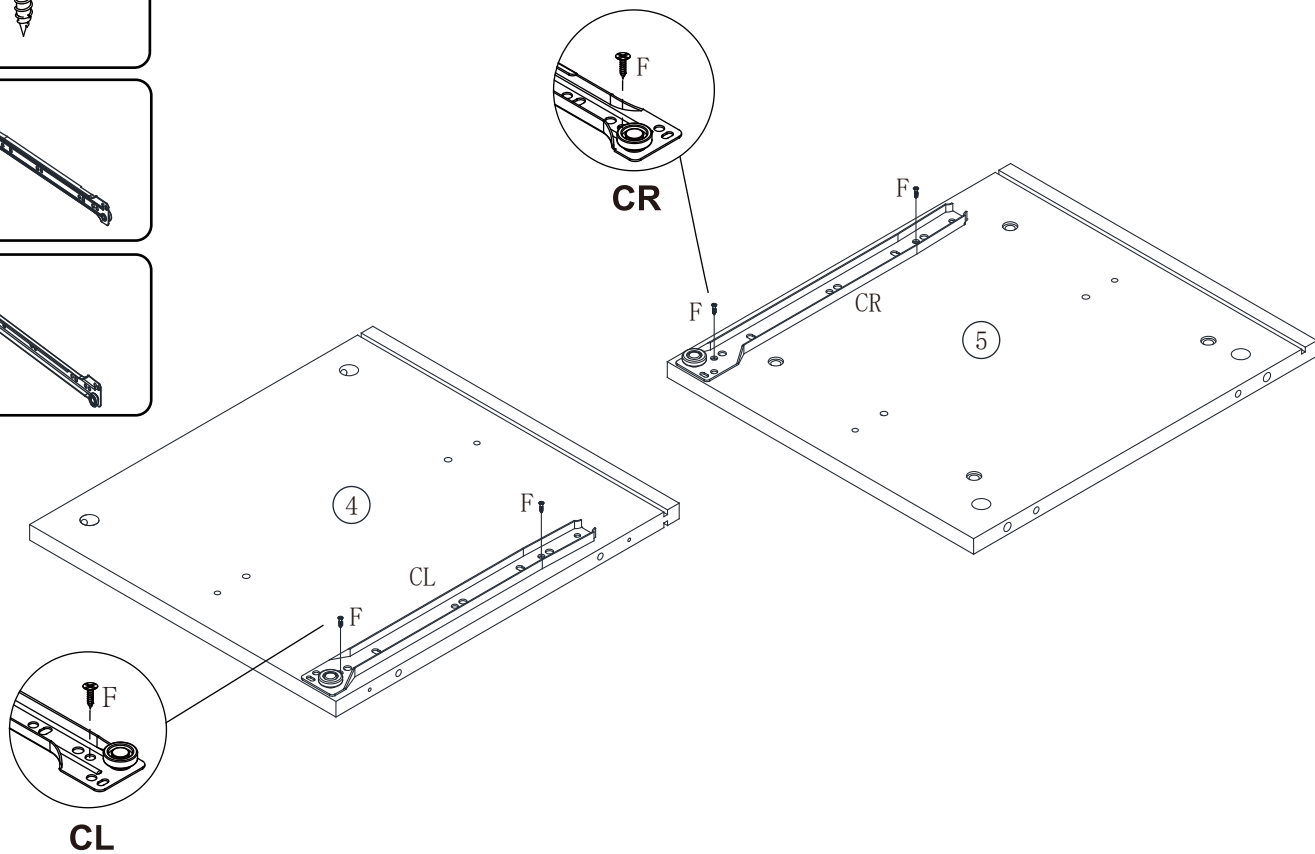


STEP 2



Dx4





 
Cx4

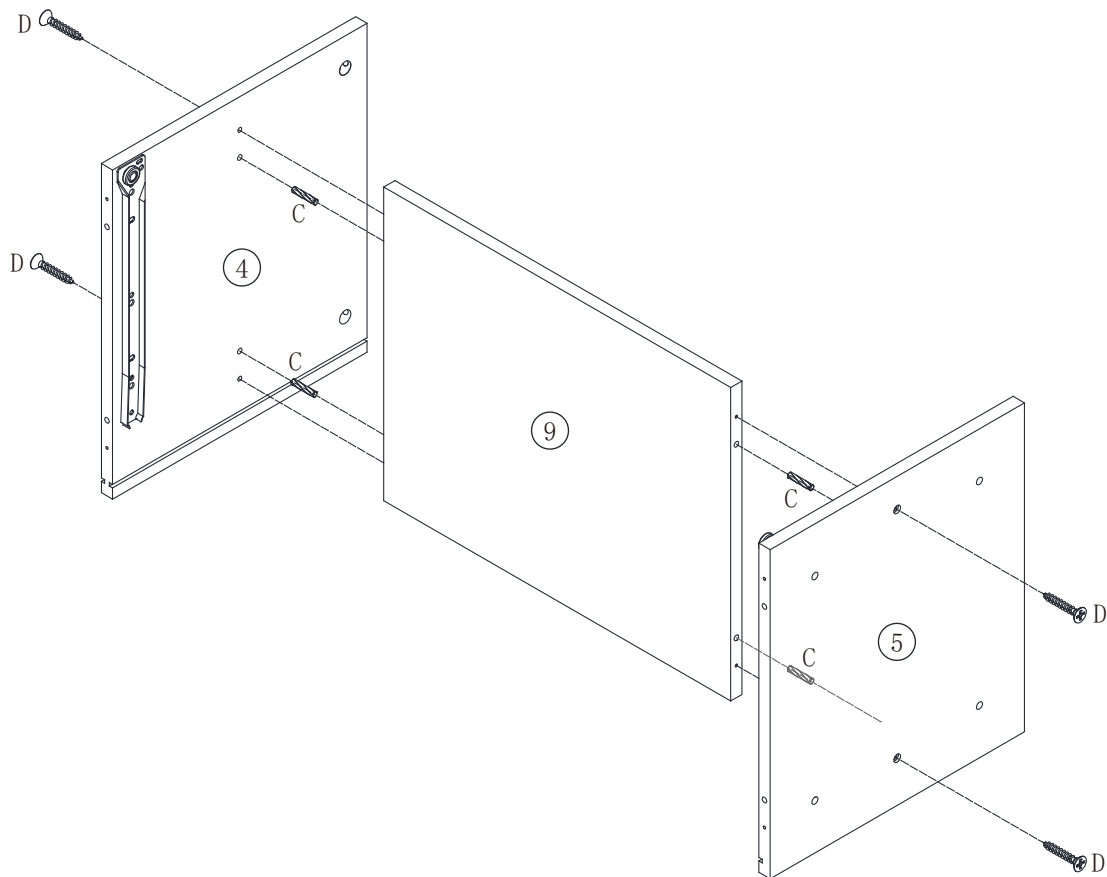

  
STEP 3

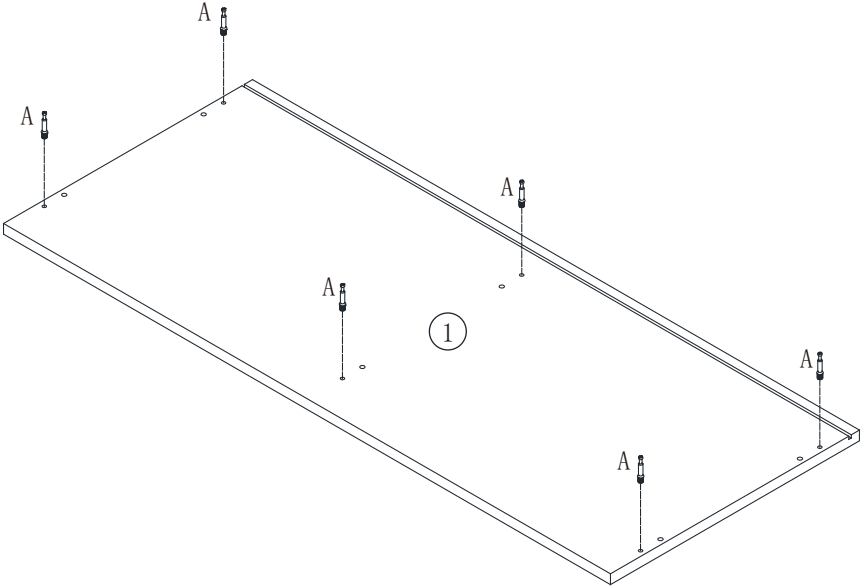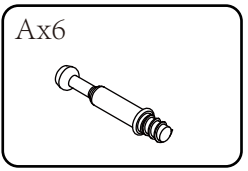

   STEP 4

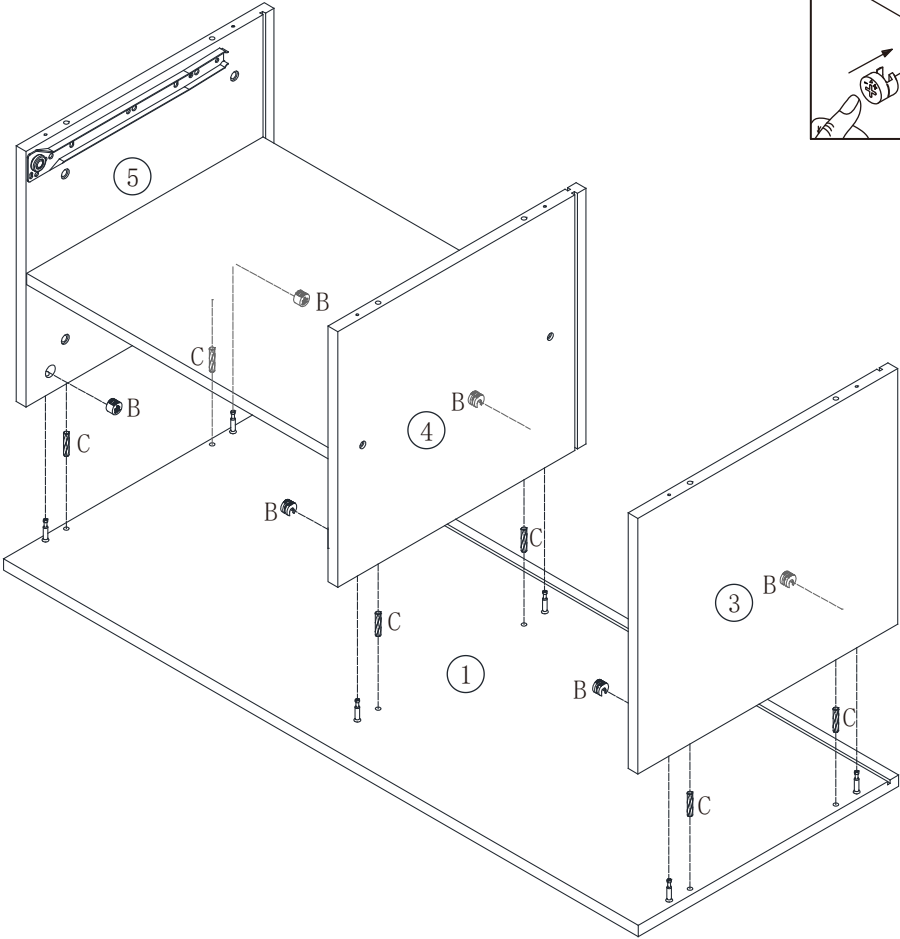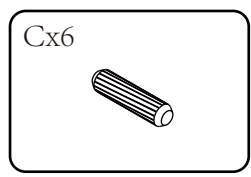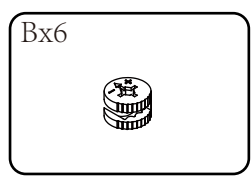

 STEP 5

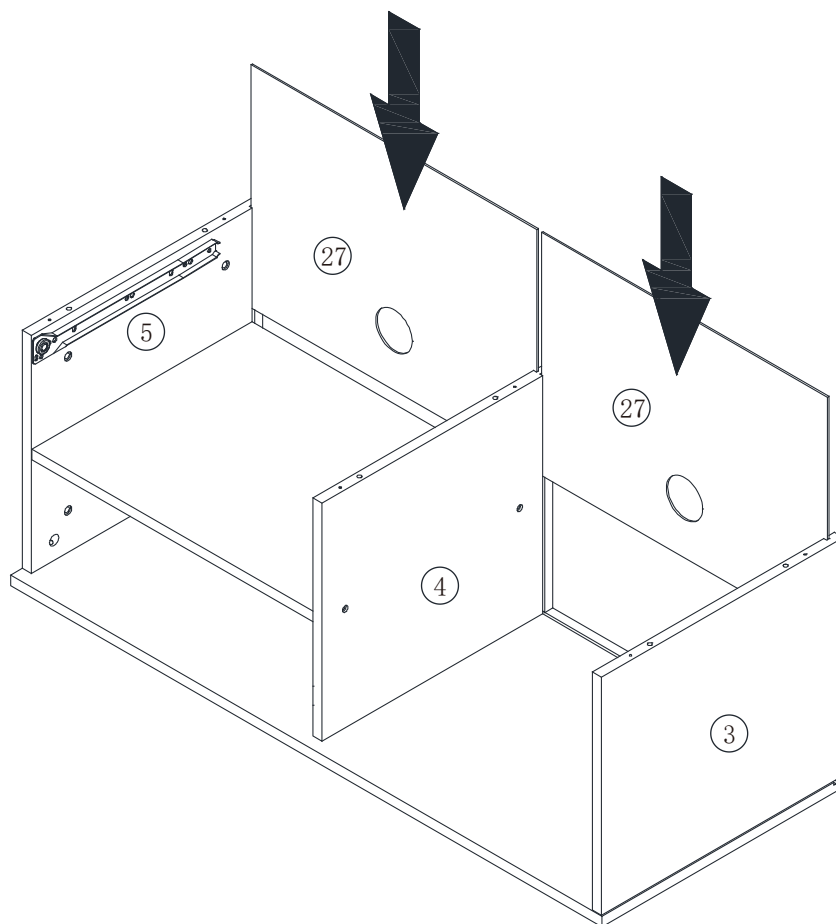


STEP 6

Dx6



 Cx6

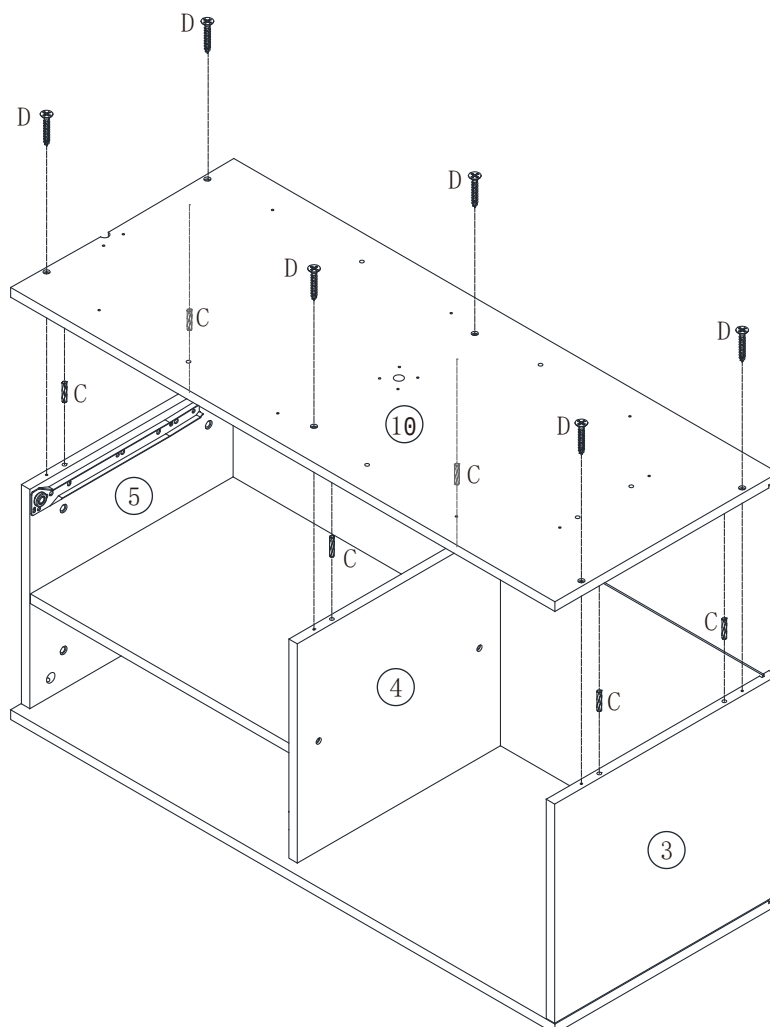

STEP 7



Fx4



CLx1




  CRx1

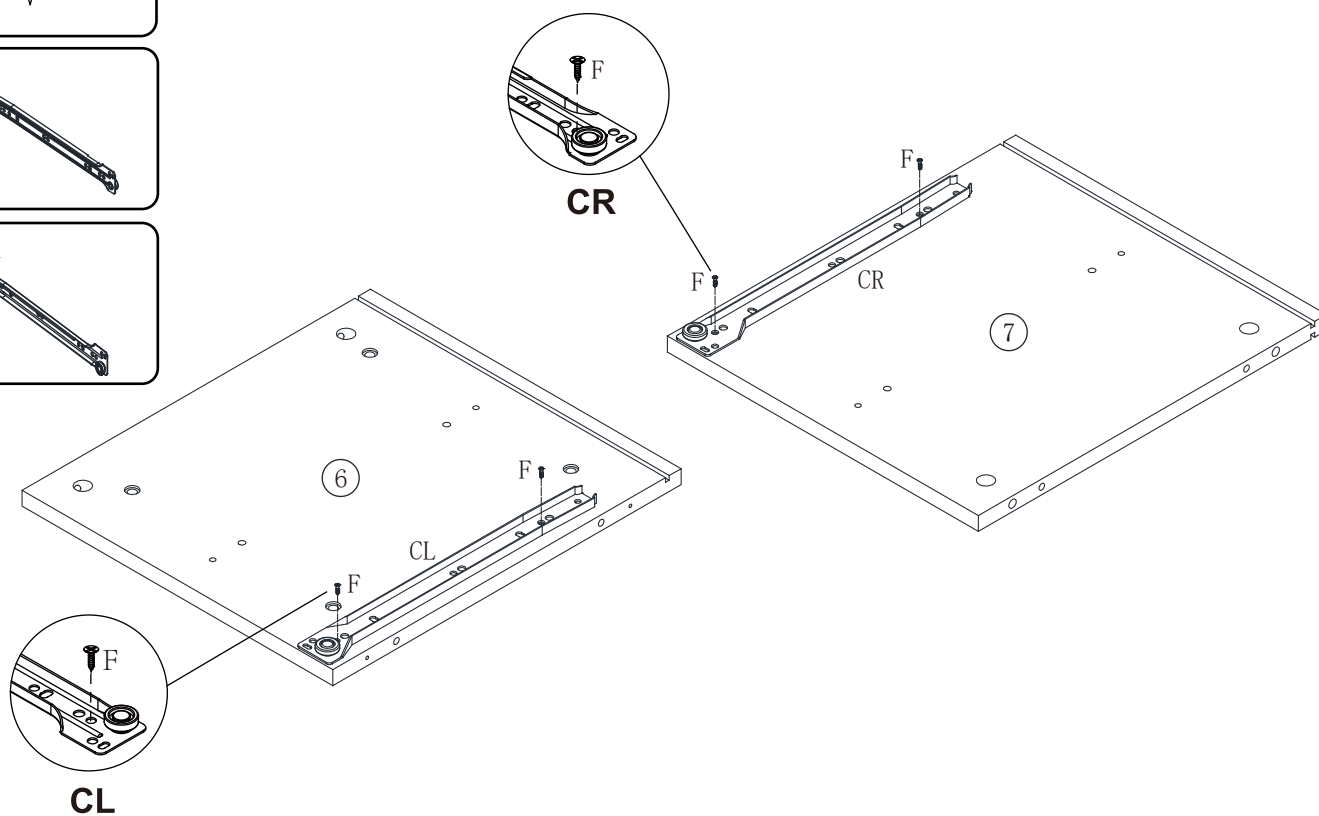


STEP 8

 Dx4





Cx4

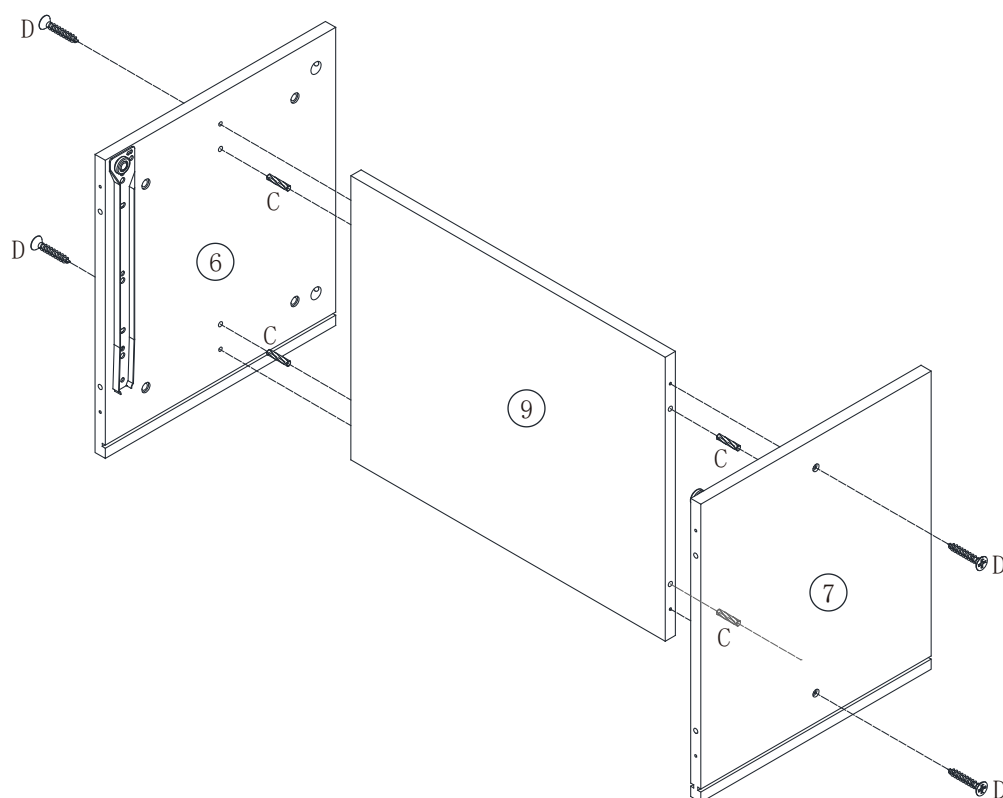 

STEP 9

  Ax6


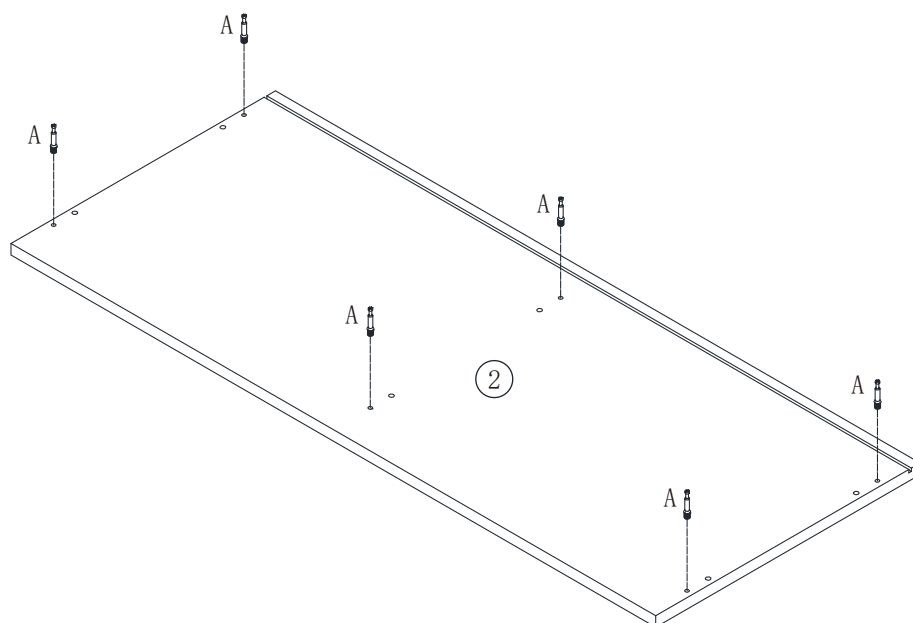



STEP 10


Bx6



 
 
 
Cx6

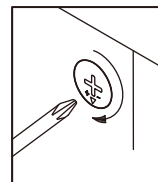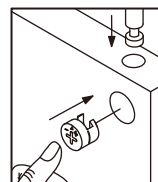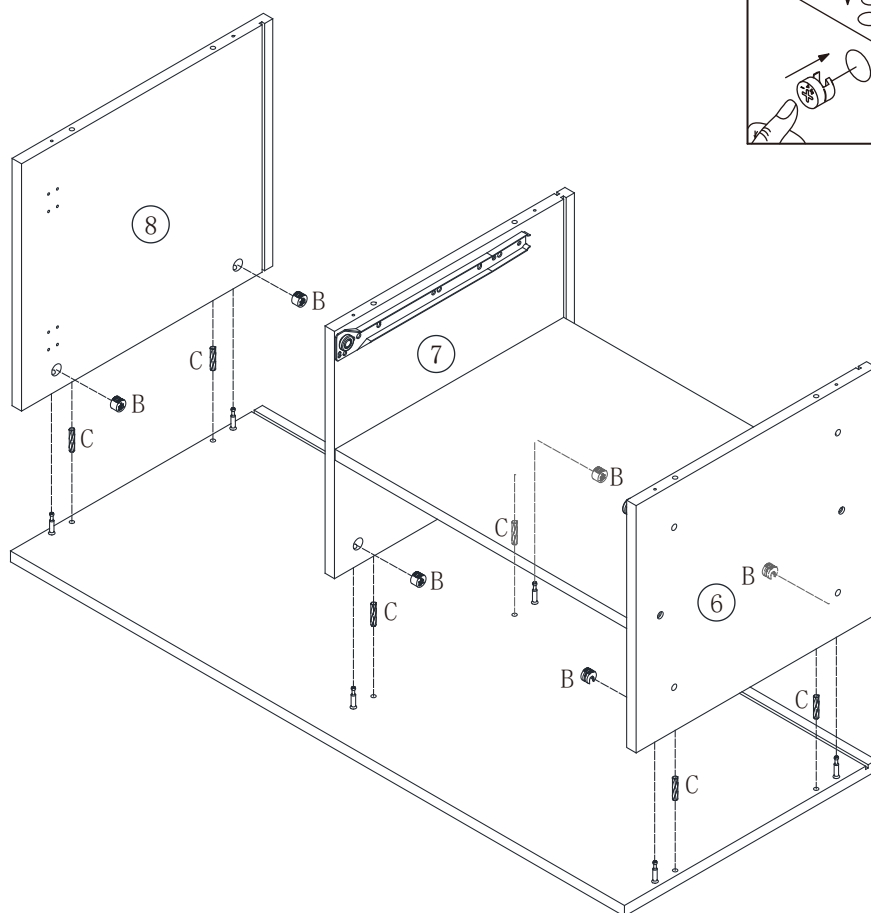

 STEP 11

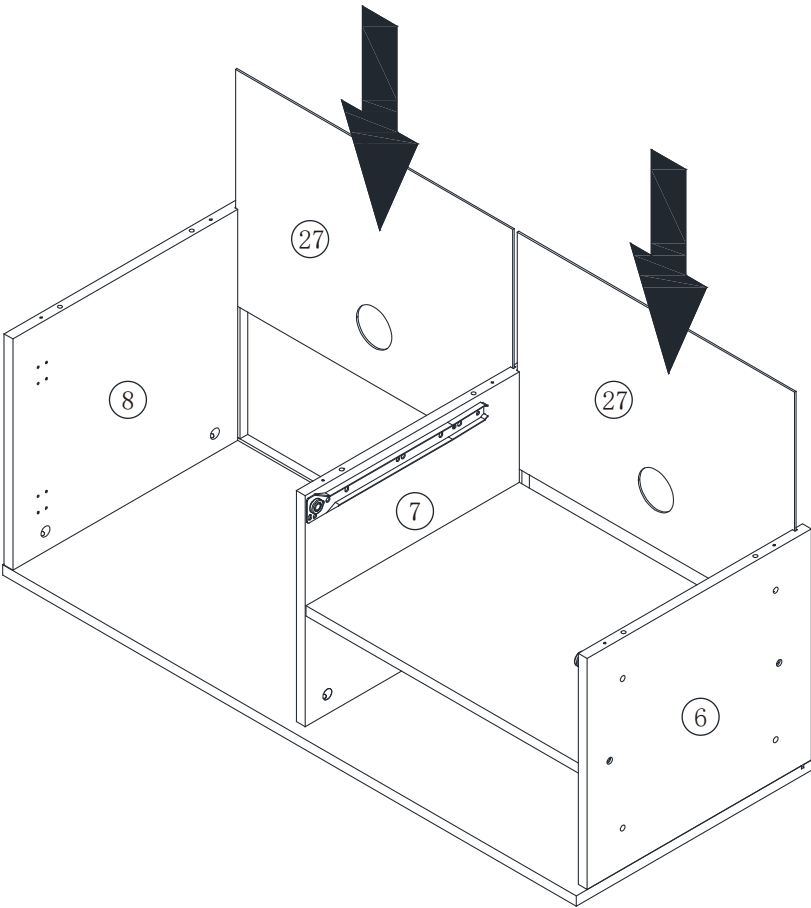


   STEP 12

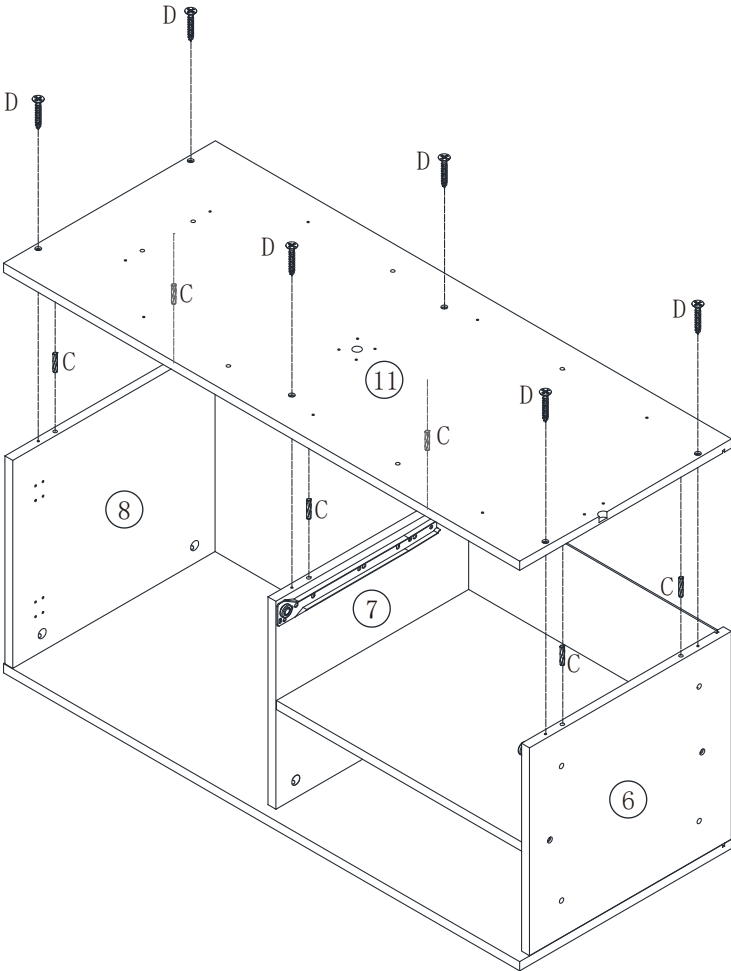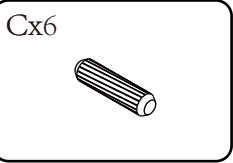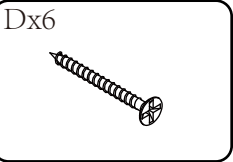

STEP 13



 
Xx4



Yx8




   Ux2


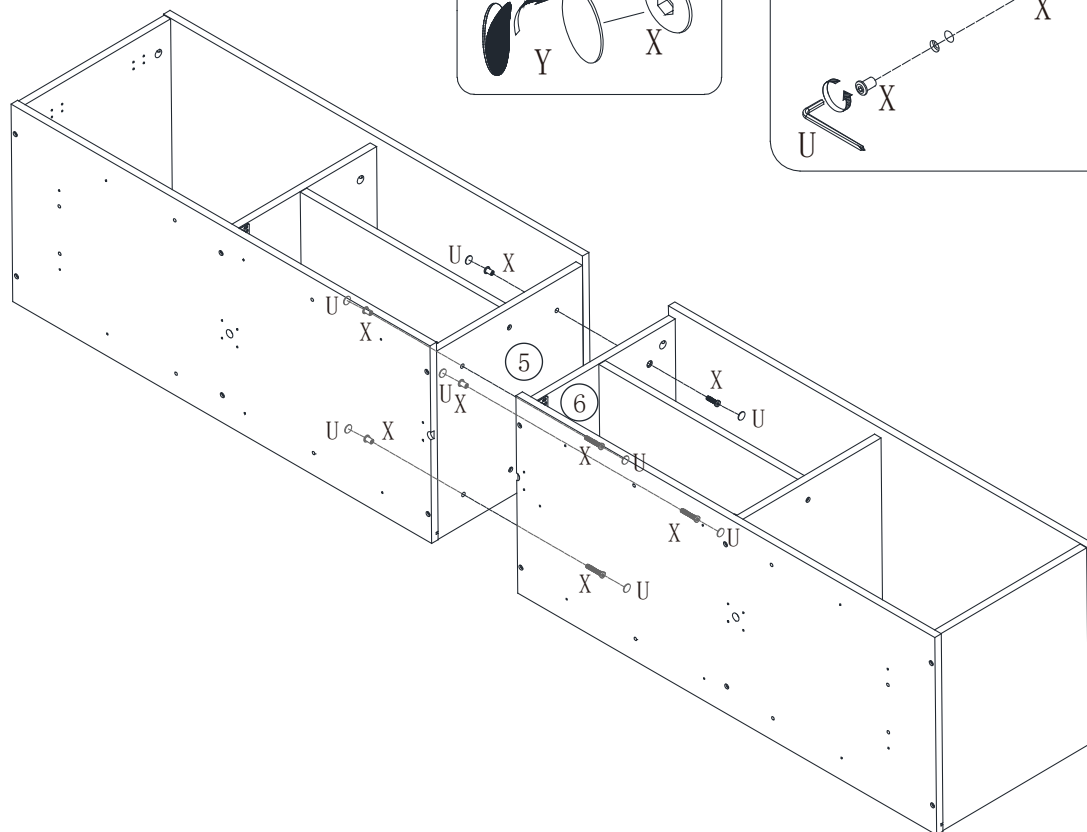
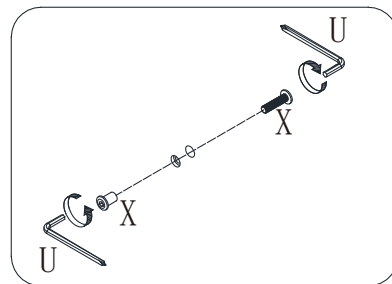
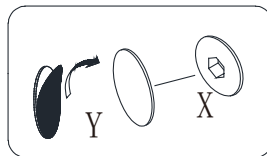


STEP 14

 Tx16

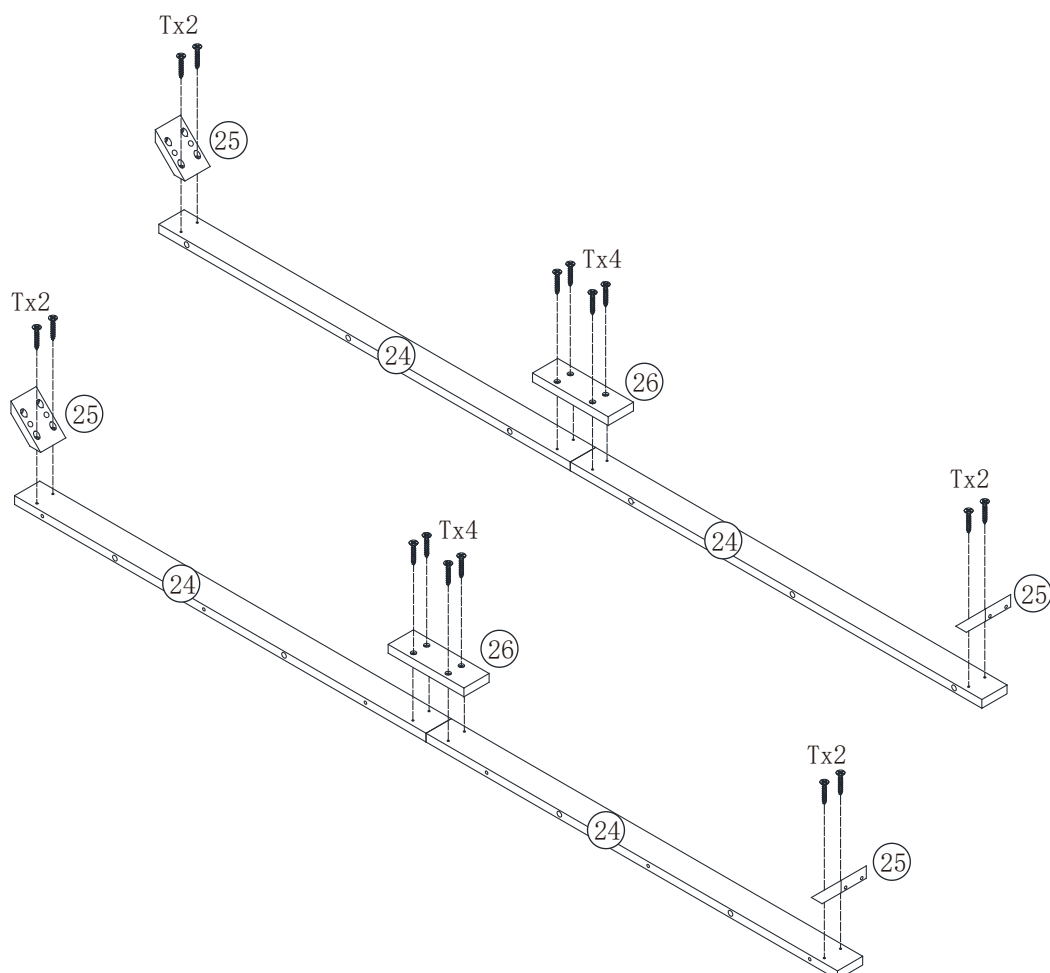


Tx8

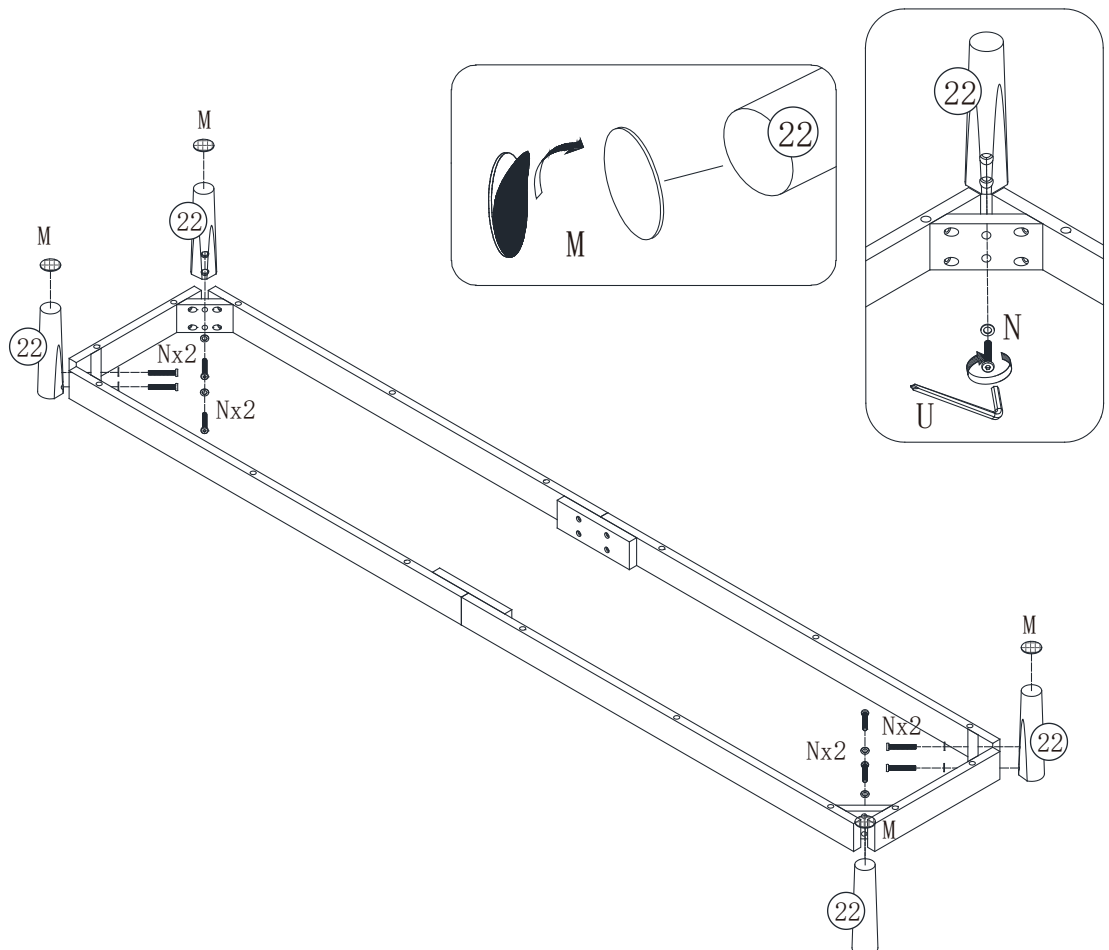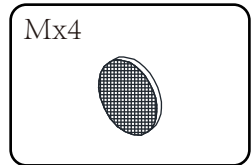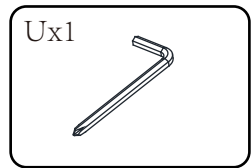   
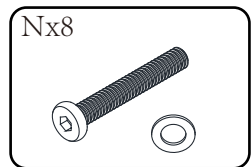 
A detailed line drawing of a Tx8 screw, showing its threaded shaft and a hexagonal head with a cross-shaped indentation.

STEP 17

 Lx16




Cx12

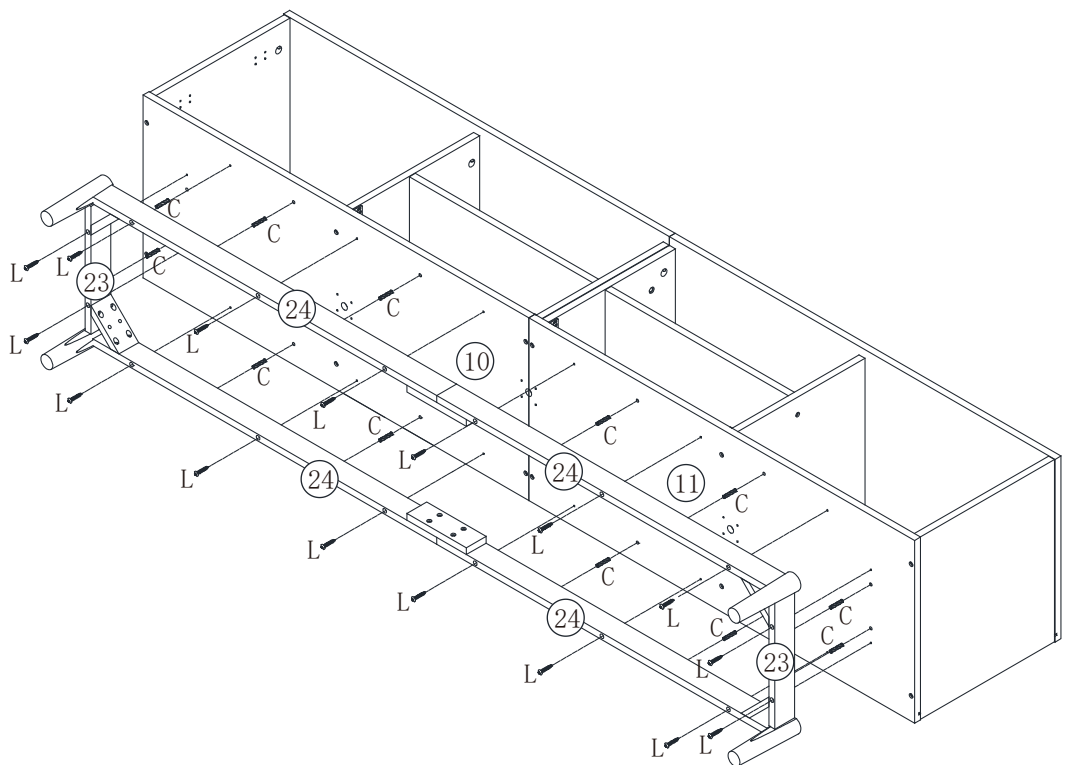  


STEP 18


 
Wx3










Gx12

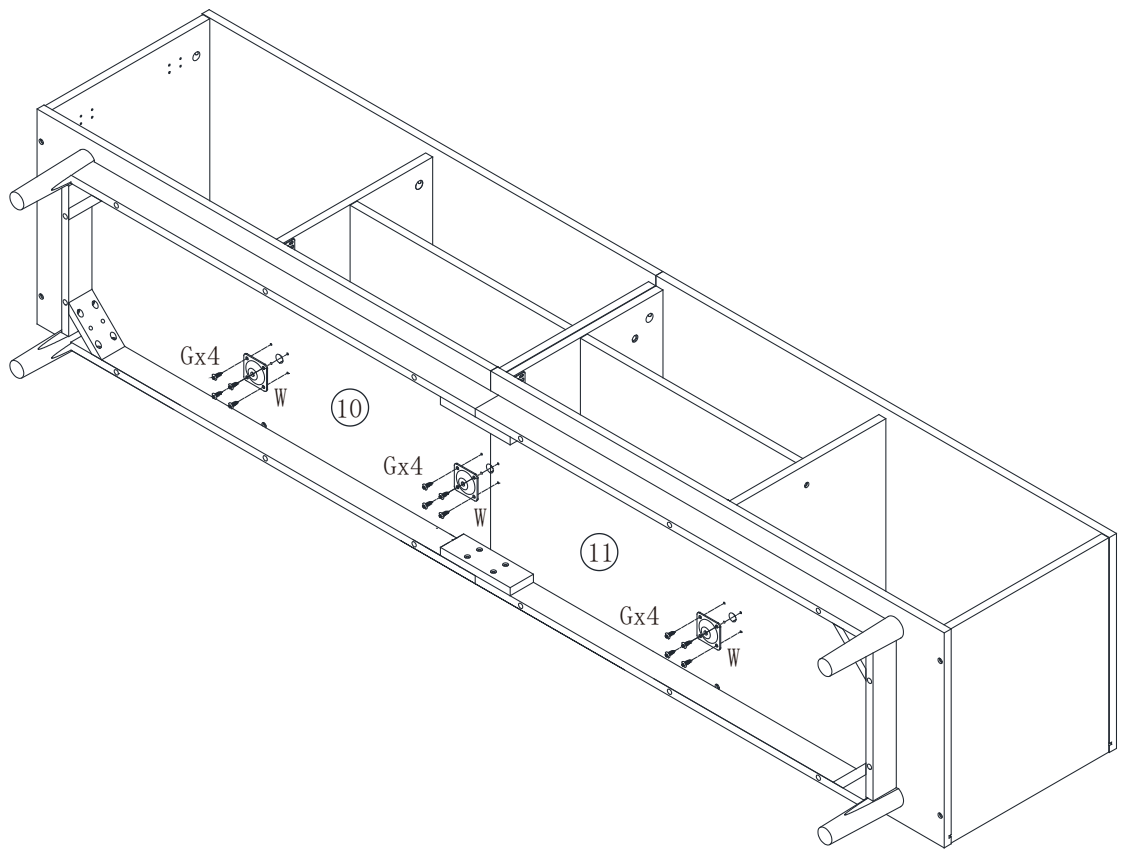 

  STEP 19


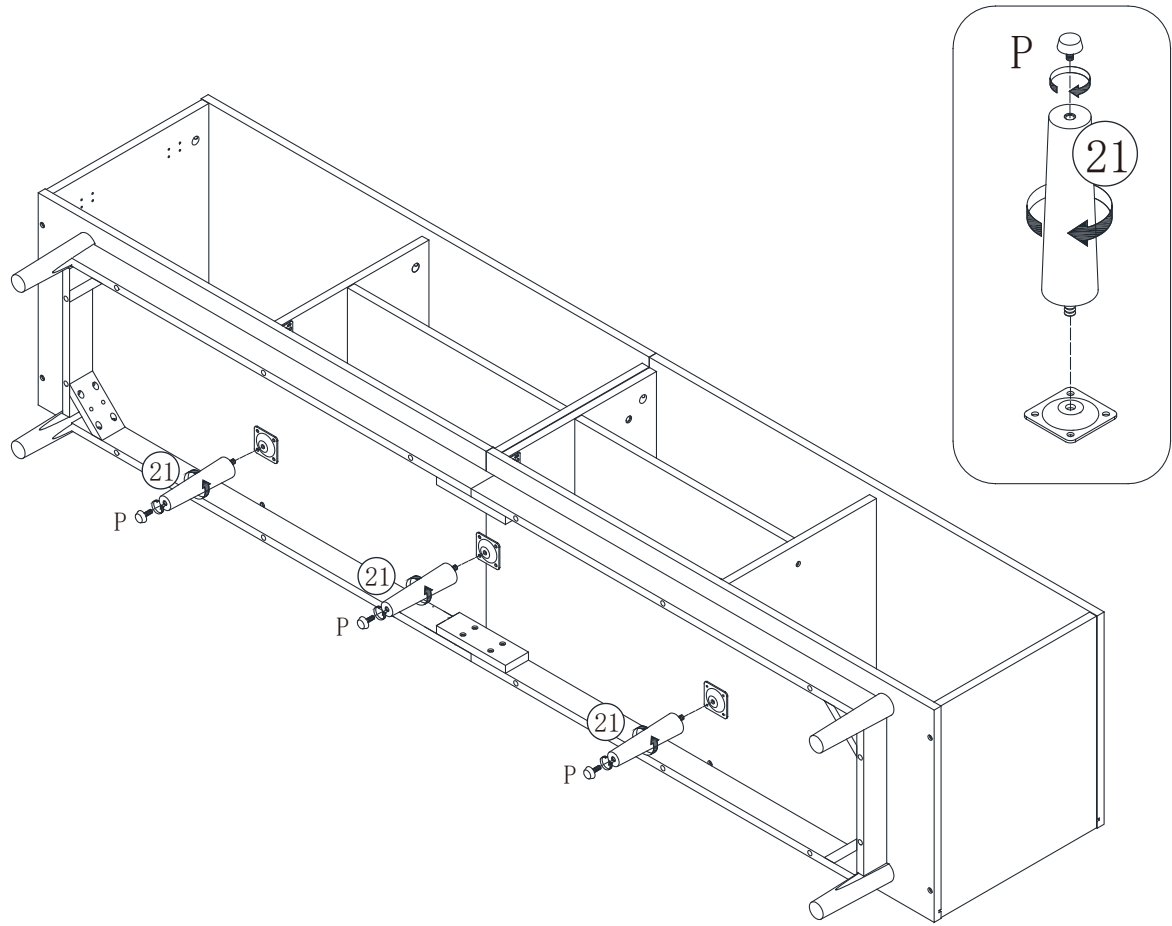
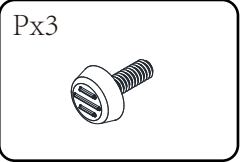


       STEP 20

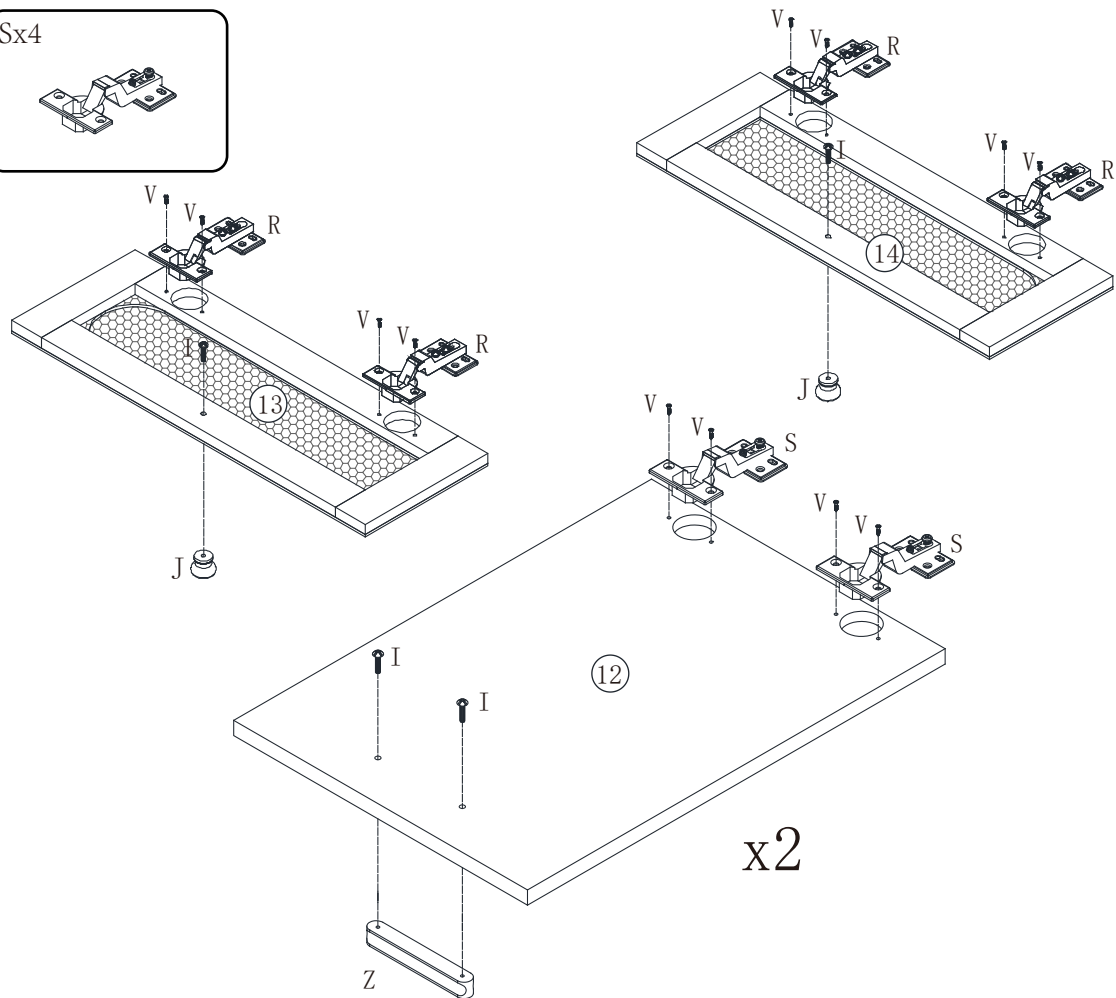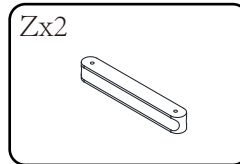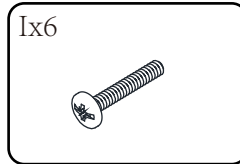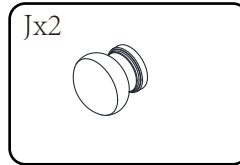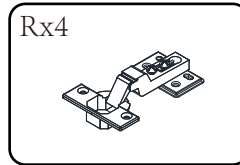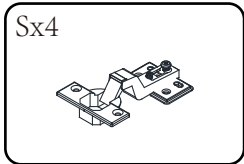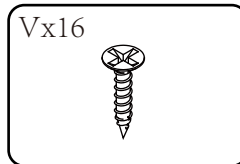

STEP 21

 
 
 
Vx16

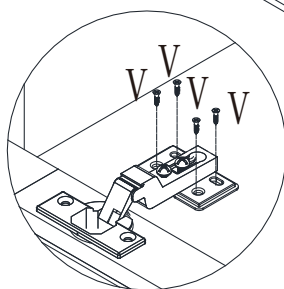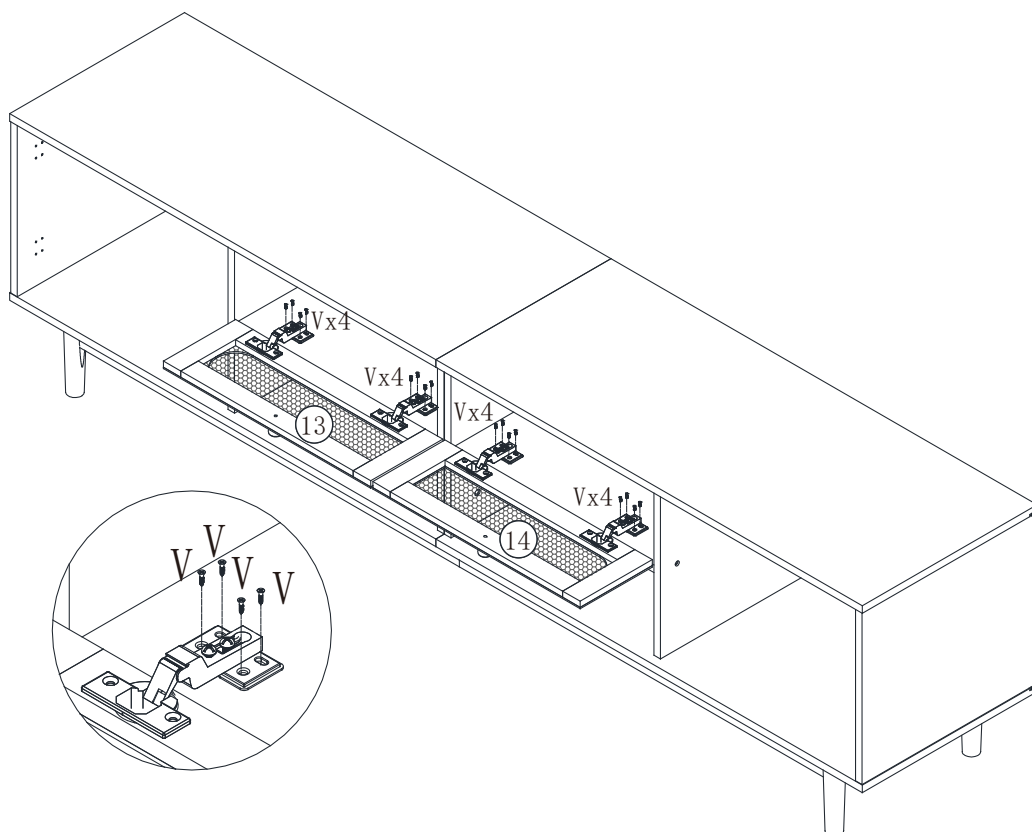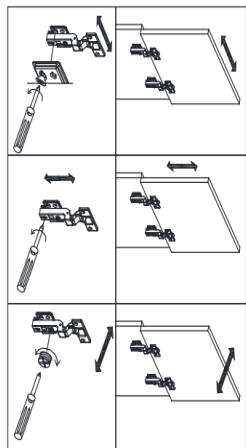

(For detailed hinge adjustment instructions, please refer to the last page.)




STEP 22

   Vx16



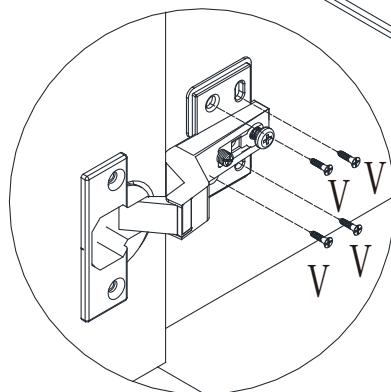
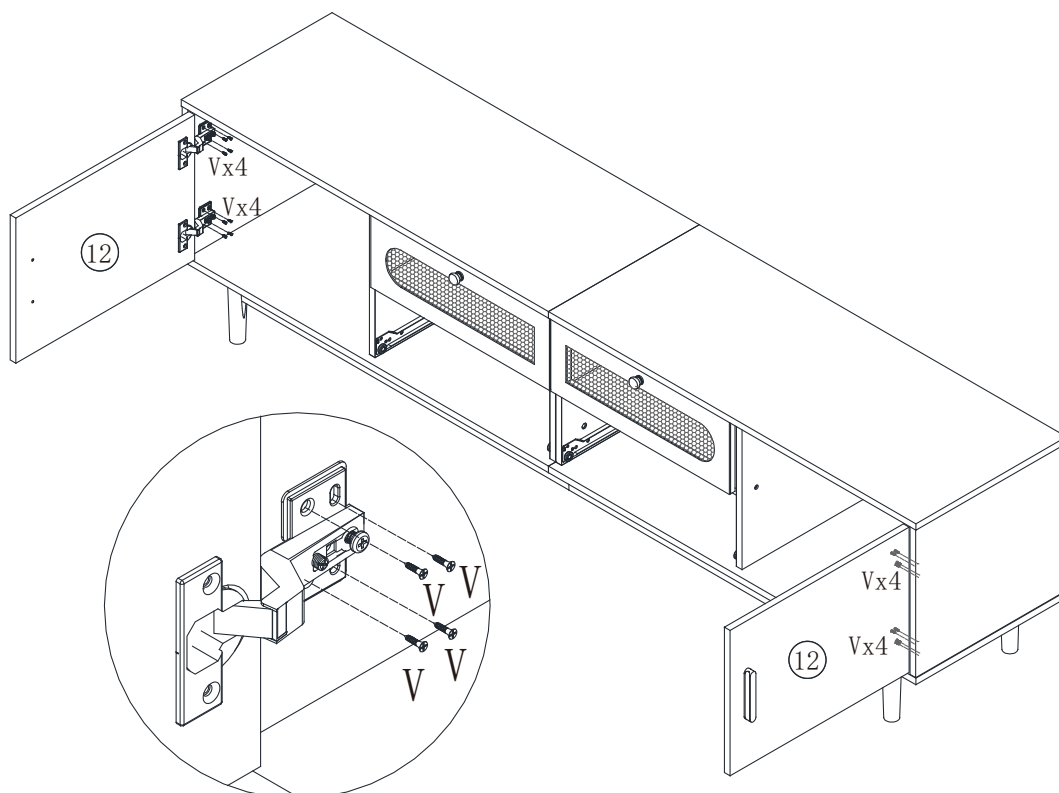
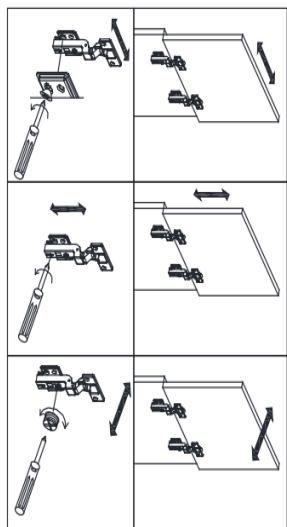


(For detailed hinge adjustment instructions, please refer to the last page.)


 
 
 
STEP 23

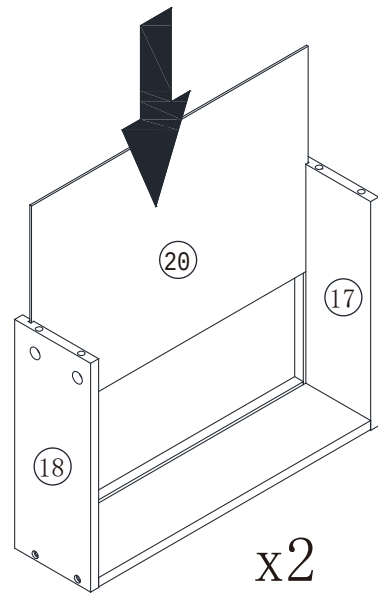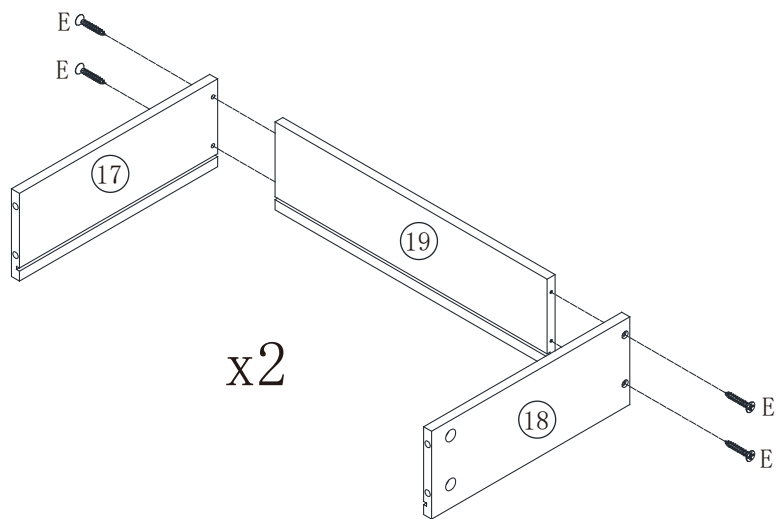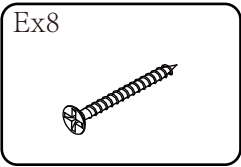

 
 
 
 
 
STEP 24

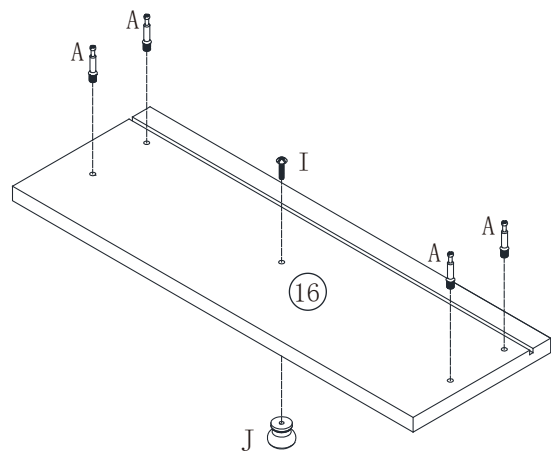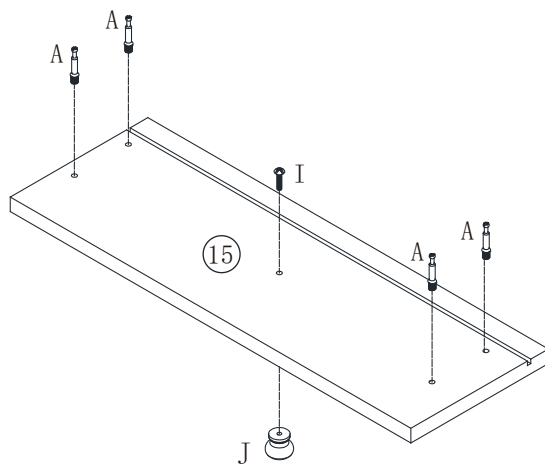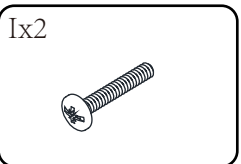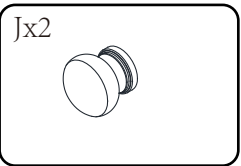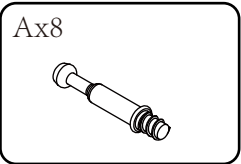

    
STEP 25

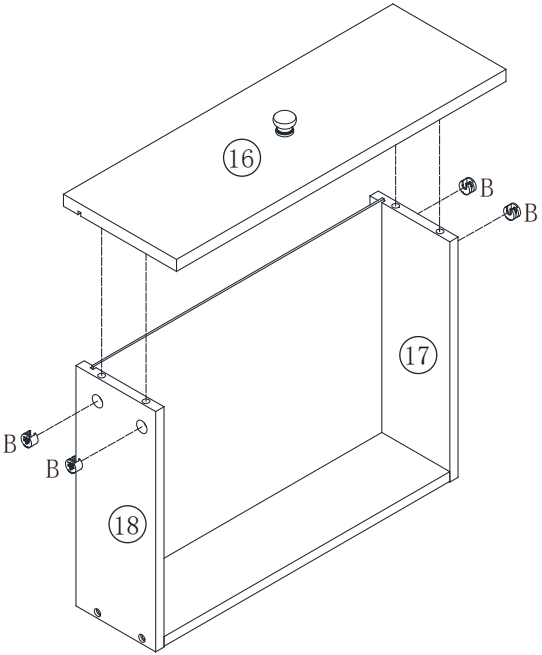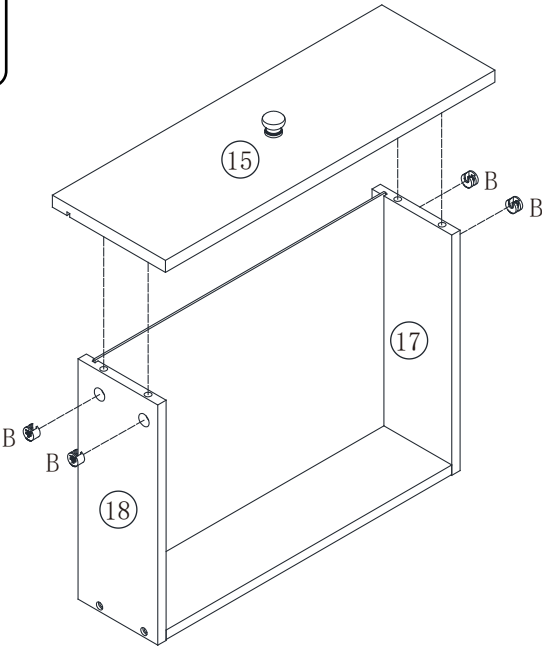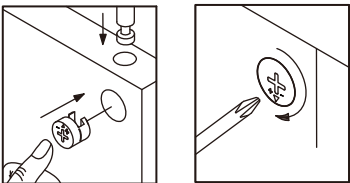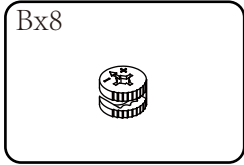

  
 
 
 
STEP 26

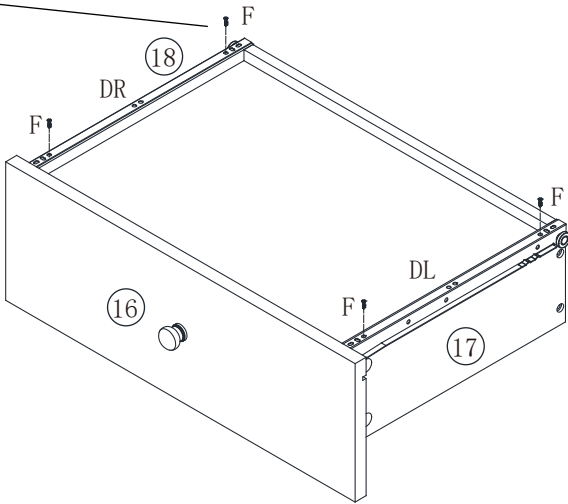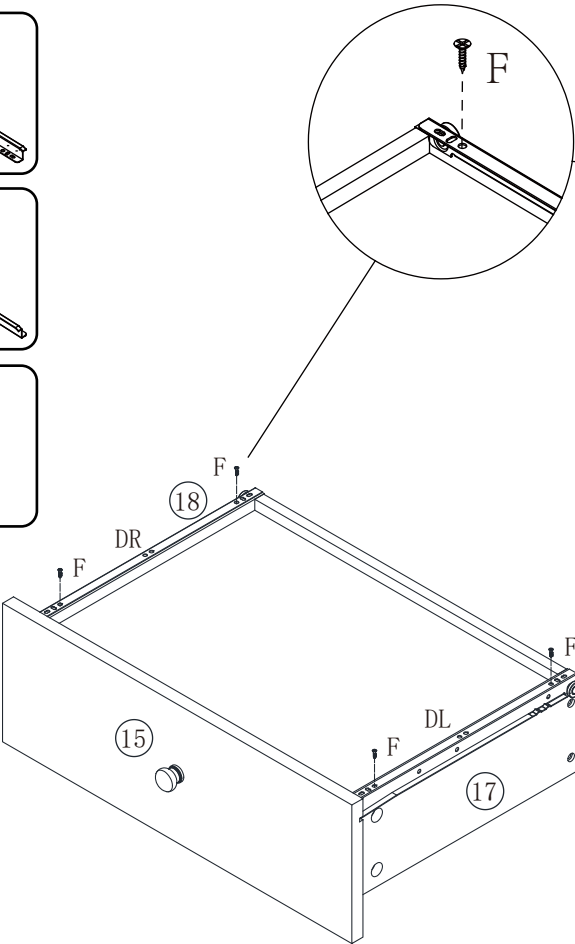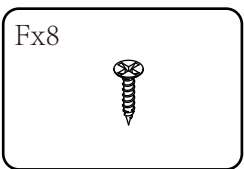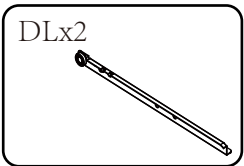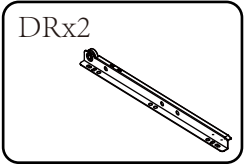



 
STEP 27

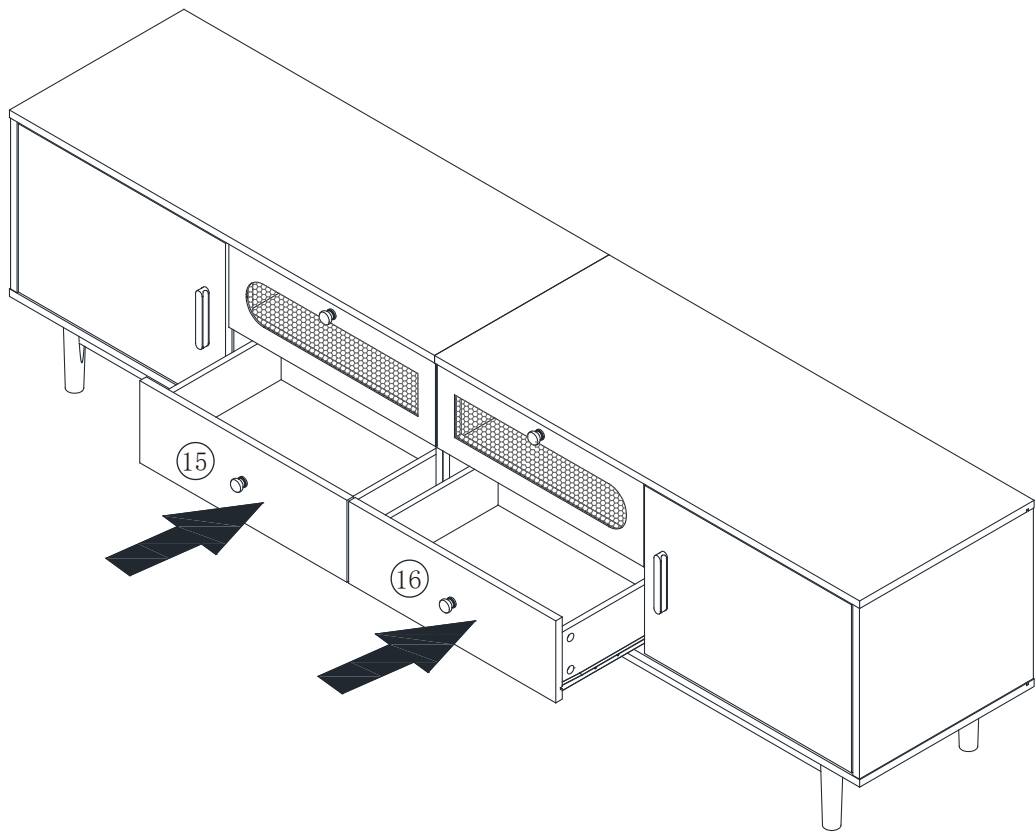

    
STEP 28

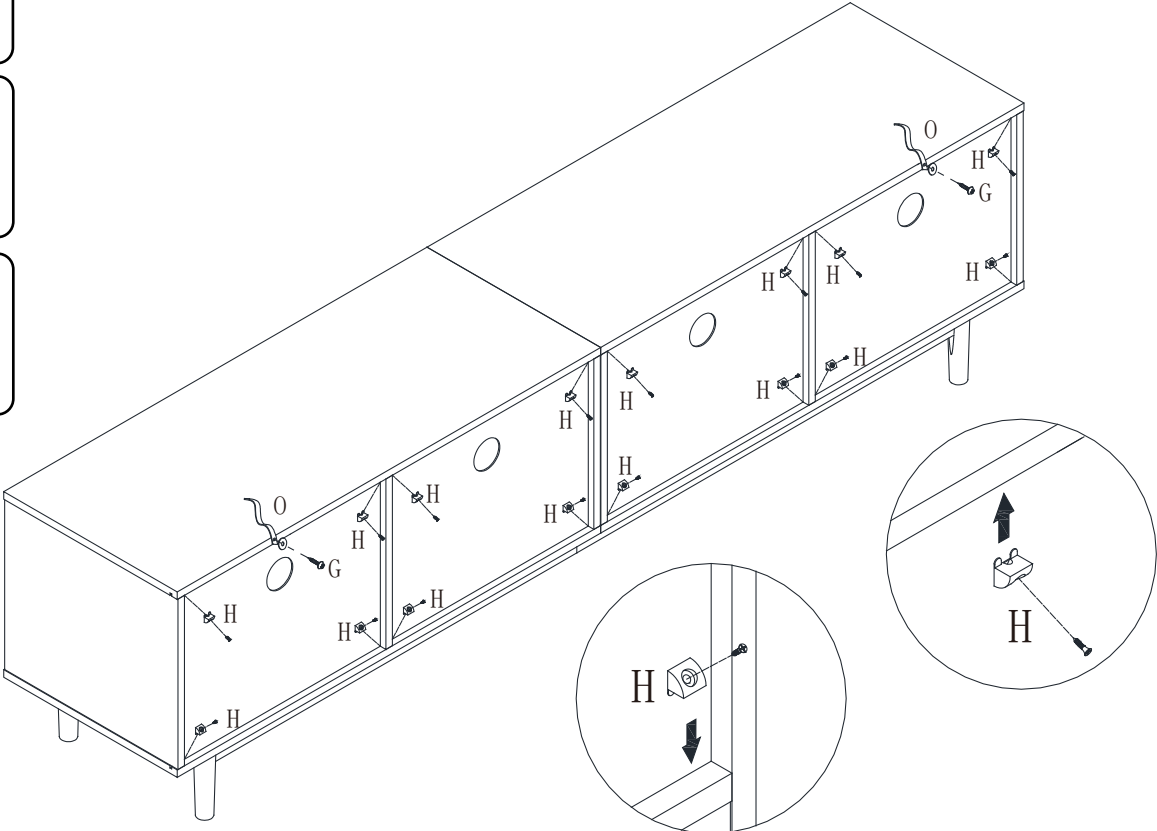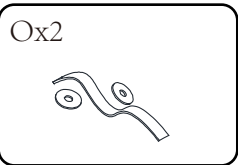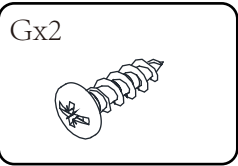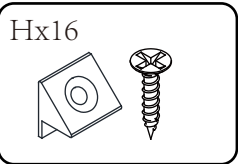

   
STEP 29

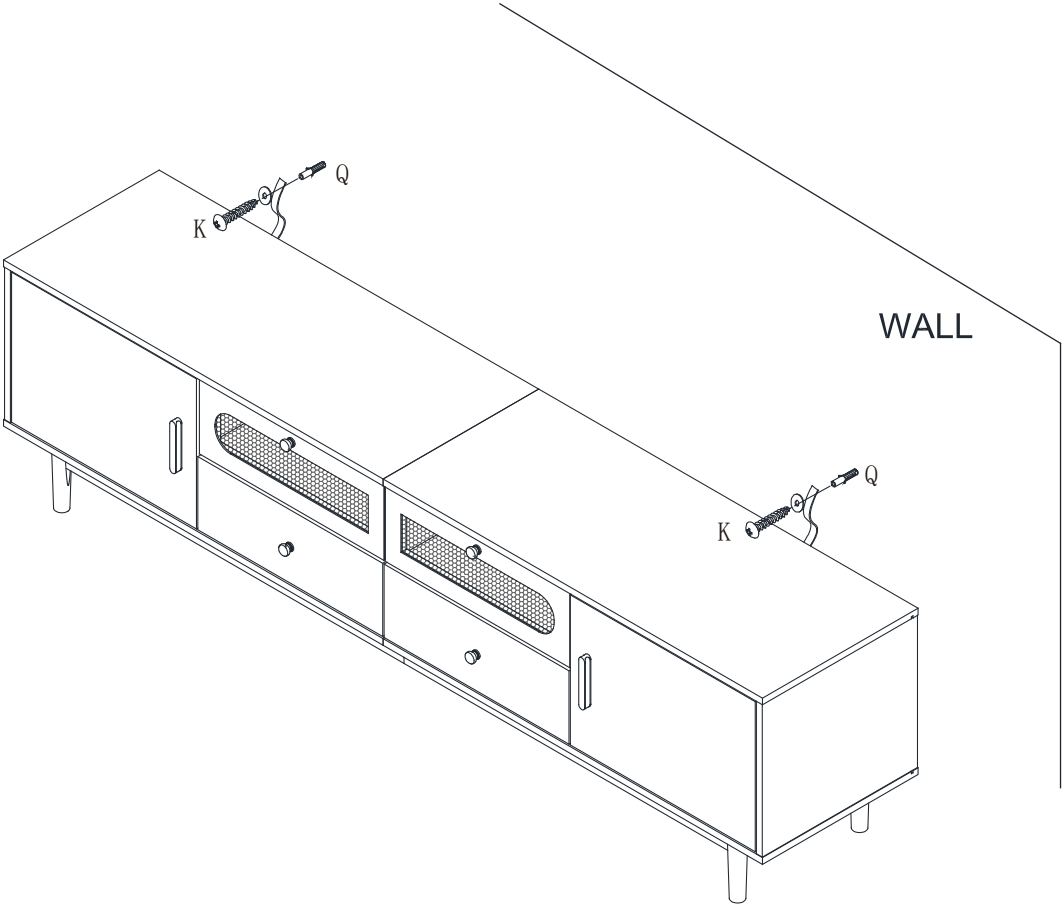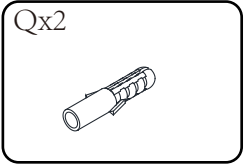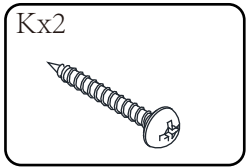

 STEP 30

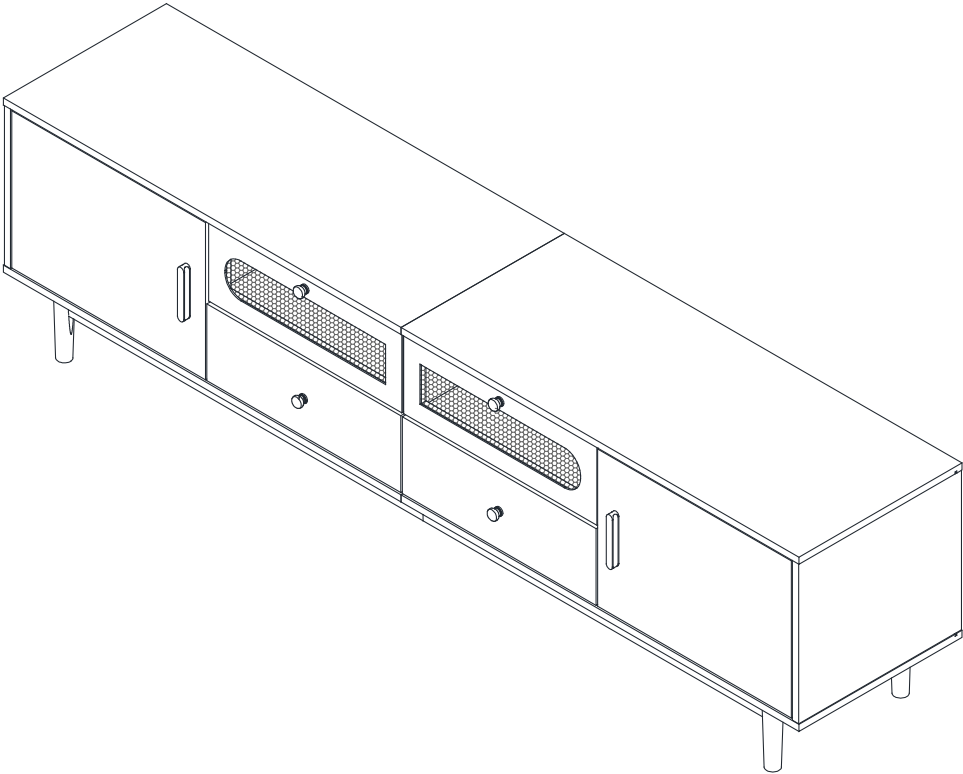

HINGE ADJUSTMENTS

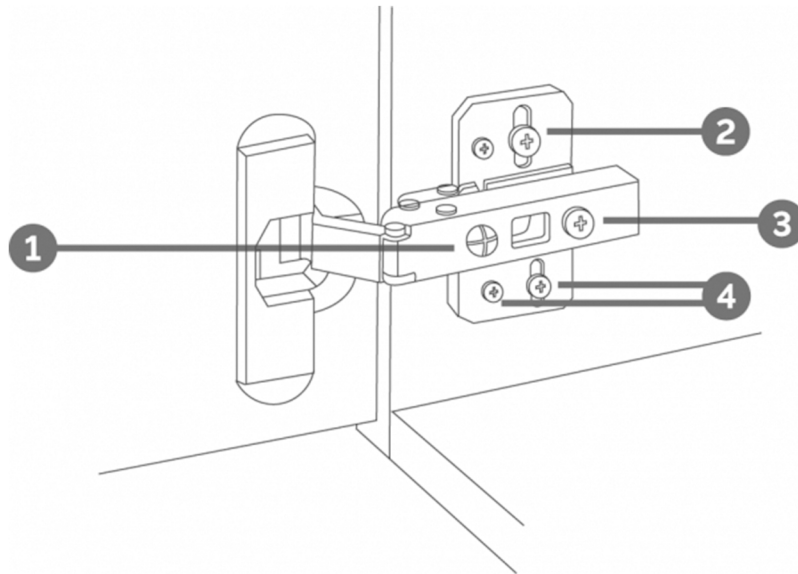 


① Sideways / Tilt adjustment

Turn the screw

clockwise to move the door further away from the side of the cabinet

 anticlockwise to move the door closer to the side of the cabinet

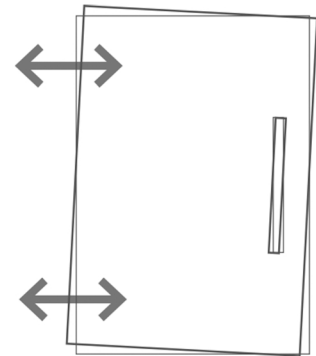


② ④ Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up

 anticlockwise to move the door down

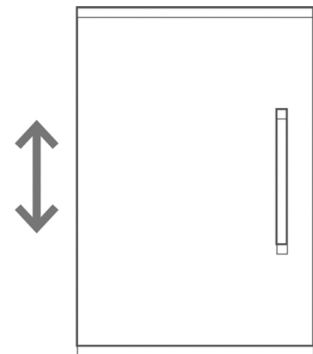

③ Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw

clockwise to decrease the gap between the door and the cabinet

anticlockwise to increase the gap between the door and the cabinet

