 
 


# INSTRUCTION

 
## Part List

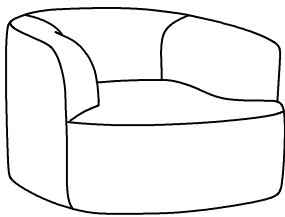

Chairs  
X 1

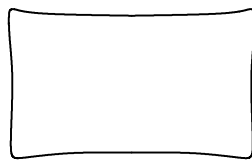


Pillow  
X 1

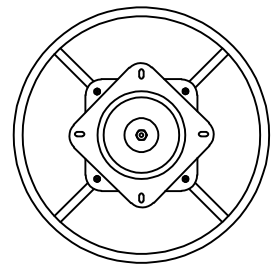


Turntable  
X 1


## Hardware List

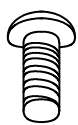

Bolt  
4+1PCS

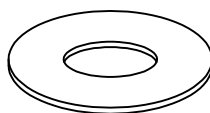


Washer  
4+1PCS

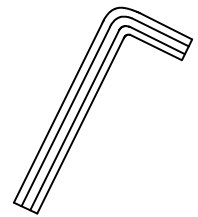 

Allen key  
X 1

## STEP:1

Do not use knife

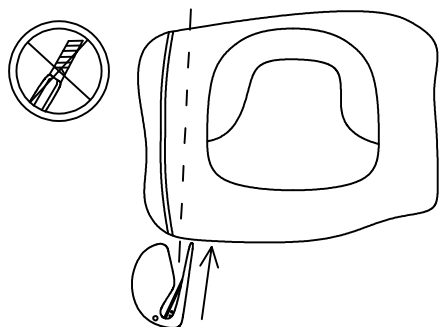


## STEP:2


After opening

Two hours later

 72hours later


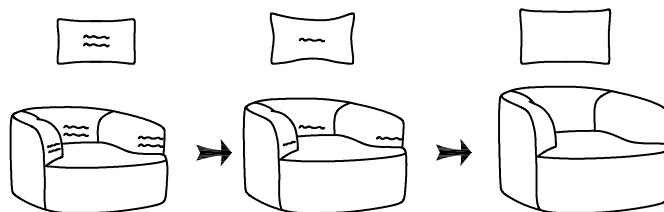


## STEP:3

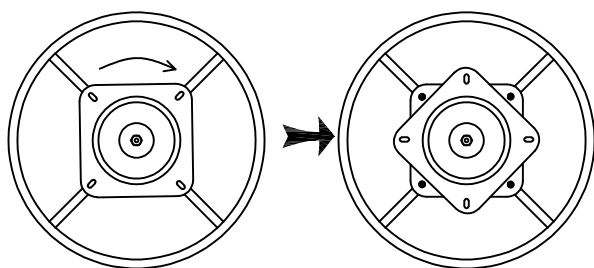 


## STEP:4

  
A		X4
B		X4
C		X1

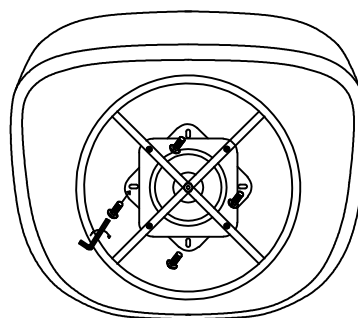

## FINISHED

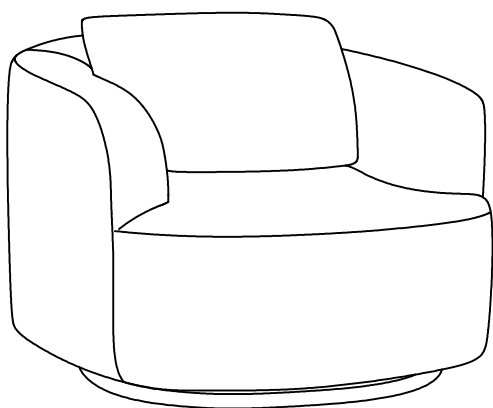 

 The sofa cushions need 72hours to decompress and fully inflate before using them.

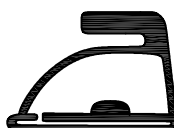

If there are still minor wrinkles, you can try ironing the sofa.