

NOTICE

*Please make sure that you have all part indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

*This item should be assembled on a soft surface to prevent scratching the finish during assembly.

*This item may require periodic tightening.

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

*Before beginning assembly of product, make sure all part are present. Compare part with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.

 
*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.


Part List

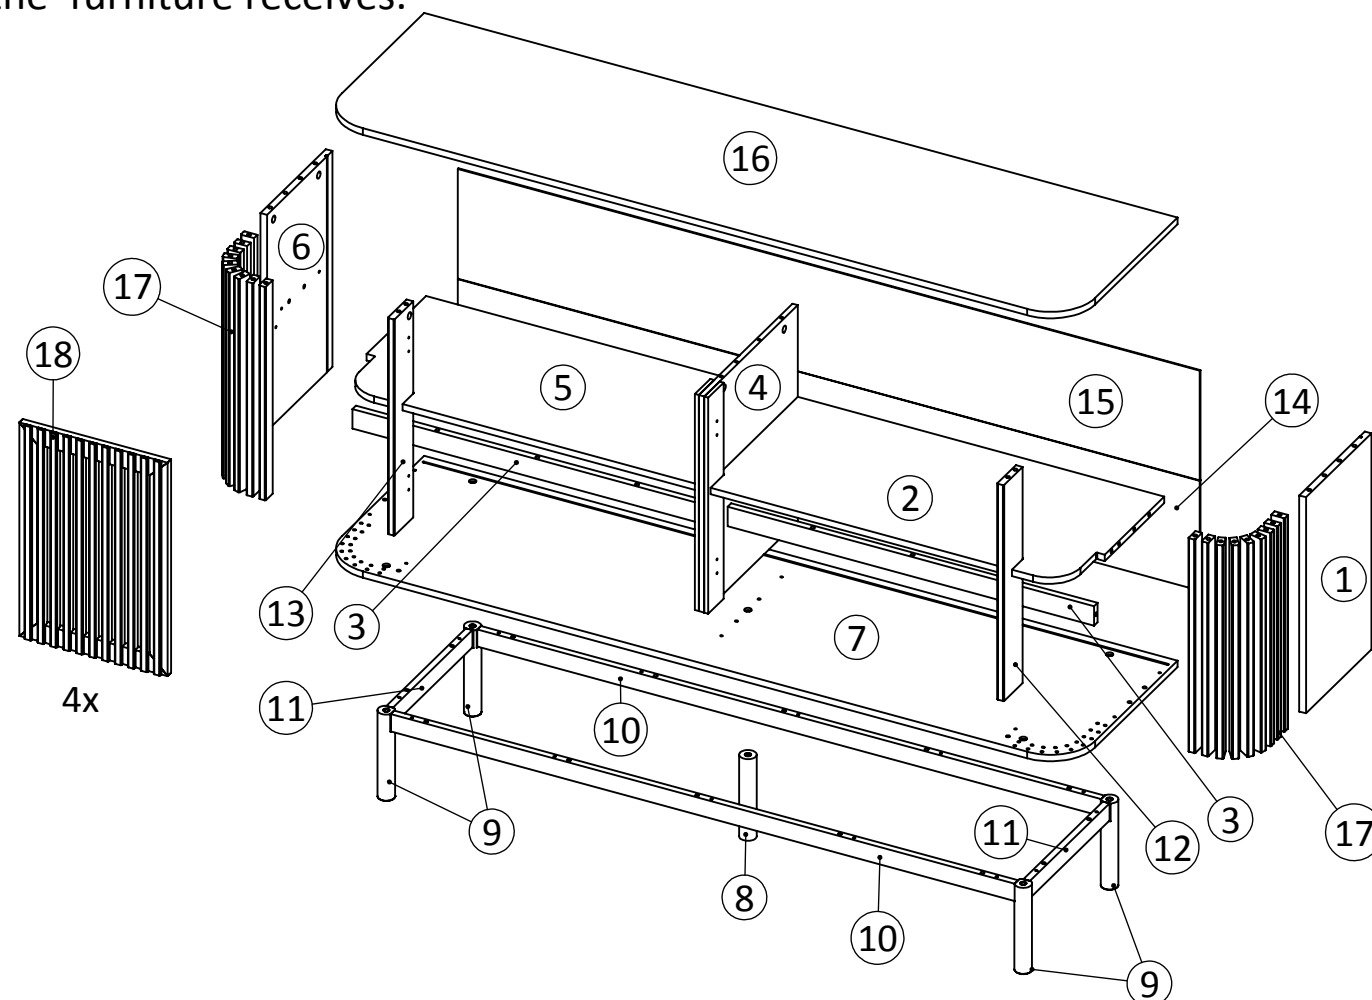

 **SAFAVIEH**
FURNITURE

Model#MED3104

 Product Dimensions: W 66.53" x D 71.71" x H 28.74"

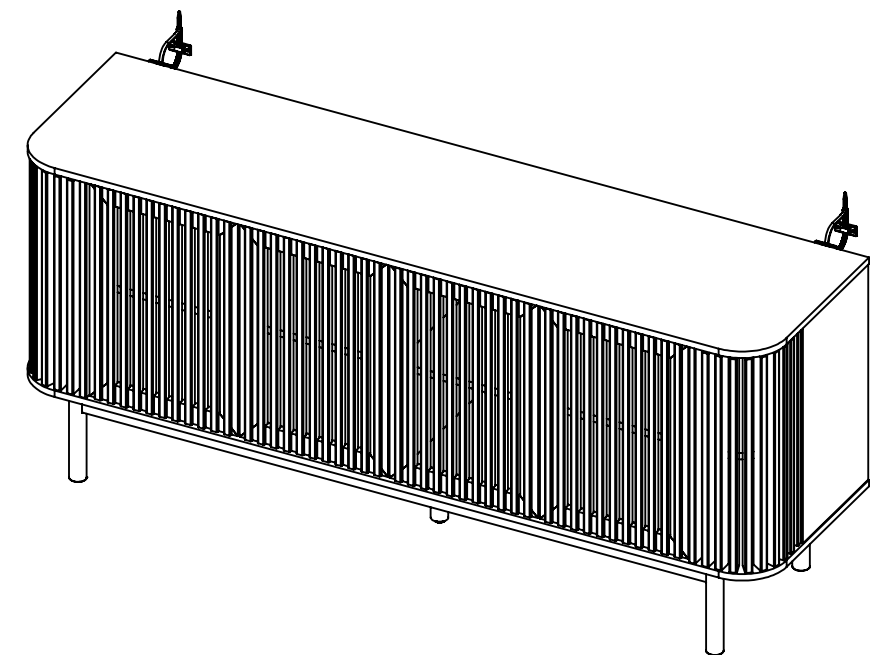

 
 
 


 
 

 

 
 
 
 
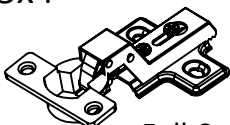 
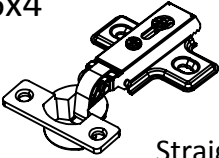 


 
 

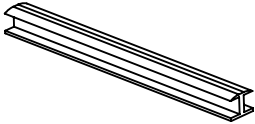 
 
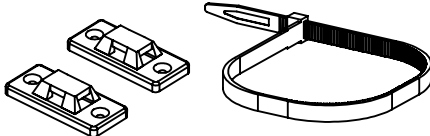 
 
WARNING

This product is intended for use with a
FLAT SCREEN TV ONLY
Maximum Screen Size: 75 inches
Weight Limit: 81 lbs
Shelf Load Limit: 34 lbs
Use with heavier televisions may result in
instability causing tip over resulting in death
or Serious injury.

WARNING

Death or serious injury may occur
when children climb on audio
and/or video equipment furniture.
A remote control or toys placed on
the furnishing may encourage a
child to climb on the furnishing and
as a result the furnishing may tip
over on to the child

Hardware List
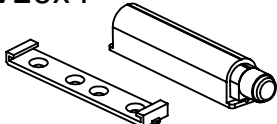
<div>HW1x22</div> <div></div> <div>Ø6x32MM</div>	<div>HW2x20</div> <div></div> <div>Ø15x12MM</div>	<div>HW3x2</div> <div></div> <div>Ø15x9.6MM</div>	<div>HW4x38</div> <div></div> <div>Ø8x32MM</div>	<div>HW5x40</div> <div></div> <div>Ø6x30MM</div>	<div>HW6x22</div> <div></div> <div>Ø6x50MM</div>
<div>HW7x4</div> <div></div> <div>Ø6x15MM</div>	<div>HW8x8</div> <div></div> <div>Ø6x12MM</div>	<div>HW9x12</div> <div></div> <div>Ø4x19MM</div>	<div>HW10x32</div> <div></div> <div>ØM5x12MM</div>	<div>HW11x5</div> <div></div> <div>Ø6x40MM</div>	<div>HW12x4</div> <div></div> <div>Ø10x50MM</div>
<div>HW13x5</div> <div></div> <div>Ø6MM</div>	<div>HW14x12</div> <div></div>	<div>HW15x4</div> <div></div> <div>Full Curve Hinge</div>	<div>HW16x4</div> <div></div> <div>Straight Hinge</div>	<div>HW17x16</div> <div></div> <div>Ø20MM</div>	<div>HW18x1</div> <div></div>
<div>HW19x1</div> <div></div> <div>L4MM</div>	<div>HW20x4</div> <div></div>	<div>HW21x4</div> <div></div> <div>Ø8MM</div>	<div>HW22x1</div> <div></div> <div>1653MM</div>	<div>HW23x2</div> <div></div>	<div>HW24x2</div> <div></div>
<div>HW25x4</div> <div></div> <div>Ø20MM</div>					


Part List & HW

Piece	Description	Qty	Carton Call
1	Right Side Panel	1	1 Of 2
2	Right Fixed Shelf	1	1 Of 2
3	Panel Support Shelf	2	2 Of 2
4	Center Panel	1	1 Of 2
5	Left Fixed Shelf	1	1 Of 2
6	Left Side Panel	1	1 Of 2
7	Bottom Panel	1	2 Of 2
8	Center Leg	1	1 Of 2
9	Leg	4	1 Of 2
10	Plint Support - Front/Back	2	2 Of 2
11	Plint Support - Side	2	2 Of 2
12	Pillar Right	1	1 Of 2
13	Pillar Left	1	1 Of 2
14	Back Panel - Lower	1	2 Of 2
15	Back Panel - Upper	1	2 Of 2
16	Top Panel	1	2 Of 2
17	Jalousie	18	1 Of 2
18	Door Panel	4	2 Of 2


Piece	Description	Qty	Carton Call
HW1	Cambolt	22	1 Of 2
HW2	Camlock Big Ø15x12 mm	20	1 Of 2
HW3	Camlock Small Ø15x9.6 mm	2	1 Of 2
HW4	Wooden Dowel Big Ø8	38	1 Of 2
HW5	Wooden Dowel Small Ø6	40	1 Of 2
HW6	Screw M6 x 50 mm	22	1 Of 2
HW7	Screw M6 x 15 mm	4	1 Of 2
HW8	Screw M6 x 12 mm	8	1 Of 2
HW9	Screw M4 x 19 mm	12	1 Of 2
HW10	Screw M5 x 12 mm	32	1 Of 2
HW11	JCBC Bolt M6 x 40 mm	5	1 Of 2
HW12	Screw M10 x 50 mm	4	1 Of 2
HW13	Washer	5	1 Of 2
HW14	Plastic Stopper	12	1 Of 2
HW15	Full Curve Hinge	4	1 Of 2
HW16	Straight Hinge	4	1 Of 2
HW17	Cover Cap Sticker	16	1 Of 2
HW18	Edging	1	1 Of 2
HW19	Allen Key	1	1 Of 2
HW20	Push To Open	4	1 Of 2
HW21	Fisher "S" 8	4	1 Of 2
HW22	List "H"	1	1 Of 2
HW23	Push Pin	18	1 Of 2
HW24	Anti-tip	2	1 Of 2
HW25	Felt Ø20 MM	4	1 Of 2

PREPARATION

 
Before beginning assembly of product, make sure all part are present. Compare part with part contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 60 minutes.

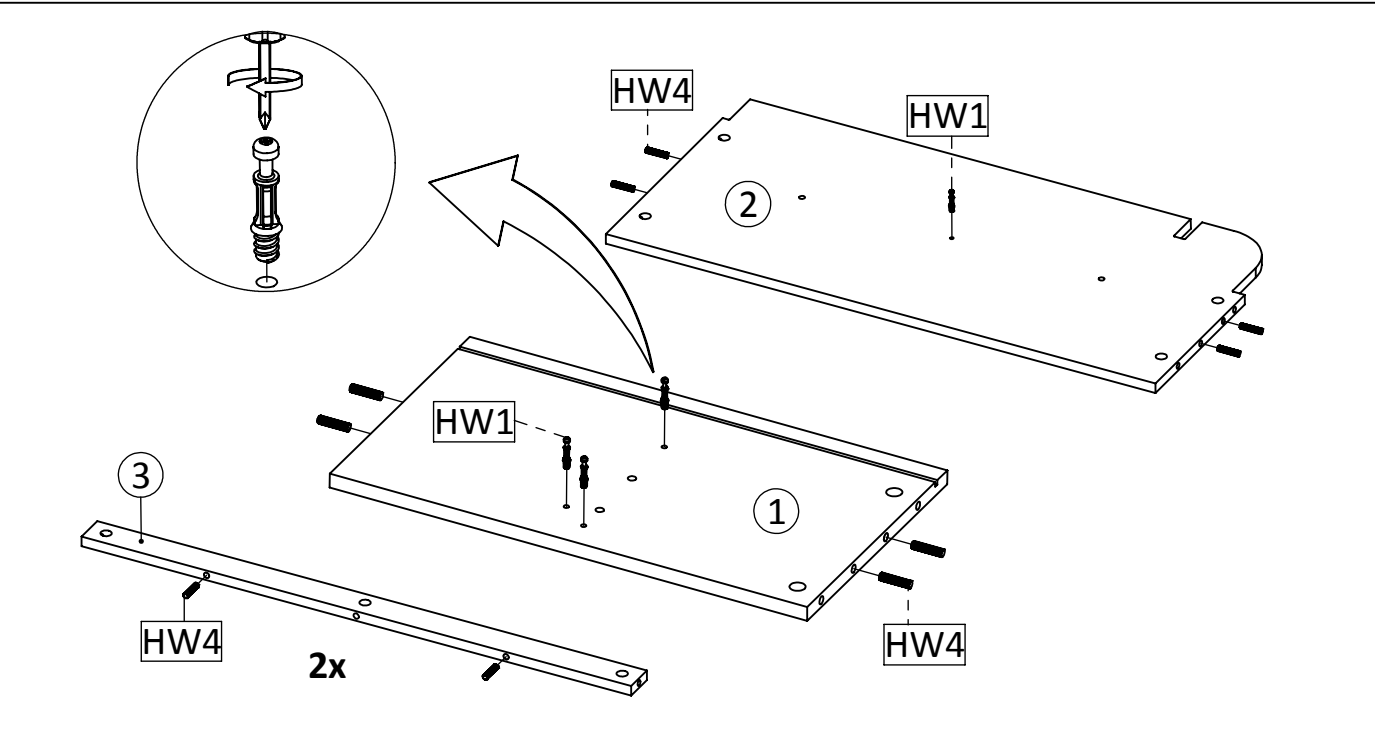

 
STEP1: Insert Cambolt (HW1) And Wooden Dowel Big Ø8 (HW4) Into Right Side Panel (1) And Right Fixed Shelf (2).
Insert Wooden Dowel Big Ø8 (HW4) Into Panel Support Shelf (3).

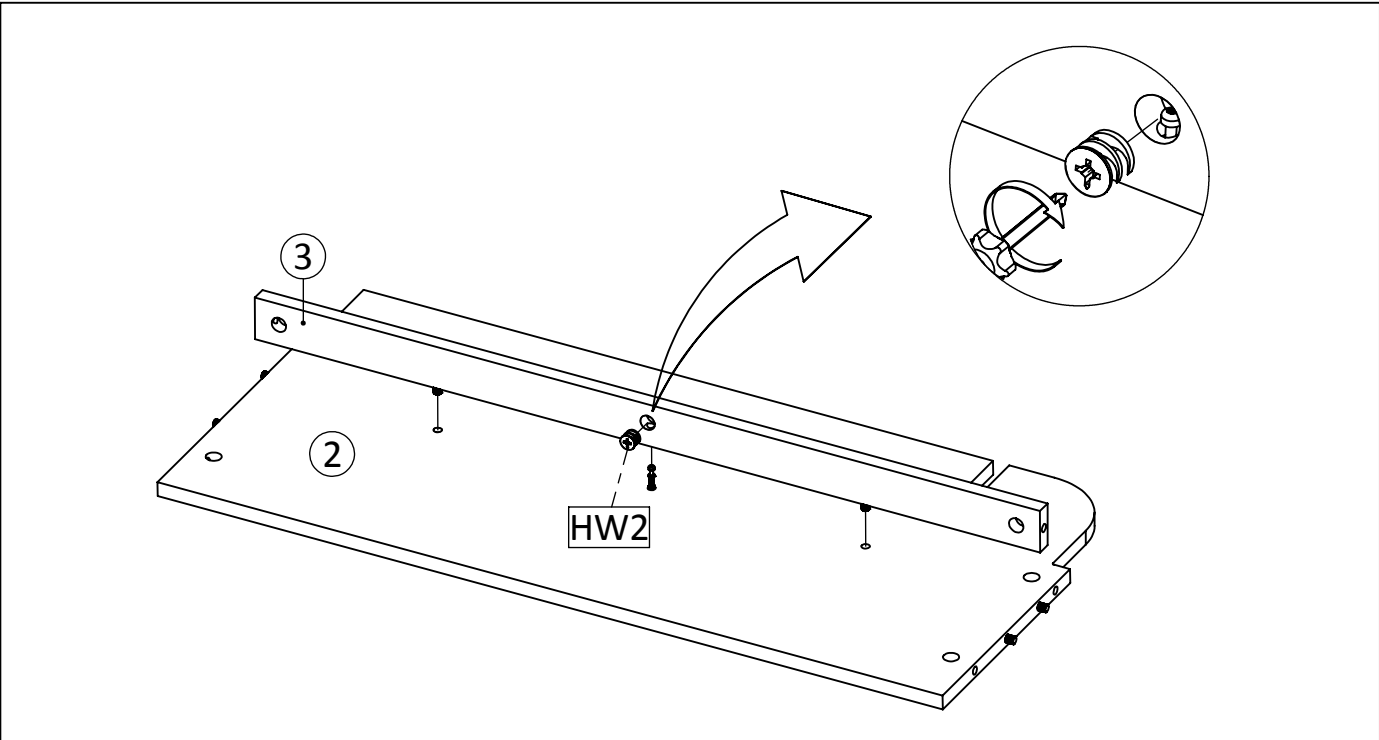




 
STEP2: Insert Panel Support Shelf (3) Into Right Fixed Shelf (2), Secure With Camlock Big (HW2) Tighten It Using Screwdriver.

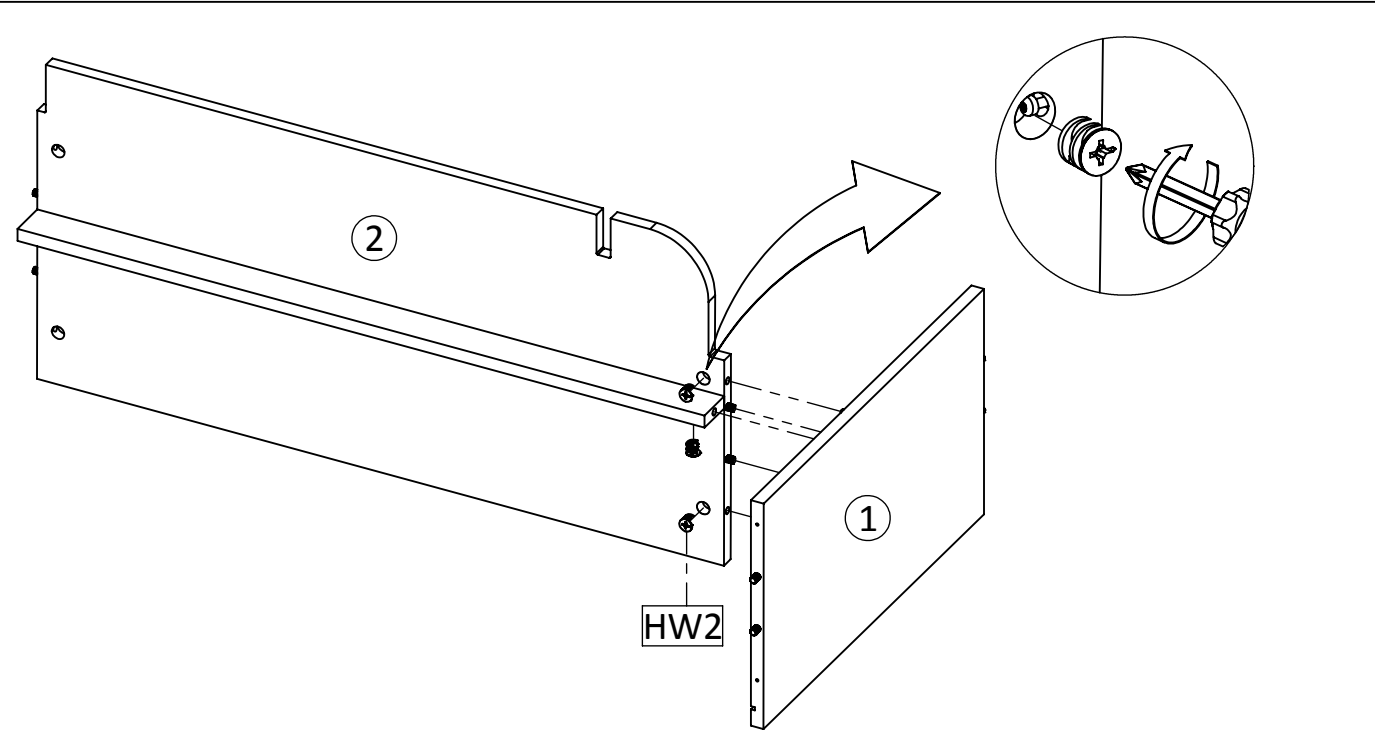


 STEP3: Insert Right Side Panel (1) Into Right Fixed Shelf (2), Secure With Camlock Big (HW2) Tighten It Using Screwdriver.

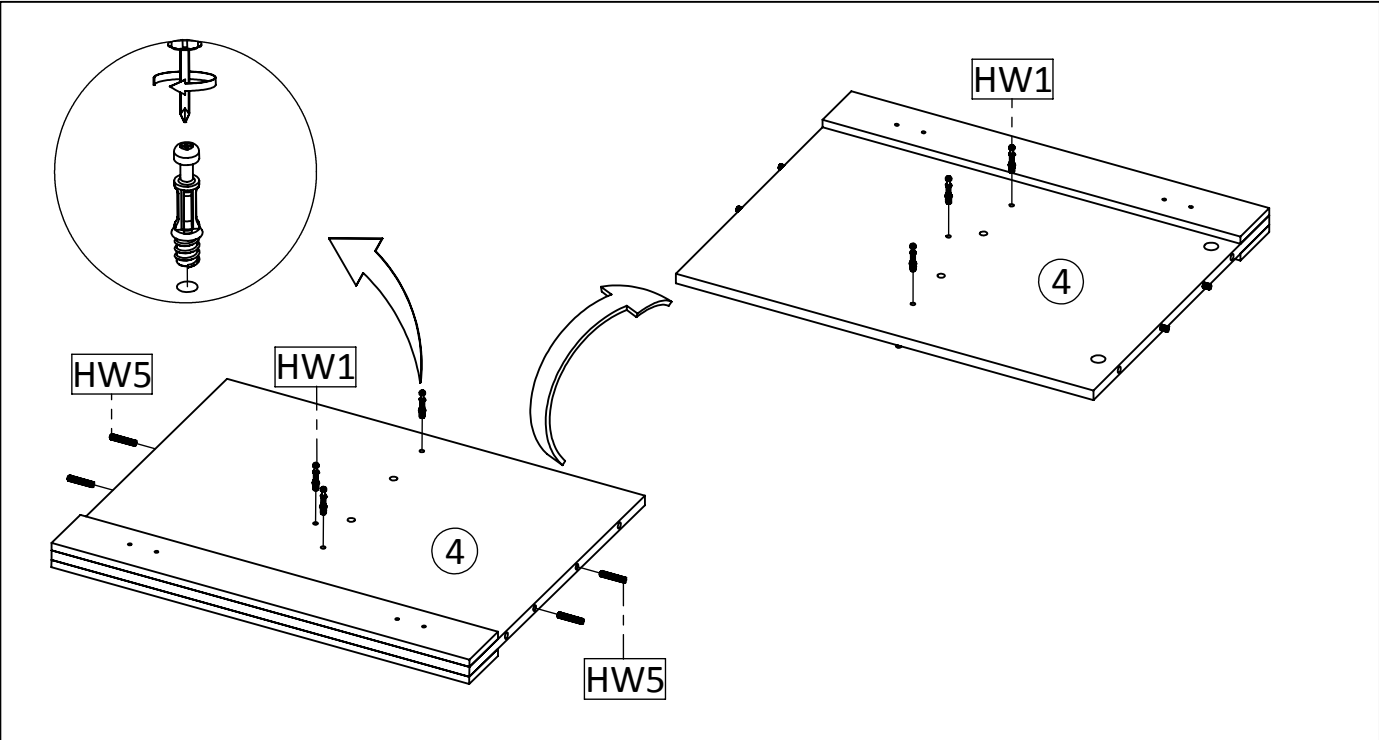


     STEP4: Insert Cambolt (HW1) And Wooden Dowel Small Ø6 (HW5) Into Center Panel (4).

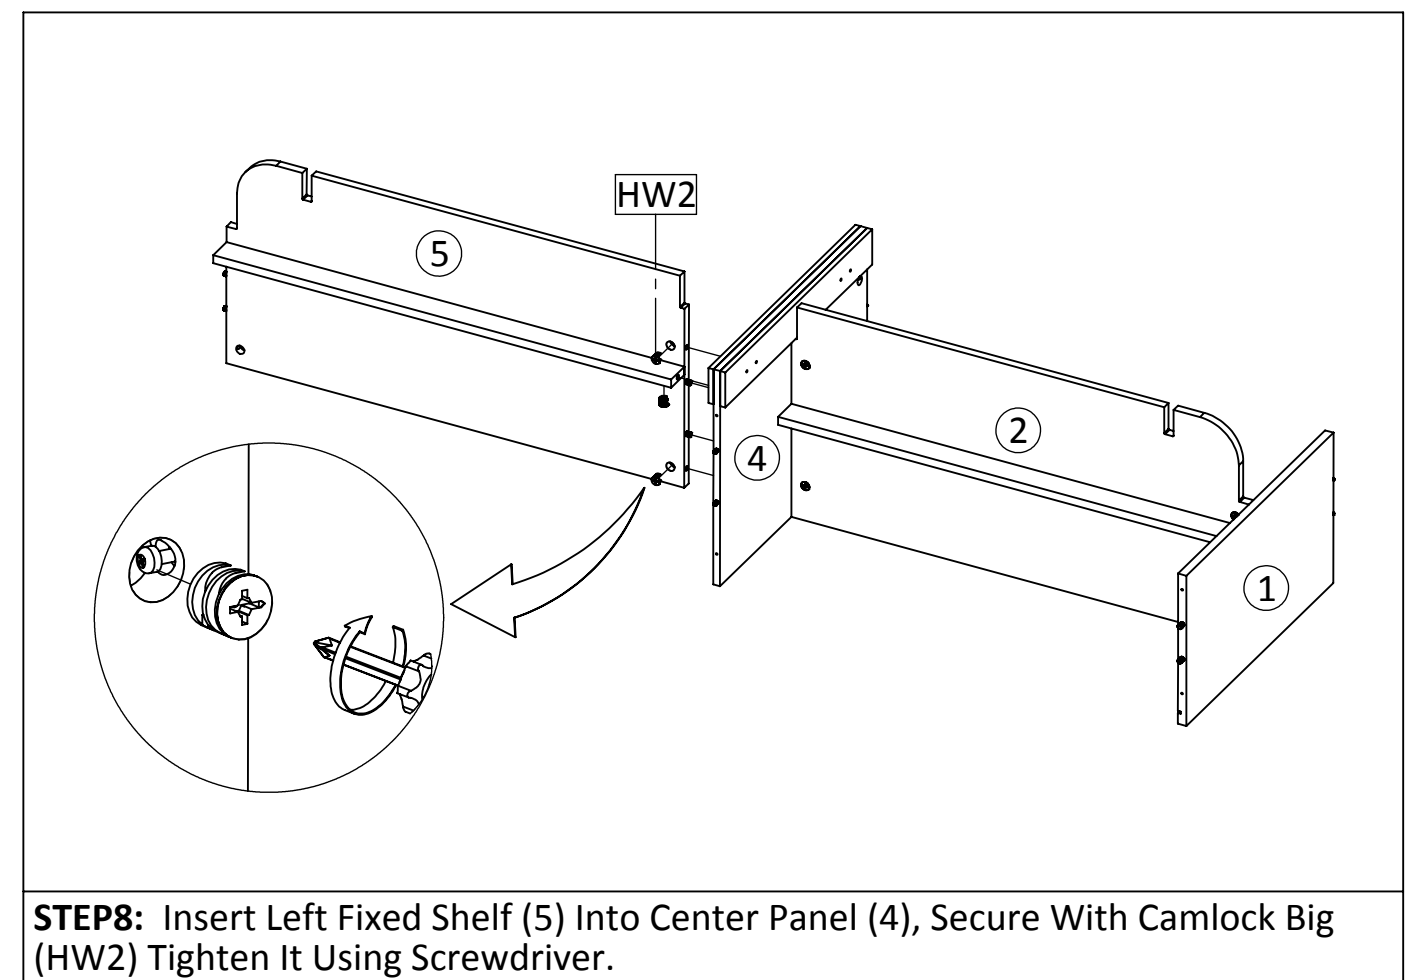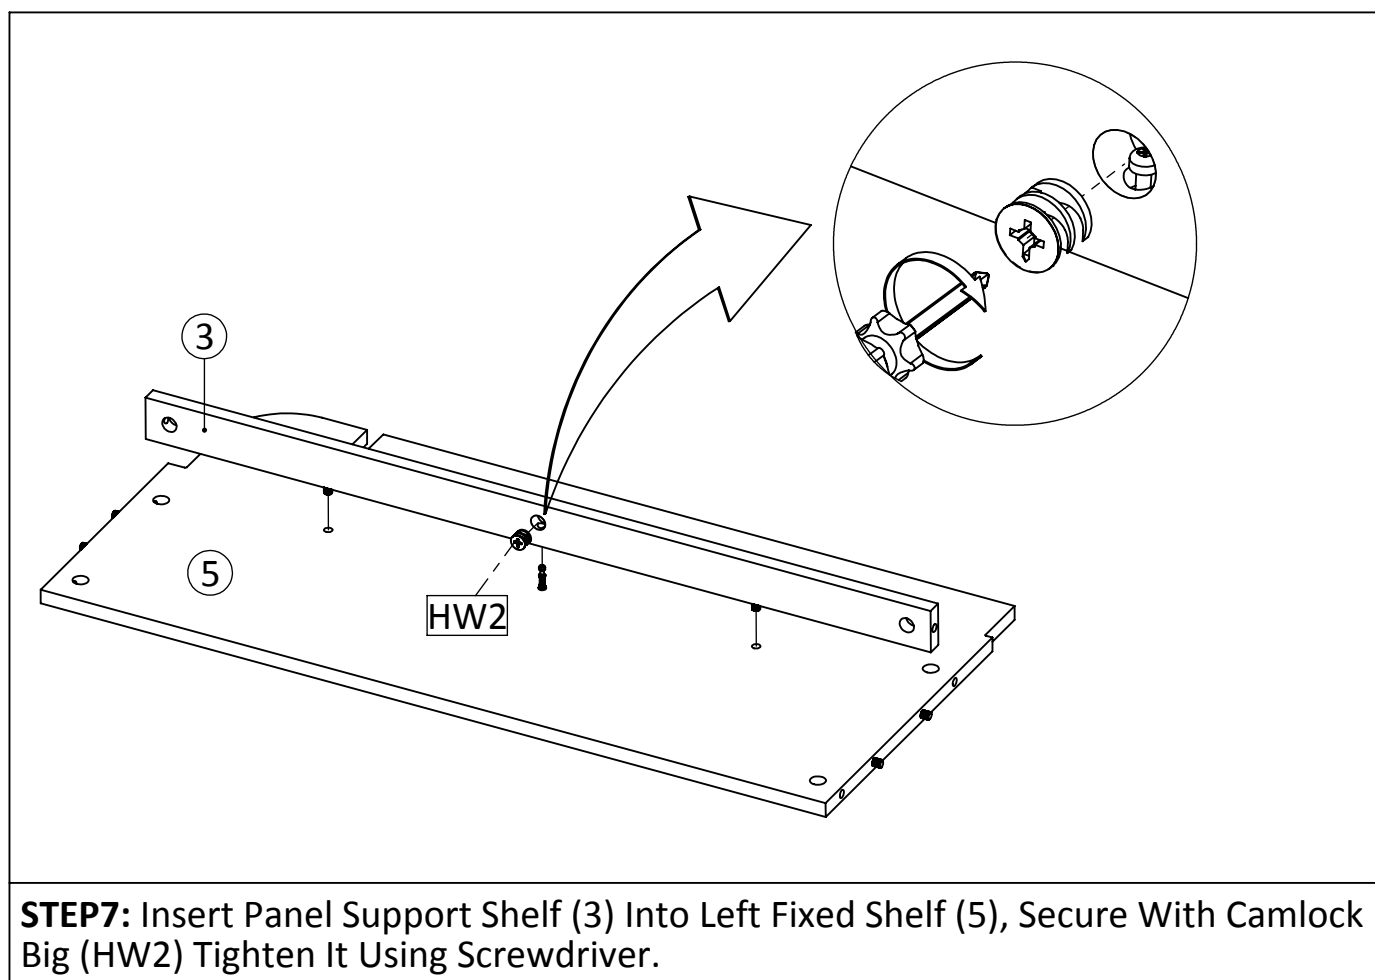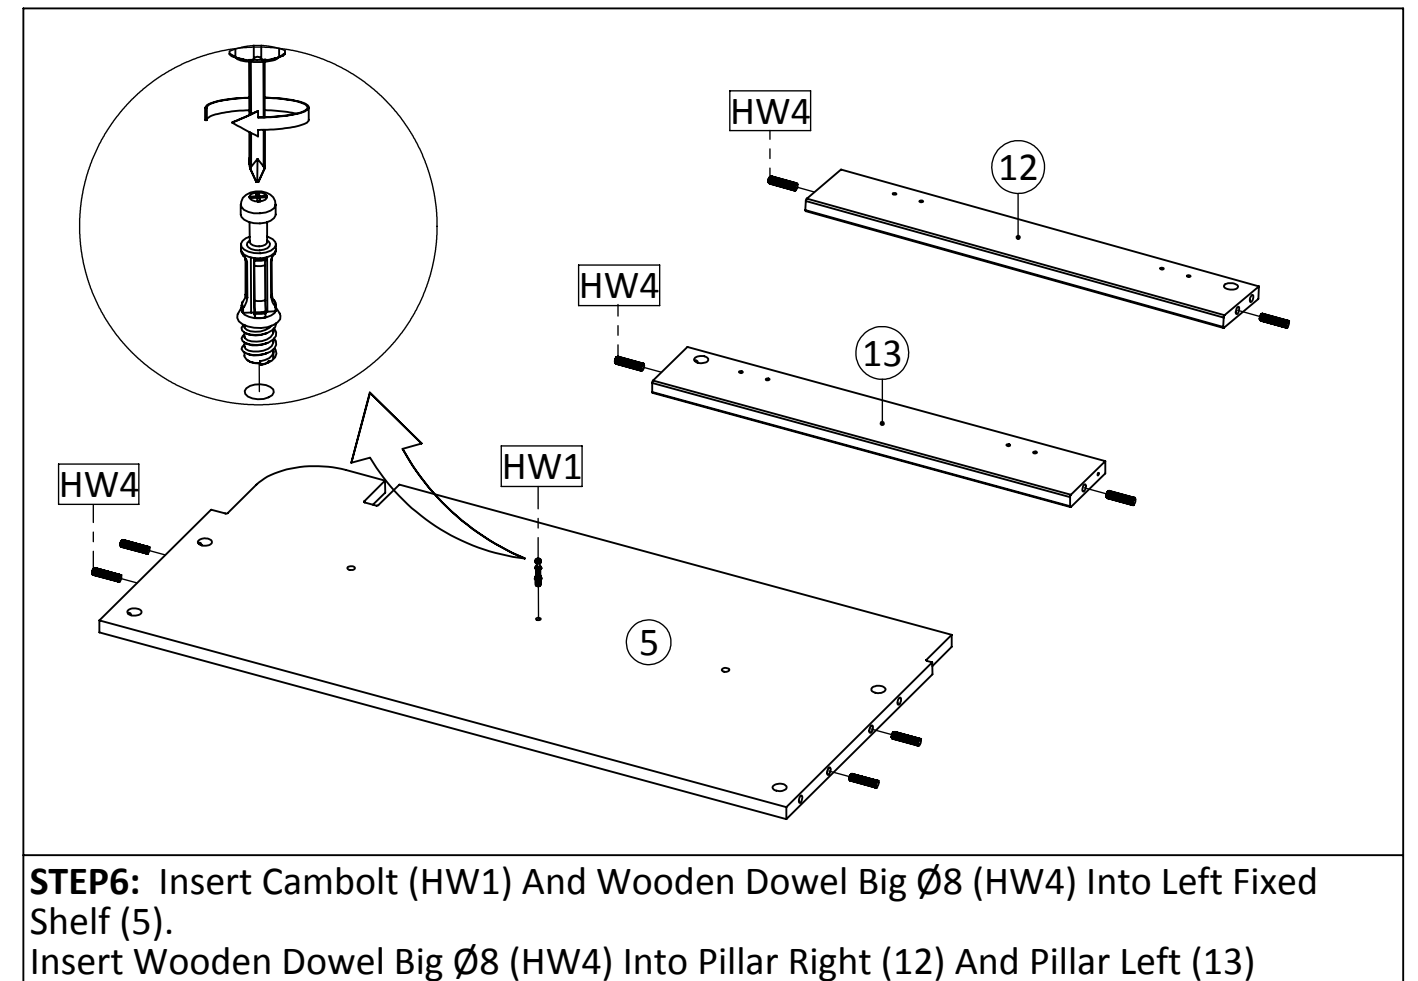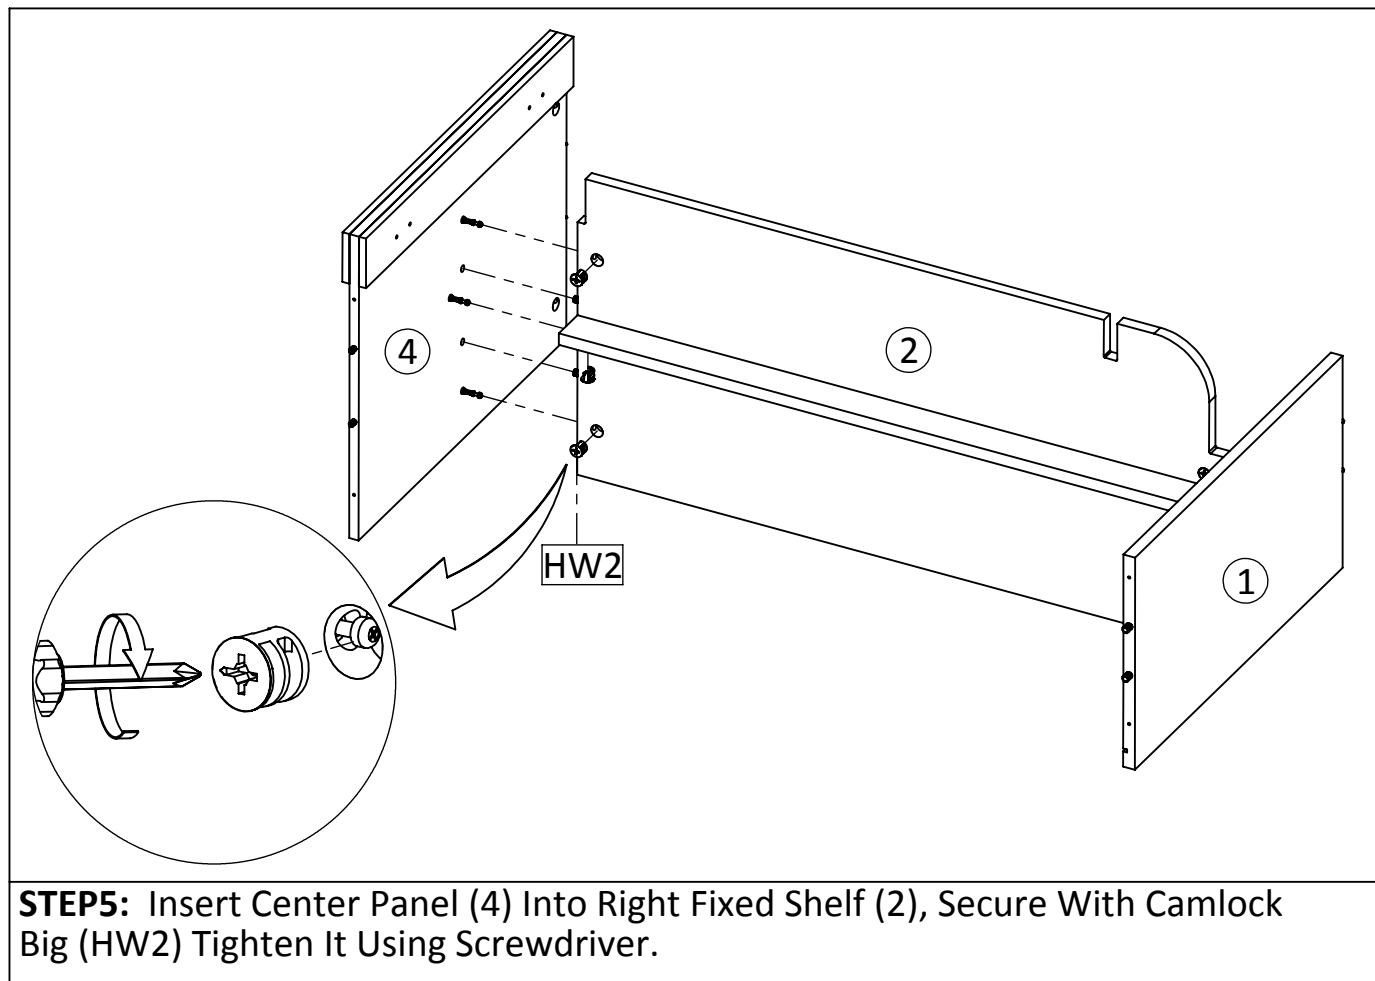


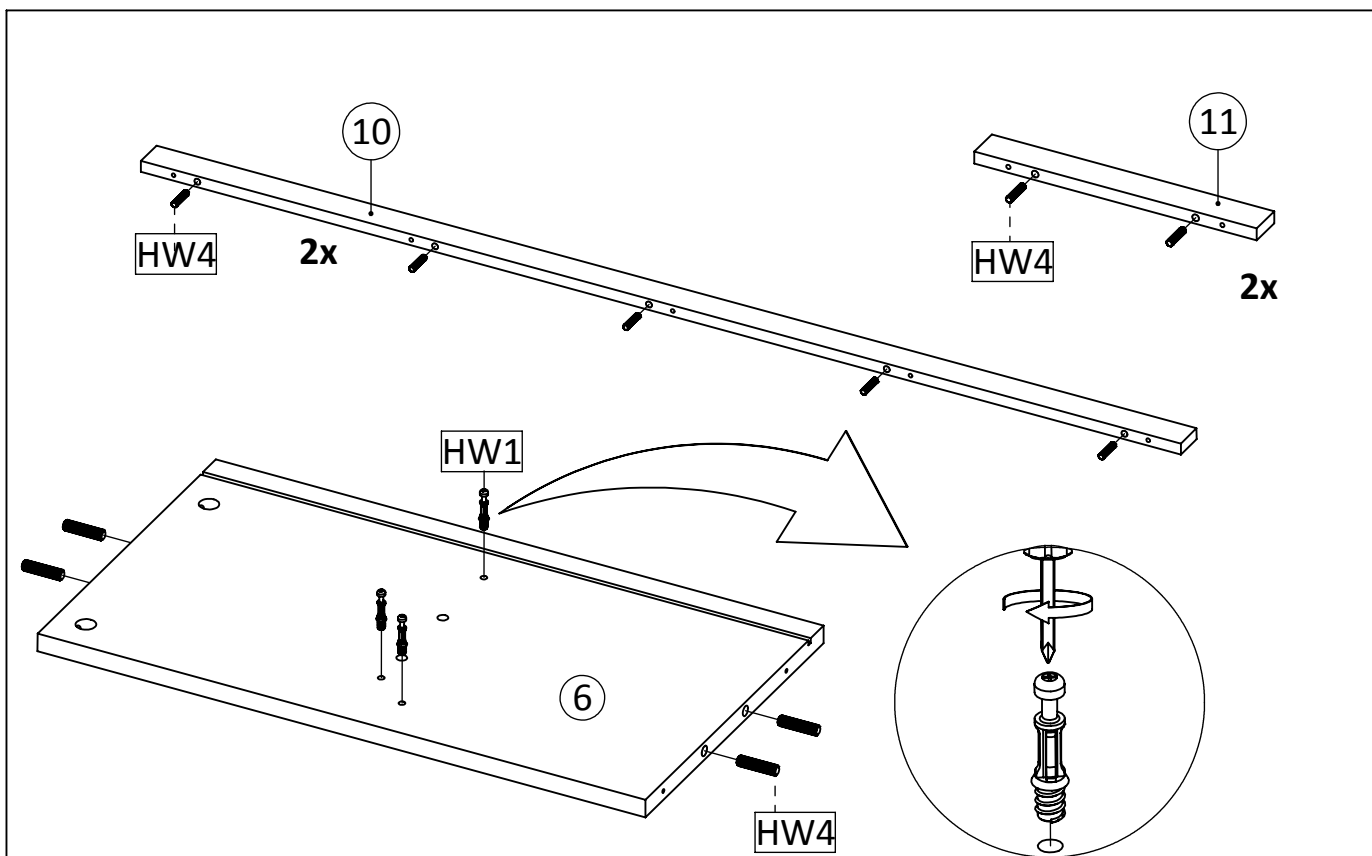

 
STEP9: Insert Cambolt (HW1) And Wooden Dowel Big Ø8 (HW4) Into Left Side Panel (6). Insert Wooden Dowel Big Ø8 (HW4) Into Plint Support - Front/Back (10) And Plint Support - Side (11)

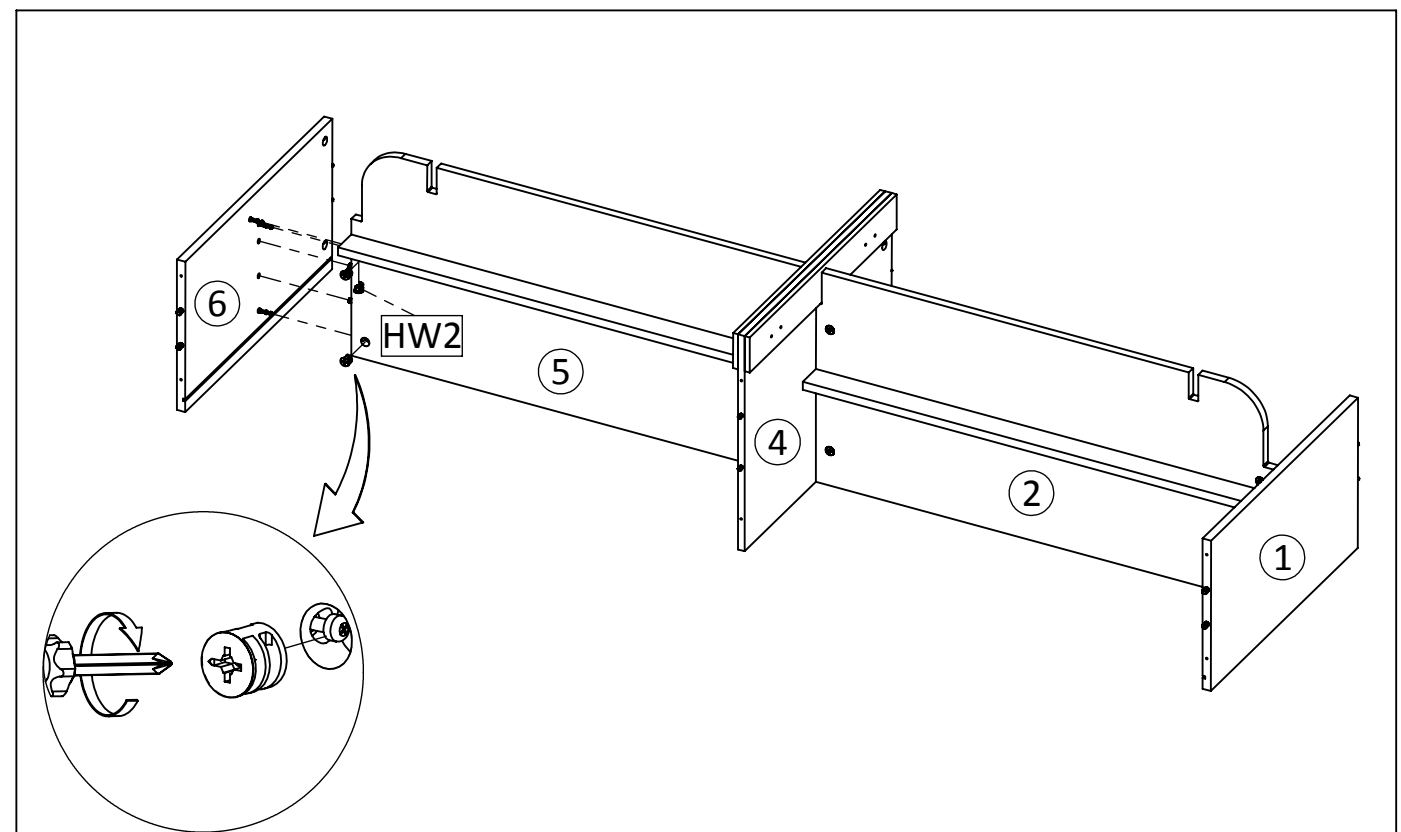

 
STEP10: Insert Left Side Panel (6) Into Left Fixed Shelf (5), Secure With Camlock Big (HW2) Tighten It Using Screwdriver.

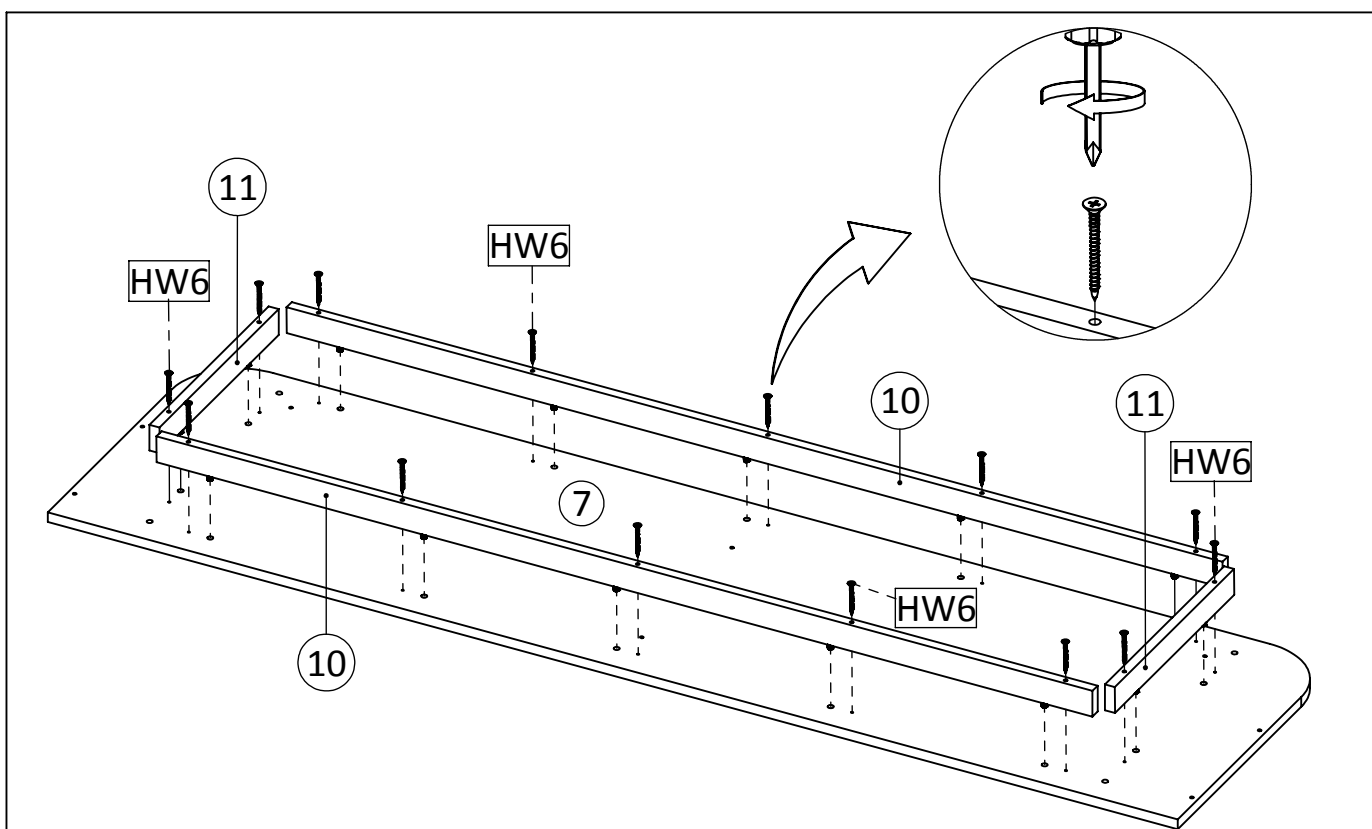

 
STEP11: Insert Plint Support - Front/Back (10) And Plint Support - Side (11) Into Bottom Panel (7) Scure With Screw M6 x 50 mm (HW6) Tighten It Using Screwdriver.

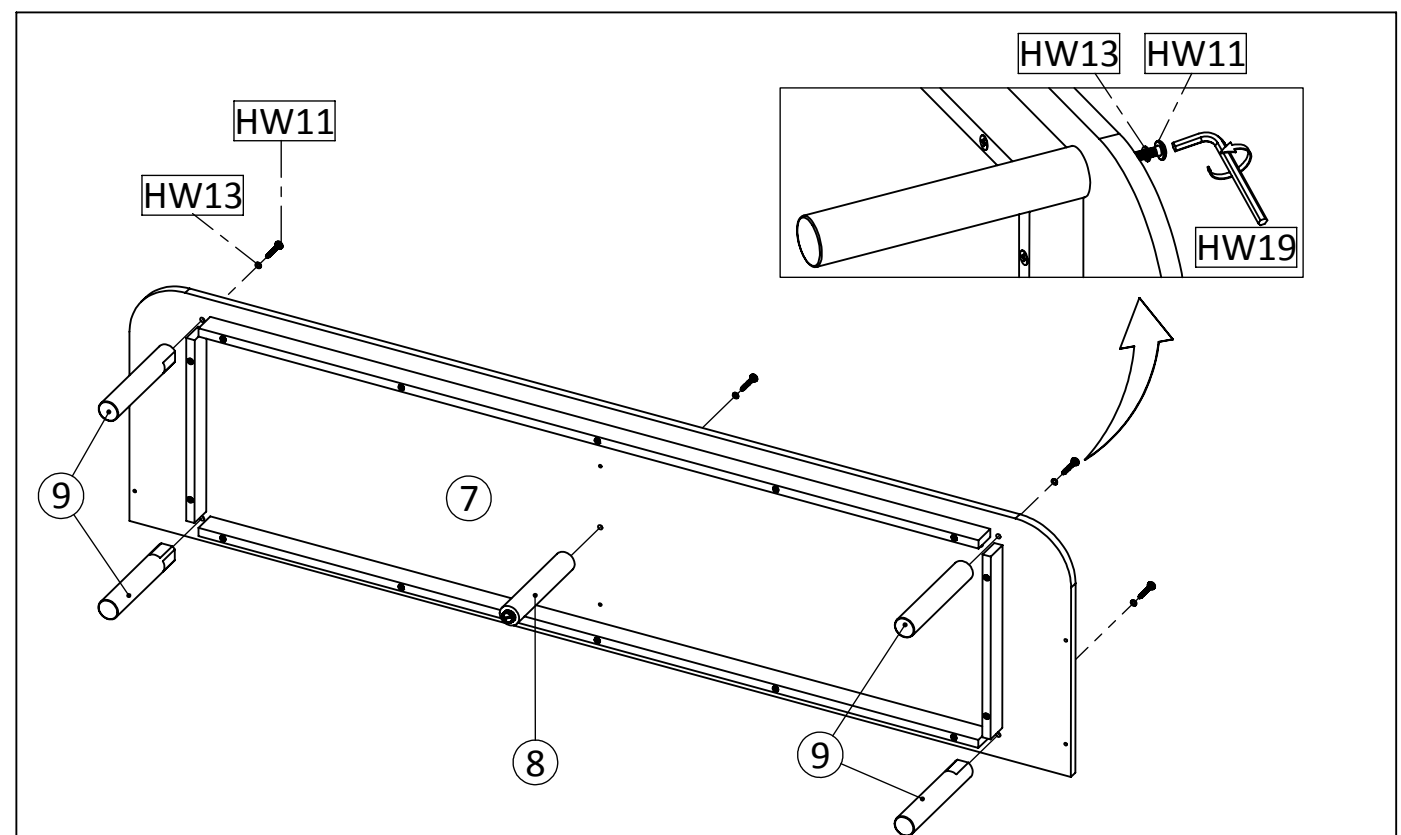

 
STEP12: Insert Center Leg (8) And Leg (9) Into Bottom Panel (7) Secure with Washer (HW13) And JCBC Bolt M6 x 40 mm (HW11) Tighten It Using Allen Key (HW19)

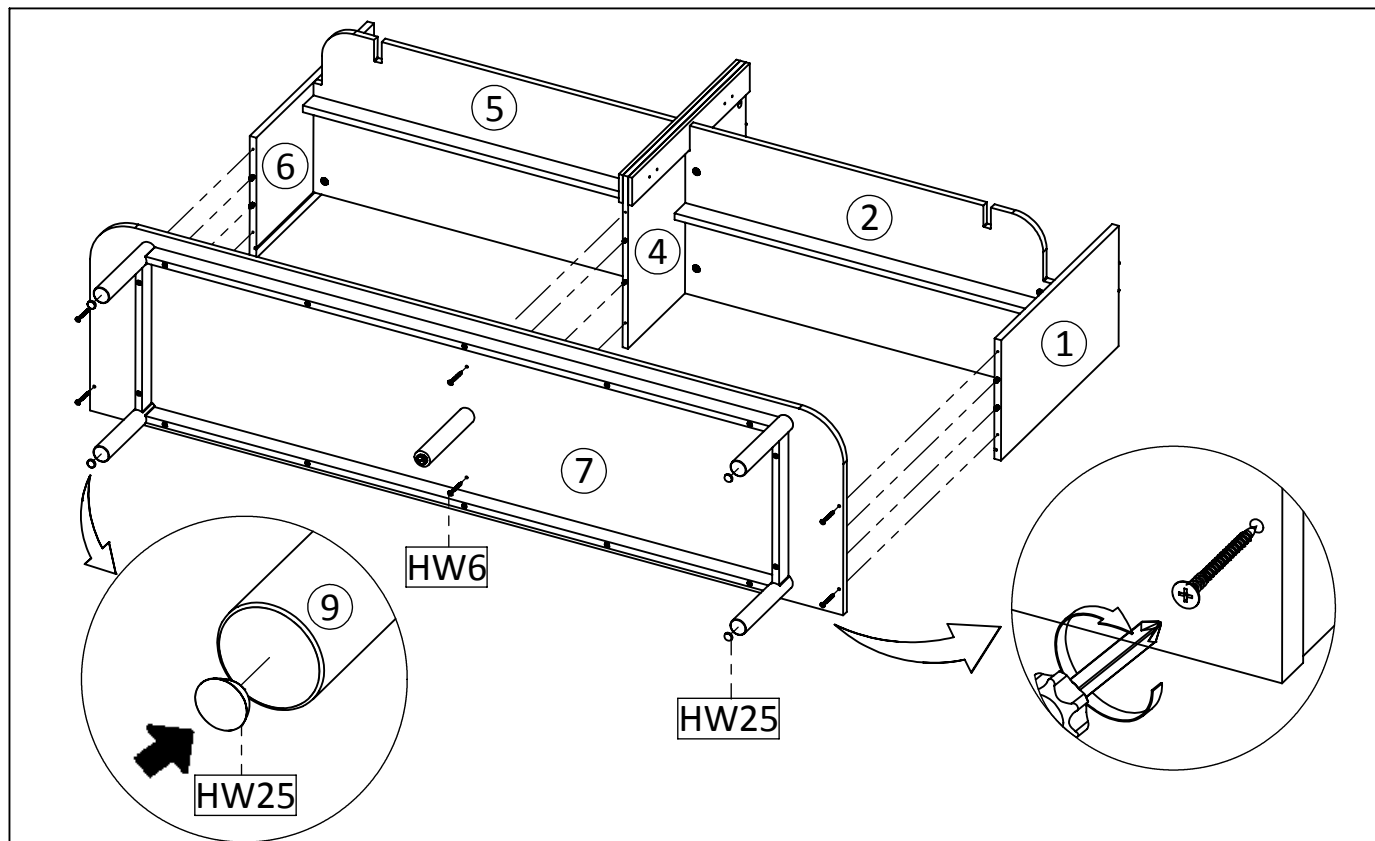

 
STEP13: Insert Bottom Panel (7) Scure With Screw M6 x 50 mm (HW6) Tighten It Using Screwdriver.
Attach Felt Ø20 MM (HW25) Into Leg (9).

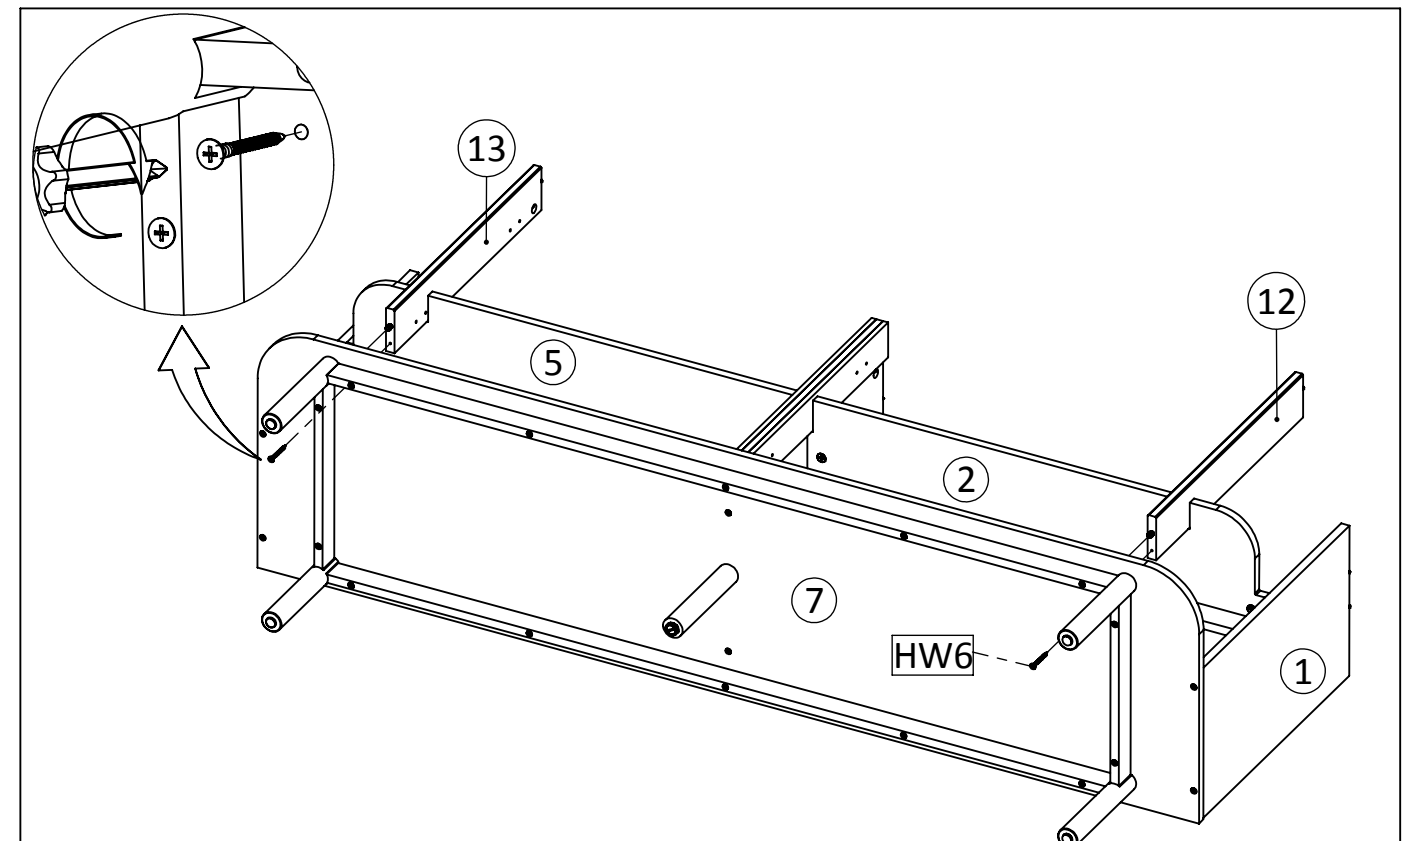




 
STEP14: Insert Pillar Right (12) And Pillar Left (13) Into Bottom Panel (7) Scure With Screw M6 x 50 mm (HW6) Tighten It Using Screwdriver.




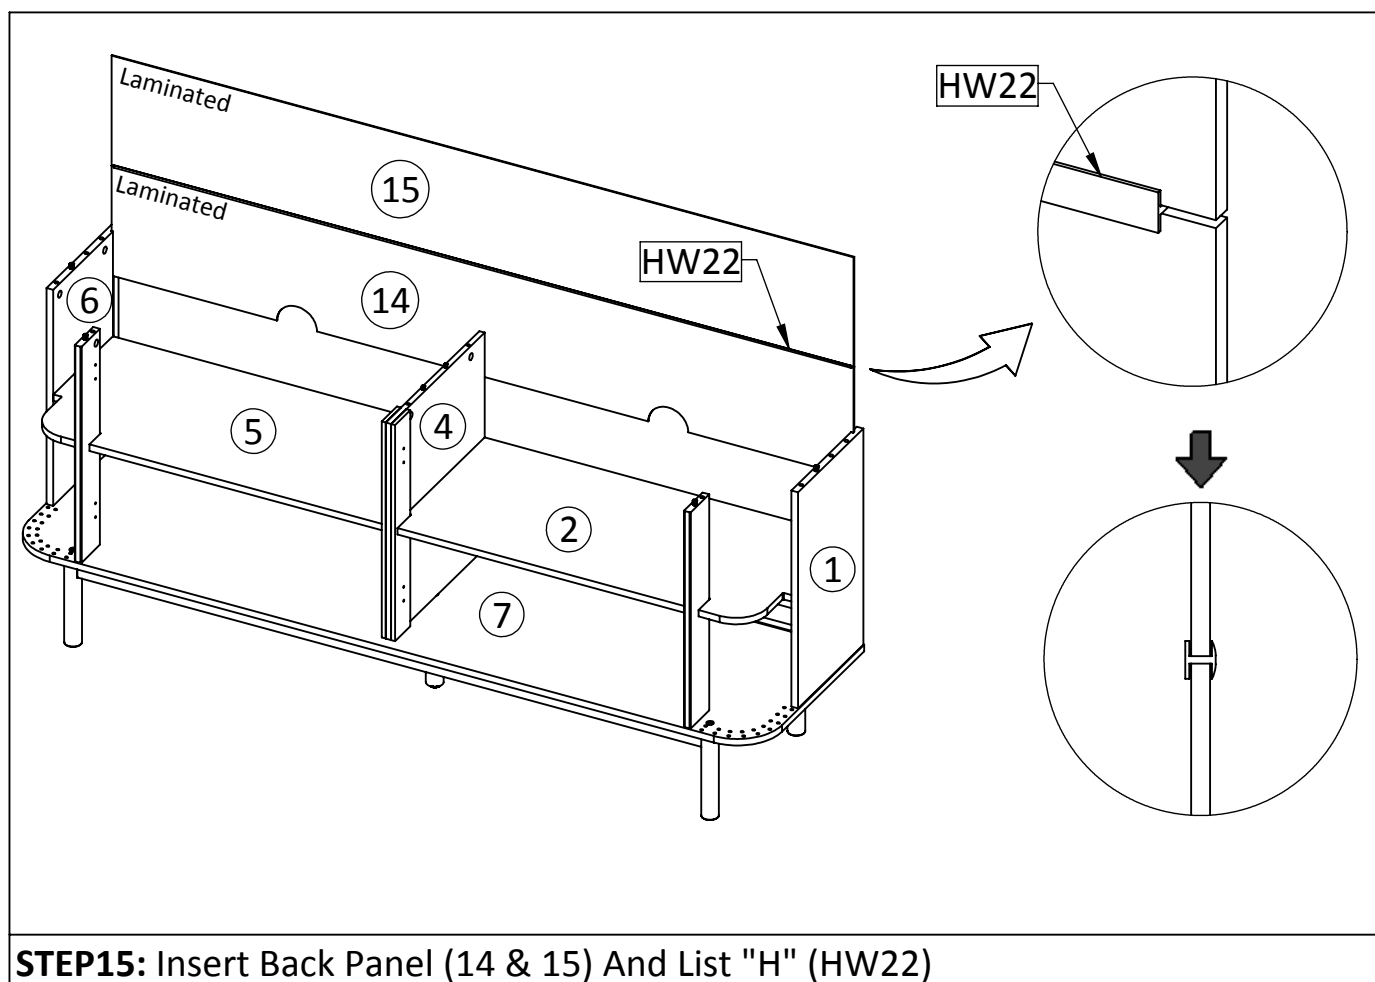


 STEP15: Insert Back Panel (14 & 15) And List "H" (HW22)

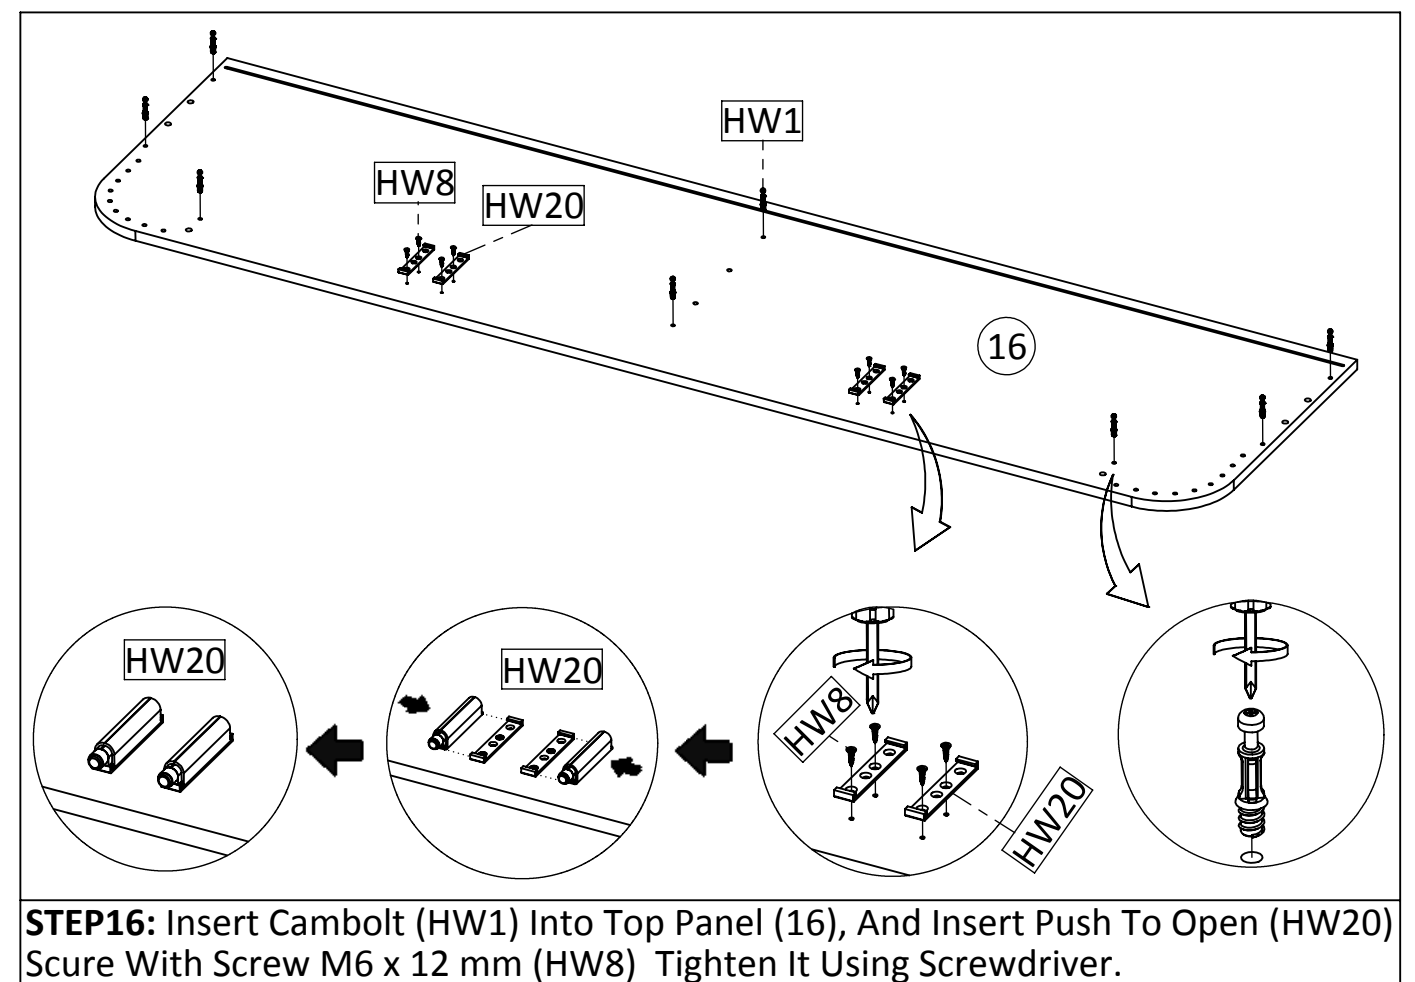

        STEP16: Insert Cambolt (HW1) Into Top Panel (16), And Insert Push To Open (HW20) Scure With Screw M6 x 12 mm (HW8) Tighten It Using Screwdriver.

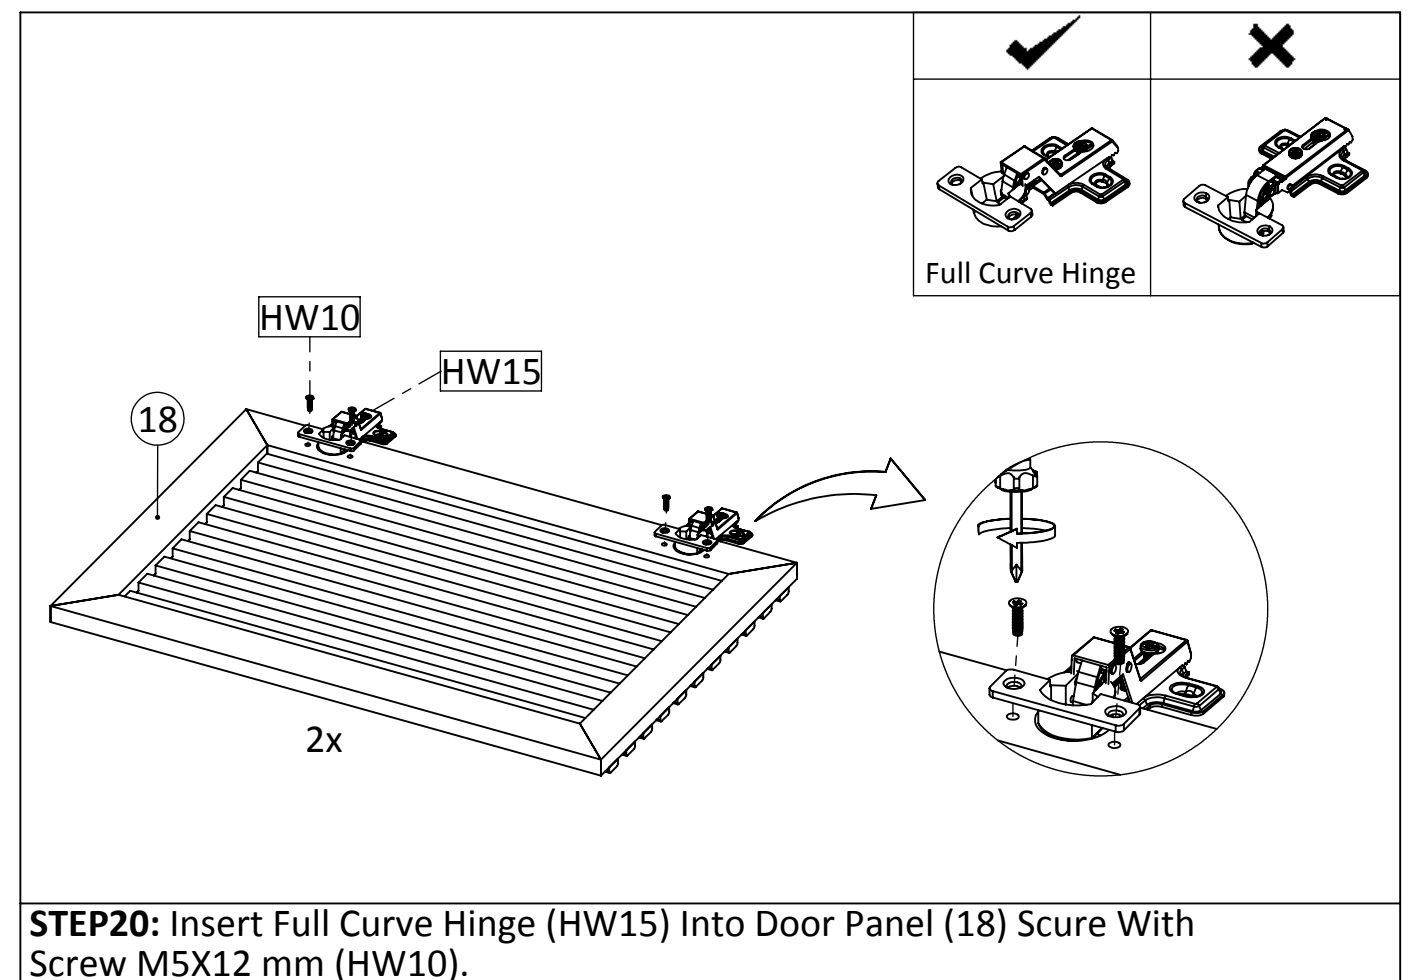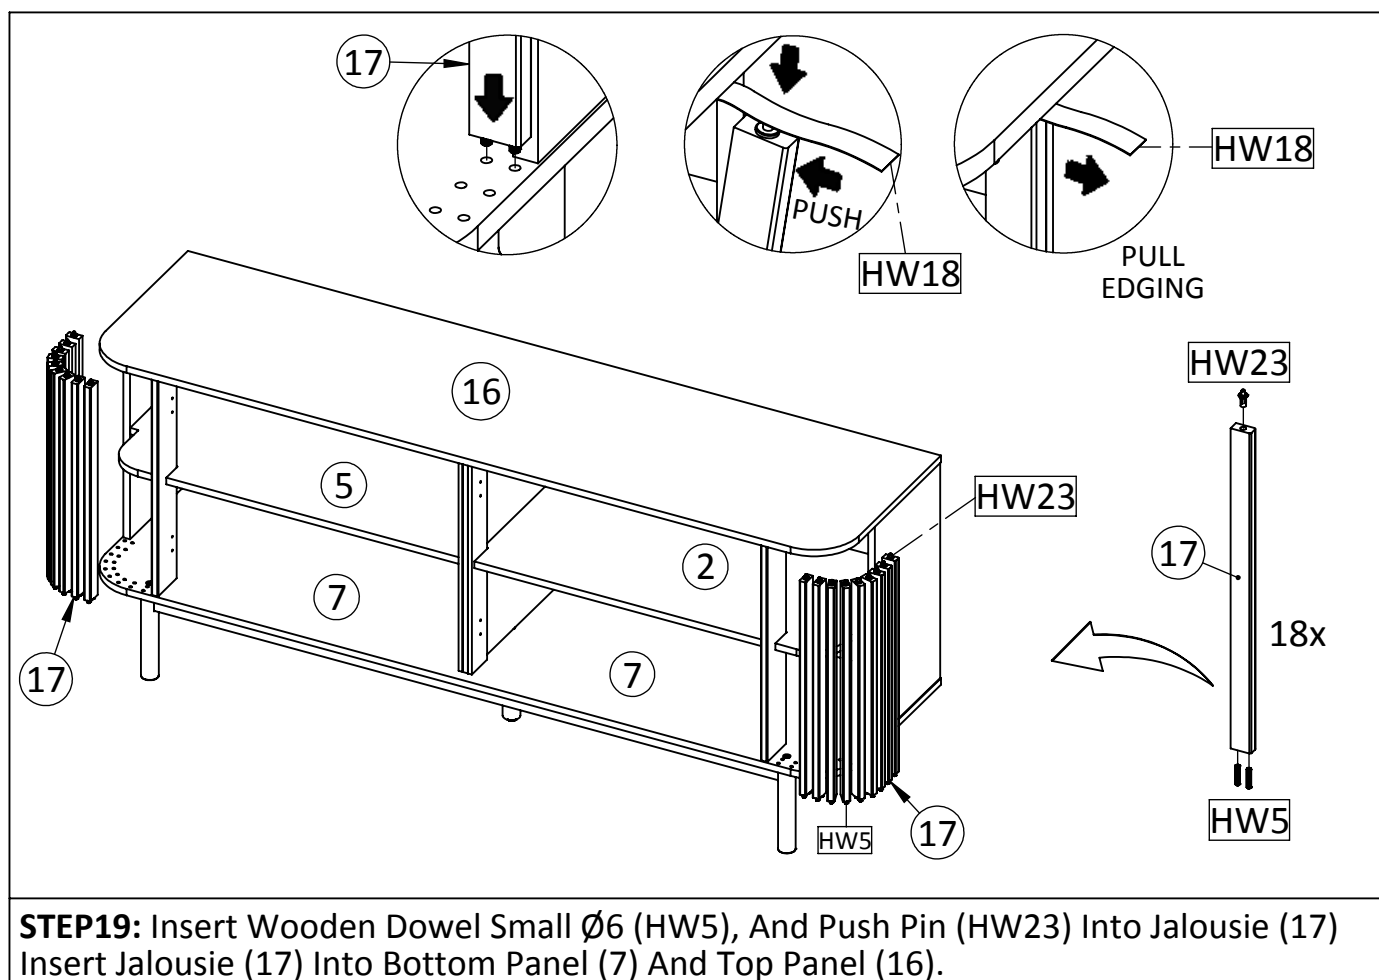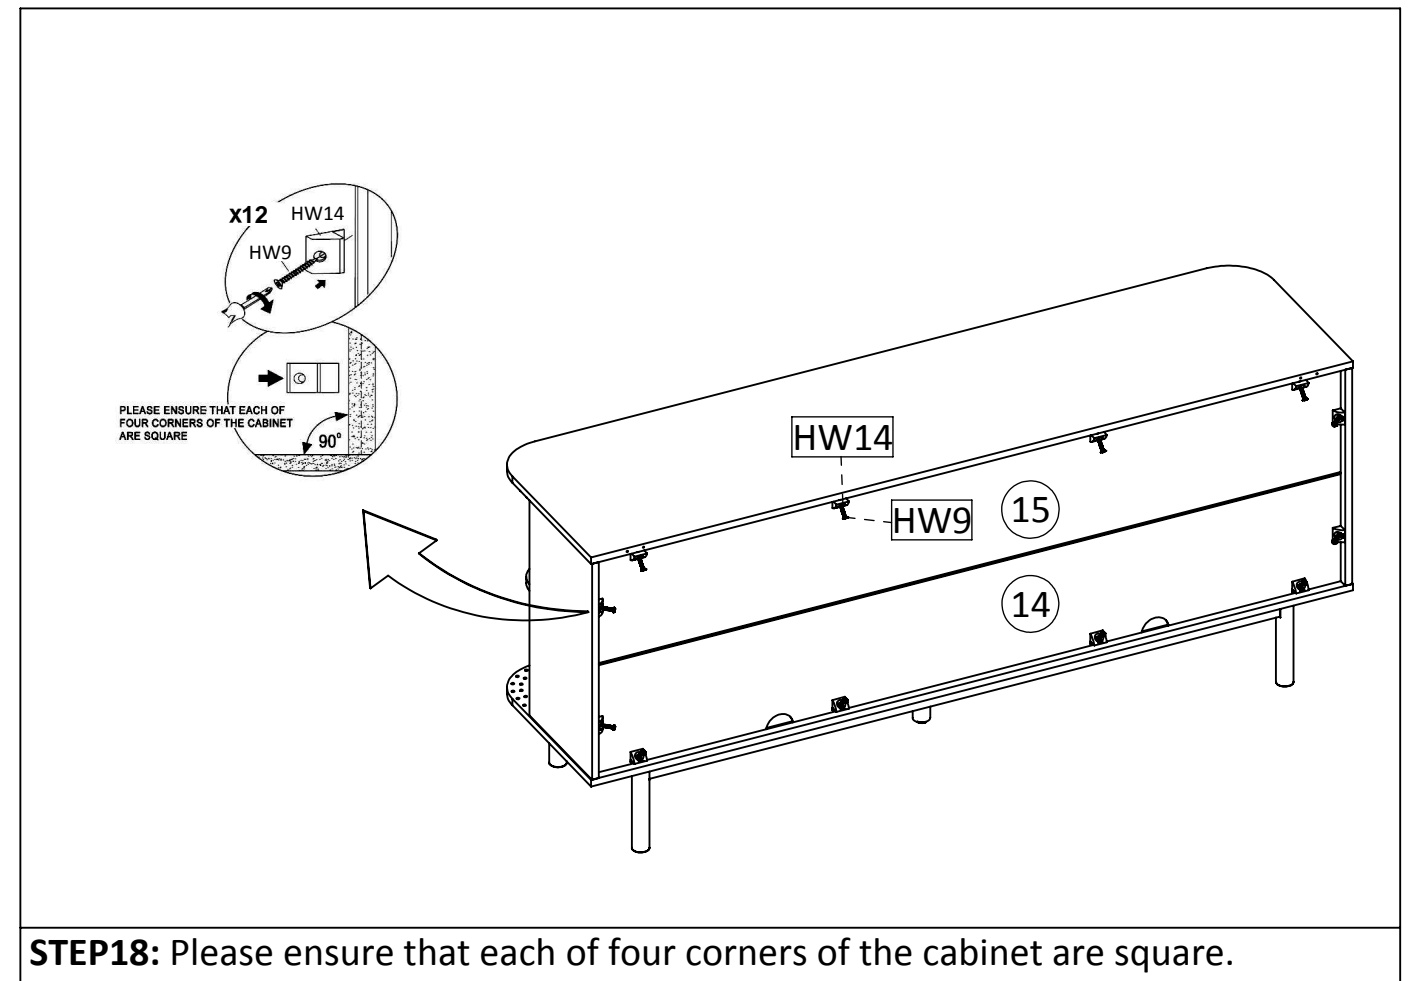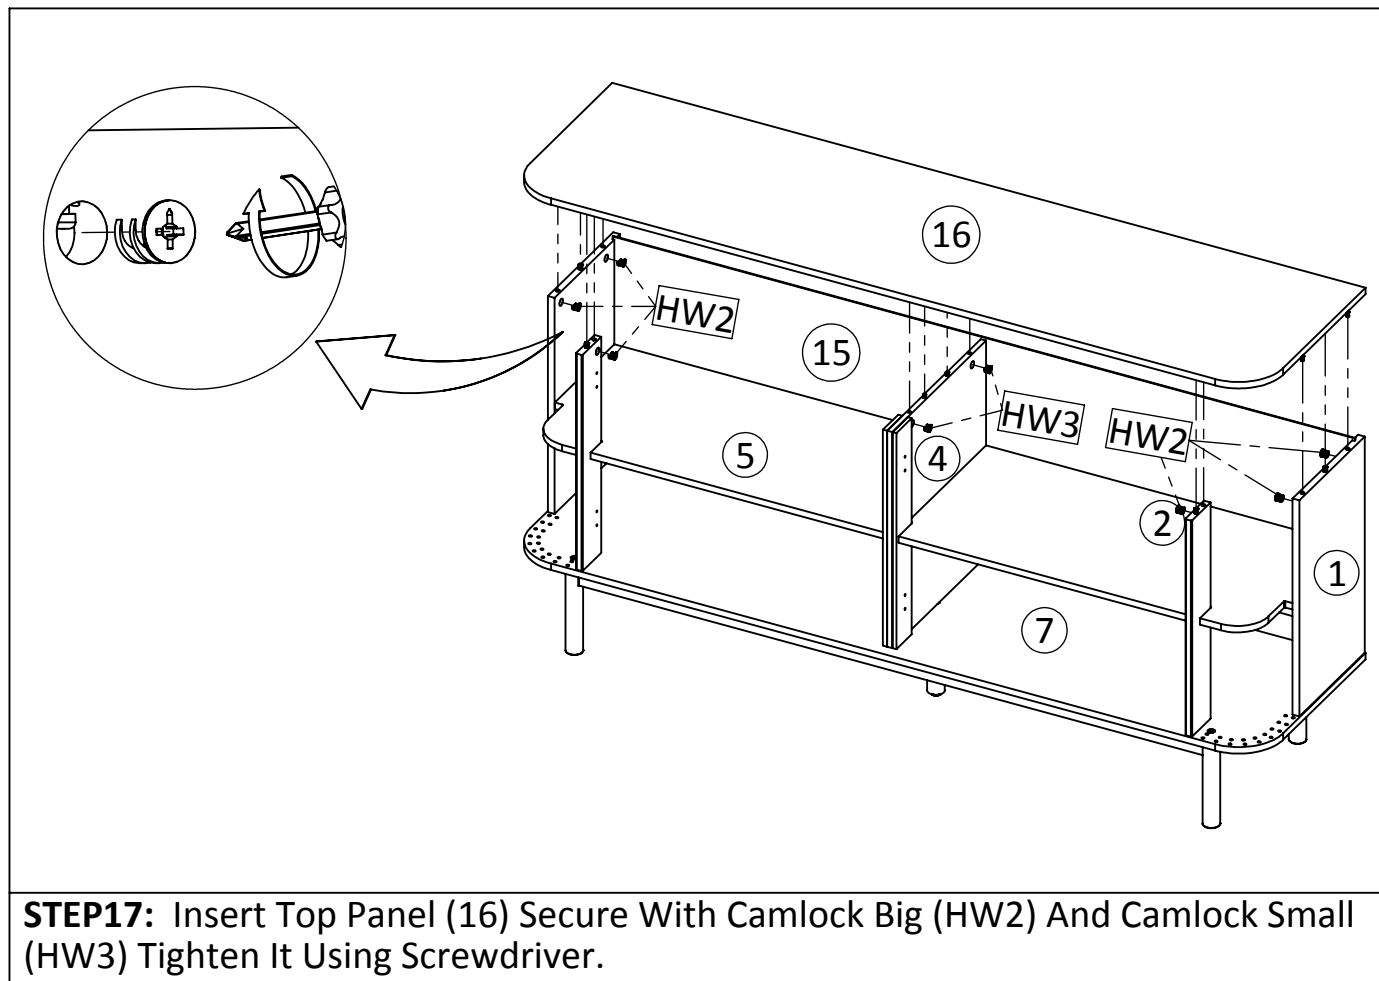

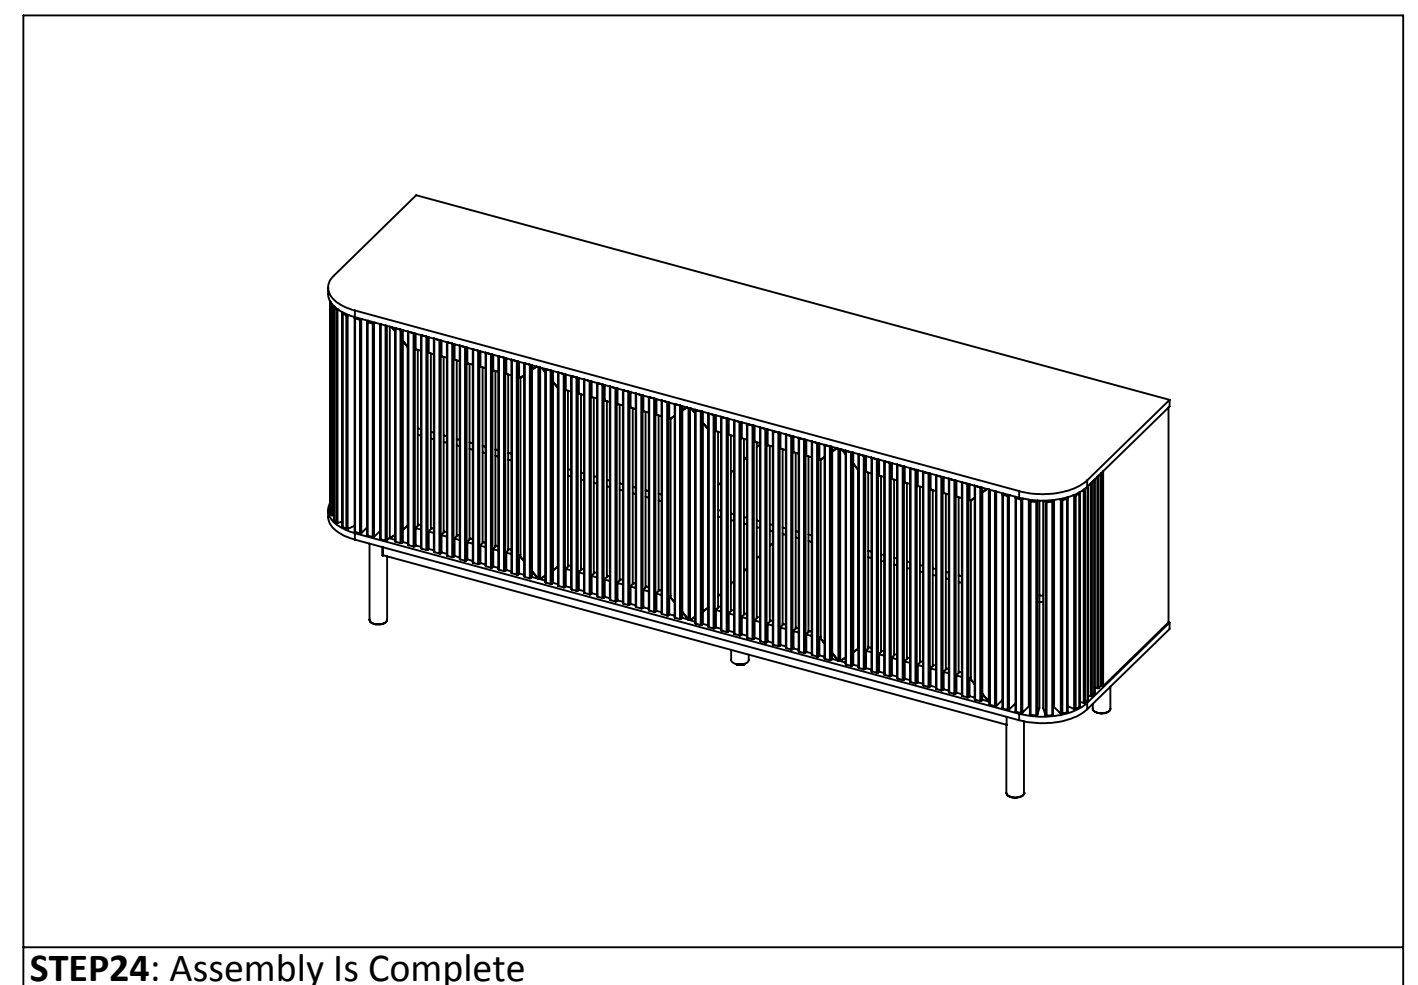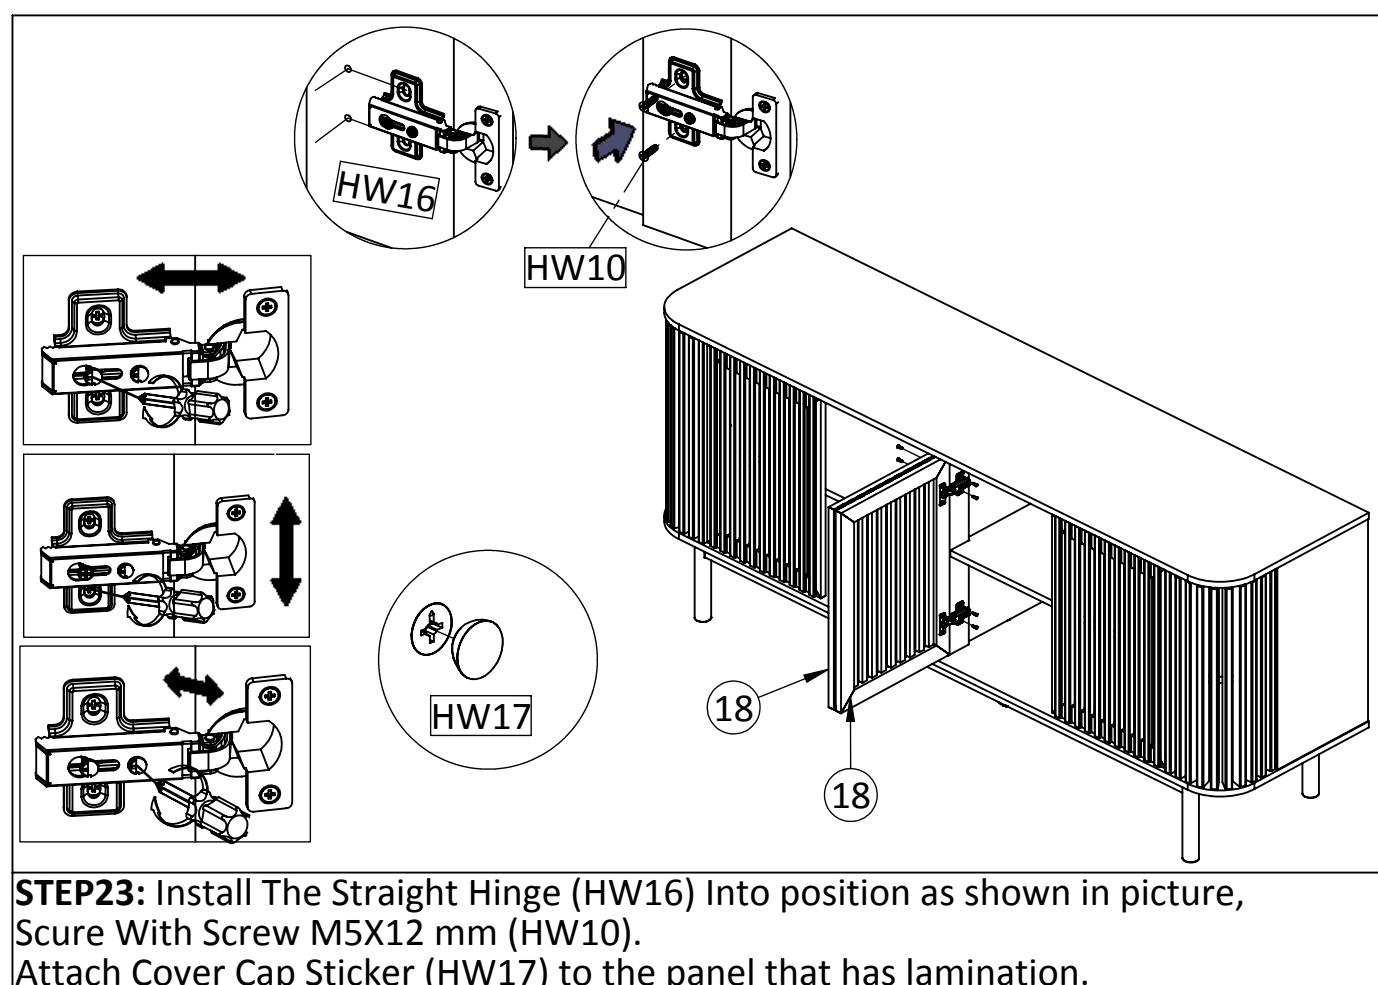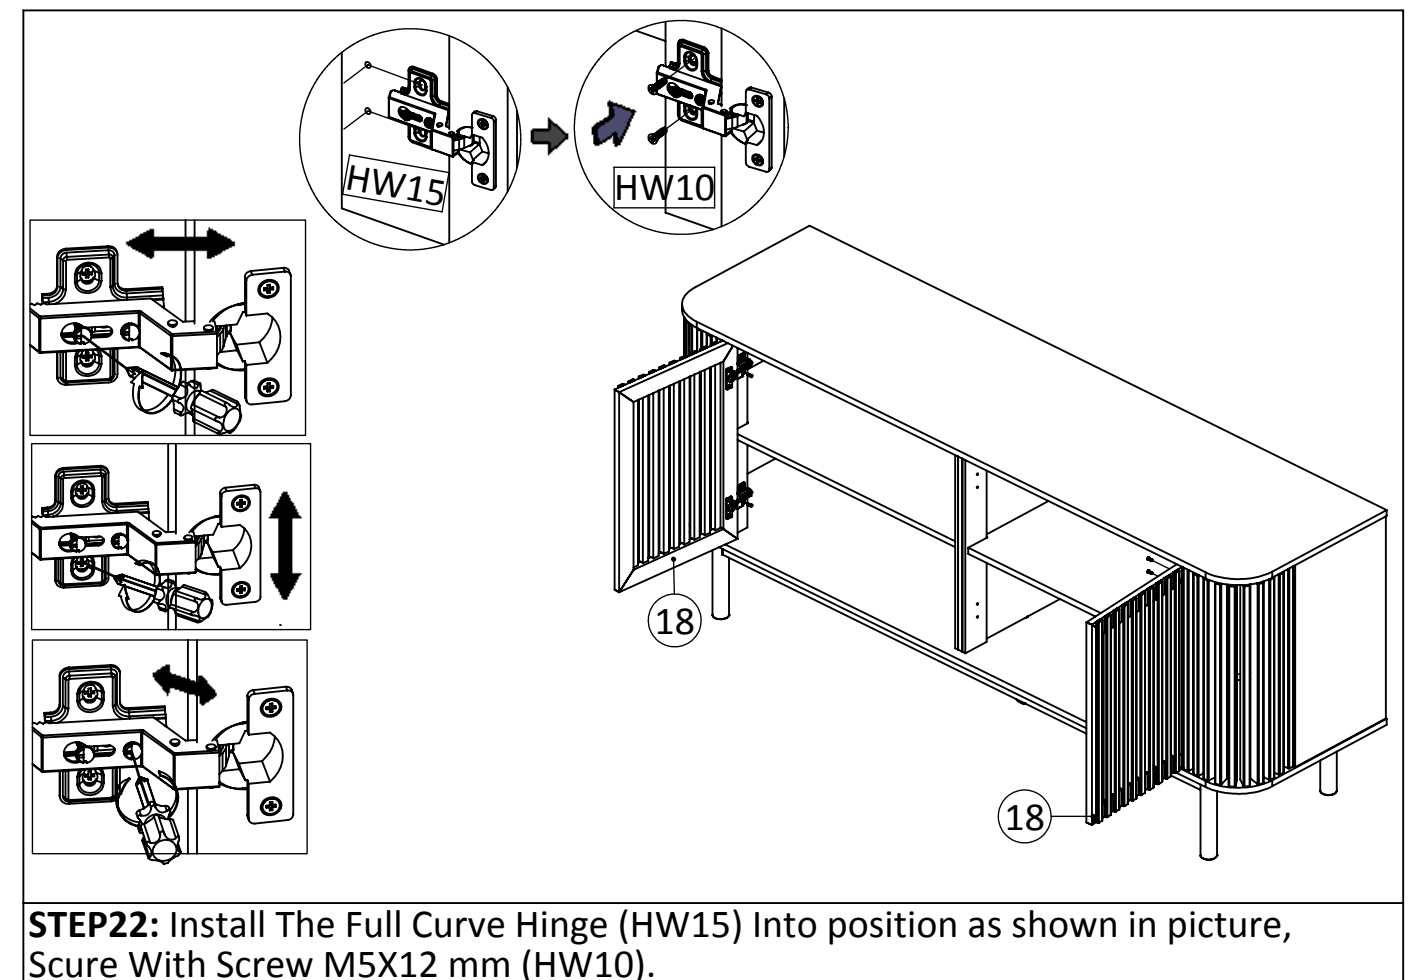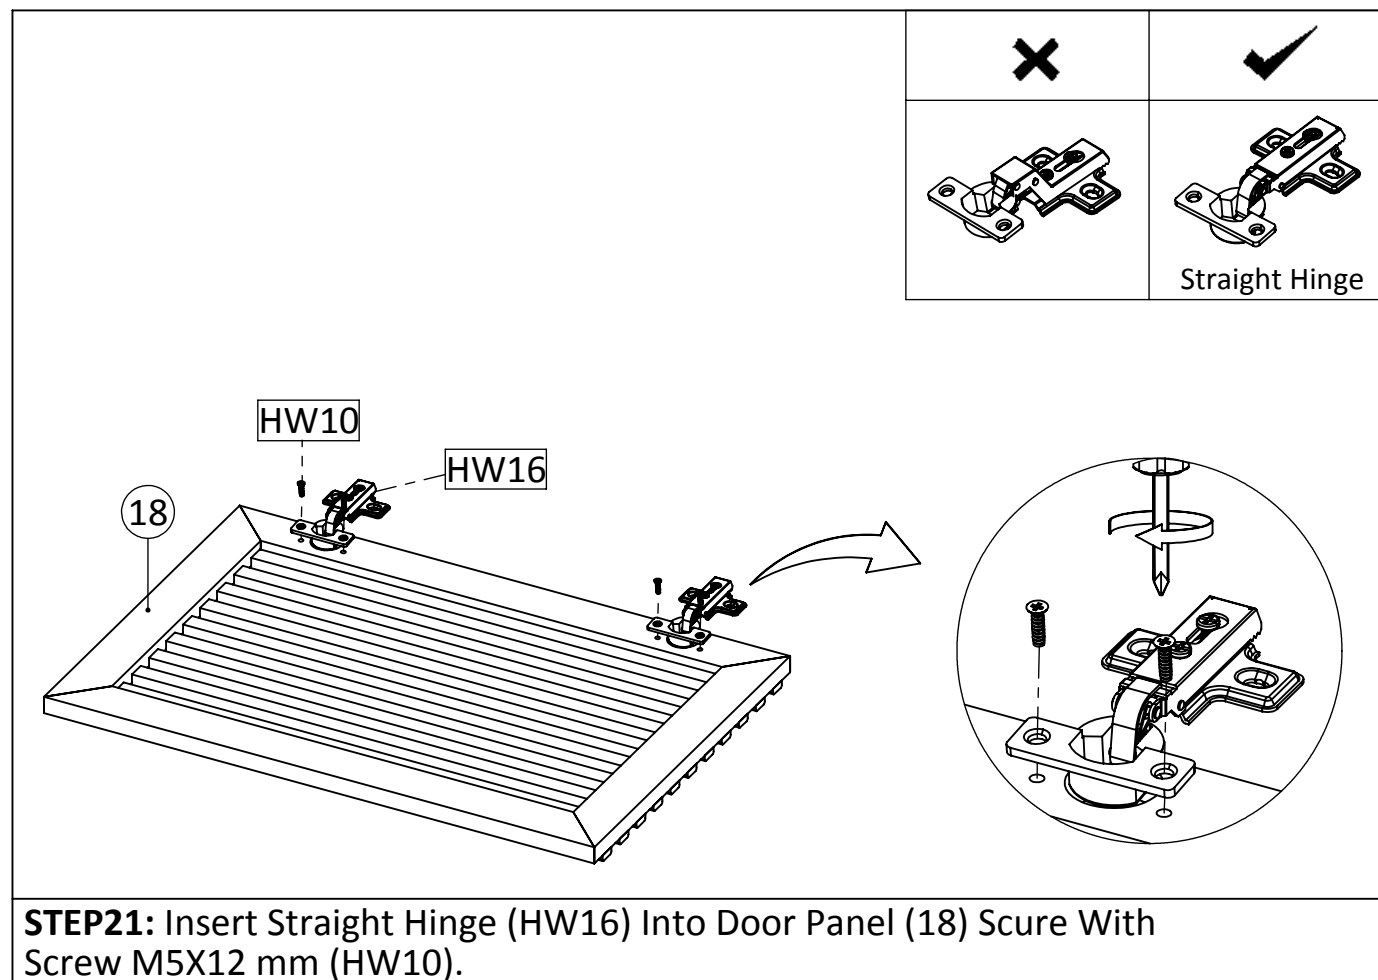




ANTI-TIP RESTRAINT INSTALLATION


! WARNING!

Children have died from furniture tipover.
To reduce the risk of furniture tipover:

 - ALWAYS install tipover restraint provided.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lower drawers.

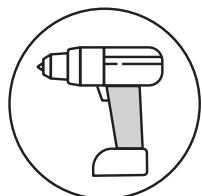


REQUIRED TOOL
8MM / 5/16" DRILL BIT

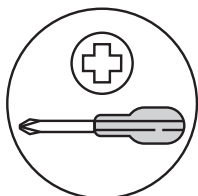 

REQUIRED TOOL




 Hardware (HW21/HW12) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.

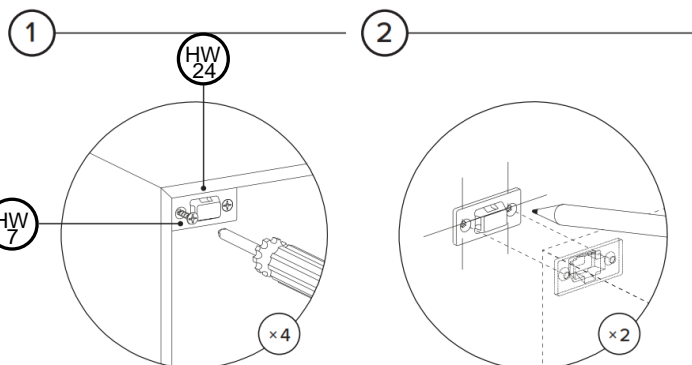


Attach pair of brackets to "Top Panel" of the unit. Note there are no existing pilot holes on the product.

 
Mark on wall where second pair of brackets should be placed.

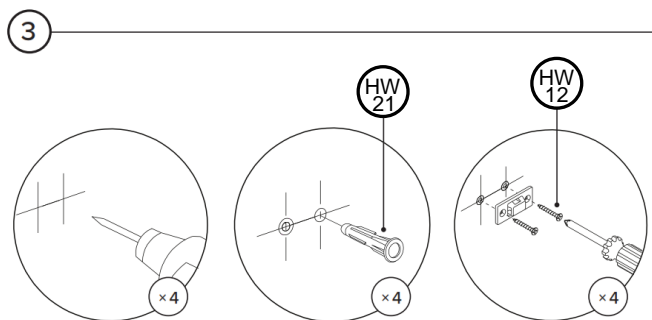

  Drill holes in wall using 8mm / 5/16" drill bit.

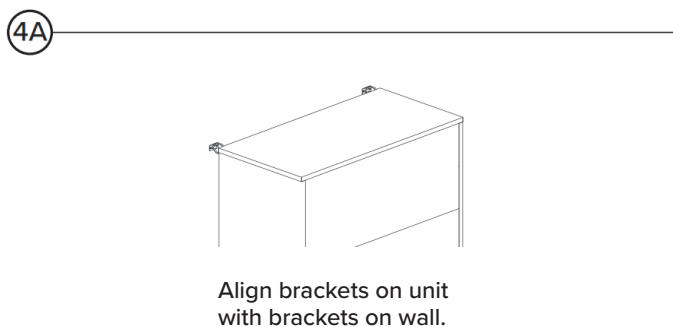 

 
 



Align brackets on unit with brackets on wall.

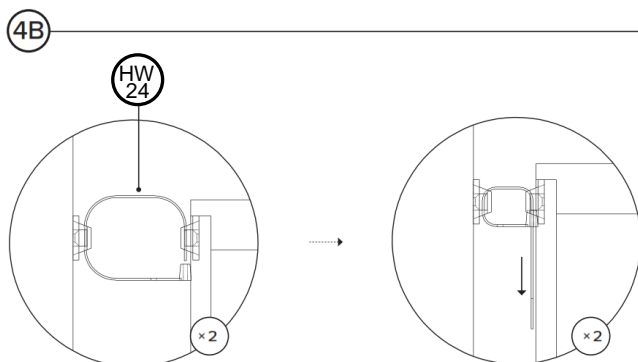

Pull strap down until it snap-locks.

ANTI-TIP RESTRAINT PACK

ID	DESCRIPTION	QTY
HW24	BRACKET 	4
HW7	M6 × 15MM SCREW 	4
HW21	M8 × 35MM PLUG 	4
HW12	M10 × 50MM SCREW 	4
HW24	STRAP 	2