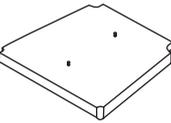
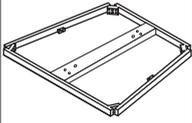
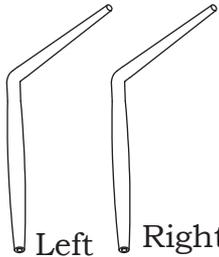
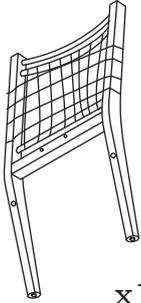


ITEM NAME/NOM D'ITEM: WEZLY DINING CHAIR

ITEM #/NO. ITEM: 110689,110690

PARTS LIST/LISTE DES PIÈCES

(1)	(2)	(3)	(4)	(5)	(6)
					<p>A.  M6x70mm x8</p> <p>B.  M6x35mm x4</p> <p>C.  M6 x12</p> <p>D.  M6 x10</p> <p>E.  38mm x12</p> <p>F.  M14.5 x2</p> <p>G.  M6 x1</p>
x1	x1	Left Right x1	x1	x2	

ASSEMBLY INSTRUCTIONS/INSTRUCTIONS D'ASSEMBLAGE

Do not FULLY TIGHTEN the screws or nuts for any step until all are in place.

I

Diagram I shows the seat base (1) being attached to the seat frame (2). Two circular callouts show screws (E) being inserted into the frame. A third callout shows the seat base being lowered into the frame.

II

Diagram II shows the backrest (4) being attached to the seat frame (2). Two callouts show brackets (G) being attached to the frame with screws (A), washers (C, D), and nuts (F).

III


Diagram III shows the legs (3) being attached to the seat frame (2). Screws (E) are used to secure the legs. A bar (5) is also shown being attached to the legs.

IV


60% tighten

Diagram IV shows the assembly being tightened. A callout shows the backrest (4) being attached to the legs (3) using brackets (G), washers (C, D), and screws (A, B). The instruction '60% tighten' is noted.



V

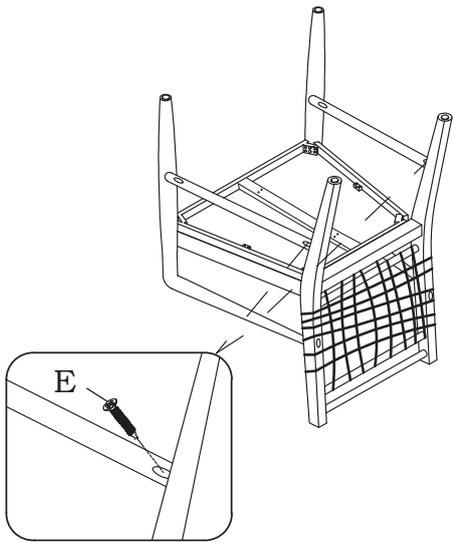

VI

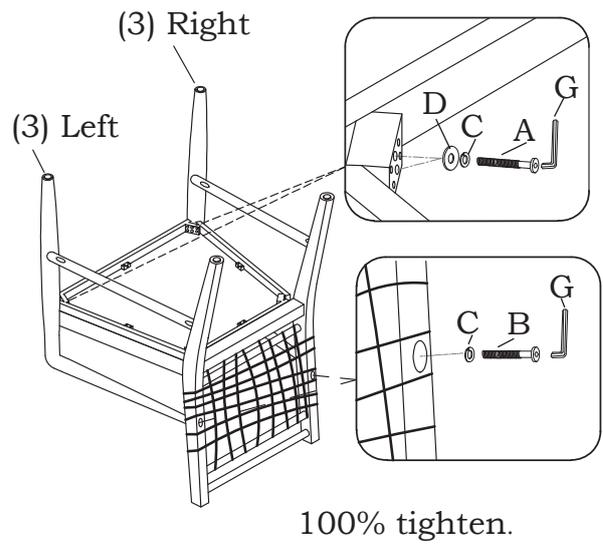

VII

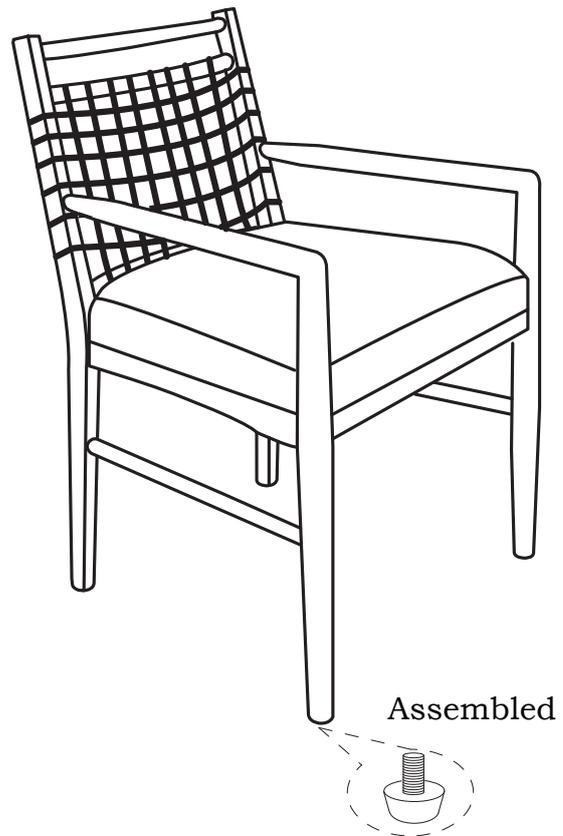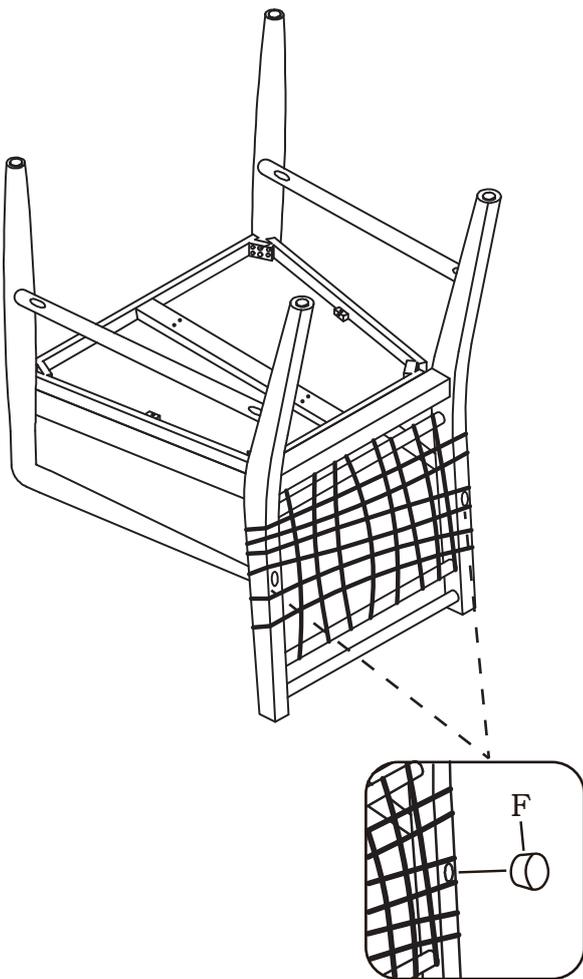

Please use the attached adjustable footglides to level the chair on an uneven surface.