
# ASSEMBLY INSTRUCTIONS 30 INCH BATH VANITY (COMBO)

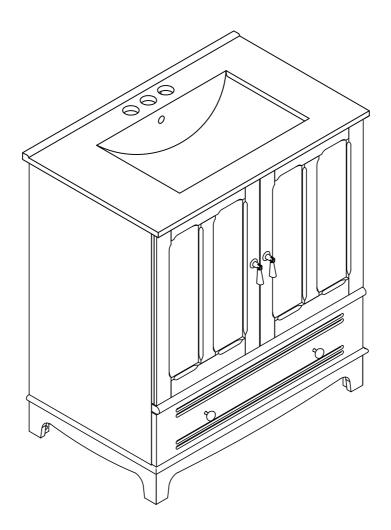

Thank you for purchasing this quality product. Be sure to check all pac material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardw.

Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"



\*Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!

 
\*Please assemble on a clean soft sunrface to avoid damage.







Tools Required





**IMPORTANT:** 

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

## PLEASE DO NOT RETURN TO STORE



## Please do not return this product to the retailer!! We are able to assist you in ANY way

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

- 1. Note: This is not a clothing storage cabinet and it is not recommended to use it as a clothing storage cabinet.
- 2. All cabinets come with TRD, stainless steel or our "L-Bracket "when shipped.


## **Before Installation**


### Important – Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will
  make the assembly easier, and will help eliminate damage to the product or injury to persons during
  assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

## **Cam Lock Assembly Instructions**

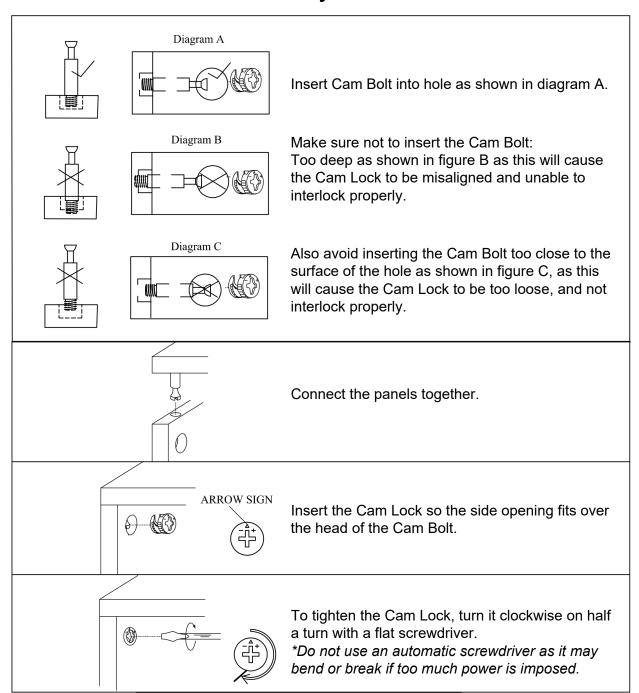

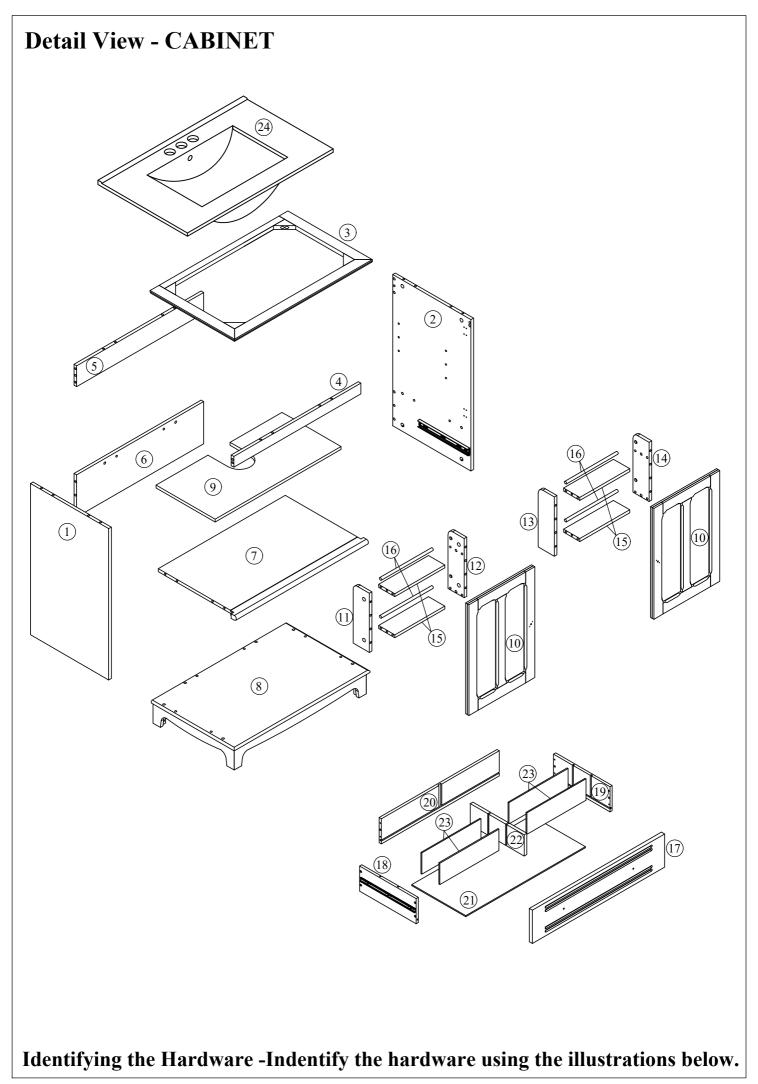



## Part List - N710P293306K/C

	2	3	4	5
Side Panel (L) - 1pc	Side Panel (R) - 1pc	Top Frame - 1pc	Top Crossbar Front - 1pc	Top Panel Rear - 1pc
6	7	8	9	10
Bottom Panel Rear - 1pc	Bottom Frame - 1pc	Base Frame - 1pc	Shelf - 1pc	Door - 2pcs
11	12	13	14	15
0				
Door side panel(A) - 1pc	Door side panel(B) - 1pc	Door side panel(C) - 1pc	Door side panel(D) - 1pc	Door shelf panel - 4pcs
16	17	18	19	20
Round Bar - 4pcs	Drawer Face - 1pc	Drawer Side Panel (L)-1pc	Drawer Side Panel (R)-1pc	Drawer Back Panel (R)-1pc
21	22	23	24	
Drawer Bottom Panel-1pc	Drawer Mid Panel-1pc	Drawer Divide Panel-4pcs	Sink - 1pc	


## Hardware List - N710P293306K/C


Α	В	С	
		9////	
ø6x35mm	ø14.5x12mm	ø8x30mm	
Three in one bolts - 46pcs	Three in one lock - 46pcs	Wood dowel - 50pcs	
D	E	F	
OY////D	(-)::::::::::::::::::::::::::::::::::::		
ø6x30mm	ø8xø4x32mm		
Wood dowel - 4pcs	Round head screw-8pcs	Handle - 2pcs	
G	Н	I	
		( <u>)</u>	
_	ø5/32"x28mm	ø5/32"x35mm	
Handle - 2pcs	Handle screw - 2pcs	Handle screw - 2pcs	
J	K	L	
	ø7xø3.5x15mm		
Damping hinge - 4pcs	Flat head screw - 24pcs	Laminata Pad - 4pcs	
M			
Anti fall hardware - 2sets			

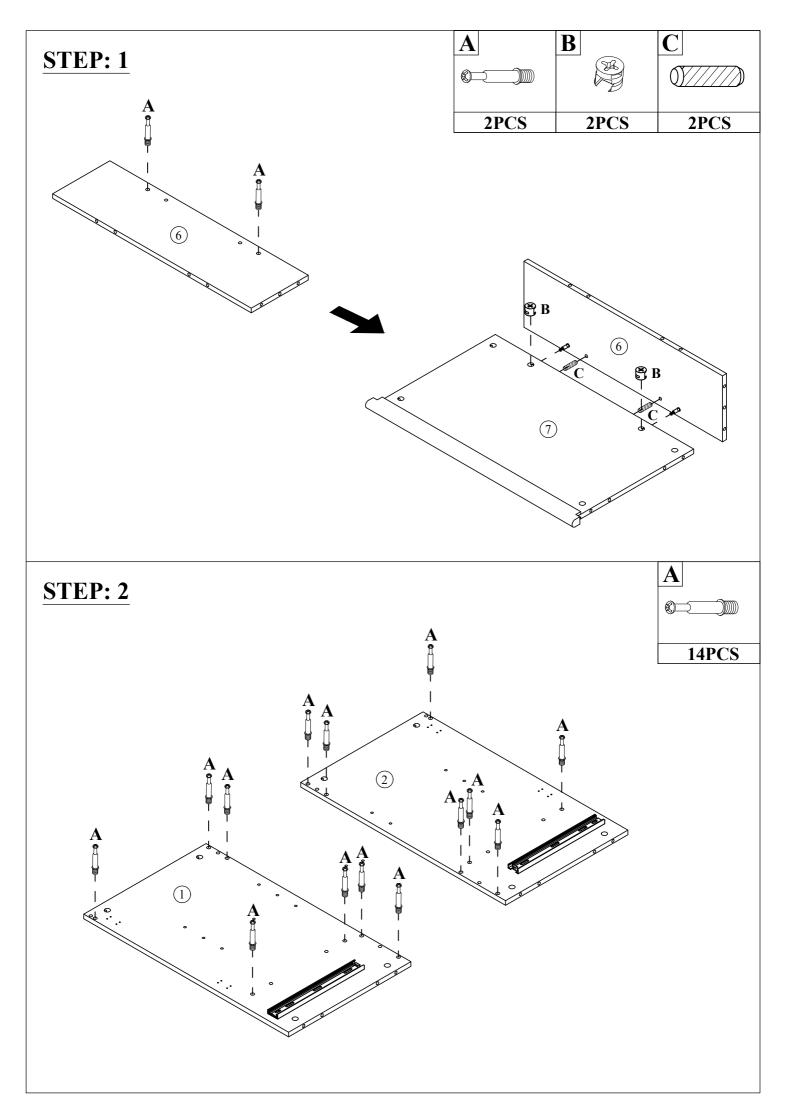


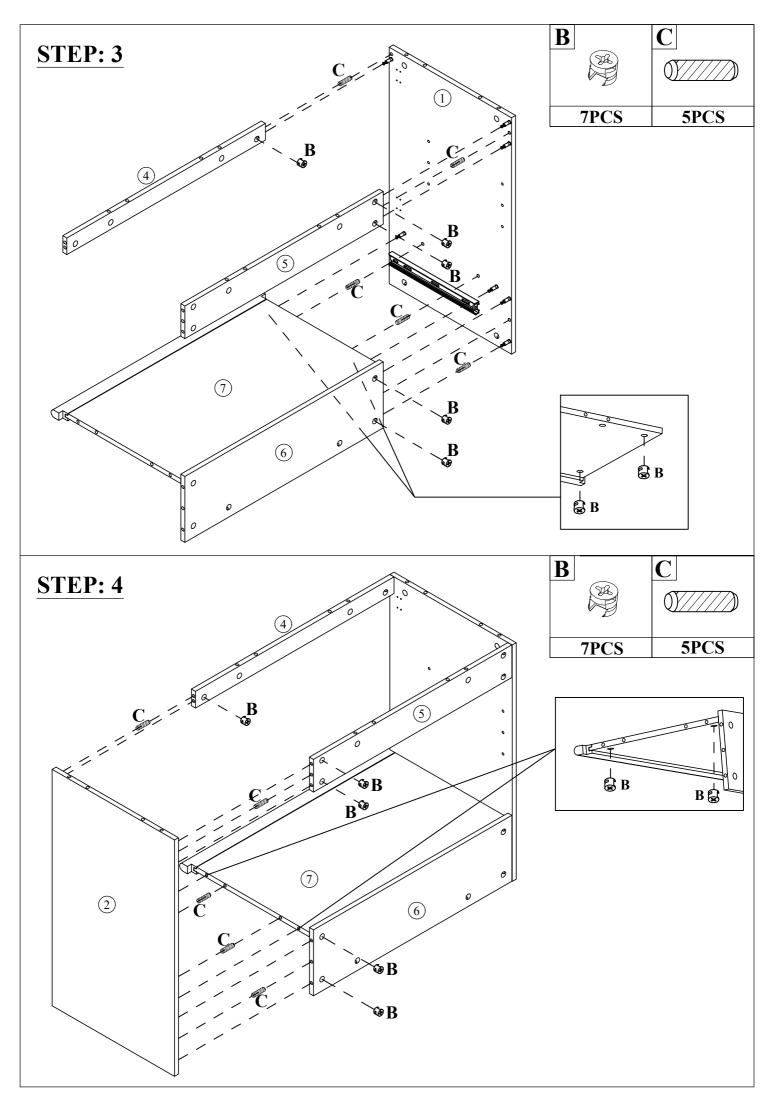



## **STEP: 5**

 

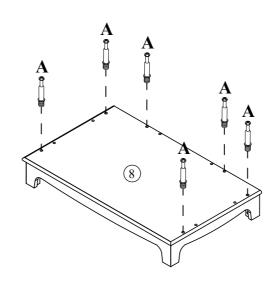


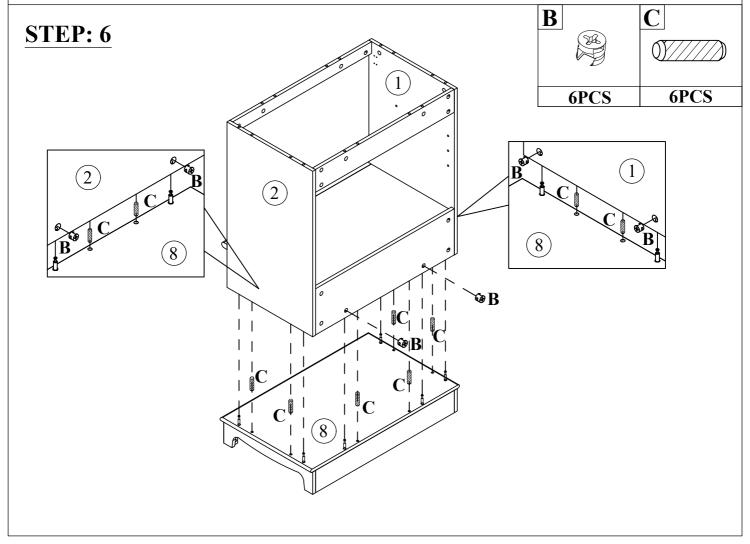

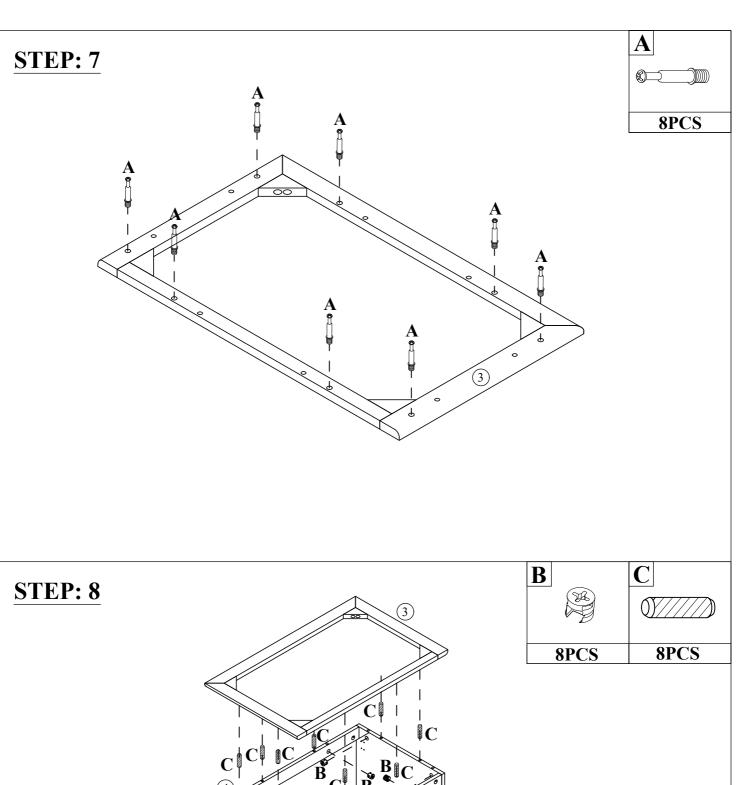

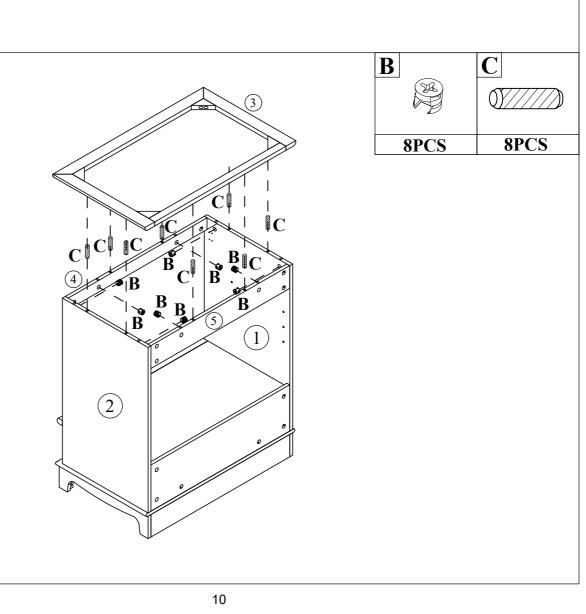 







A




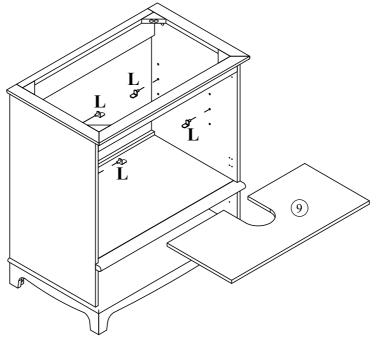



# **STEP: 10** 8PCS

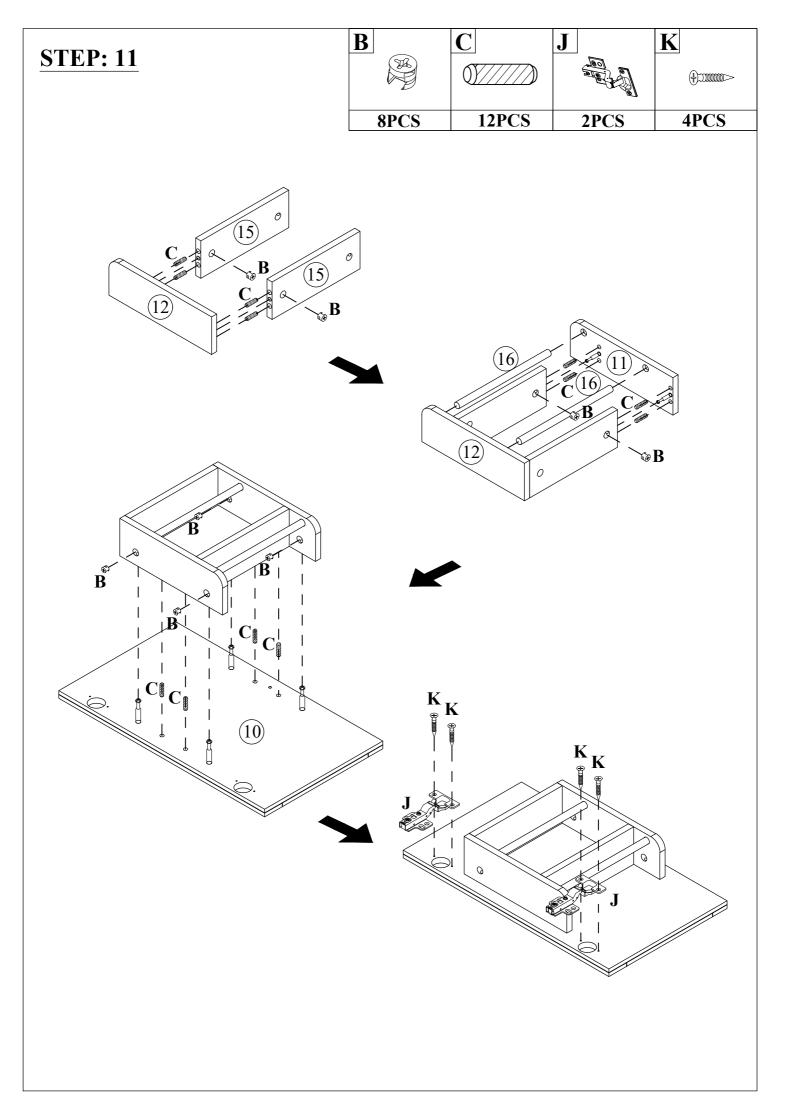


## **STEP: 12**

 


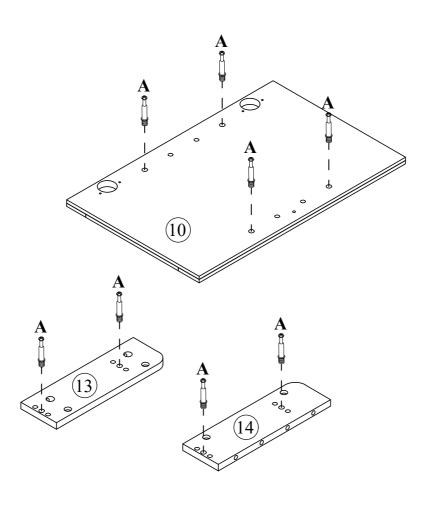

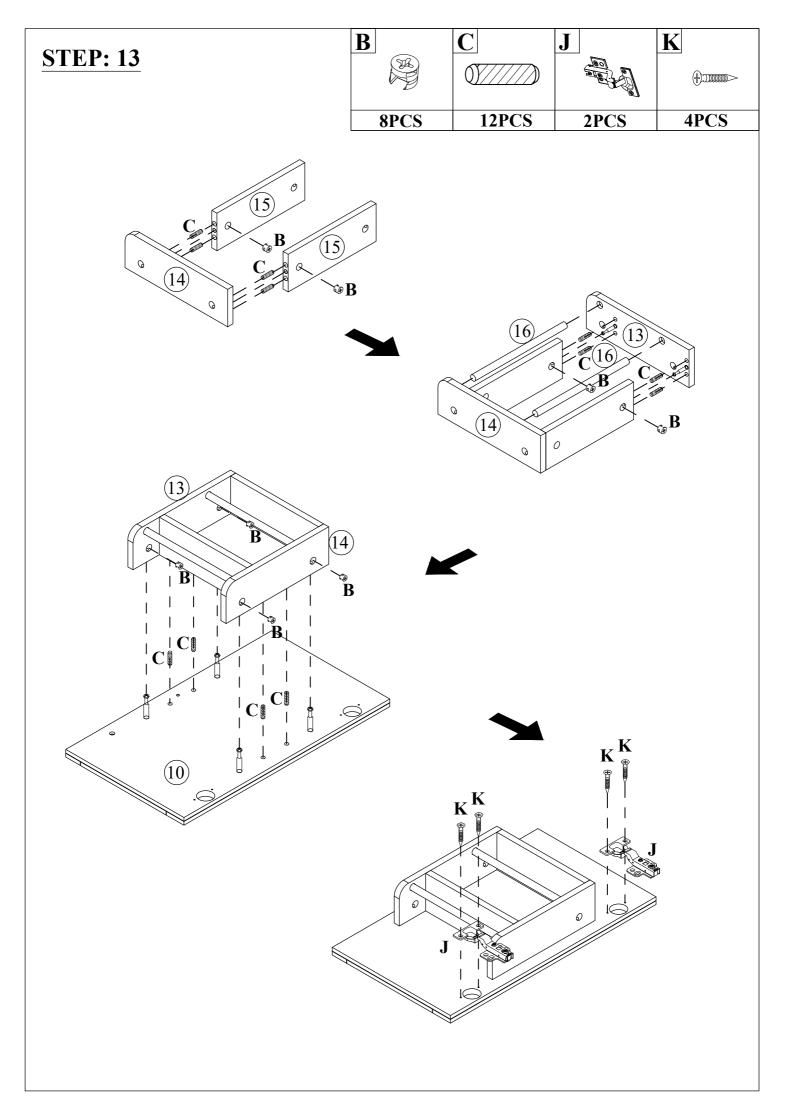




 


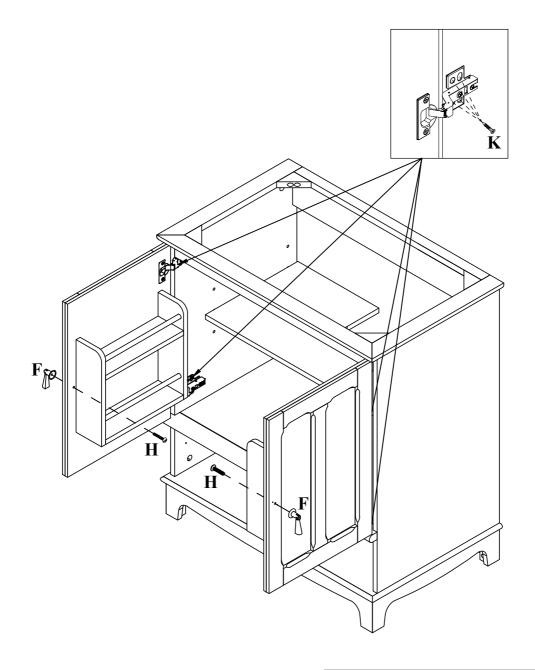

Use the screws to adjust up or down

  
Use the screws to permanent








Use the screws to adjust left or right

  Use the screws to adjust in or out






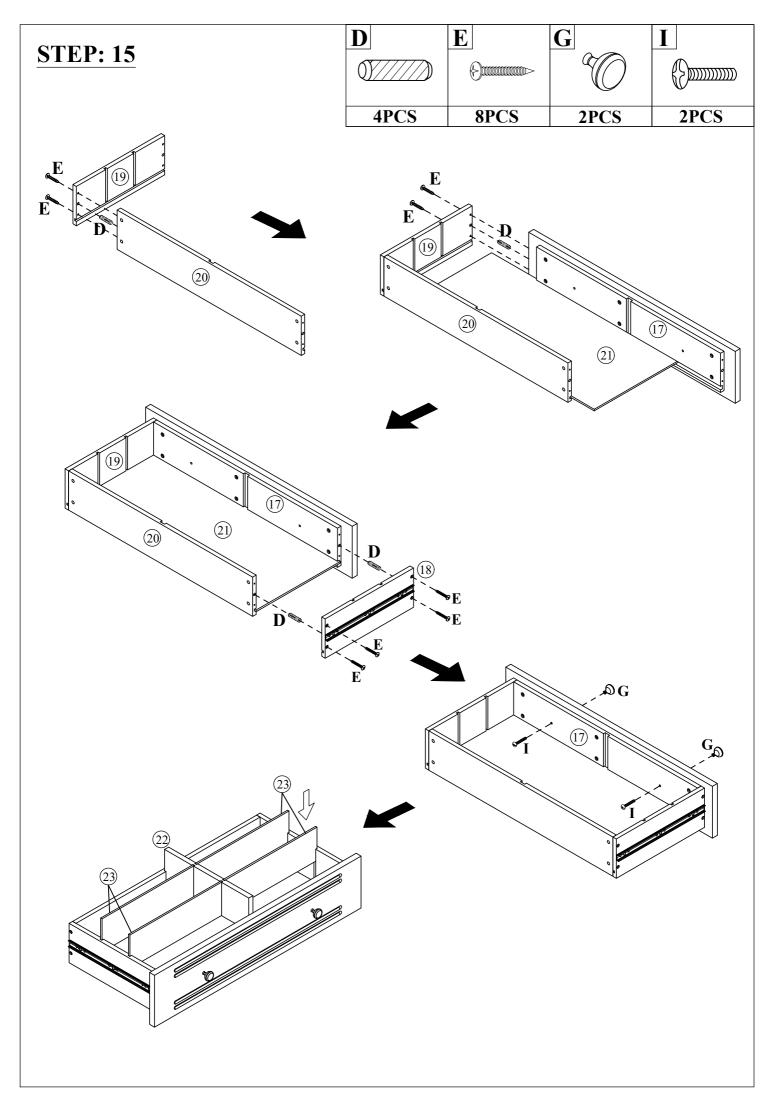


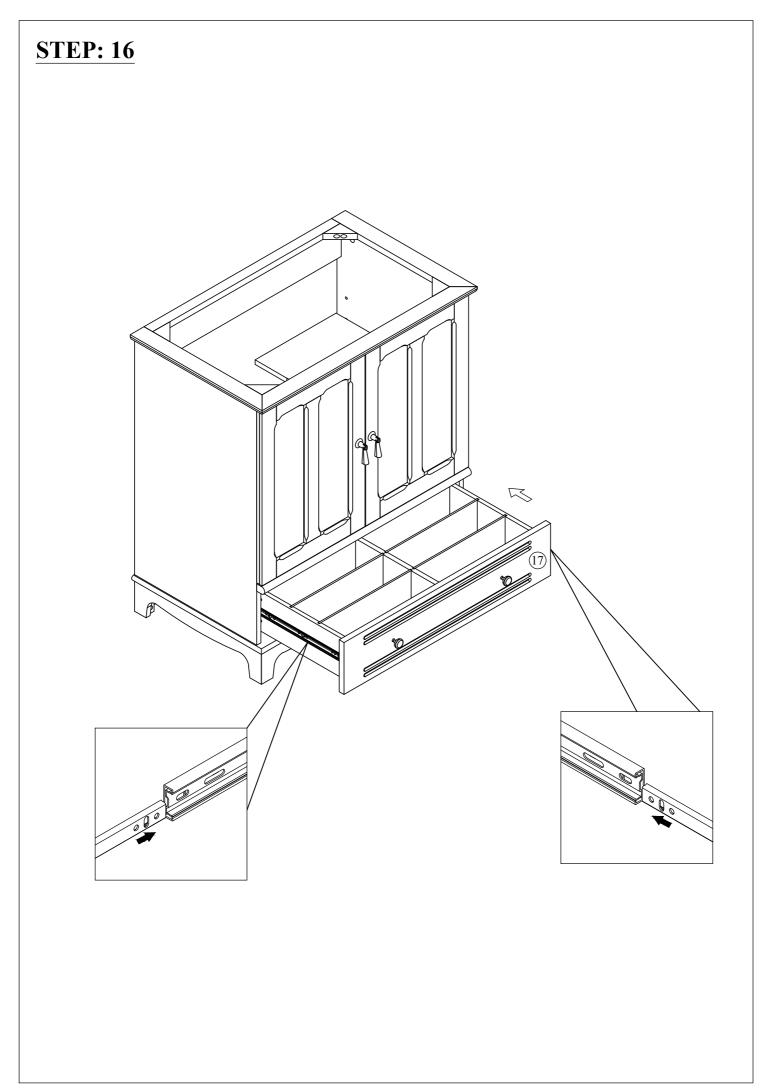

# STEP: 17 Wall Vall 2SETS

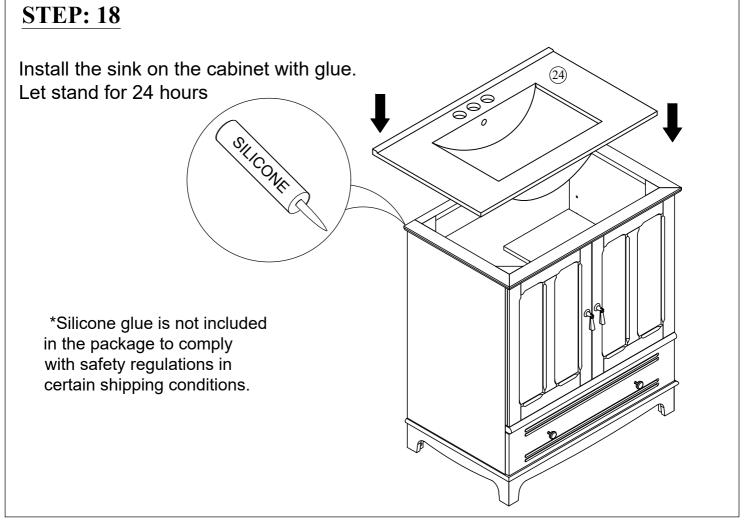


## **STEP: 19**

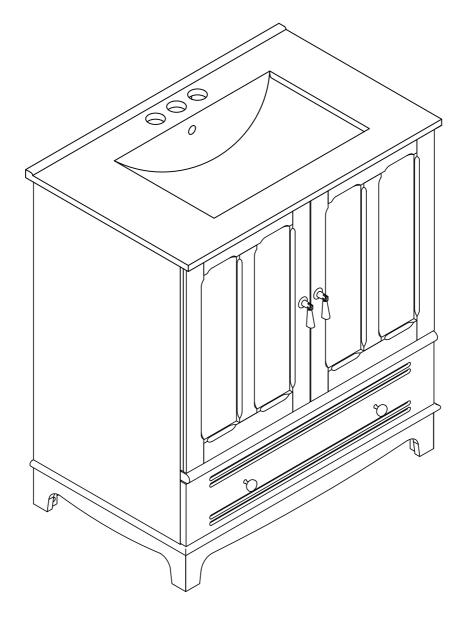




## HINGE ADJUSTMENTS

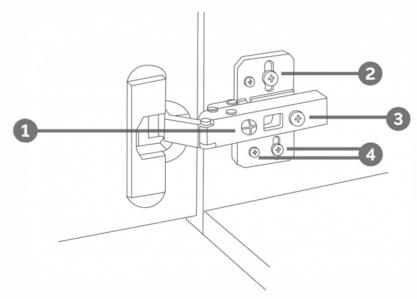

## 1 Sideways / Tilt adjustment


Turn the screw clockwise to move the door further away from the side of the cabinet anticlockwise to move the door closer to the side of the cabinet

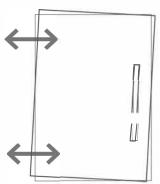

## 2 4 Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up anticlockwise to move the door down

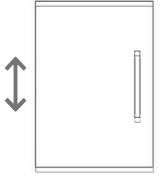

## Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw

clockwise to decrease the gap between the door and the cabinet

anticlockwise to increase the gap between the door and the cabinet

