

Assembly Instructions

Caution: You must read this before you proceed

Care & Maintenance

 
	• Not for commercial use. For residential use only.
	• Do not put hot items directly on furniture surface.
	• Do not clean furniture with harsh cleansers or polish.
	• Do not place furniture under direct sunlight.
	• Do not place furniture near heating or cooling vents.
	• Do not write on furniture without a padded barrier to protect the surface.
	• Do not place furniture outside . For indoor use only.
	• Stains may be removed with mild soap solution and damp cloth.
	• Children should not climb or jump on the furniture.
	• Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in Corner of carton for hardware packs .

Sets often ship in multiple boxes and may arrive a day or two apart.

ASSEMBLY INSTRUCTION
ITEM NO. N780P330601


SIDEBOARD

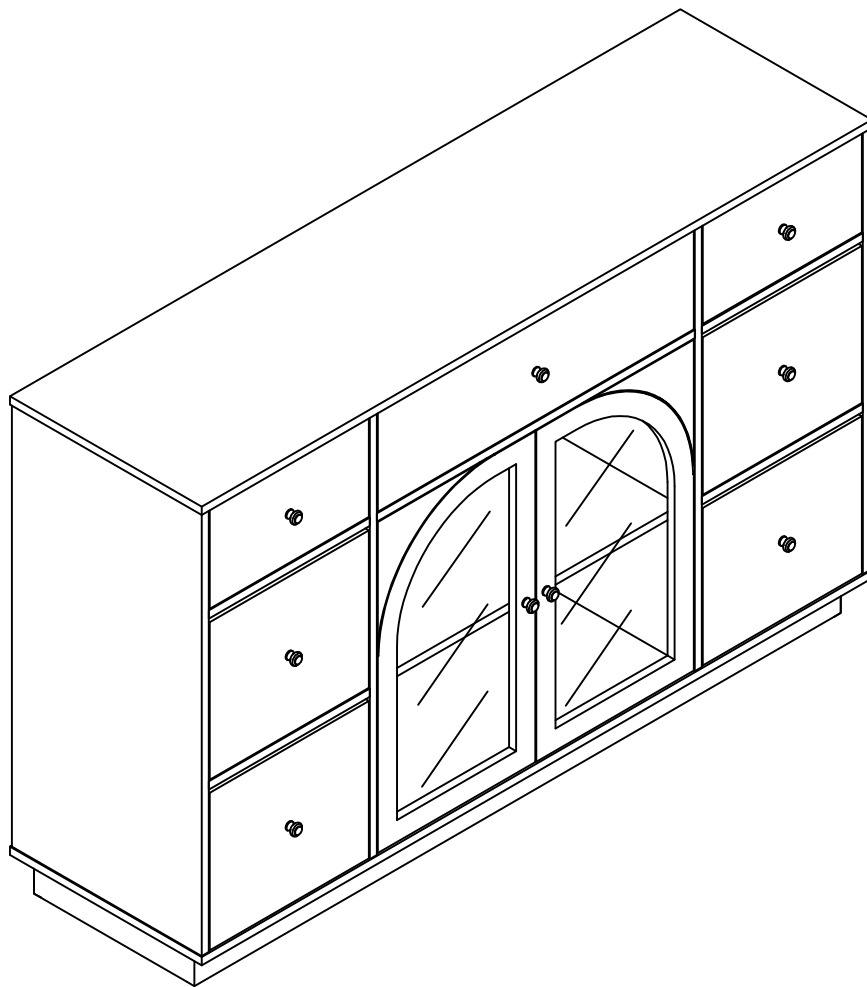

2 - People

ASSEMBLY INSTRUCTION





















 
ITEM NO. N780P330601

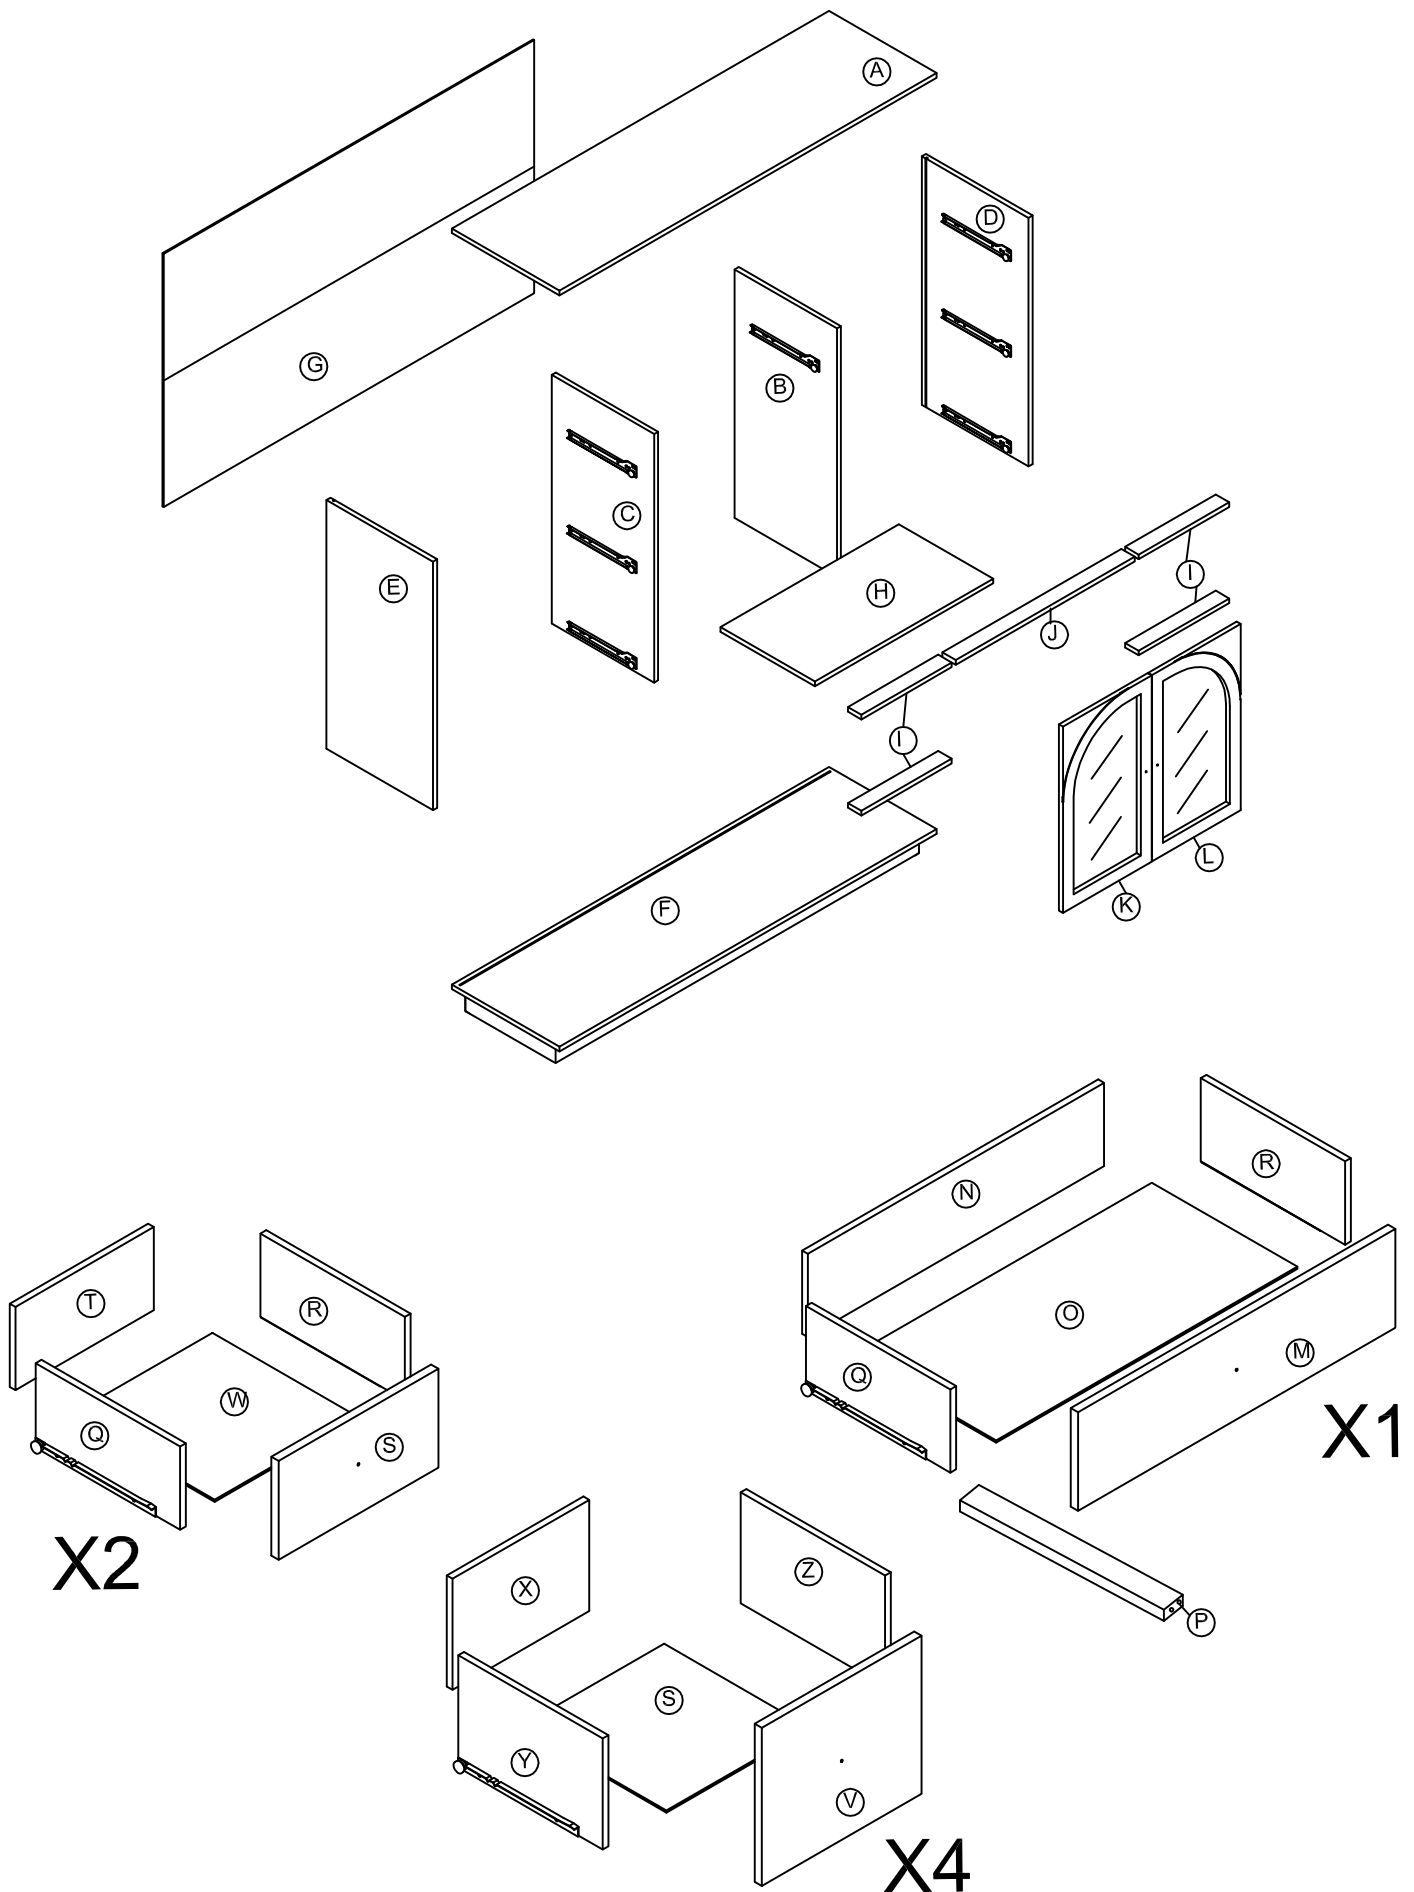

ASSEMBLY INSTRUCTION

ITEM NO. N780P330601

             
 
 
 
 
 
 
 
 
Pack List

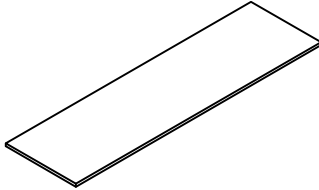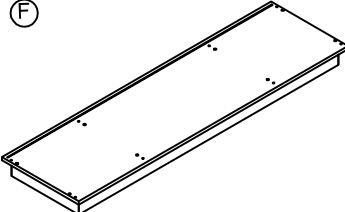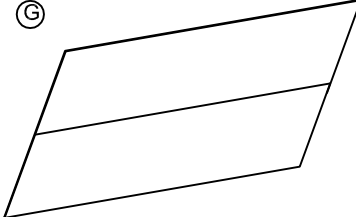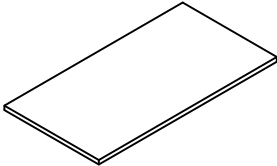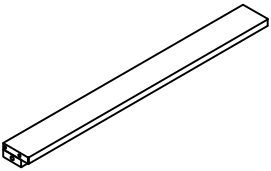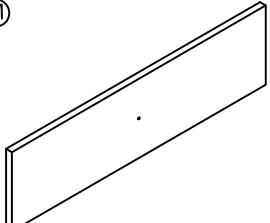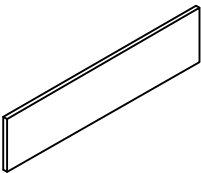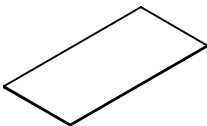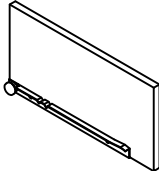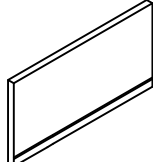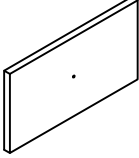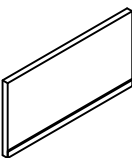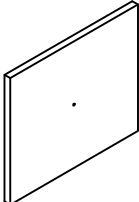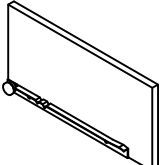Ⓐ 	Ⓑ 	Ⓒ 	Ⓓ 	
Table Top =1pc	Right Middle Panel=1pc	Left Middle Panel=1pc	Right Side=1pc	
Ⓔ 	Ⓕ 	Ⓖ 	Ⓗ 	
Left Side=1pc	Bottom=1pc	Back =1pc	Shelf =1pc	
Ⓘ 	Ⓙ 	Ⓚ 	Ⓛ 	
Short Crossbar=4pcs	Long Crossbar=1pc	Left Doors =1pc	Right Doors =1pc	
Ⓜ 	Ⓝ 	Ⓞ 	Ⓟ 	
Long Front Drawer=1pc	Long Back of drawer =1pc	Bottom of Middle Drawer=1pc	Support Of Middle Drawer =1pc	
Ⓢ 	Ⓡ 	Ⓣ 	Ⓤ 	
Upper Left side drawer =3pcs	Upper Right side drawer =3pcs	Upper Front Drawer=2pcs	Upper back drawer =2pcs	
Ⓥ 	Ⓧ 	Ⓨ 	Ⓩ 	Ⓦ 
Lower Front Drawer=4pcs	Lower back drawer =4pcs	Lower Left side drawer =8pcs	Lower Right side drawer =8pcs	Lower Bottom side drawer =4pcs

ASSEMBLY INSTRUCTION


ITEM NO. N780P330601

         Pack List

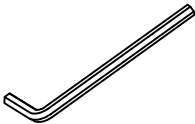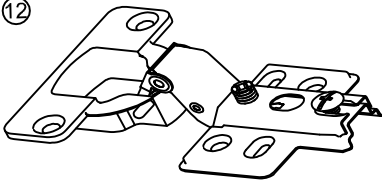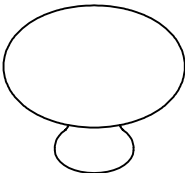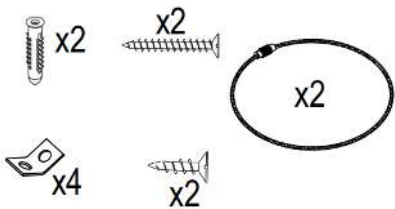① 	② 	③ 
Short Bulong 1/4" x 25mm= 2pcs +Extra 1pc	Long Bulong 1/4" x 38mm = 8pcs +Extra 1pc	Wooden Dowel 6 x 30mm =60pcs +Extra 2pcs
④ 	⑤ 	⑥ 
Spring Washer =10pcs +Extra 1pc	Flat Washer =10pcs +Extra 1pc	T Nut 10 x 12 =8pcs +Extra 1pc
⑦ 	⑧ 	⑨ 
Allen Key K4 x 80 =1pc +Extra 1pc	Cam Bolt M6x 28mm =36pcs + extra 1pc	Camlock 15 x 10mm =36pcs+ extra 1pc
⑩ 	⑪ 	⑫ 
Flat screw M4 x 25 =28PCS +Extra 2pcs	Support Shelf =4PCS +Extra 1pc	Hinge =4PCS
⑬ 	⑭ 	⑮ 
Flat screw M3 x 15 =24PCS +Extra 2pcs	Bolt of Handle M4 x 20 =9pcs +Extra 1pc	Knob =9pcs
⑯ 		
ANTITIP KIT =2SETS		

Assembly Preparation

 Before Beginning Assembly:

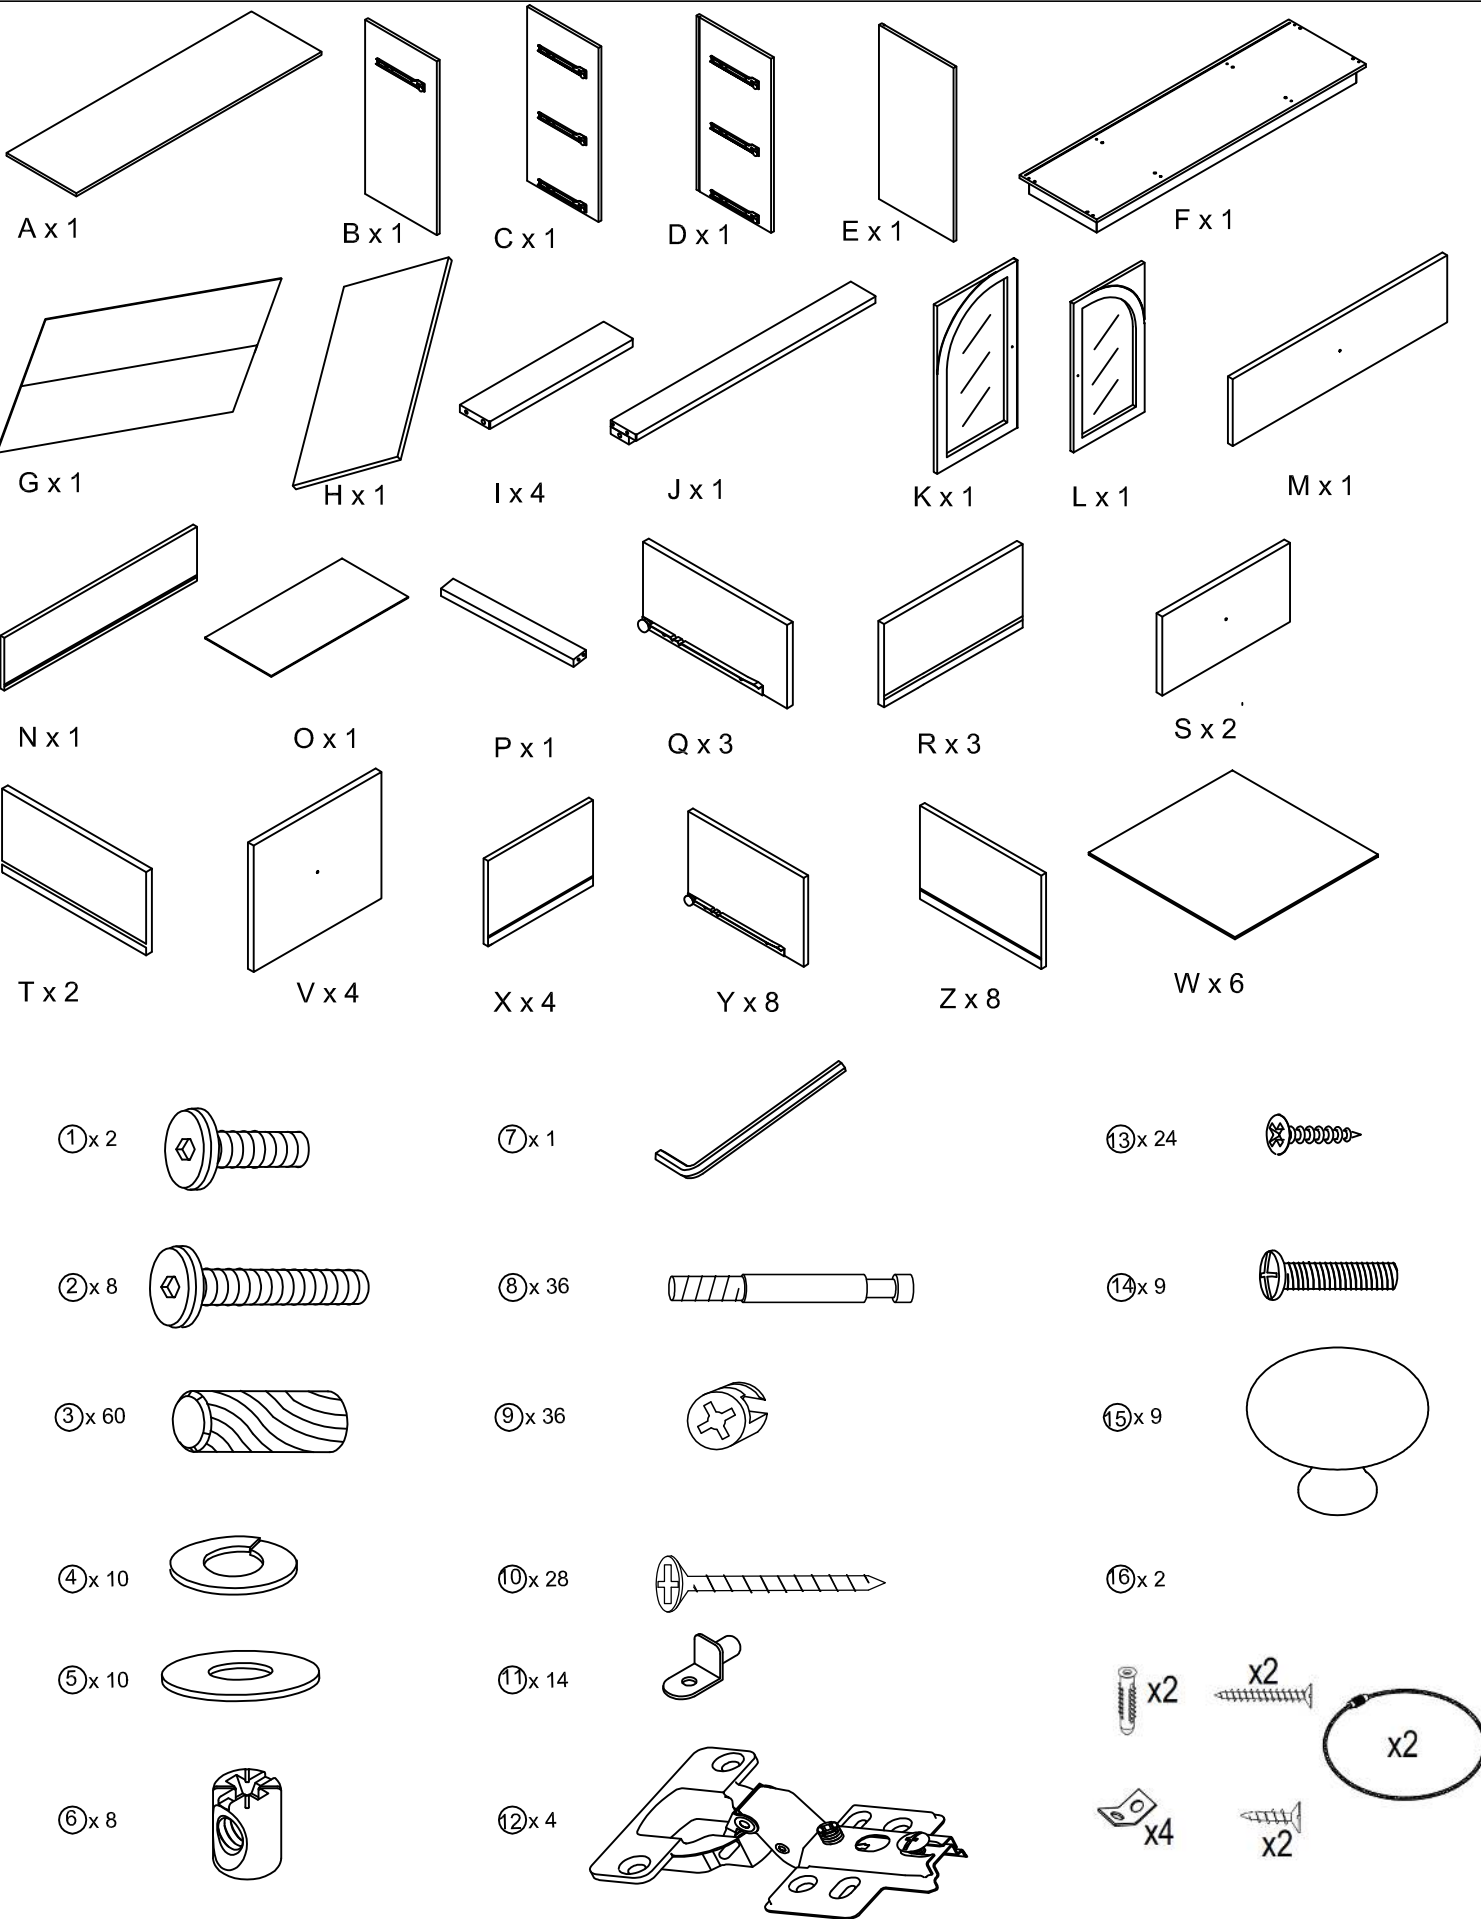

Assembly Preparation

Before Beginning Assembly:



- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-



 
- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-

Assembly Steps

Overview

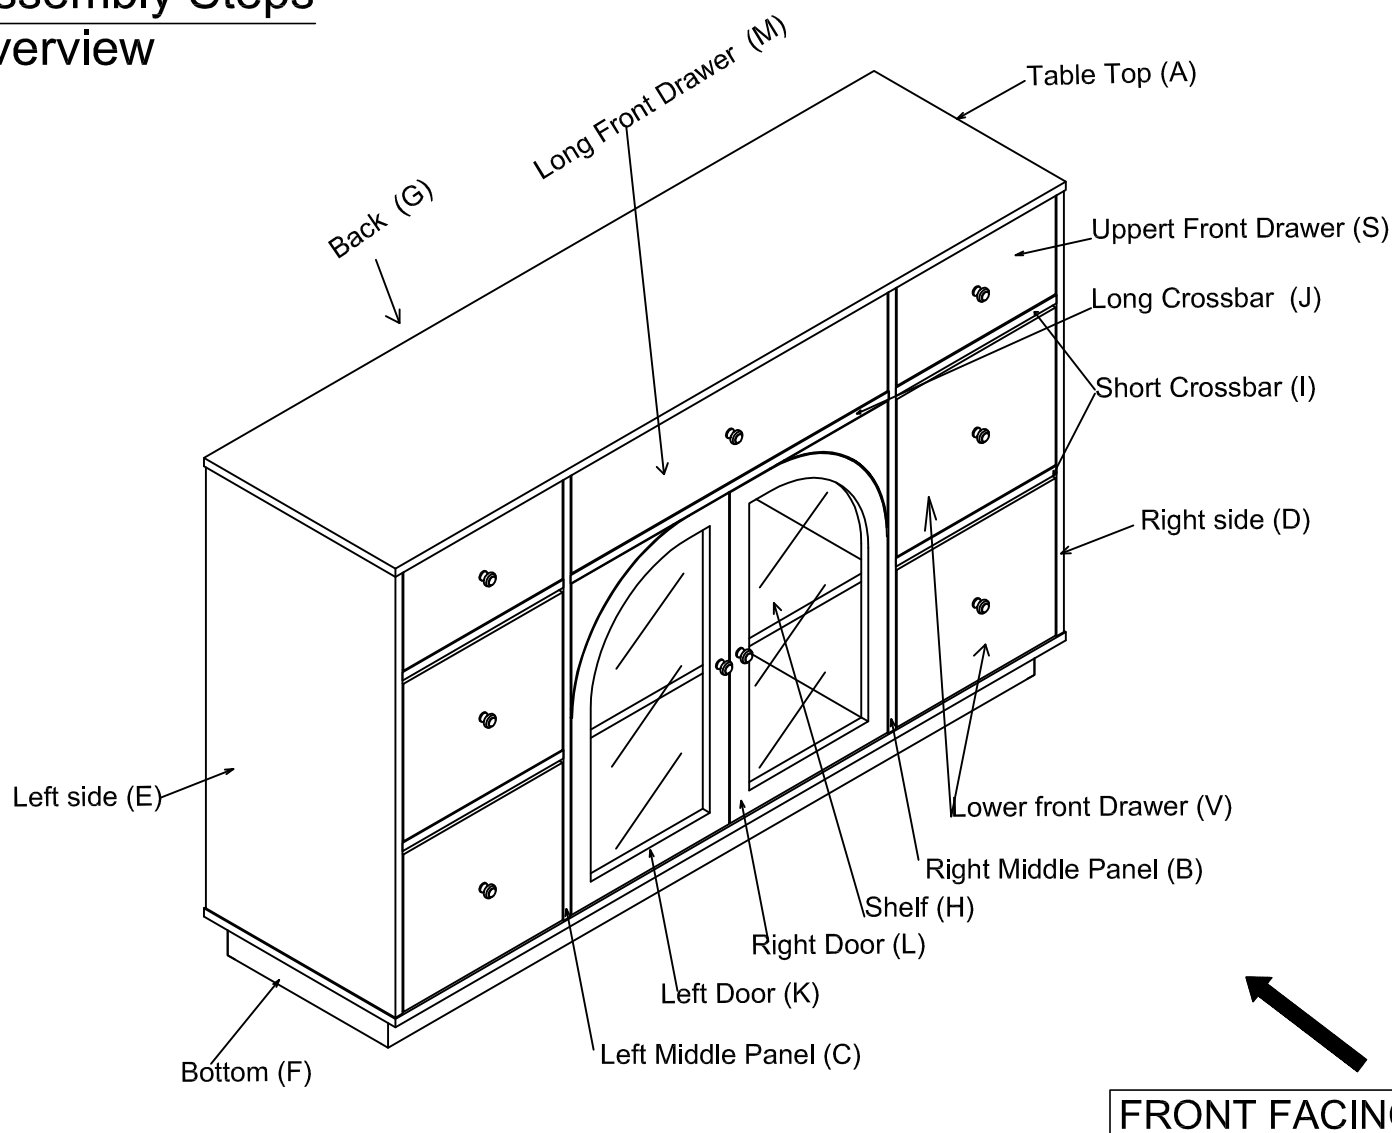

This Sideboard has multiple parts and may require up to some 75 minutes to assemble. To give you an overview of the Sideboard parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Assembly Preparation

Before Beginning Assembly:

Cam Lock Assembly Instructions


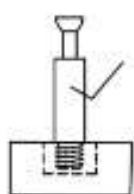 


Diagram A

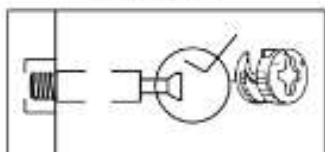 

Insert Cam Bolt into hole as shown in diagram A.


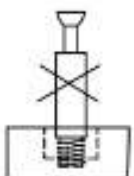 


Diagram B

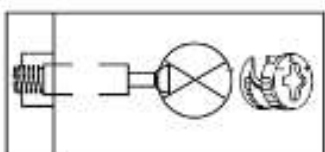 

Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.



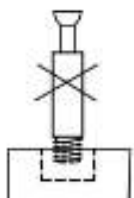 



Diagram C

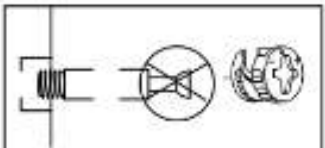 

 Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.

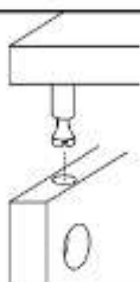


Connect the panels together.

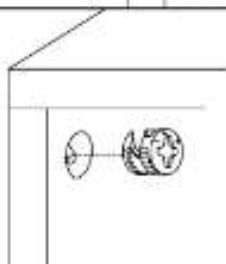 

ARROW SIGN



 Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.

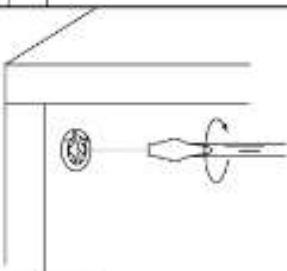


To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver.
**Do not use an automatic screwdriver as it may bend or break if too much power is imposed.*


ASSEMBLY INSTRUCTION

ITEM NO. N780P330601

 Step 1:

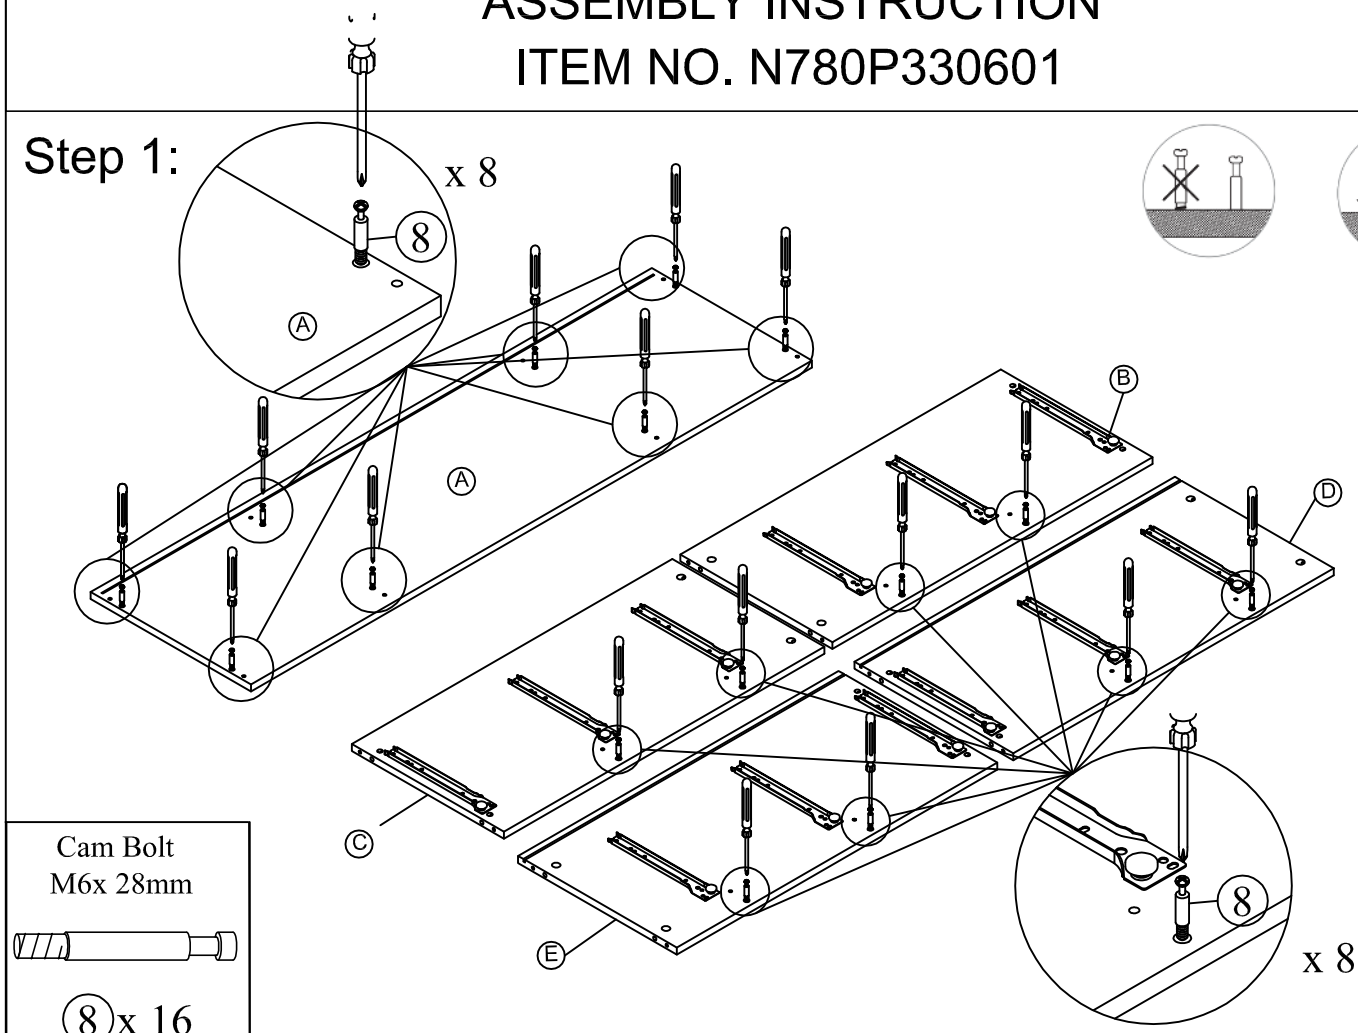

 Step 2

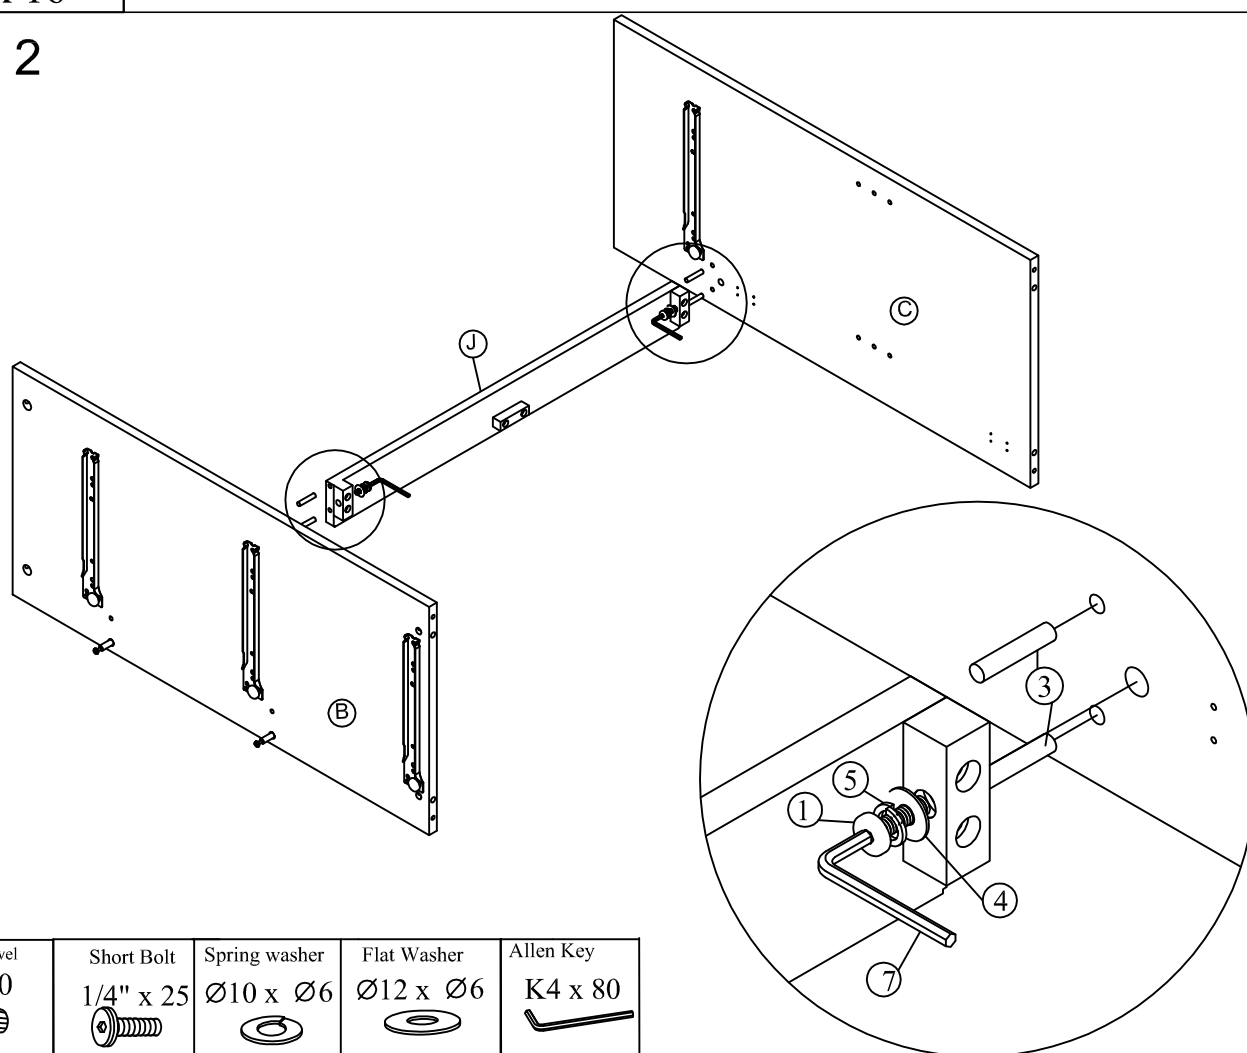

Wooden Dowel

Ø6 x 30



(3) x 4

Short Bolt

1/4" x 25



(1) x 2

Spring washer

Ø10 x Ø6



(4) x 4

Flat Washer

Ø12 x Ø6



(5) x 4

Allen Key

K4 x 80

 


(7) x 1


ASSEMBLY INSTRUCTION

ITEM NO. N780P330601

Step 3

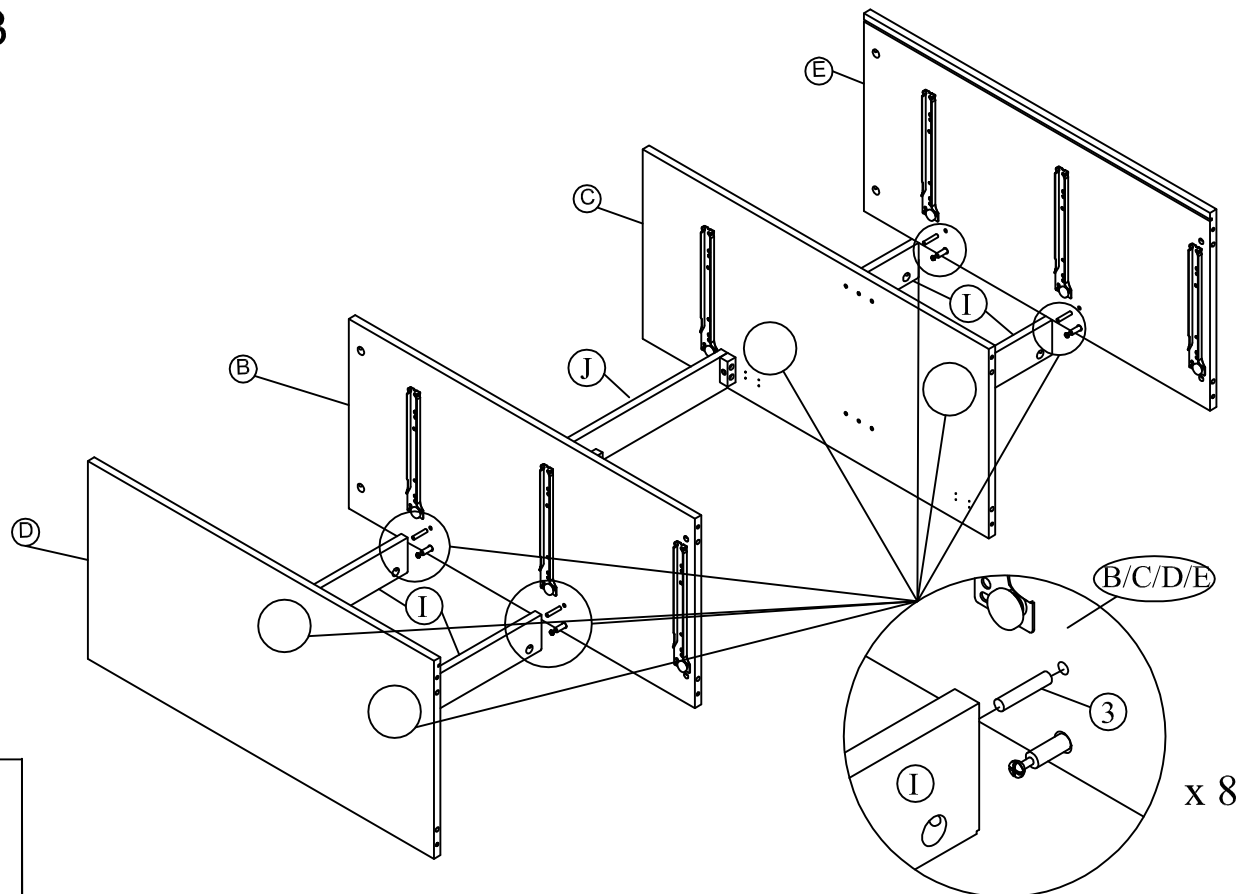

 
Step 4

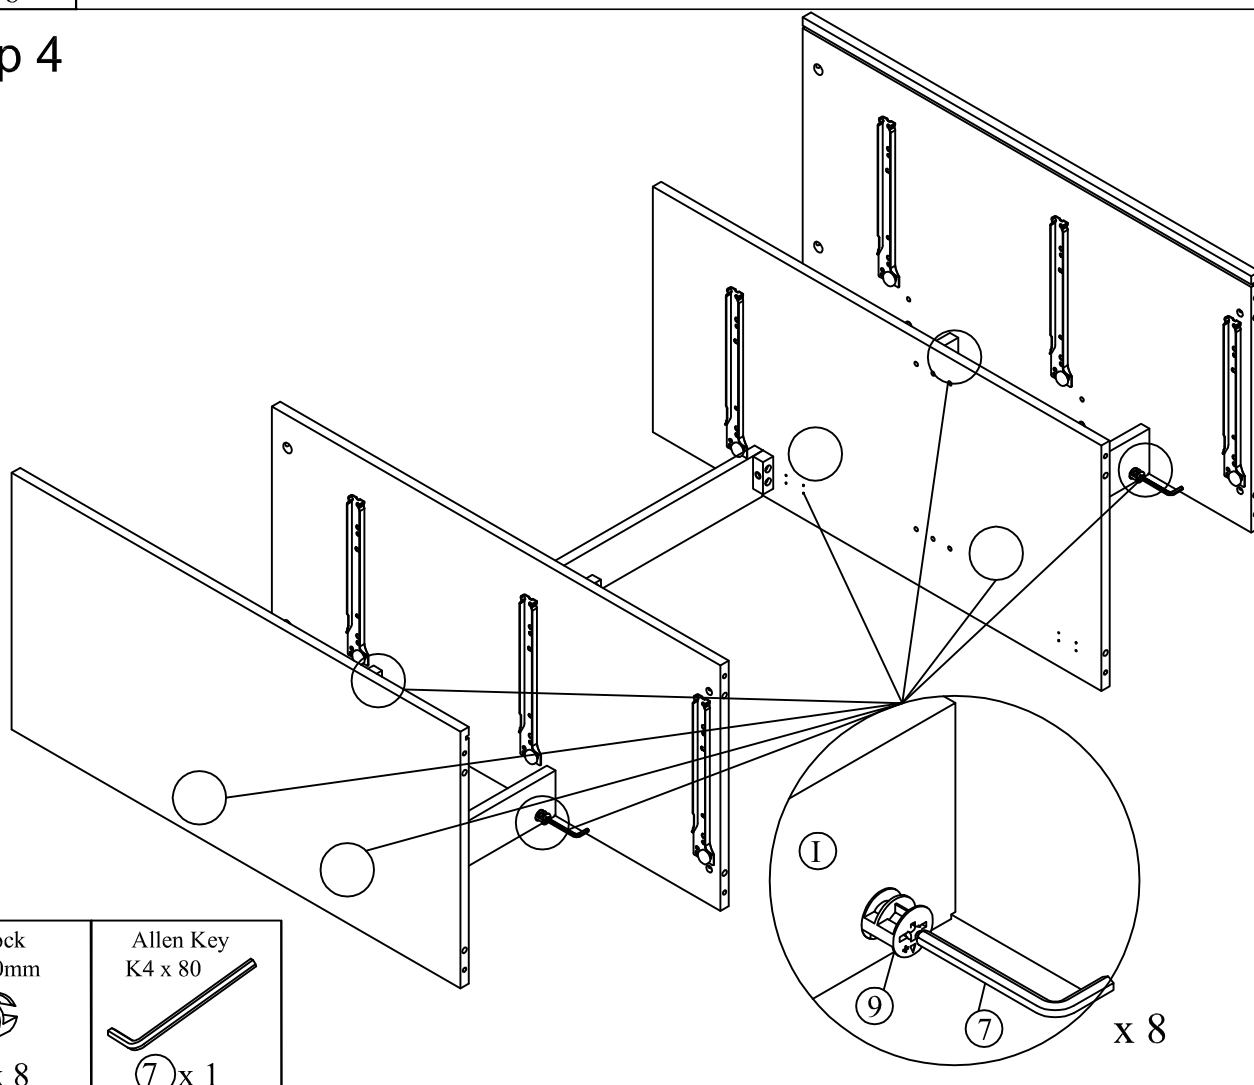


ASSEMBLY INSTRUCTION

ITEM NO. N780P330601

 Step 5:

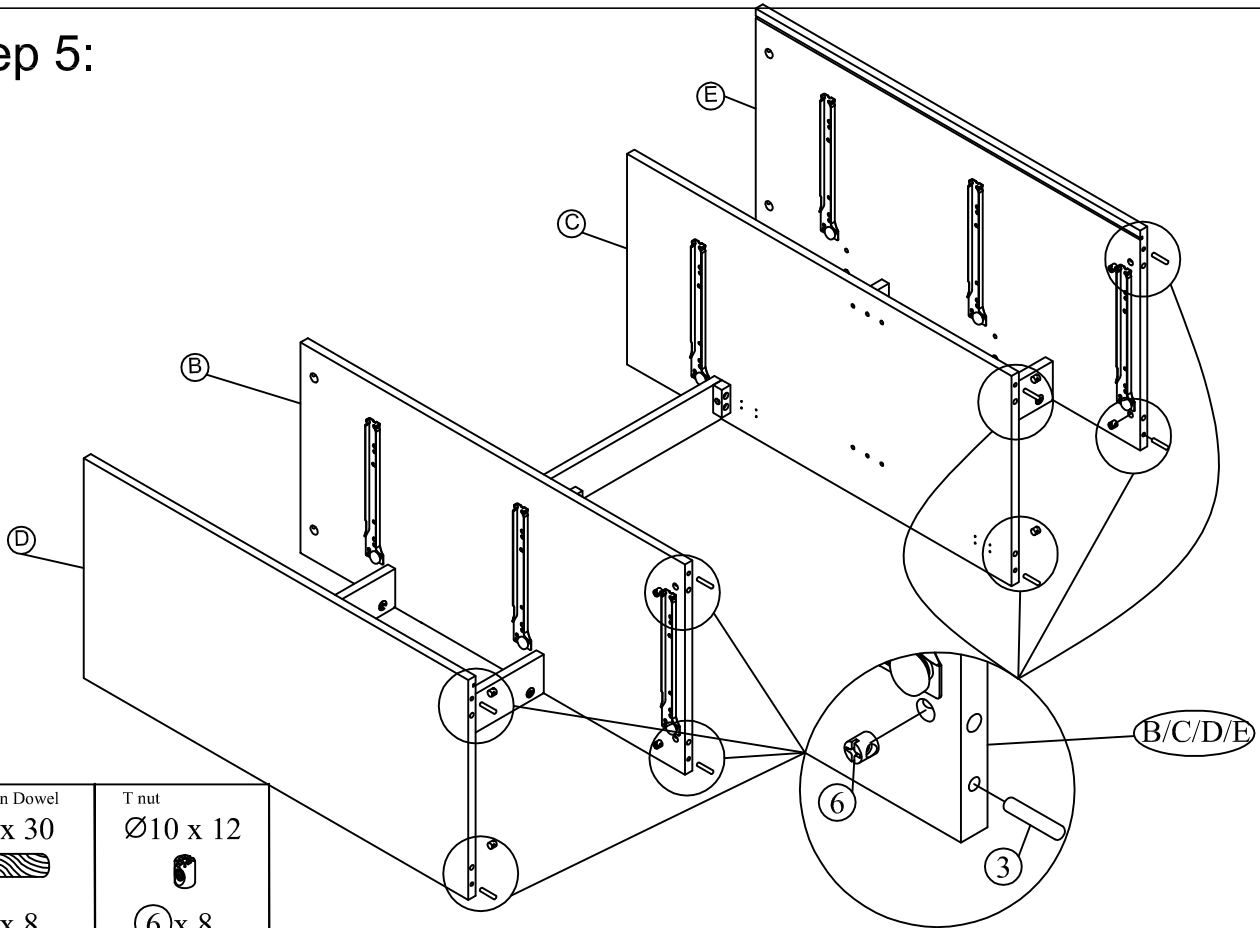

 
Step 6

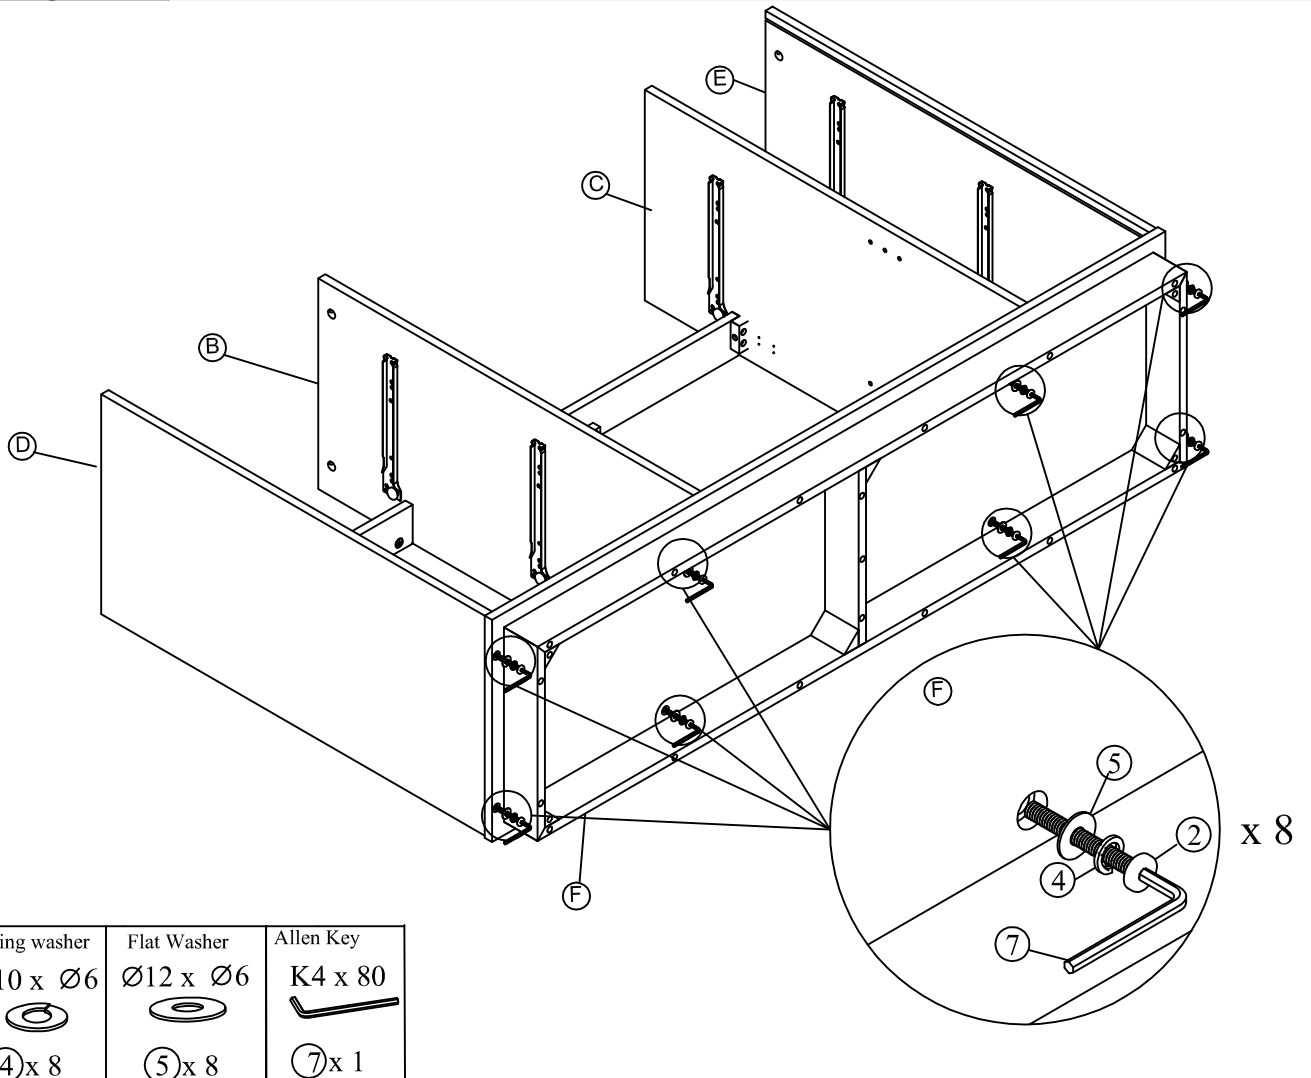


ASSEMBLY INSTRUCTION

ITEM NO. N780P330601

 Step 7

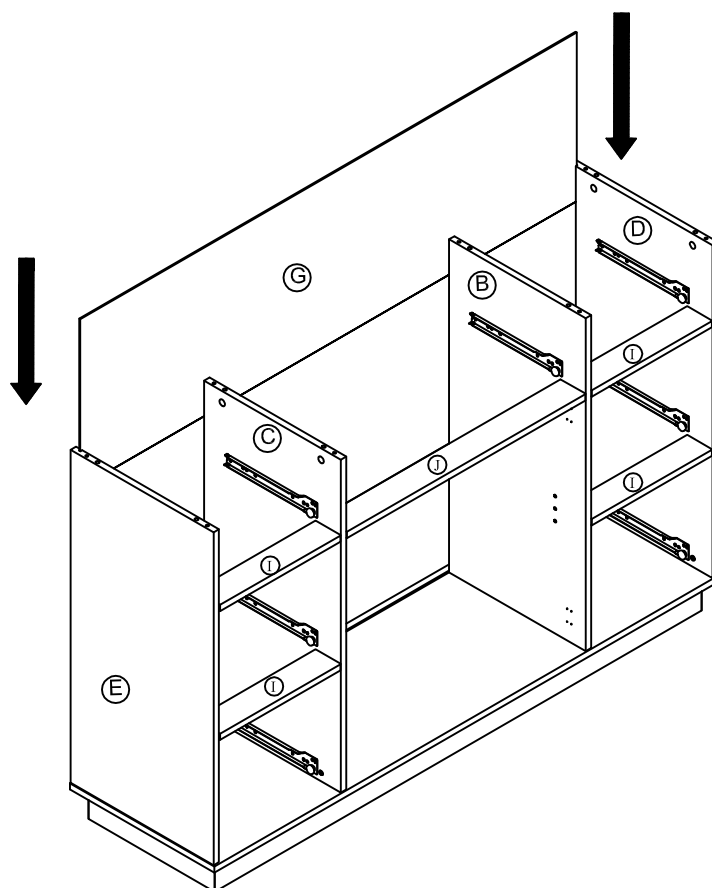

 
Step 8

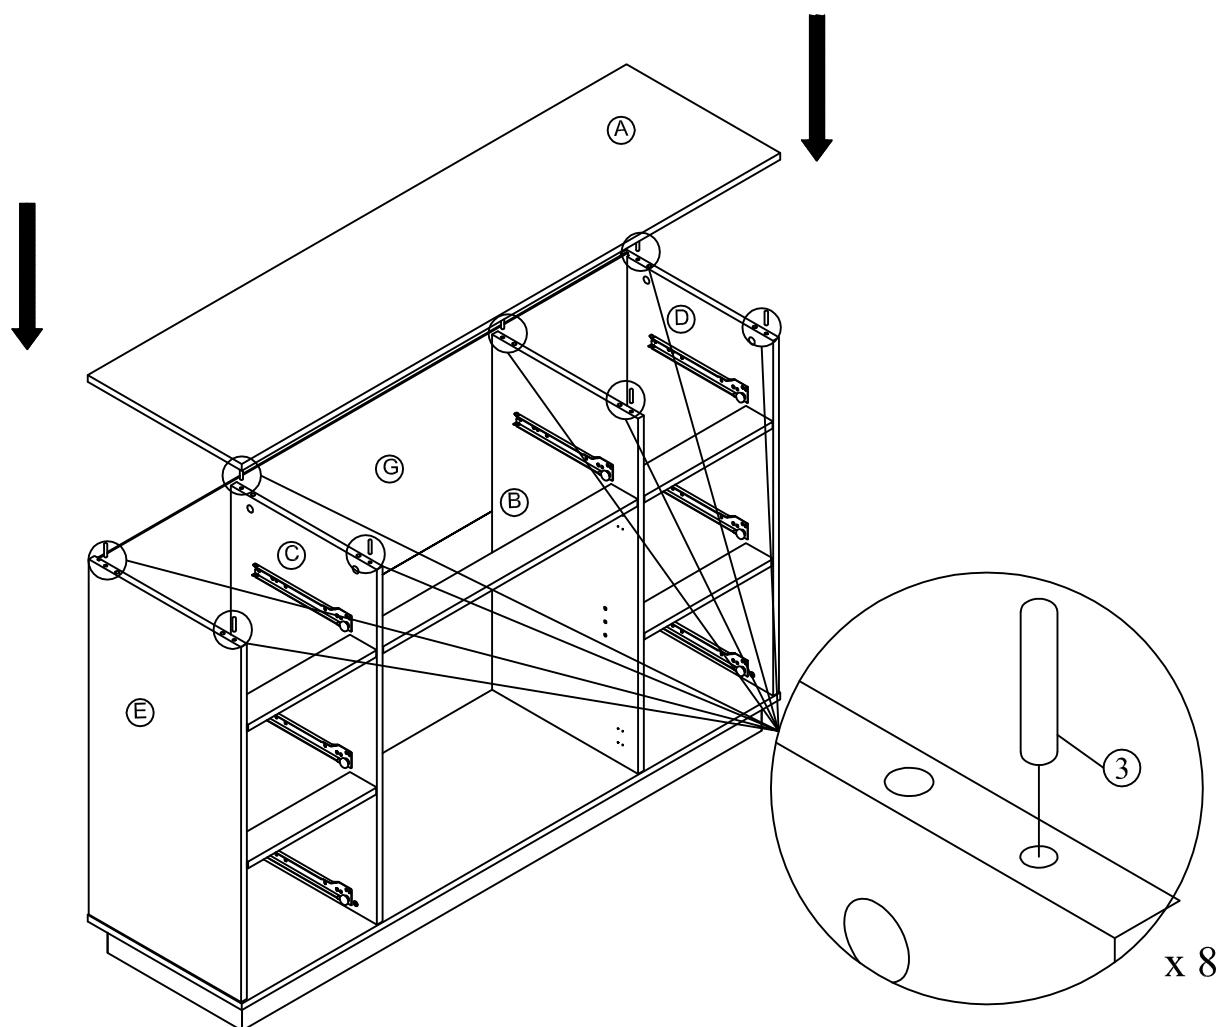

ASSEMBLY INSTRUCTION

ITEM NO. N780P330601

 Step 9

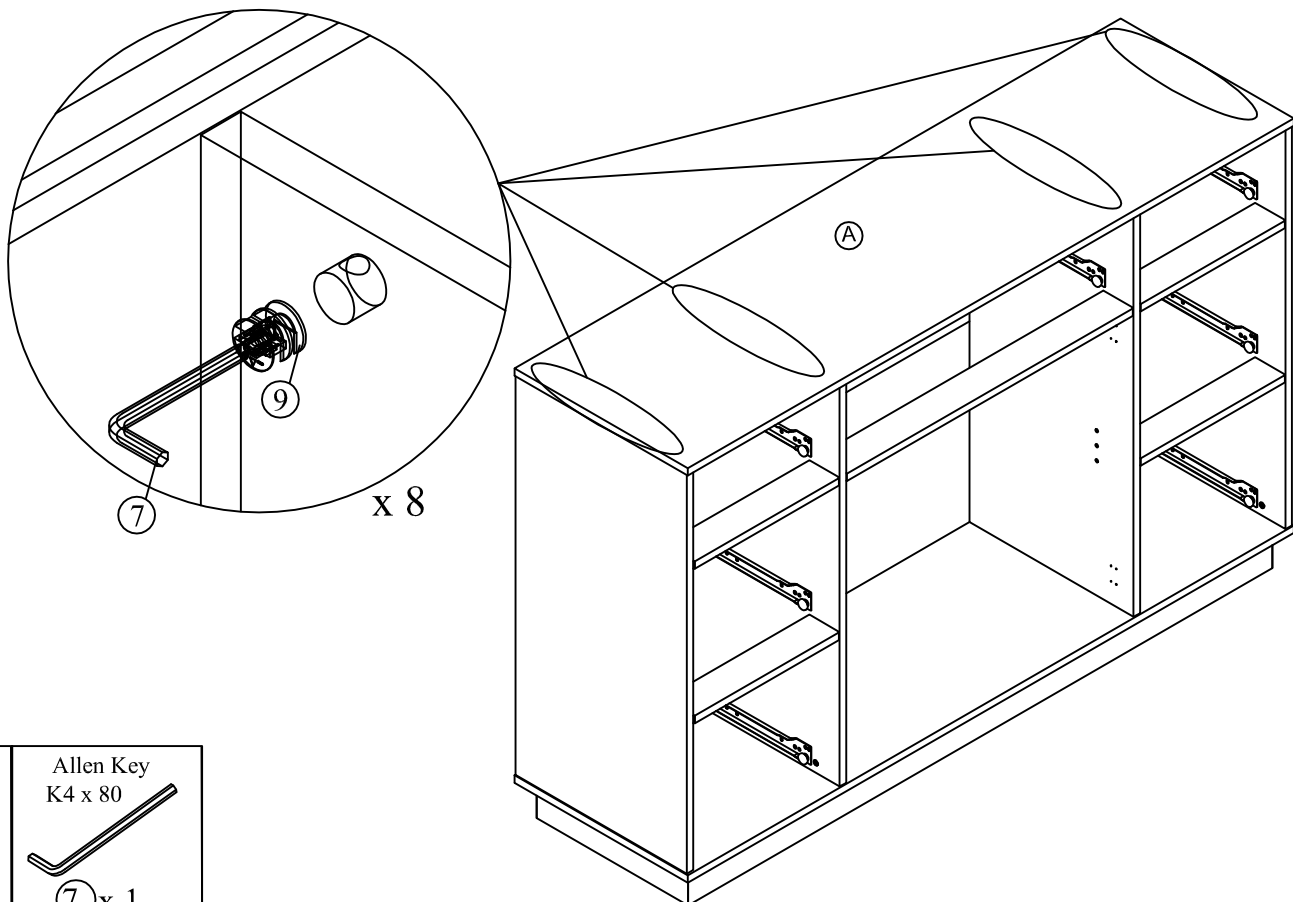


Camlock
Ø 15 x 10mm




⑨ x 8

 Allen Key
K4 x 80




⑦ x 1

 Step 10

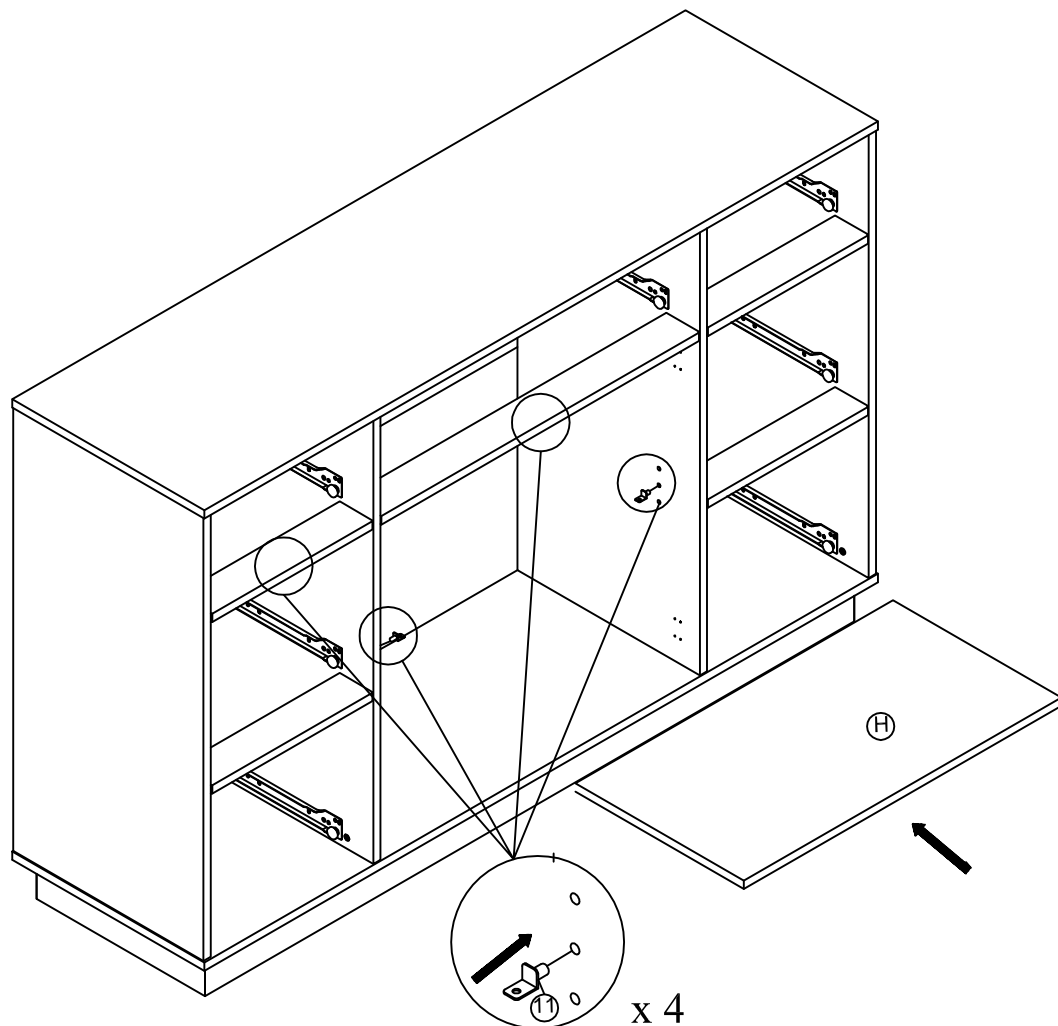

Support Shelf

 


⑪ x 4


ASSEMBLY INSTRUCTION

ITEM NO. N780P330601

 Step 11

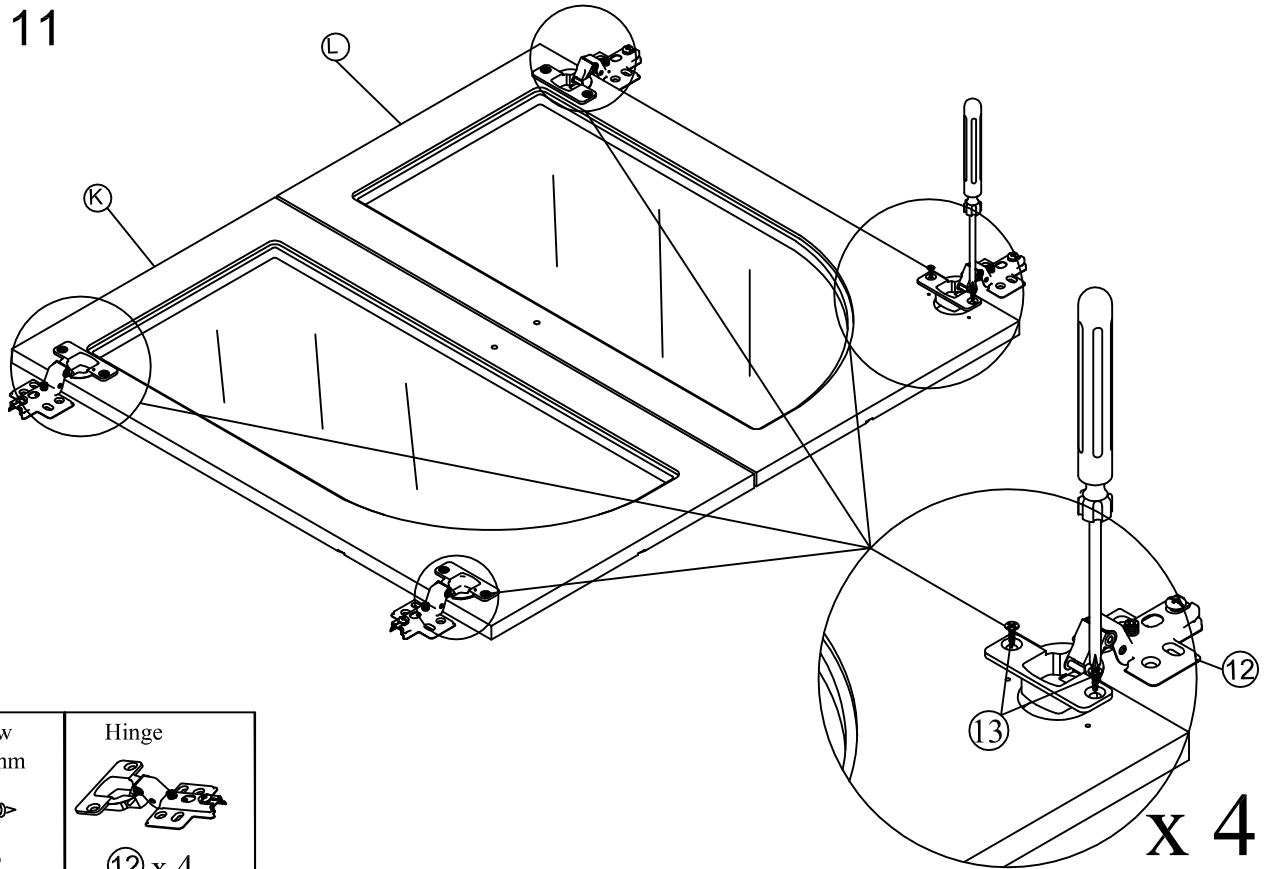

 
Step 12

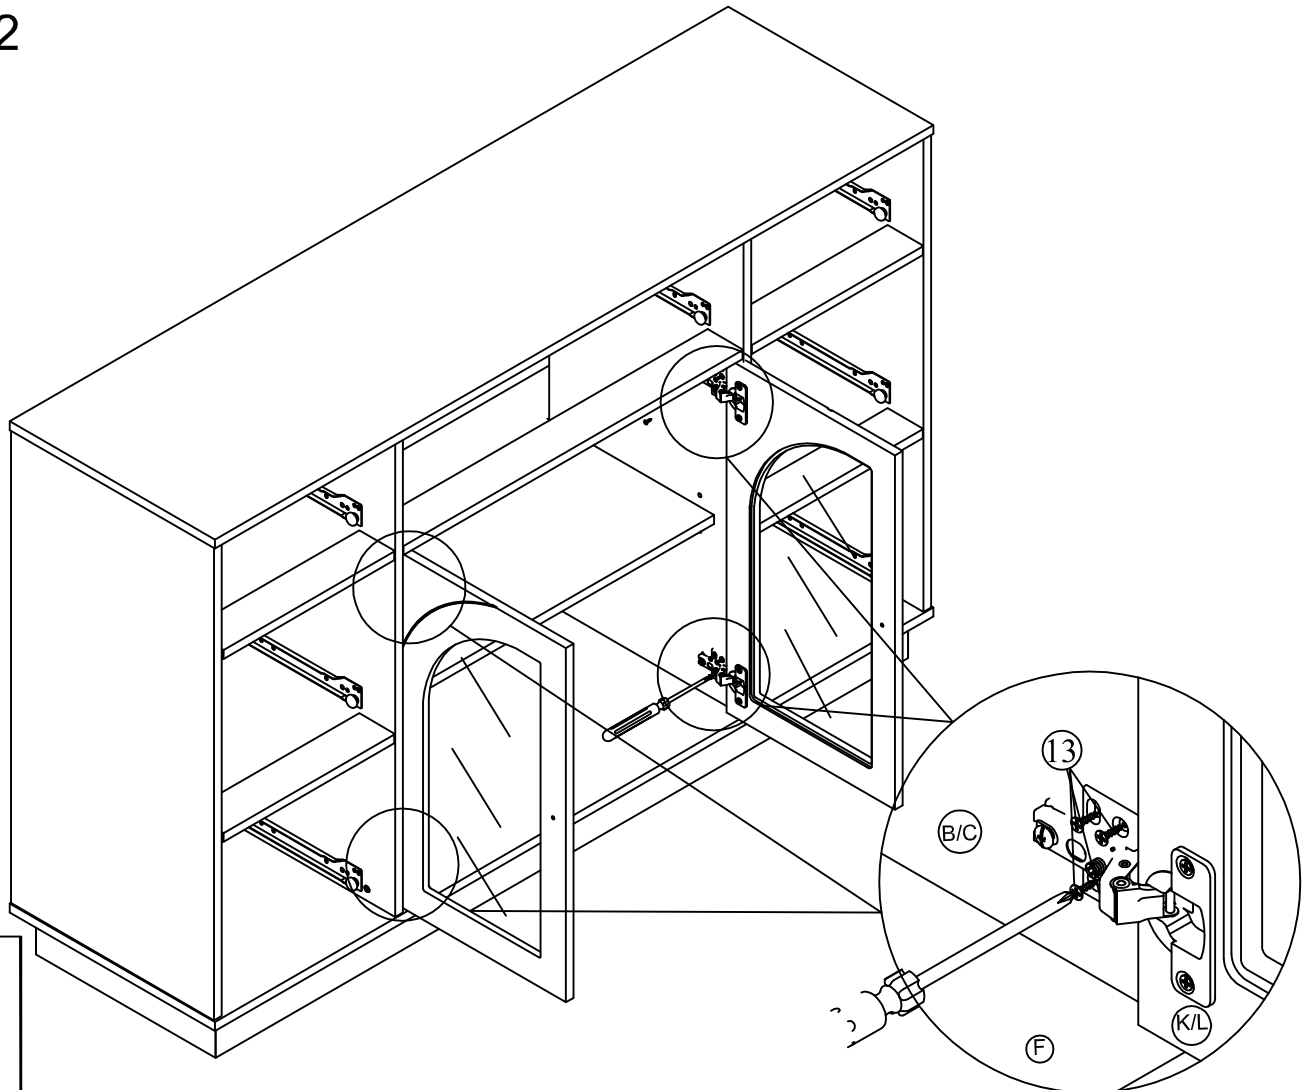

ASSEMBLY INSTRUCTION

ITEM NO. N780P330601

 Step 13

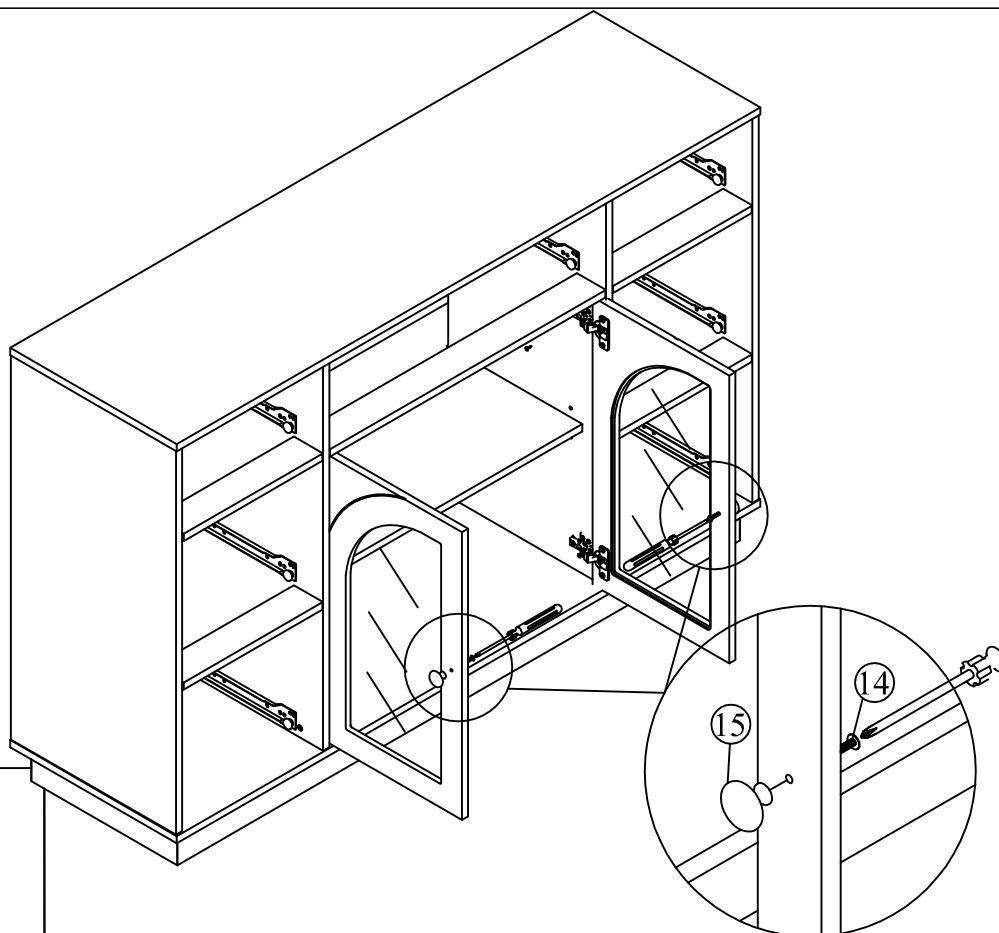

Bolt of Handle
M4 x 20 mm



(14) x 2

Knob

 


(15) x 2

Step 14 If your Cabinet door looking crooked or unevely spaced?


Then you've come to the right place, Follow the illustrations below to get your cabinet door aligned and ready for action.

If your door is too low or too high...

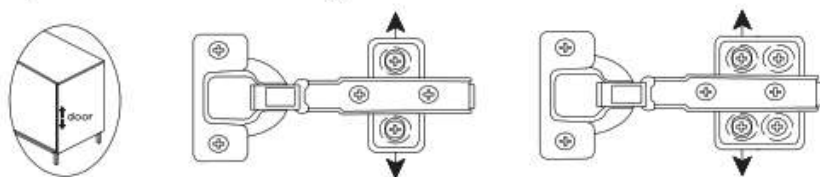


Loosen the height screws, then move the door up or down to make it level.

 If the space between your doors is off...

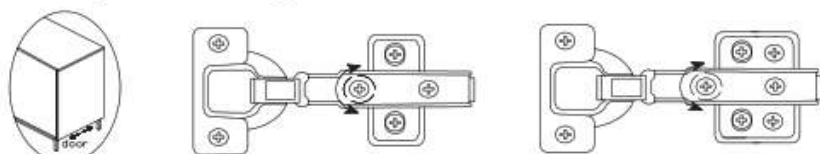

Loosen the side-to-side screws, then screw counter-clockwise to make the gap wider or clockwise to close any gaps.

 If you need to adjust the depth of the doors...

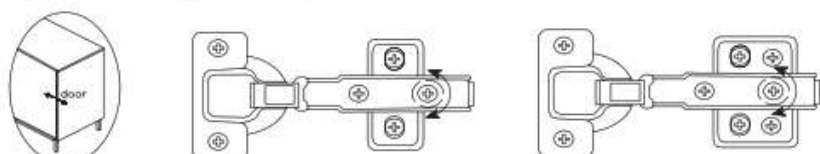


Adjust the in-and-out screws until the door is aligned with the side of the cabinet.



Note: Please assemble the door according to the installa
If the cabinet door is deviated, the internal hinge needs to be slowly adjusted to solve the problem.

ASSEMBLY INSTRUCTION

ITEM NO. N780P330601

   Step 15

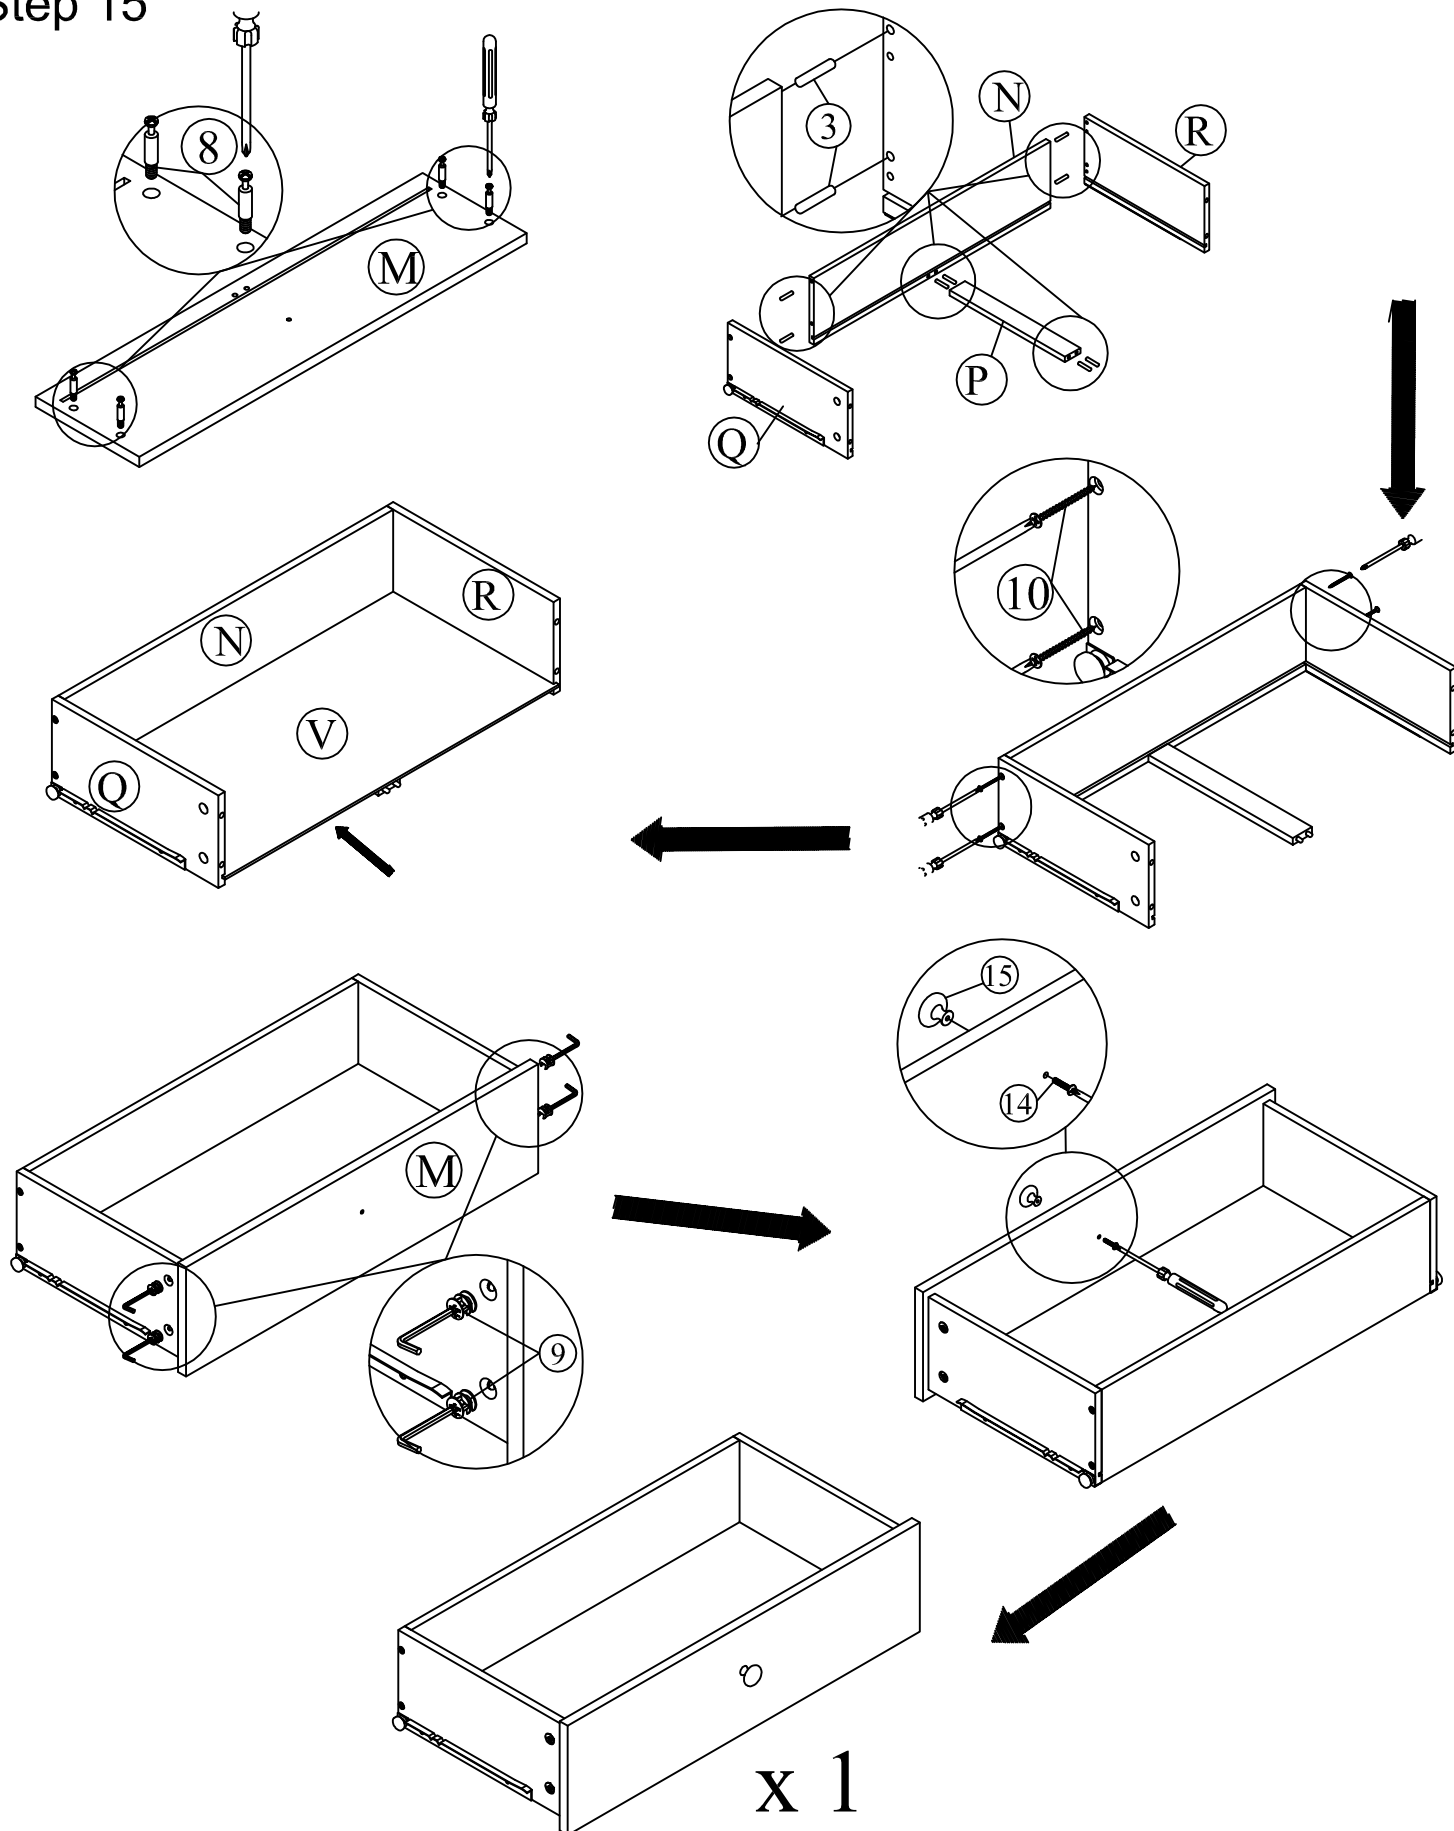


Wooden Dowel Ø6 x 30  (3) x 4	Flat screw M4 x 25mm  (10) x 4	Cam Bolt M6x 28mm  (8) x 4	Camlock 15 x 10mm  (9) x 4	Allen Key K4 x 80  (7) x 1	Bolt of Handle M4 x 20 mm  (14) x 1	Knob  (15) x 1
---	---	---	---	---	--	---



ASSEMBLY INSTRUCTION

ITEM NO. N780P330601

 Step 16

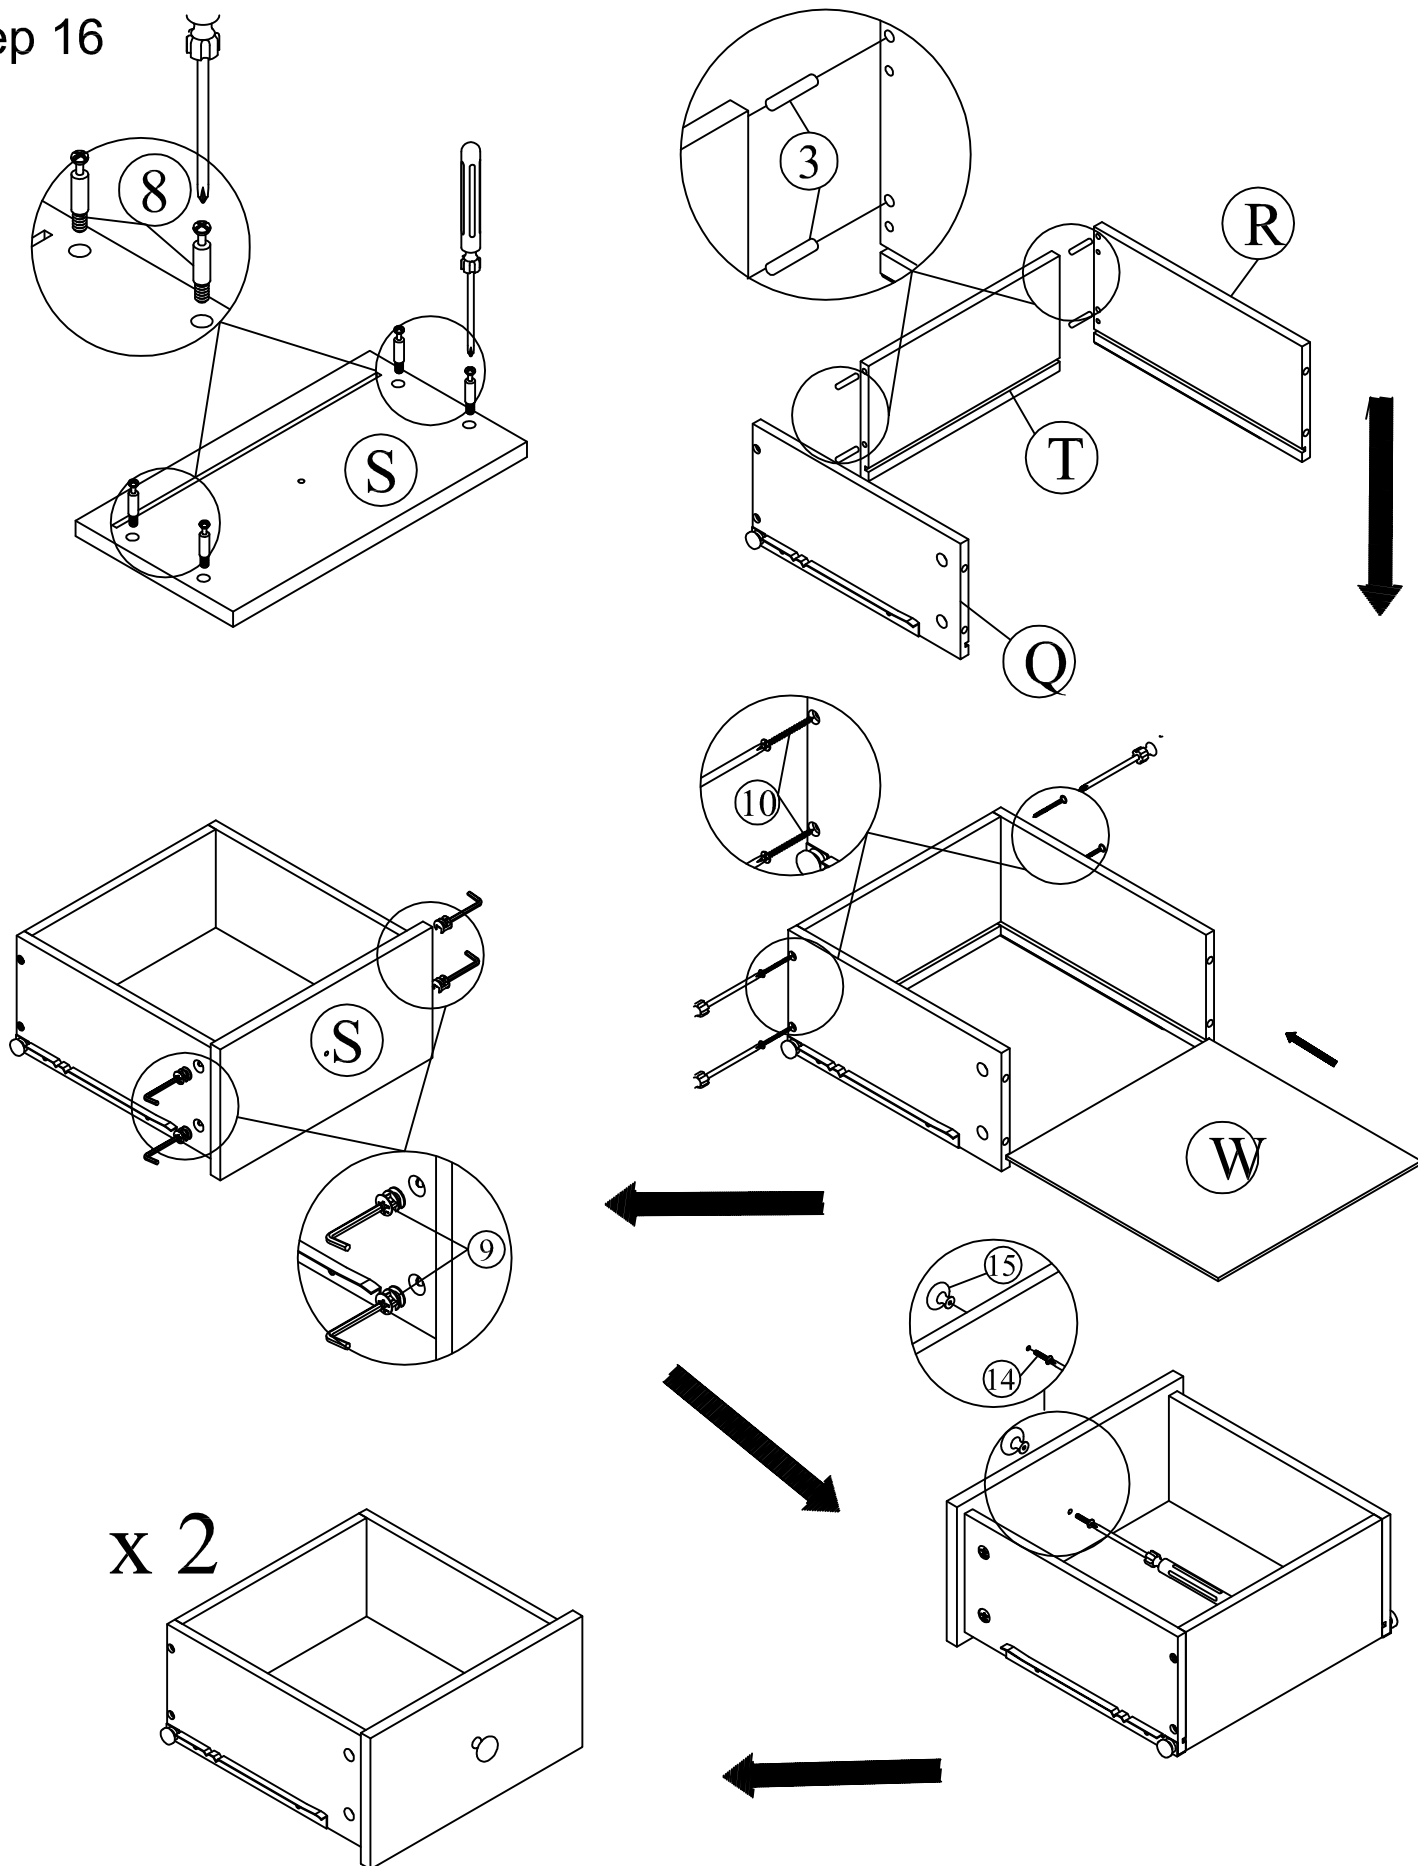


x 2

 
 
Wooden Dowel Ø6 x 30 	Flat screw M4 x 25mm 	Cam Bolt M6x 28mm 	Camlock Ø 15 x 10mm 	Allen Key K4 x 80 	Bolt of Handle M4 x 20 mm 	Knob 
(3) x 8	(10) x 8	(8) x 8	(9) x 8	(7) x 1	(14) x 2	(15) x 2

ASSEMBLY INSTRUCTION

ITEM NO. N780P330601


 
 
 
Step 17

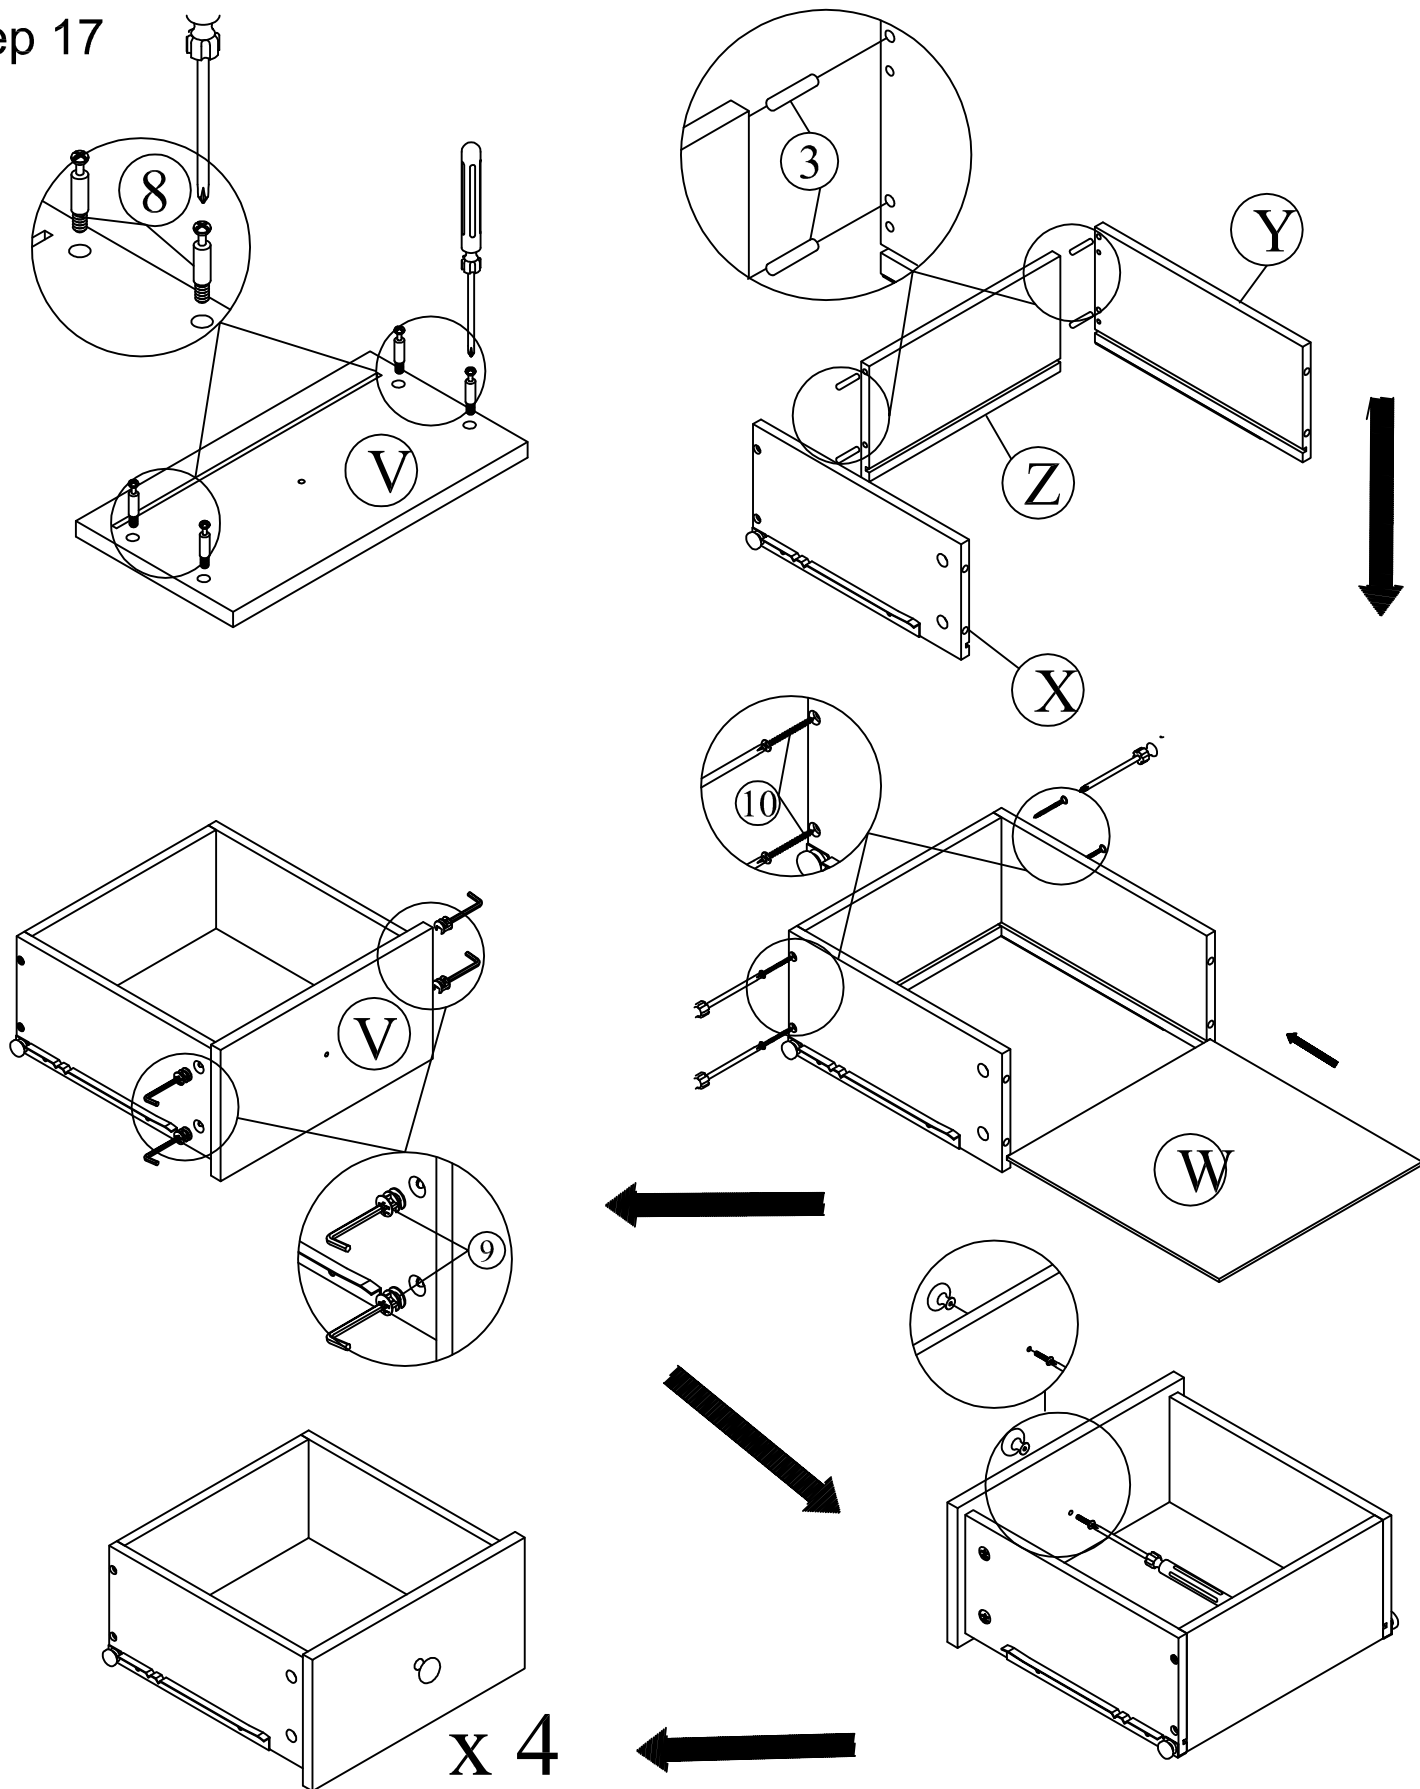

Wooden Dowel $\varnothing 6 \times 30$  (3) x 16	Flat screw M4 x 25mm  (10) x 16	Cam Bolt M6 x 28mm  (8) x 8	Camlock $\varnothing 15 \times 10\text{mm}$  (9) x 16	Allen Key K4 x 80  (7) x 1	Bolt of Handle M4 x 20 mm  (14) x 4	Knob  (15) x 4
--	--	--	--	---	--	--


ASSEMBLY INSTRUCTION
ITEM NO. N780P330601

    Step 18

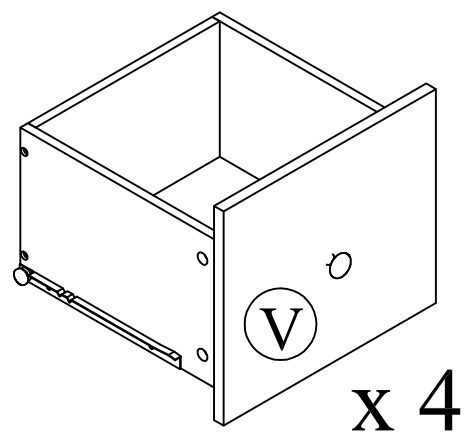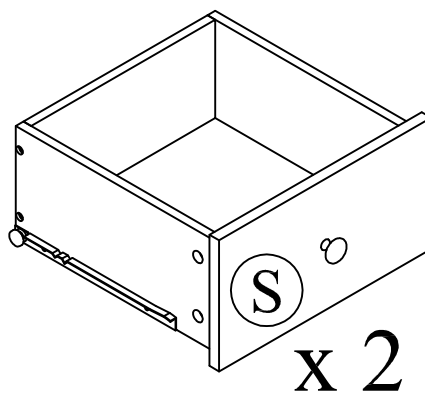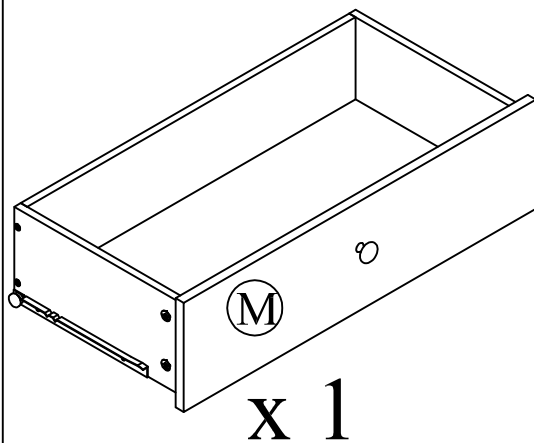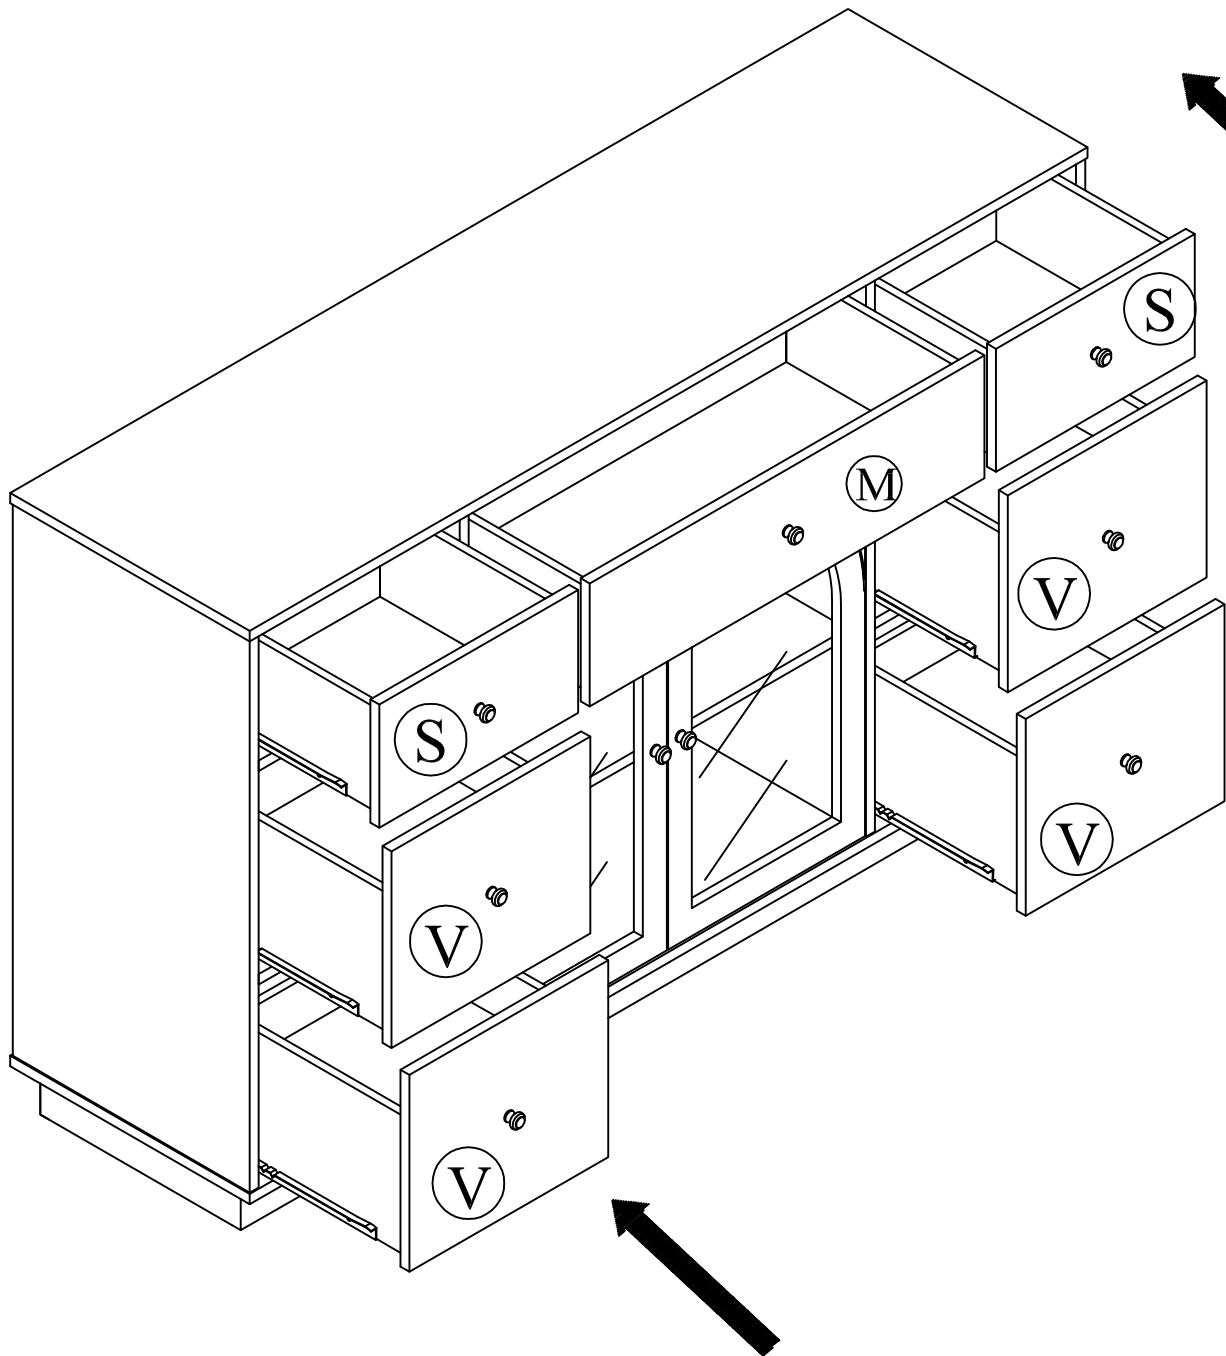


ASSEMBLY INSTRUCTION
ITEM NO. N780P330601

 Step 19

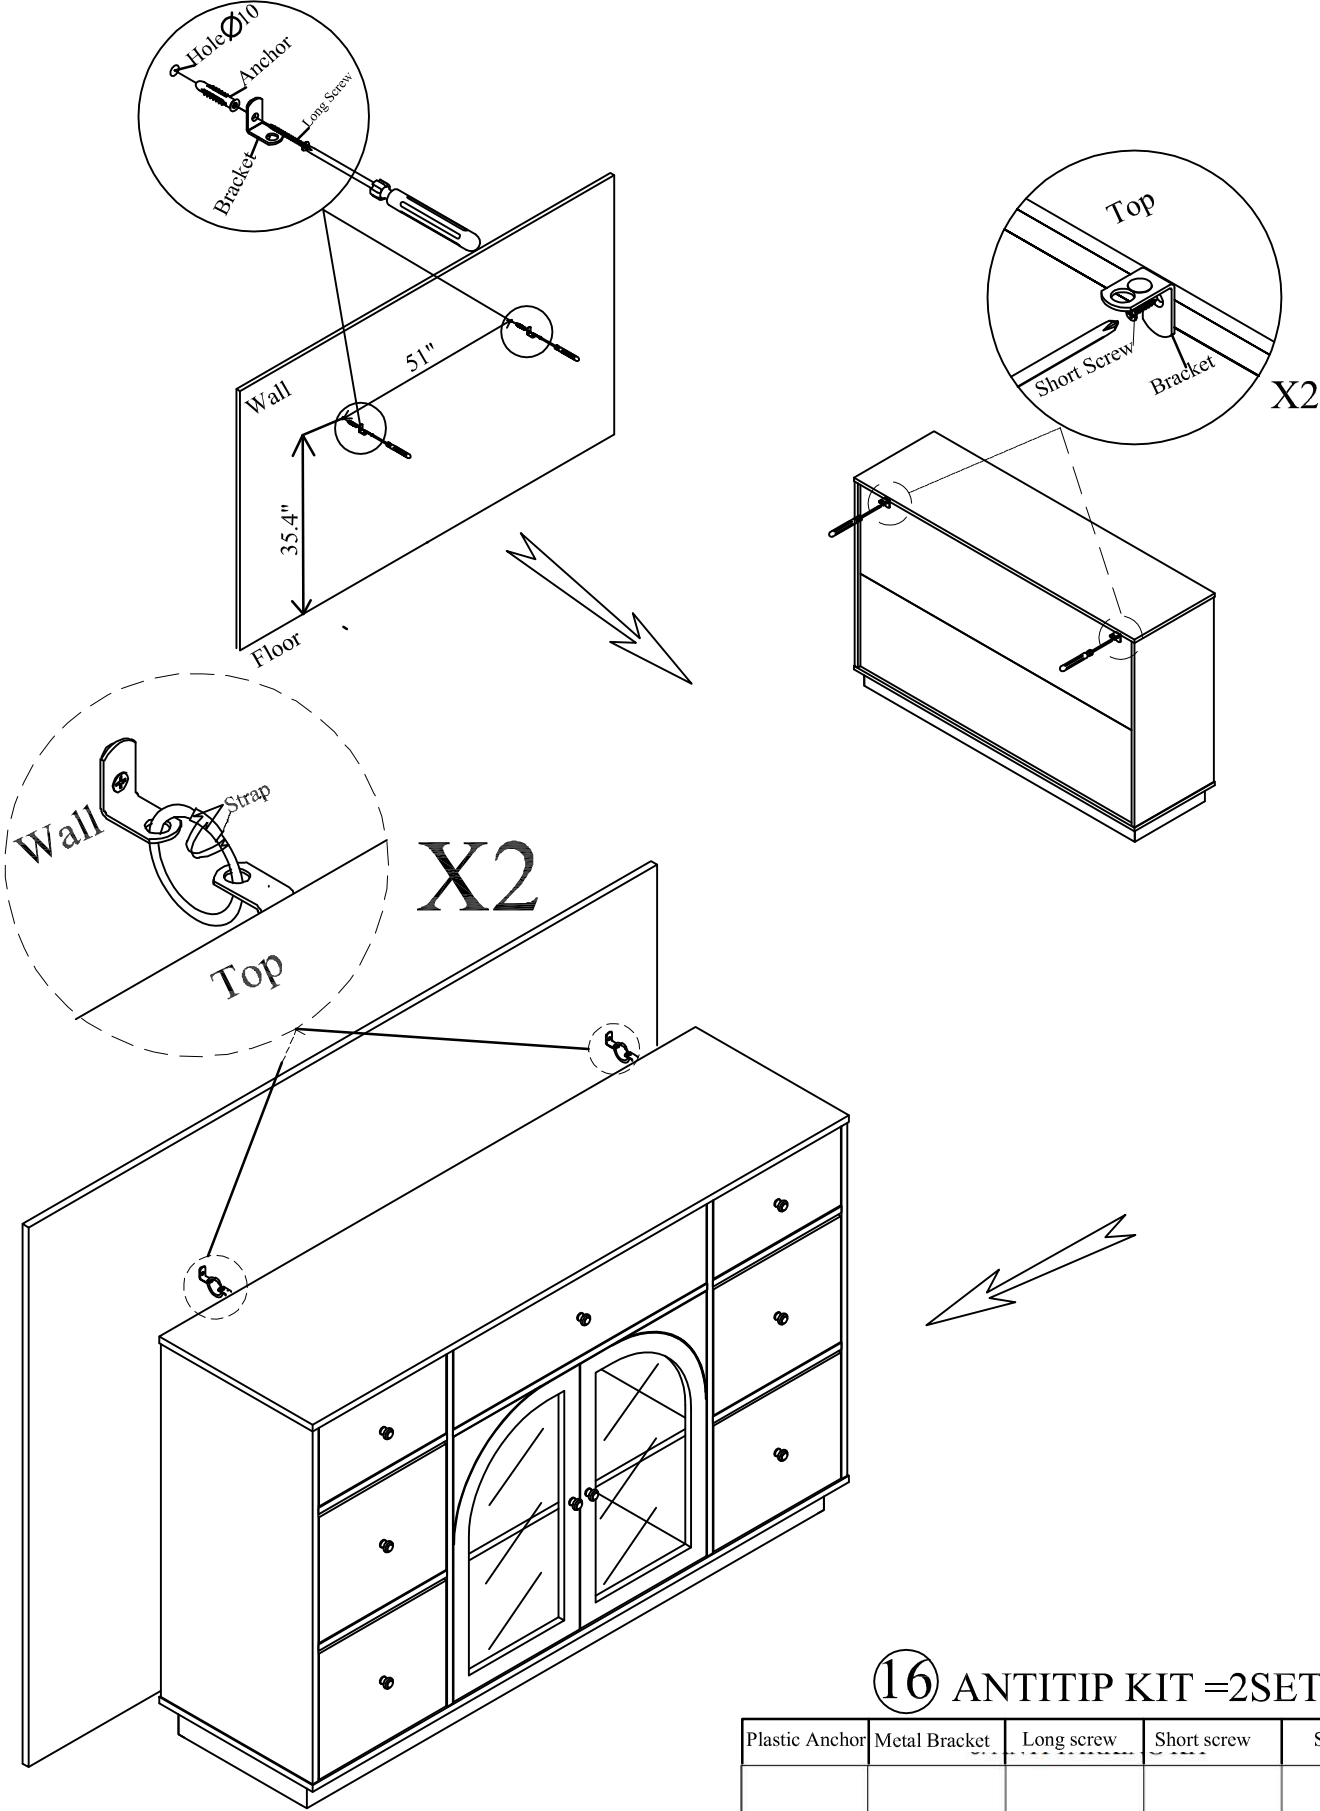

16 ANTITIP KIT = 2SETS

 
Plastic Anchor	Metal Bracket	Long screw	Short screw	Steel Wire
				
2 pcs	4 pcs	2 pcs	2 pcs	2 pcs

ASSEMBLY INSTRUCTION
ITEM NO. N780P330601

Is your cabinet door looking crooked or unevenly spaced?

If you're still having trouble lining everything up, your next step should be to try to adjust the feet slightly to square up the cabinet and doors. Follow the instructions below:

 If the right door appears to be hanging low, you can adjust the adjustable leveler on the front right until the door is better aligned.

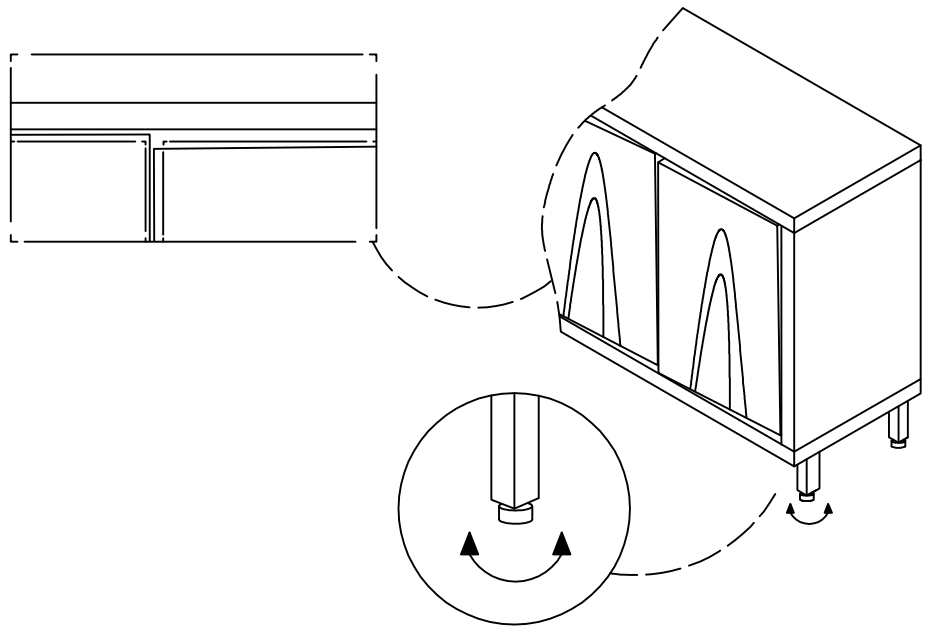

If the left door appears to be hanging low, you can adjust the adjustable leveler on the front left until the door is better aligned.

