


**IF THE REMOTE CONTROL CANNOT BE USED NORMALLY, PLEASE PRESS AND HOLD THE "FAN/OFF" BUTTONS AT THE SAME TIME WITHIN 3 SECONDS AFTER THE PRODUCT PLEASE TRY AGAIN.**

1. Please allow a moment between each operation.
2. Please handle the transmitter with care, be sure not to drop or expose it to water, high humidity or place where is too close to a heating element. Improper handling may result in malfunction and void the warranty.

### Matters needing attention.

1. Receiver can not be mounted on the plane to avoid affecting the unevenness of the cover and ceiling.
2. Receiver sub-inputs and outputs are strictly prohibited from adjusting input and output pairs.
3. The working voltage of this product: AC 90-240V
4. If there is a wall switch on the fan, it must be on to control effectively.
5. Wiring should be done according to the color of the wire and the instructions on the sleeve.
6. When using the remote control, please check whether the battery is installed or not. Pay attention to the positive and negative poles of the battery. The control key of the handle flashes every key that is pressed

180mm

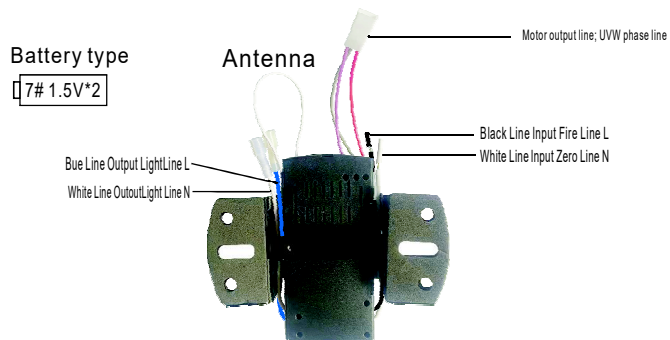

120mm

## CEILING FAN LAMP REMOTE CONTROLLER USER MANUAL



180 mm



120 mm