 


TV STAND

Assembly Instructions - Please keep for future reference

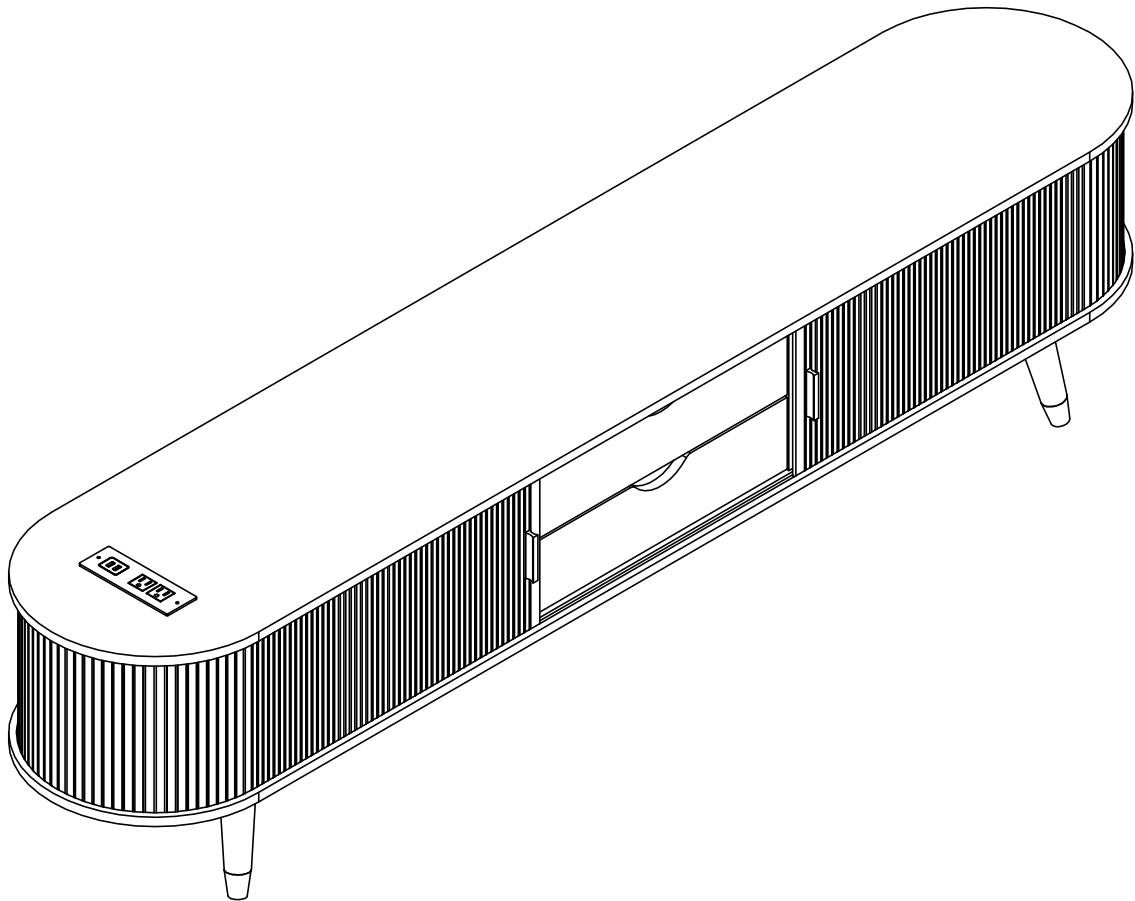

Dimensions

Width-75inch

Depth-14.96inch

Height-17.72inch

Important - Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

WARNING
In order to help prevent overturning –
please follow these instructions

 
 
 
 
 
 
 
 
 
 
 
To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Components-Fittings

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

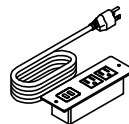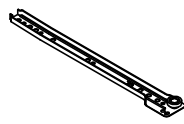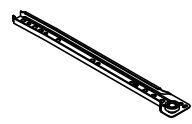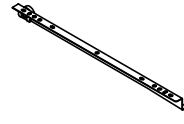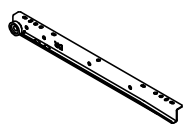(A)  6*35mm Cam Bolt x 16	(B)  15*9mm Cam Lock x 16	(C)  8*30mm Dowel x 16	(D)  4*40mm Screw x 16
(E)  3.5*14mm Screw x 28	(F)  Metal handle x 2	(G)  Adjustable Leveler x 2	(H)  3*14mm Screw x 30
(I)  4*8mm Screw x 4	(J)  Back plate buckle x 12	(K)  Shelf bracket x 8	(L)  Extension cord x 1
(M)  Four hole iron sheet x 2	(N)  Five hole iron sheet x 4	(O)  Hole to stick x 16	(P)  Phillips screwdriver x 1
(CL)  300mm runner x 2	(CR)  300mm runner x 2	(DL)  300mm runner x 2	(DR)  300mm runner x 2

Tools required



Phillips screwdriver or
flat-head screwdriver

 
Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

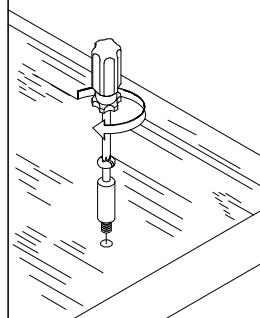

Step 2

Push the male camlock into the entry hole.

 2

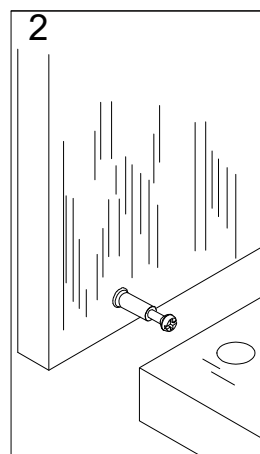


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

 3

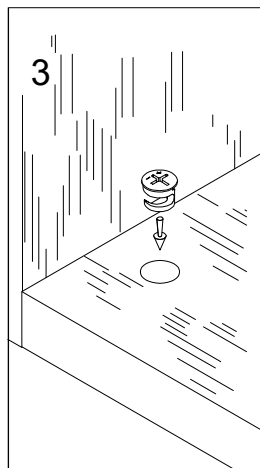


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.












The joint is now secure.

 4

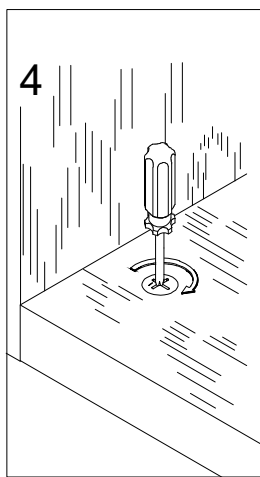


Assembly Instructions

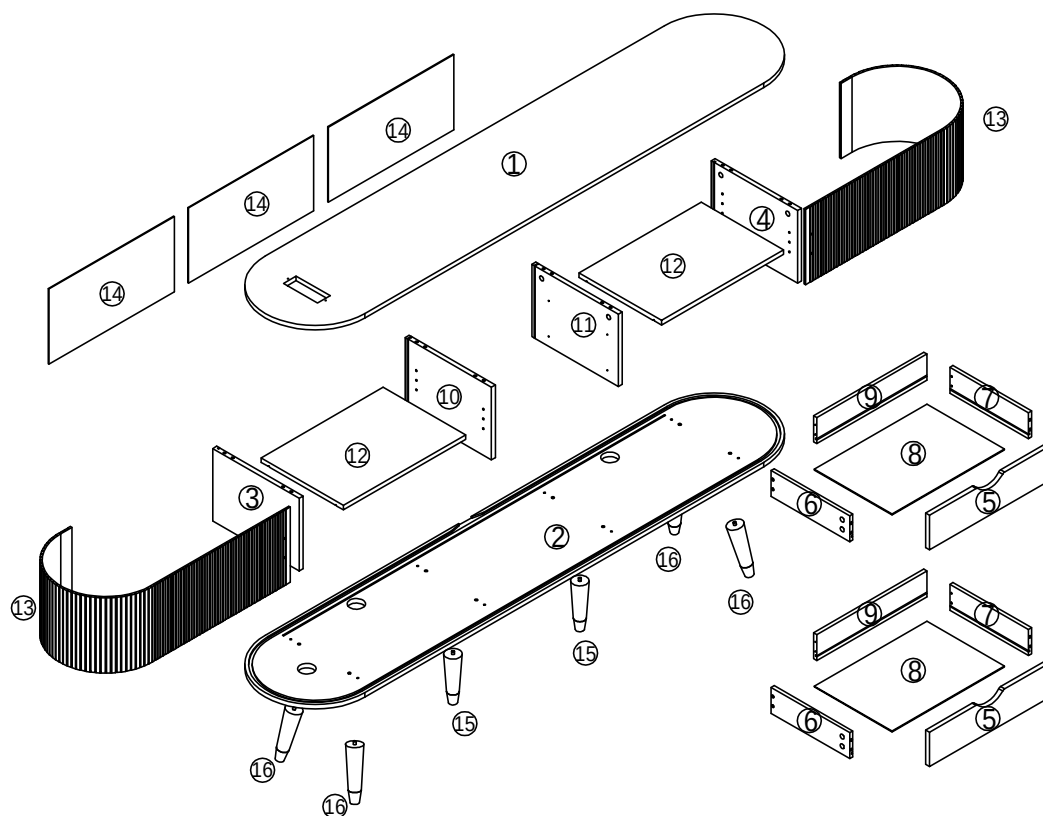 

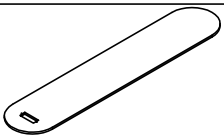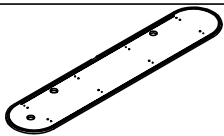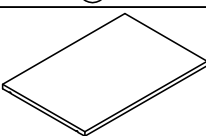           
 1905*380*15mm ① X1	 1905*380*15mm ② X1	 330*240*15mm ③ X1	 330*240*15mm ④ X1
 464*114*15mm ⑤ X2	 300*86*12mm ⑥ X2	 300*86*12mm ⑦ X2	 430*297*3mm ⑧ X2
 421*86*12mm ⑨ X2	 330*240*15mm ⑩ X1	 330*240*15mm ⑪ X1	 467*315*15mm ⑫ X2
 1065*249*5mm ⑬ X2	 479*249*3mm ⑭ X3	 Ø50*167mm ⑮ X2	 Ø50*178mm ⑯ X4

Assembly Instructions

 Step 1

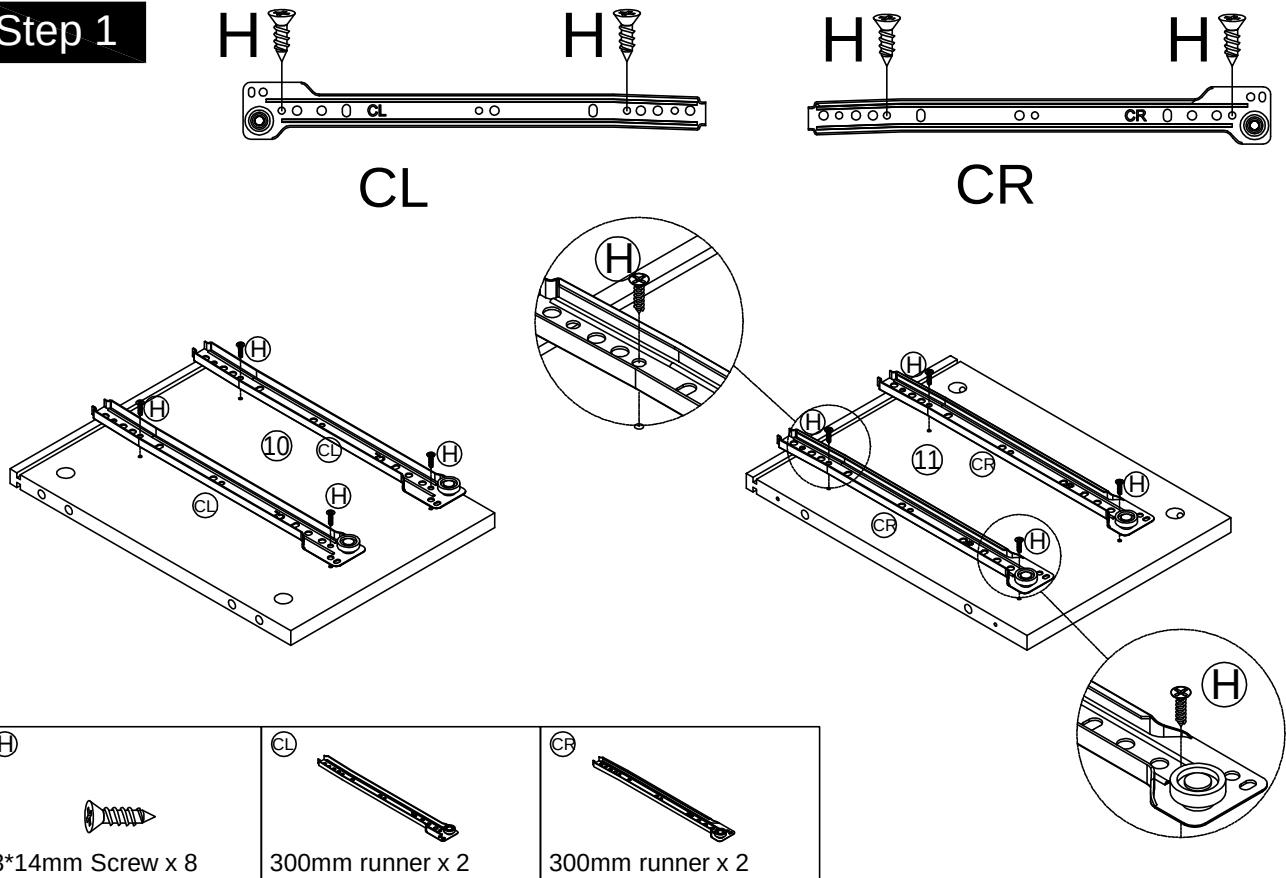

 
Step 2

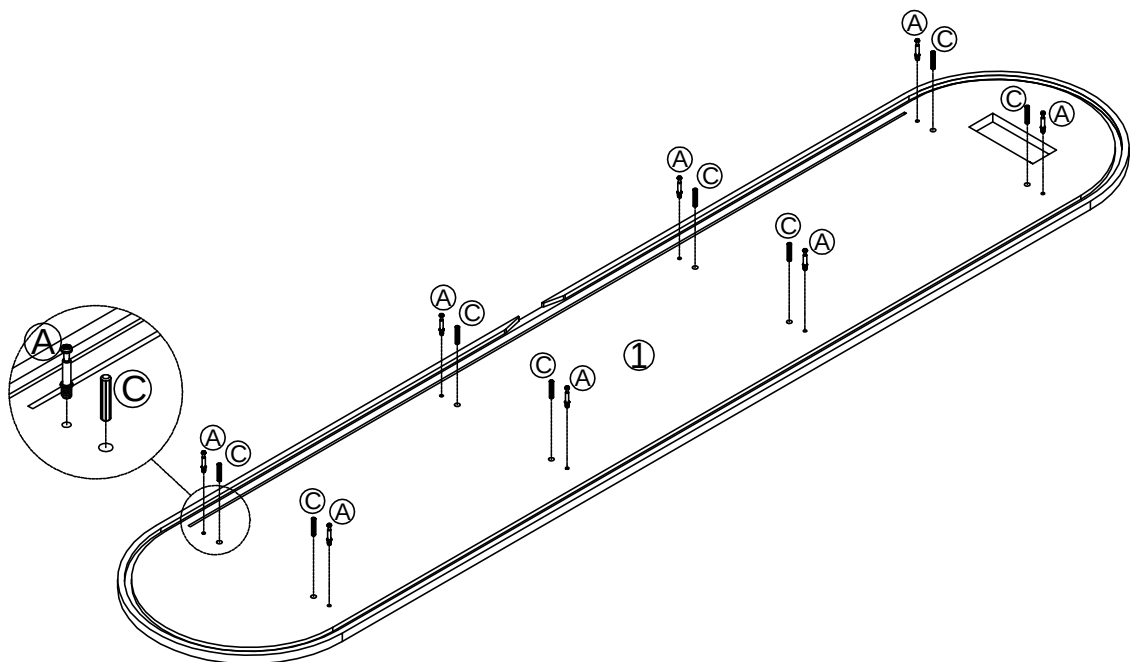


Assembly Instructions

Step 3


 
Step 1

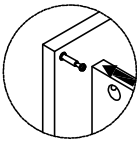

 Step 2

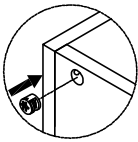

  Step 3

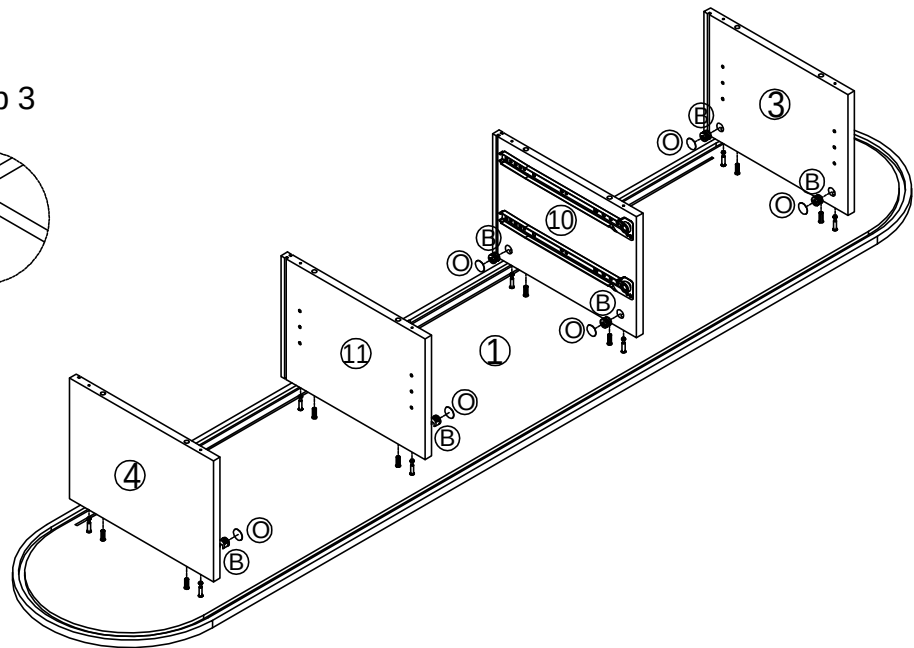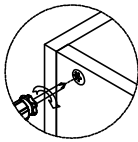

B

 
 


15*9mm Cam lock x 8


O



Hole to stick x 8

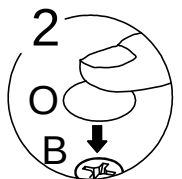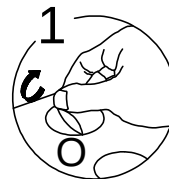

 Step 4

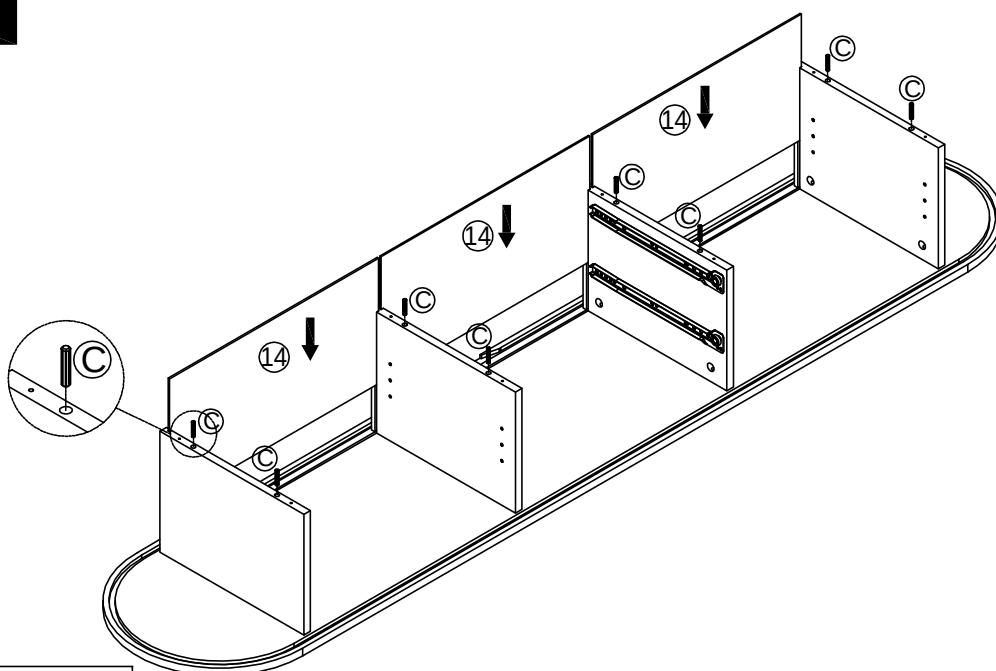


C




8*30mm Dowel x 8

Assembly Instructions

 Step 5

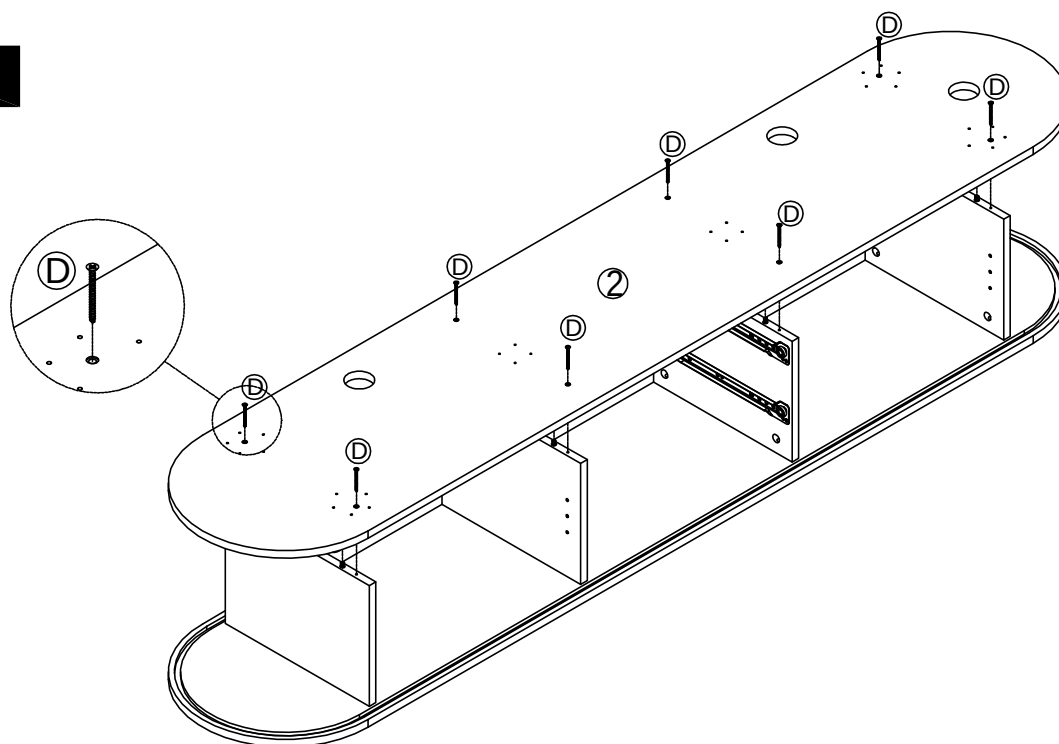


Ⓓ

 

4*40mm Screw x 8

 Step 6

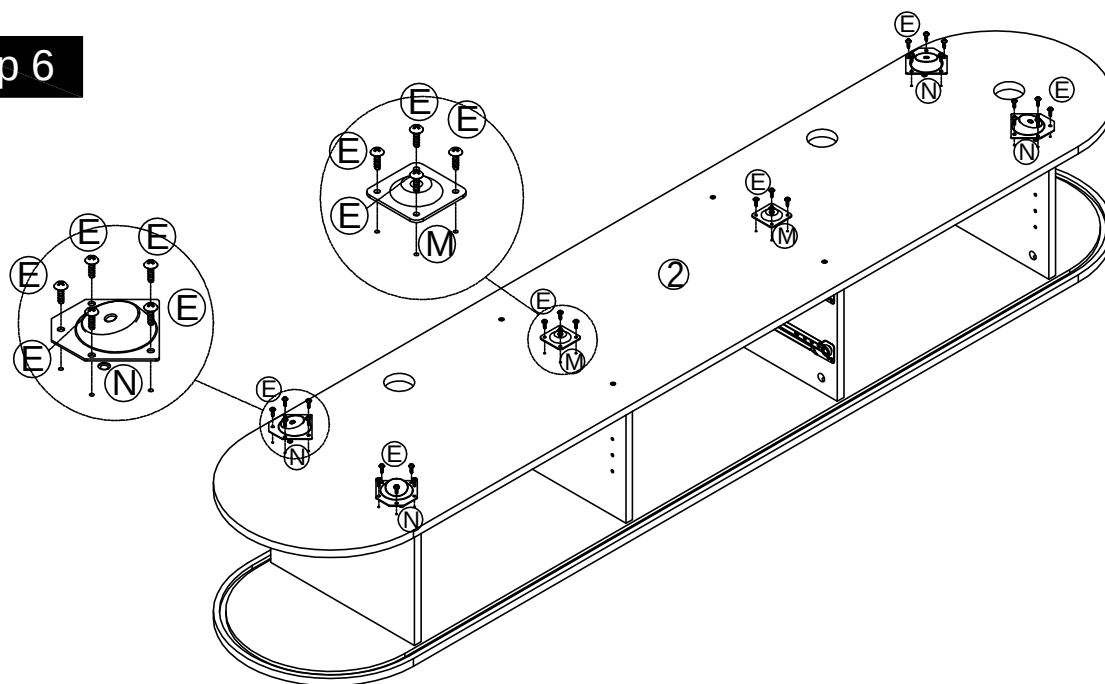


Ⓔ



3.5*14mm Screw x 28

 Ⓜ



Four hole iron sheet x 2

 
 
Ⓝ





Five hole iron sheet x 4

Assembly Instructions

Step 7

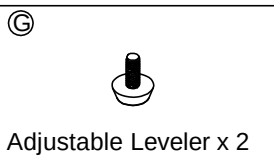
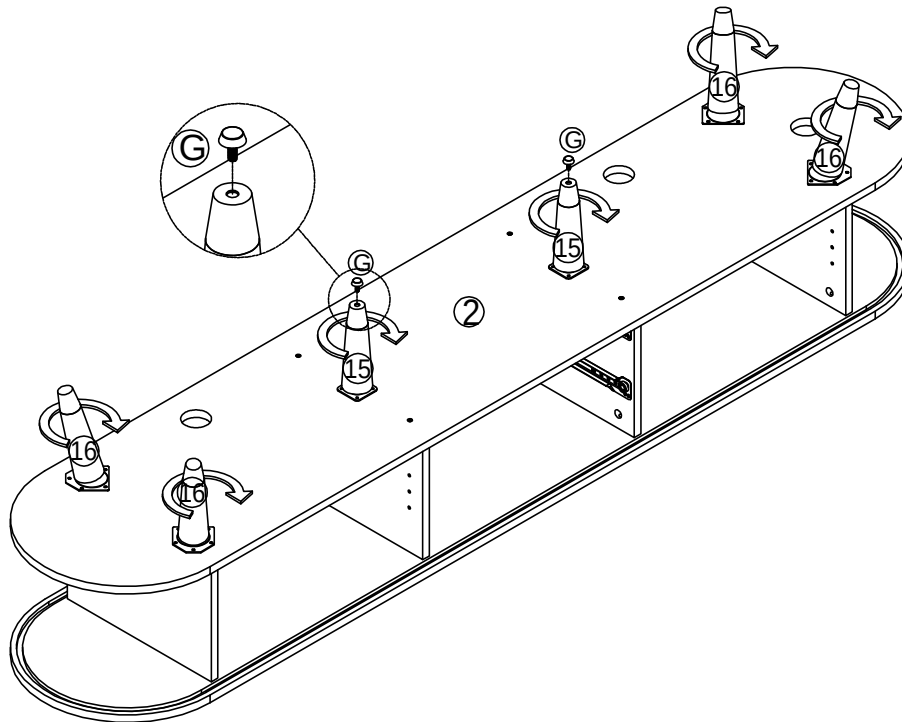


  
Step 8

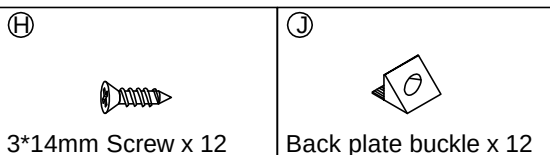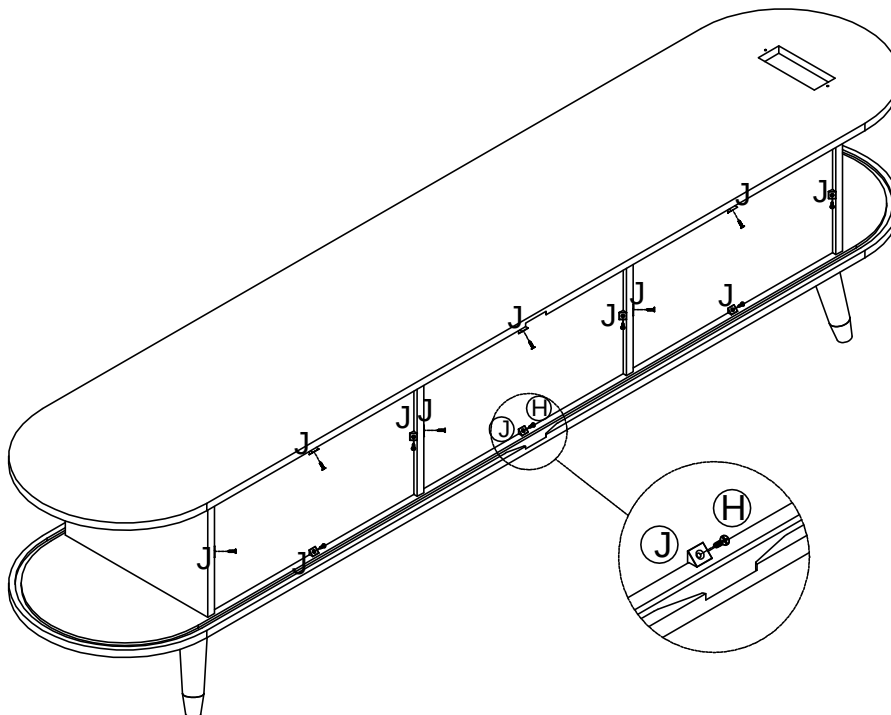


Assembly Instructions

  
 
Step 9

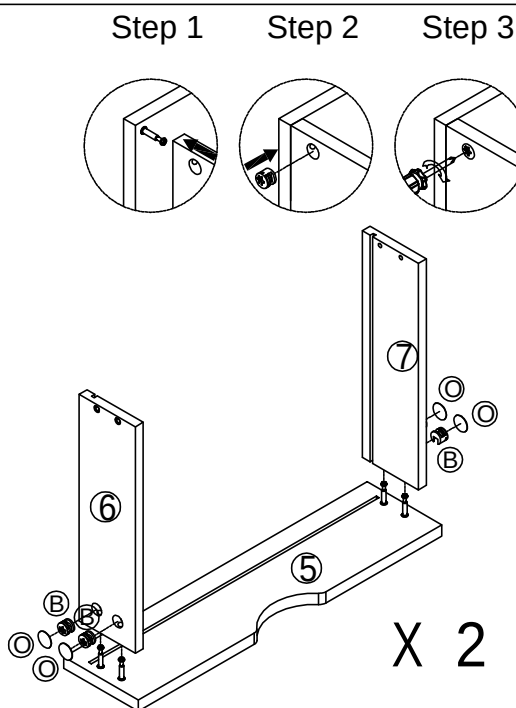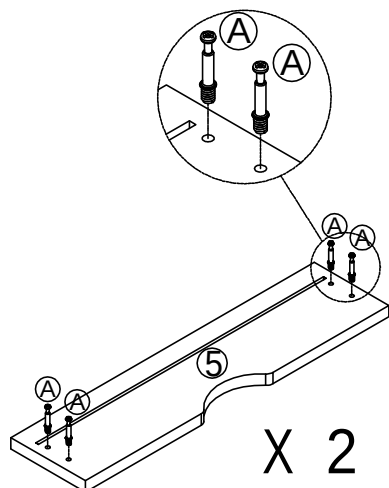


Ⓐ  6*35mm Cam Bolt x 8	Ⓑ  15*9mm Cam lock x 8	Ⓒ  Hole to stick x 8
---	---	---

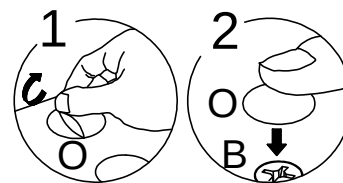 

   
Step 10

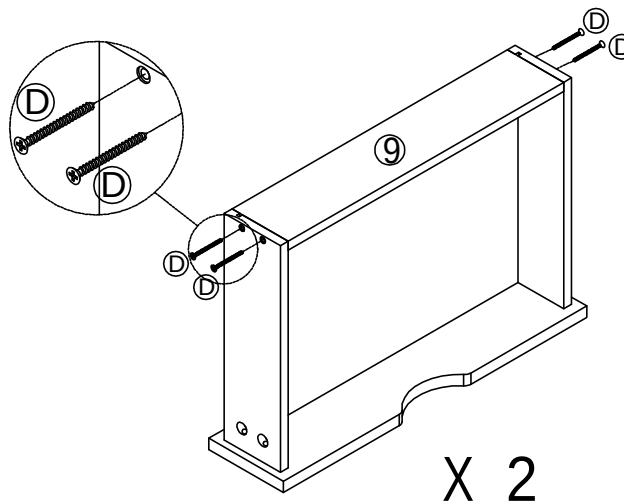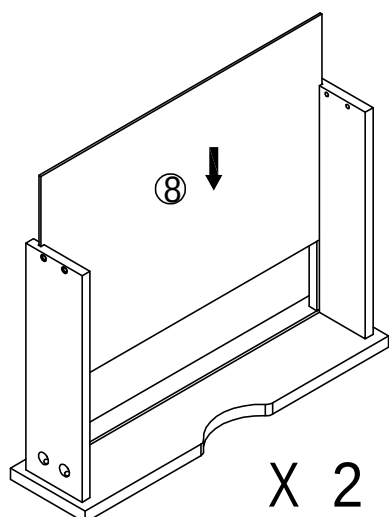


Ⓓ  4*40mm Screw x 8
--


Assembly Instructions

  Step 11

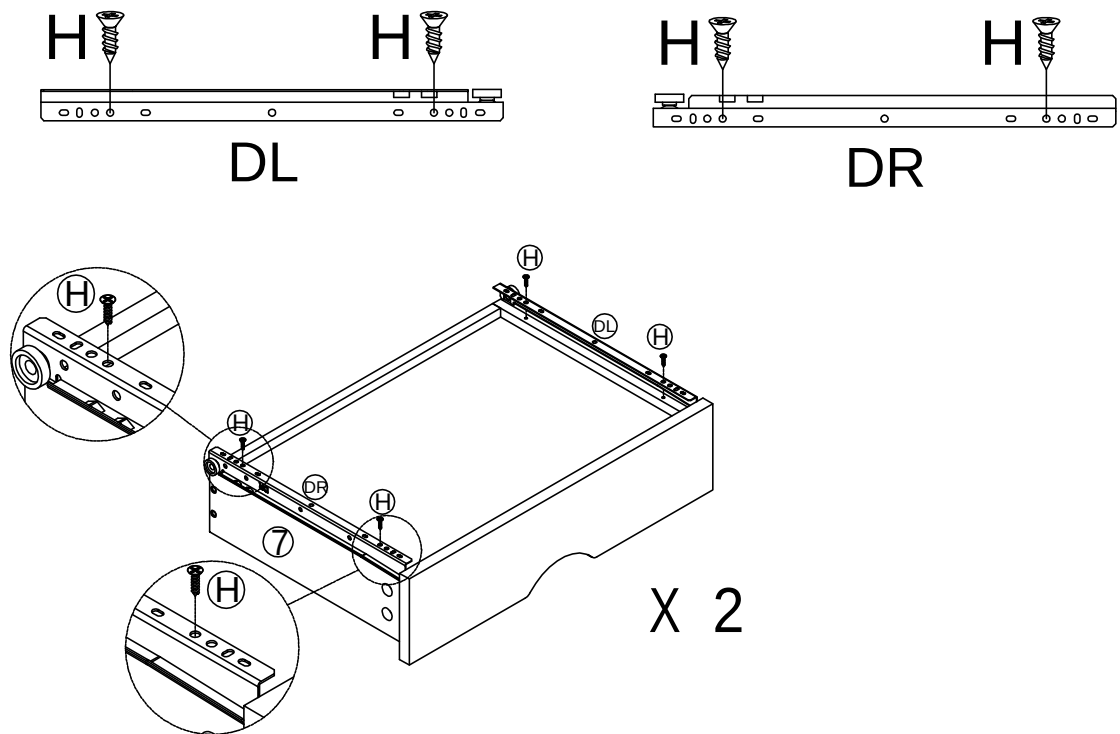


 3*14mm Screw x 8	 300mm runner x 2	 300mm runner x 2
---	---	---

 
Step 12

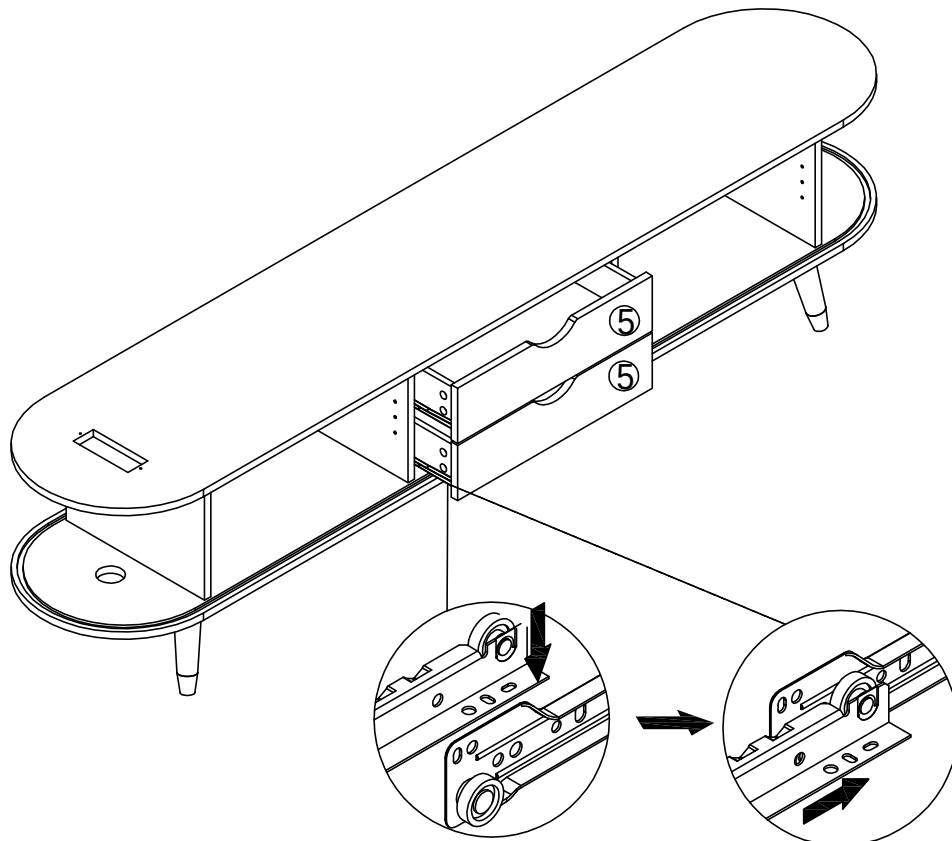


Assembly Instructions

  Step 13

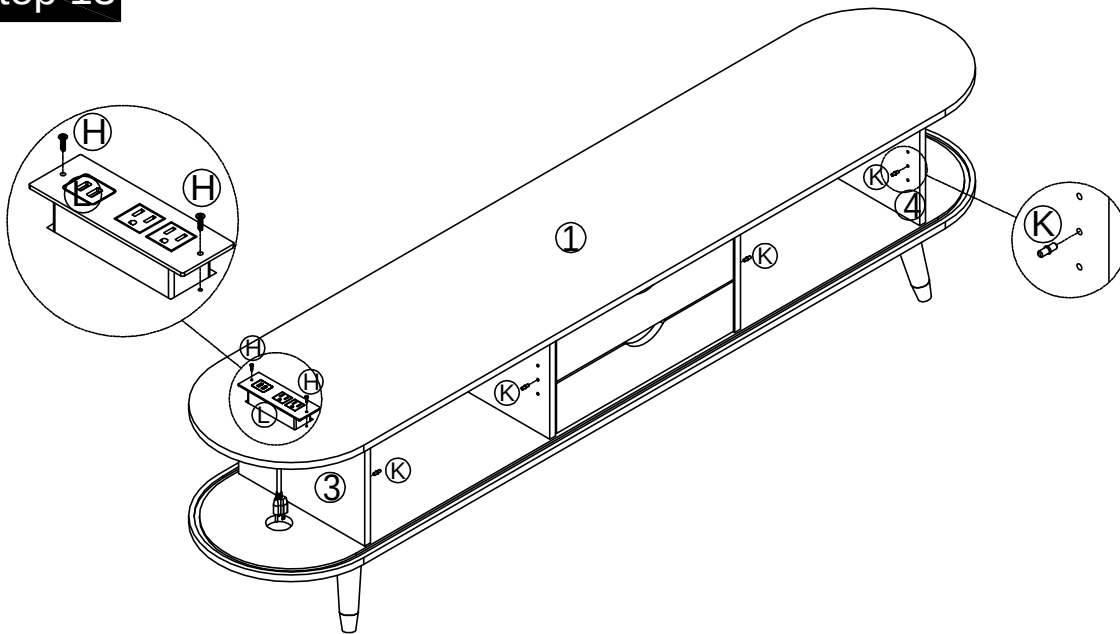



(H)  3*14mm Screw x 2	(K)  Shelf bracket x 8	(L)  Extension cord x 1
--	---	--

 Step 14

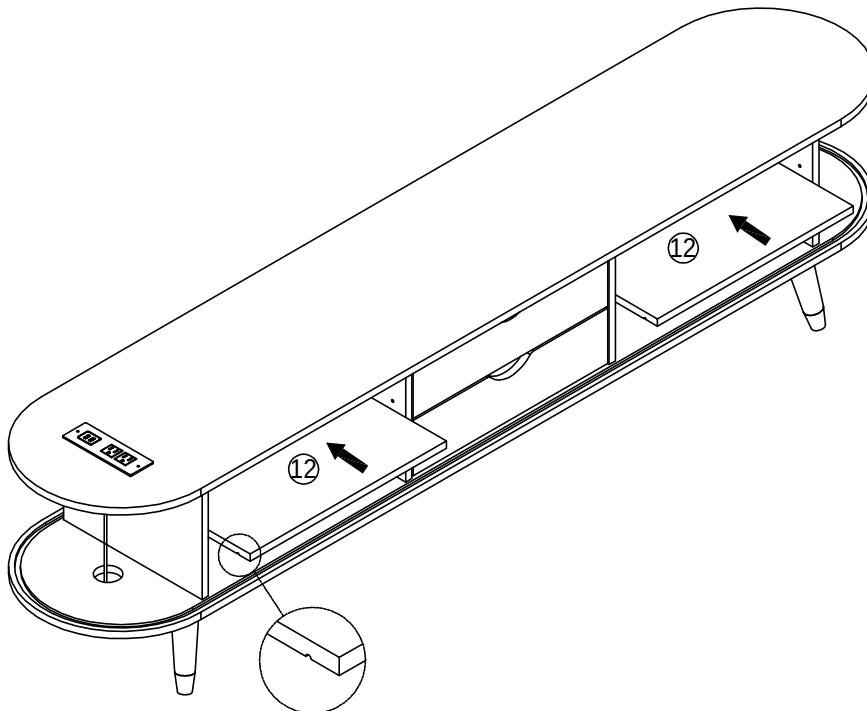


Assembly Instructions

  Step 15

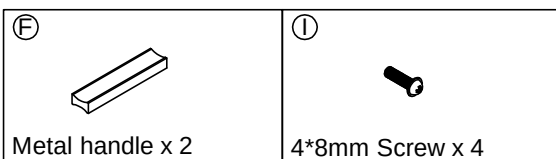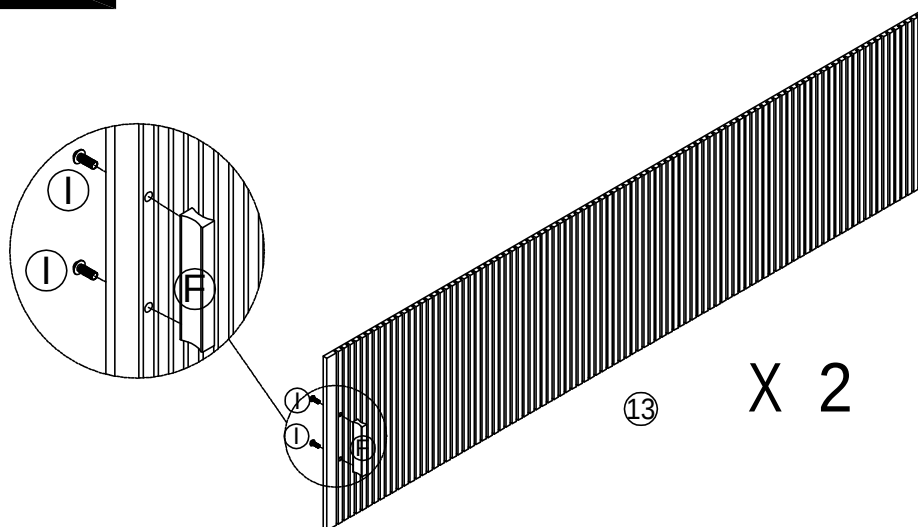

 
Step 16

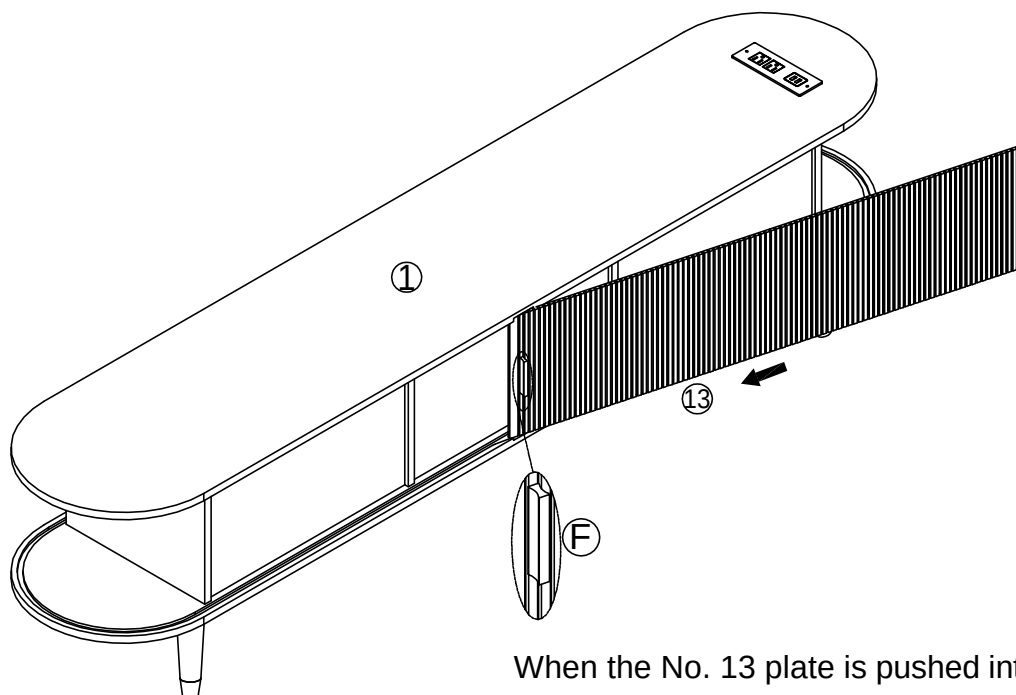

When the No. 13 plate is pushed into, it should be aligned with the upper and lower slots, with the drawing surface facing outward and the smooth surface facing inward


Assembly Instructions

 Step 17

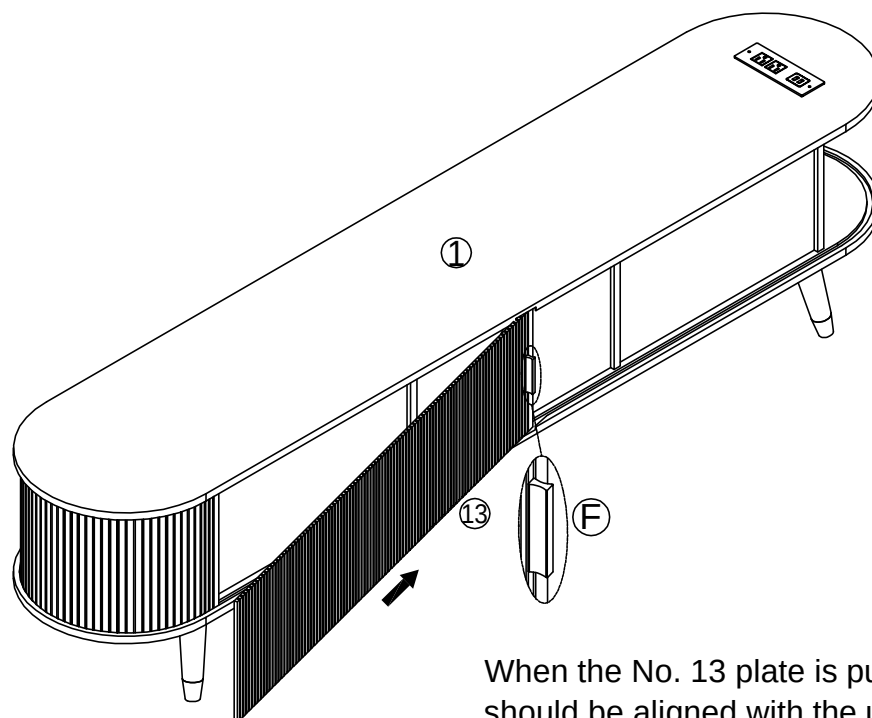

When the No. 13 plate is pushed into, it should be aligned with the upper and lower slots, with the drawing surface facing outward and the smooth surface facing inward

 Step 18

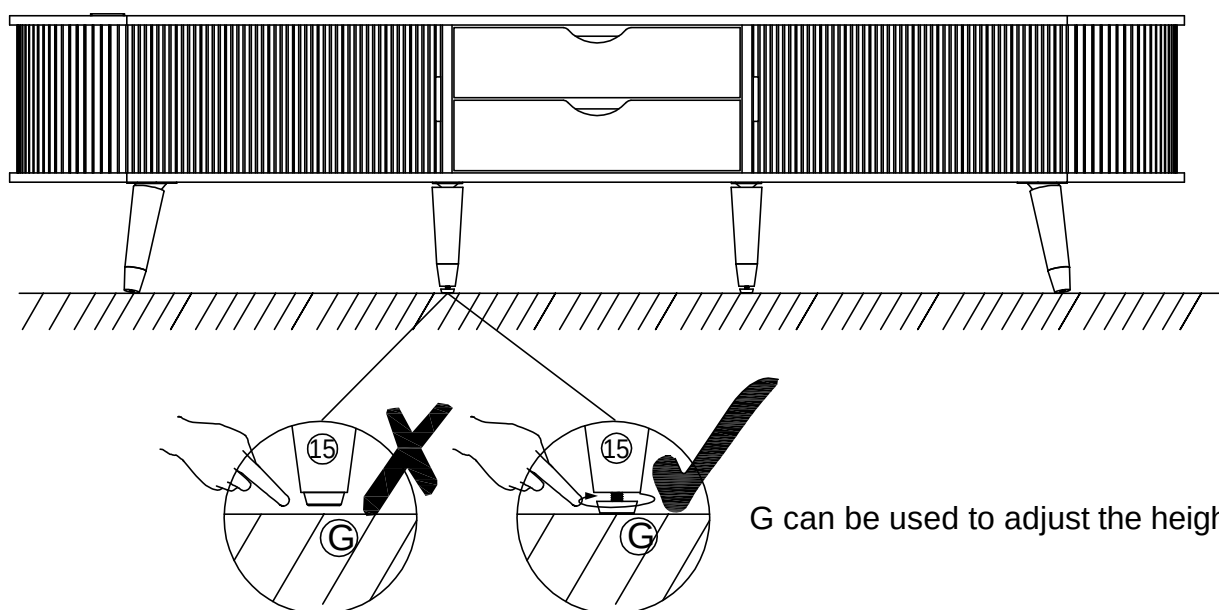

G can be used to adjust the height

Assembly Instructions

Step 19

