
N725P331419 ASSEMBLY INSTRUCTIONS STORAGE CABINET

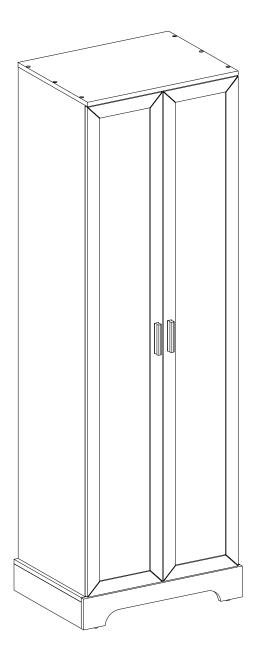

Thank you for purchasing this quality product. Be sure to check all pac material carefully for small parts which may have come loose inside t carton during shipment. Separate, identify and count all parts and hardw Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED









Tools Requi



IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Before Installation


Important - Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- . We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- . Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- . Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.


If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.


Cam Lock Assembly Instructions

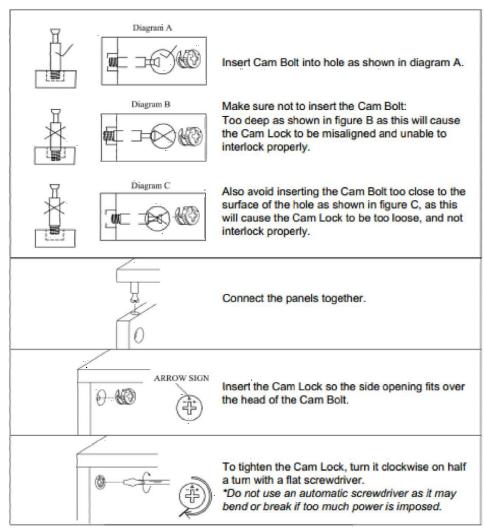


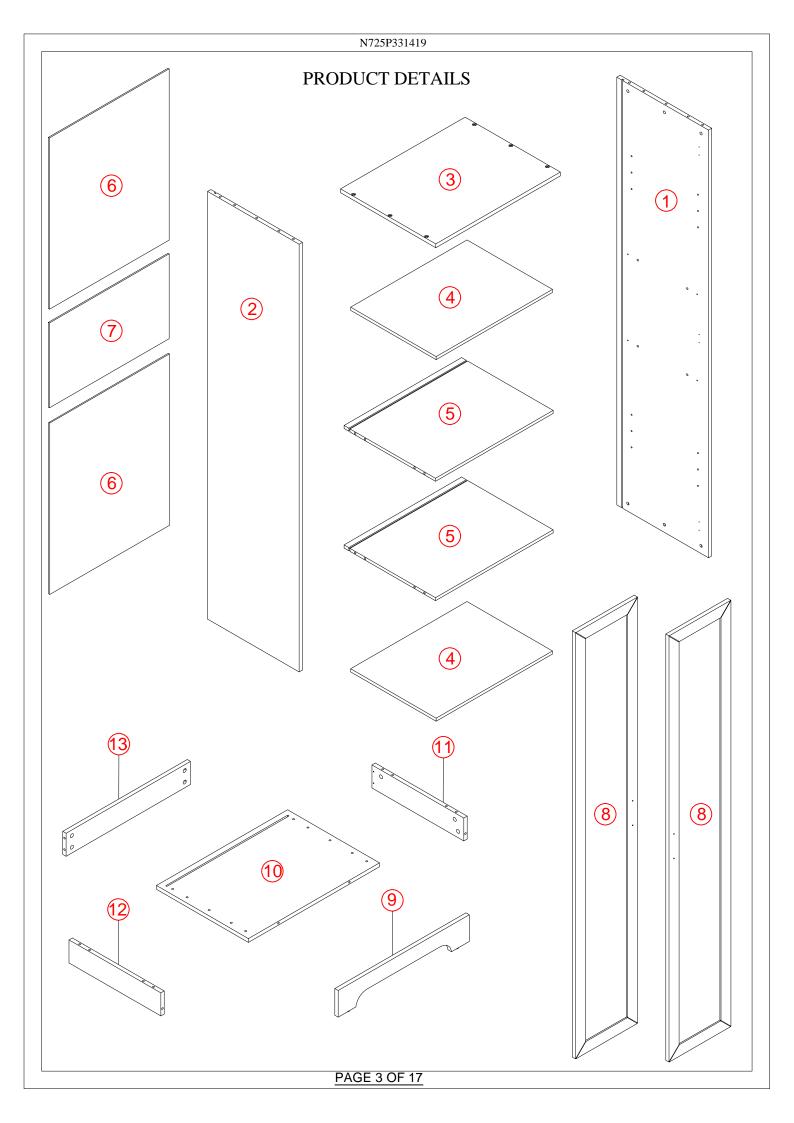



1	LEFT HIP BOARD	PART 1PC	S LIST	RIGHIT DOOR PANEL	
1)	LEFT HIP BOARD	1PC		RIGHIT DOOR PANEL	
			8		2PCS
2	RIGHT HIP BOARD	1PC	9	FRONT BAR FOOT BASE	1PC
3	ROOF BOARD	1PC	10	BOTTOM BOARD	1PC
4	ADJUSTABLE SHELVES	2PCS	11)	RIGHT HOOD BASE	1PC
(5)	FIXED SHELF	2PCS	12	LEFT HOOD BASE	1PC
6	BACK BOARD 1	2PCS	13	BAR REAR FOOT BASE	1PC
7	BACK BOARD 2	1PC			

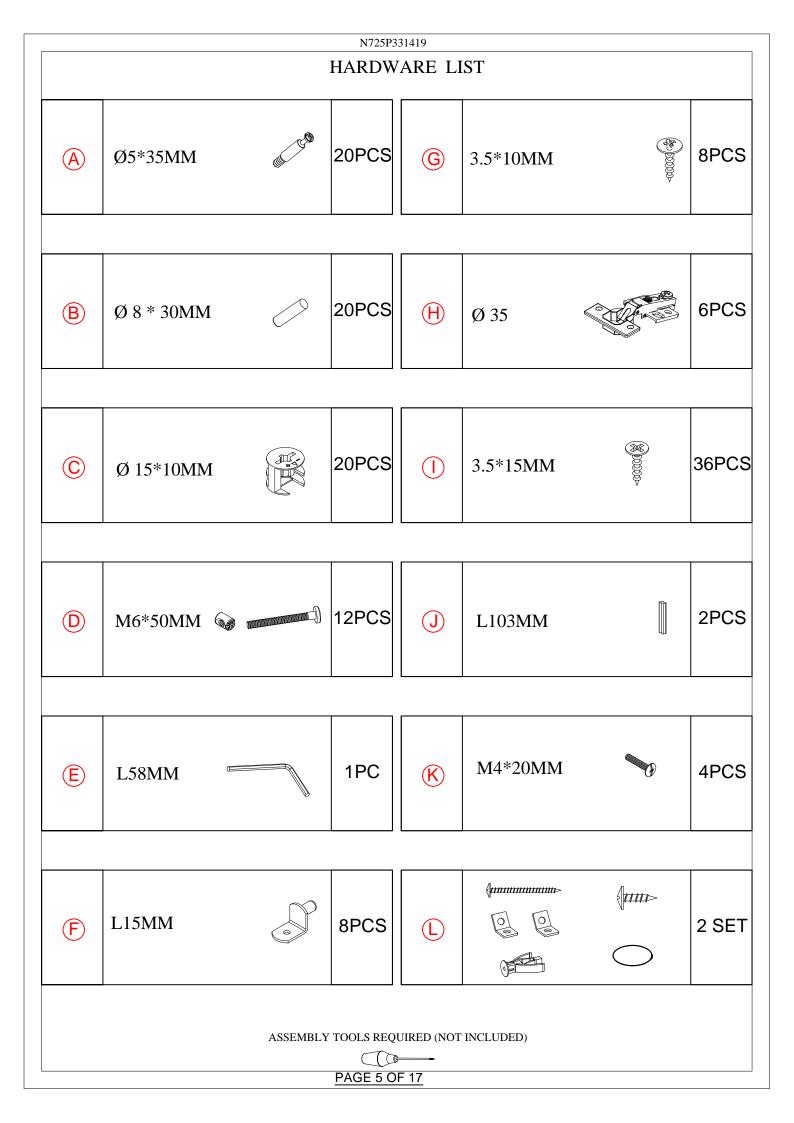


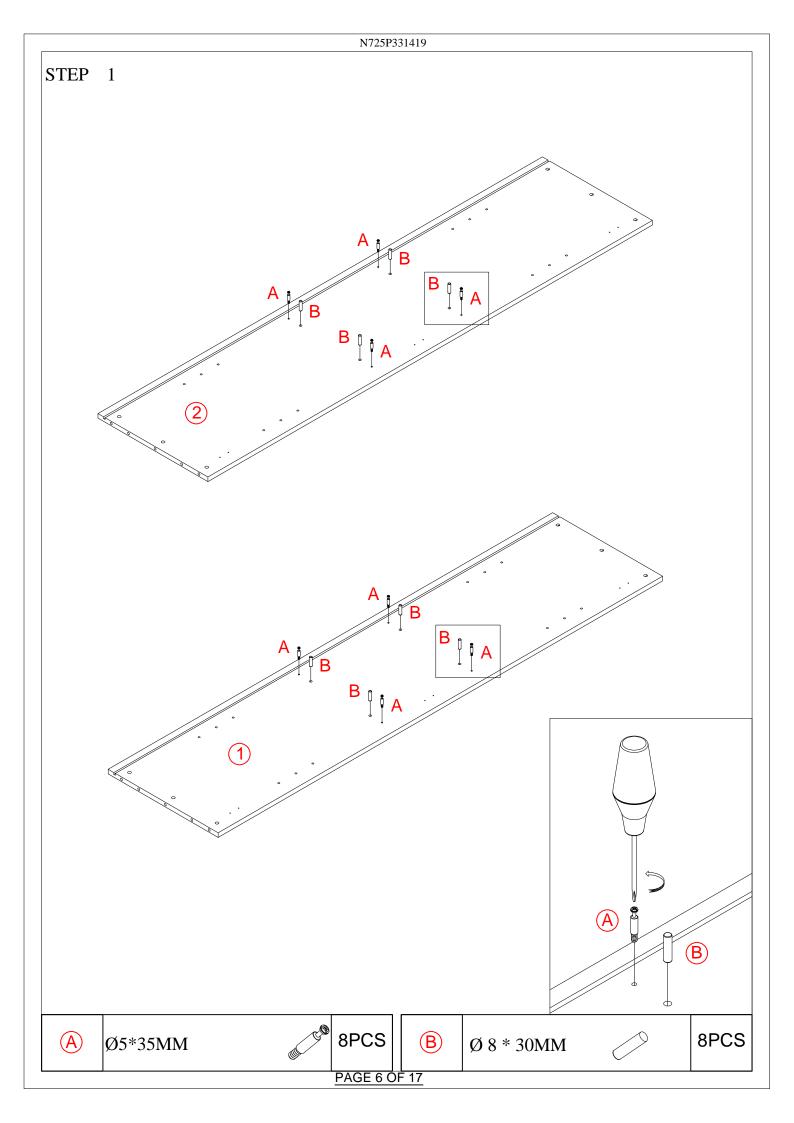


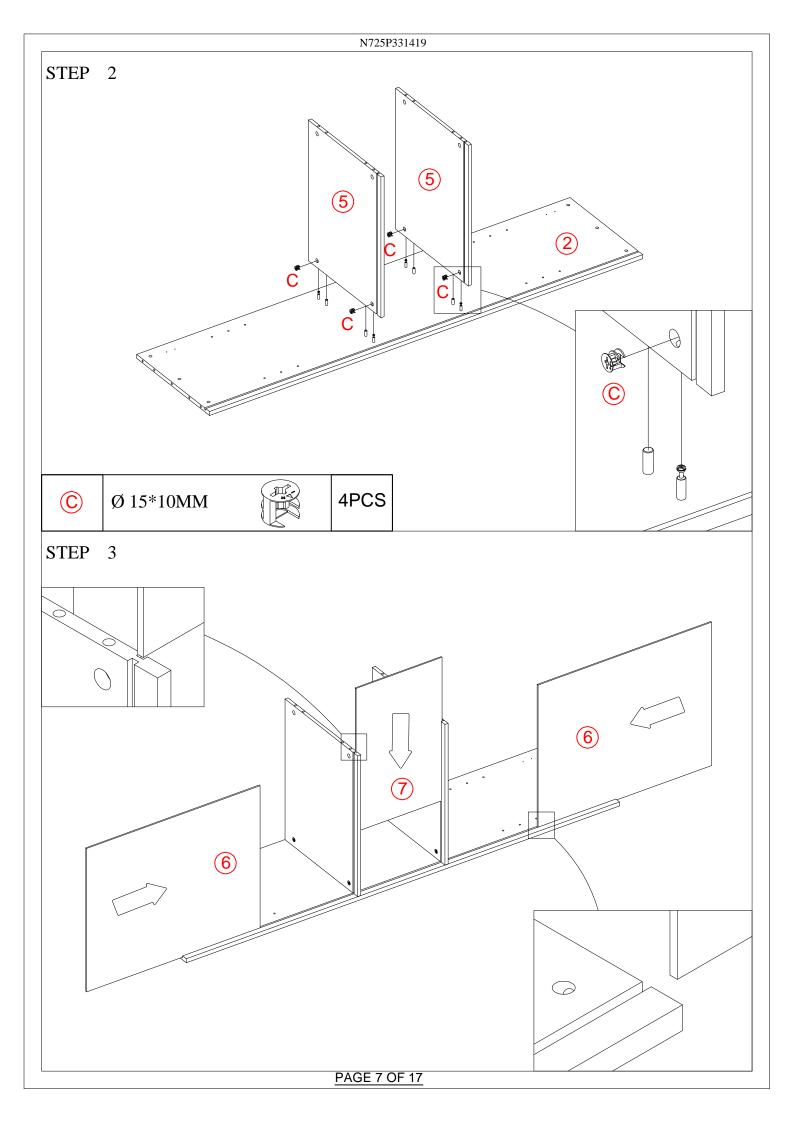


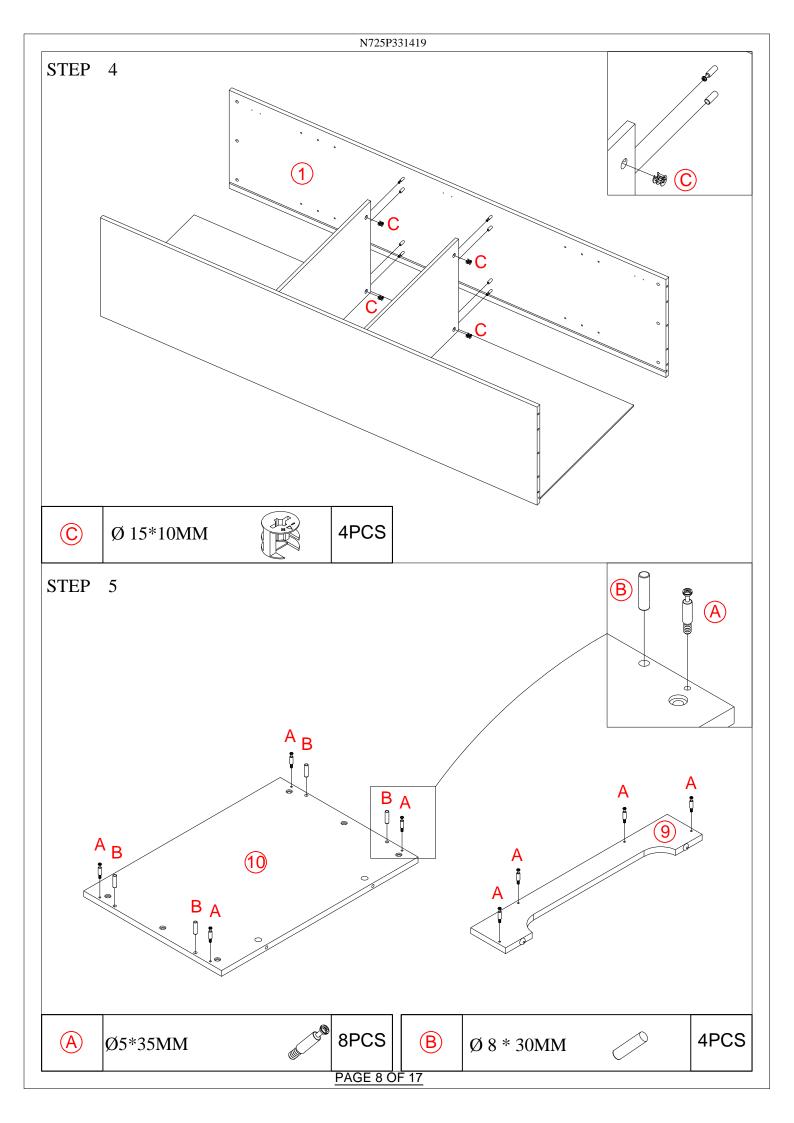


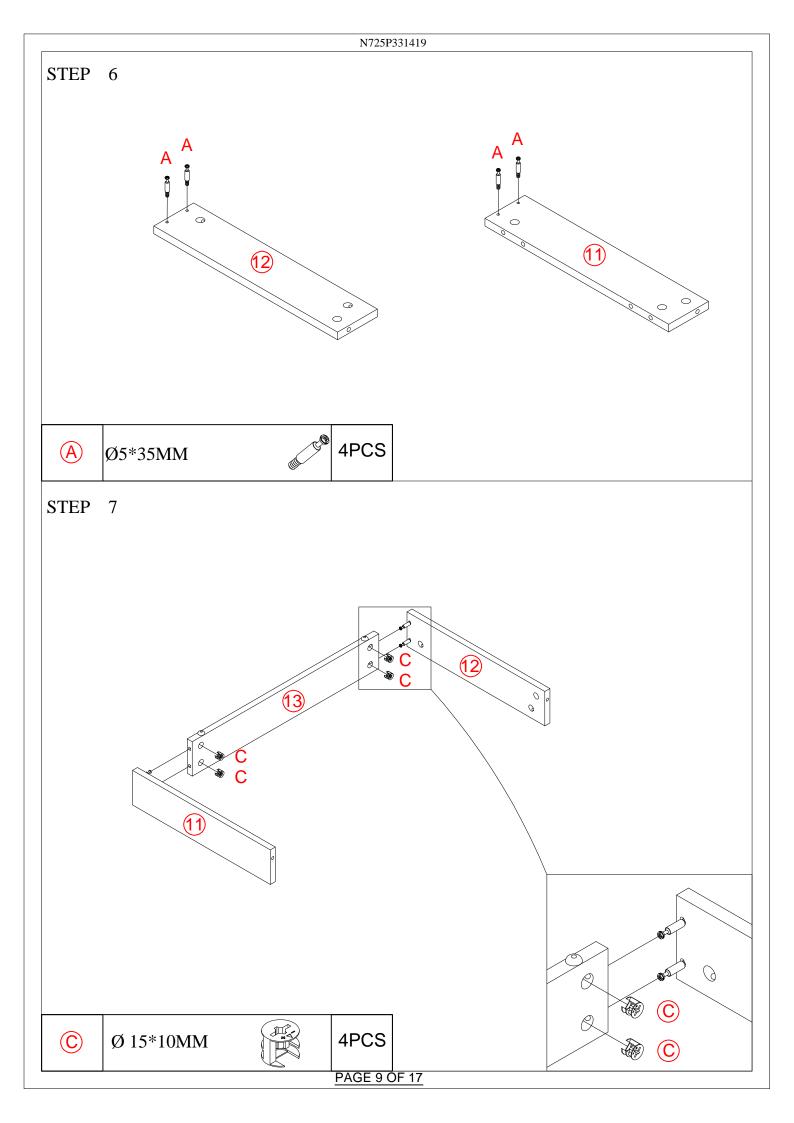


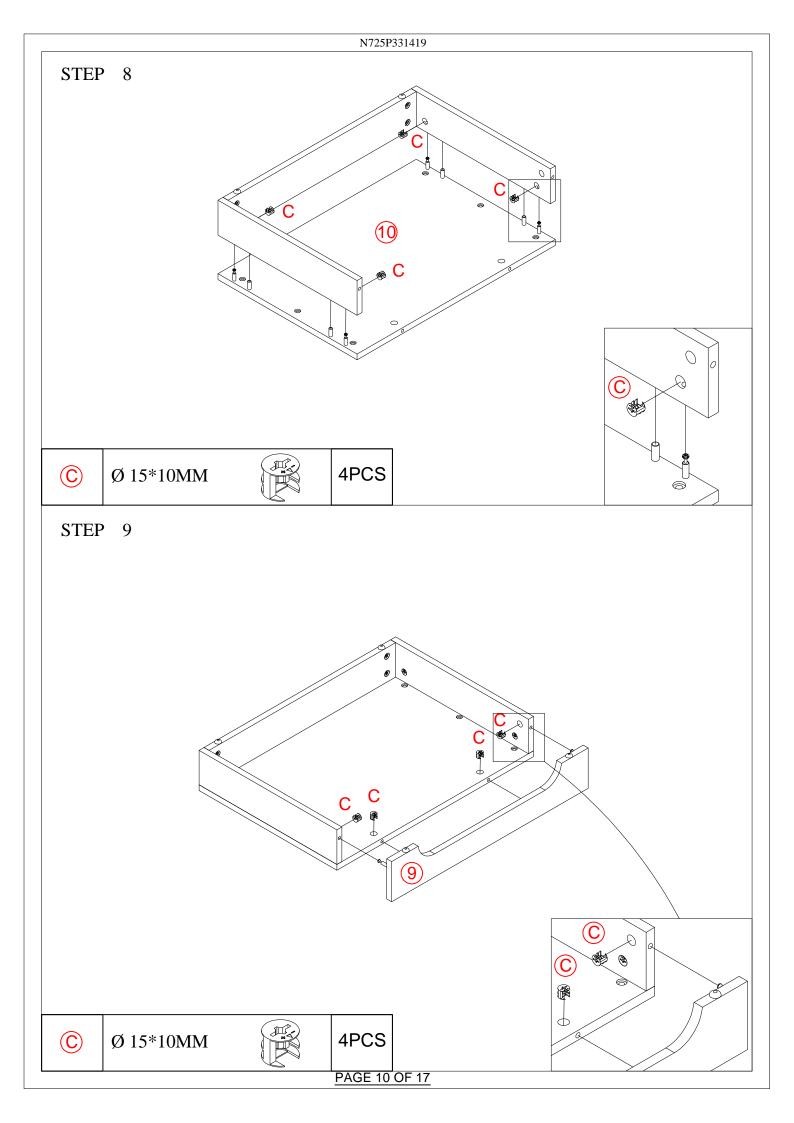


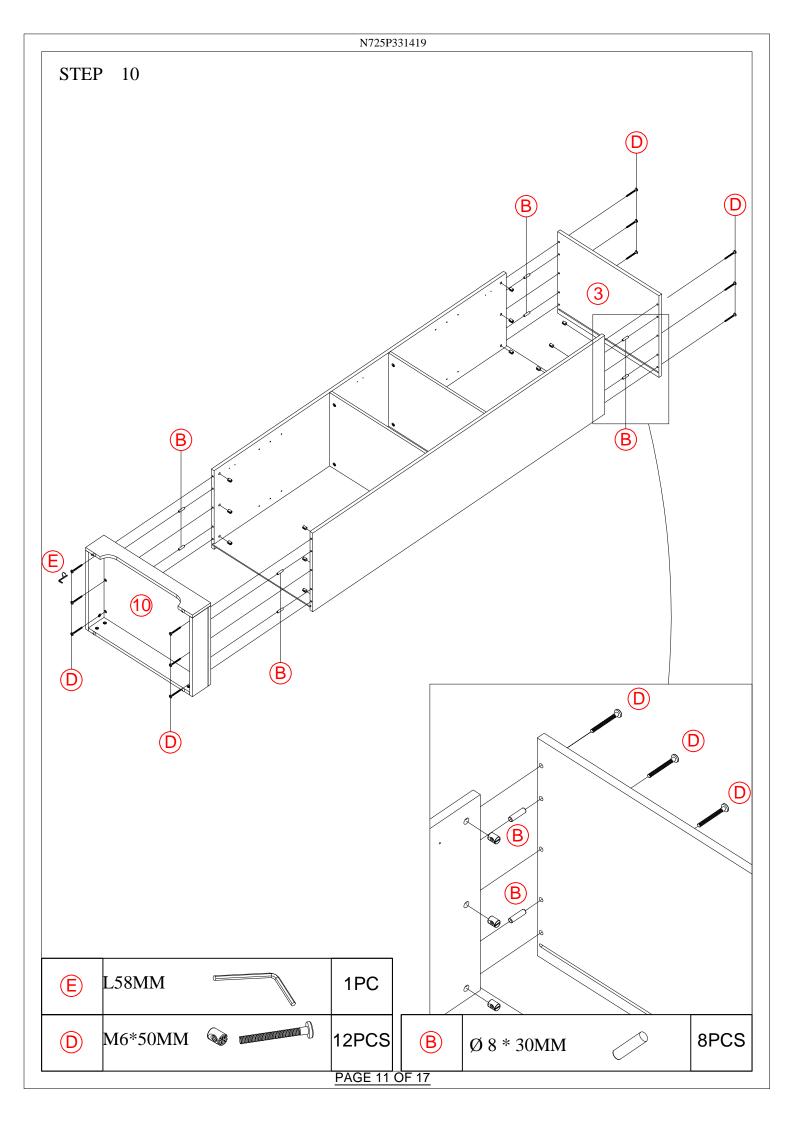


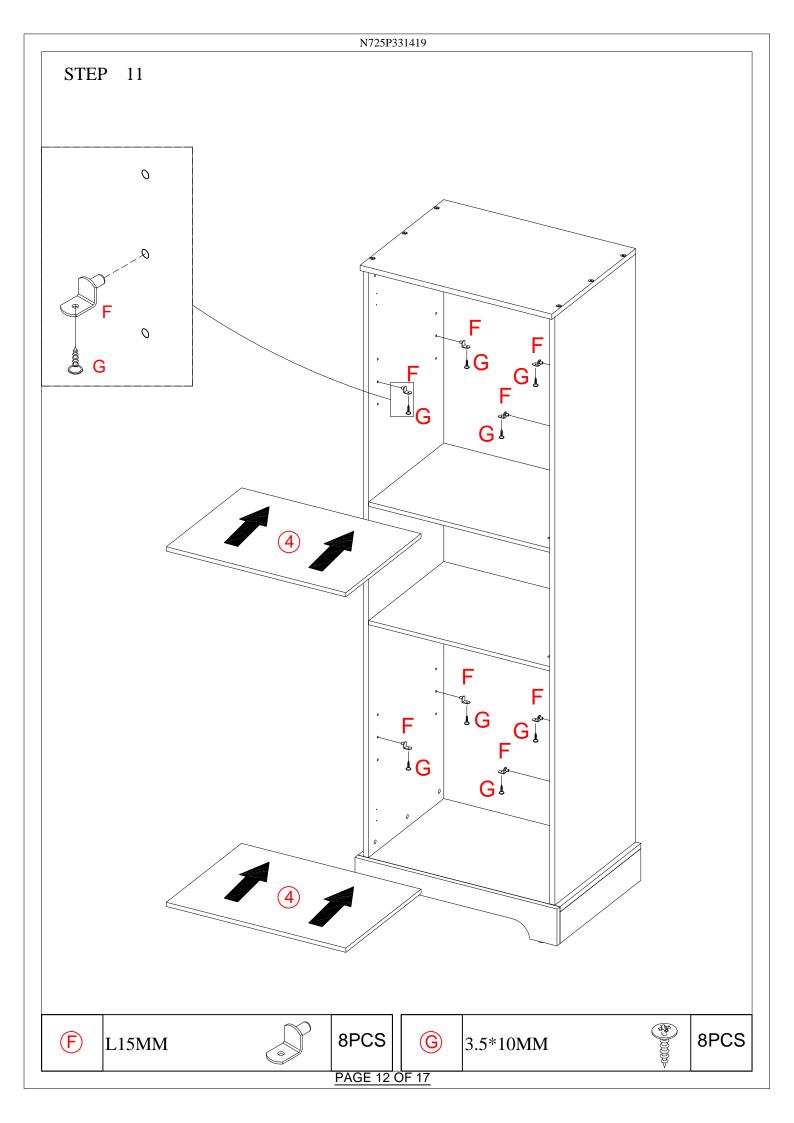

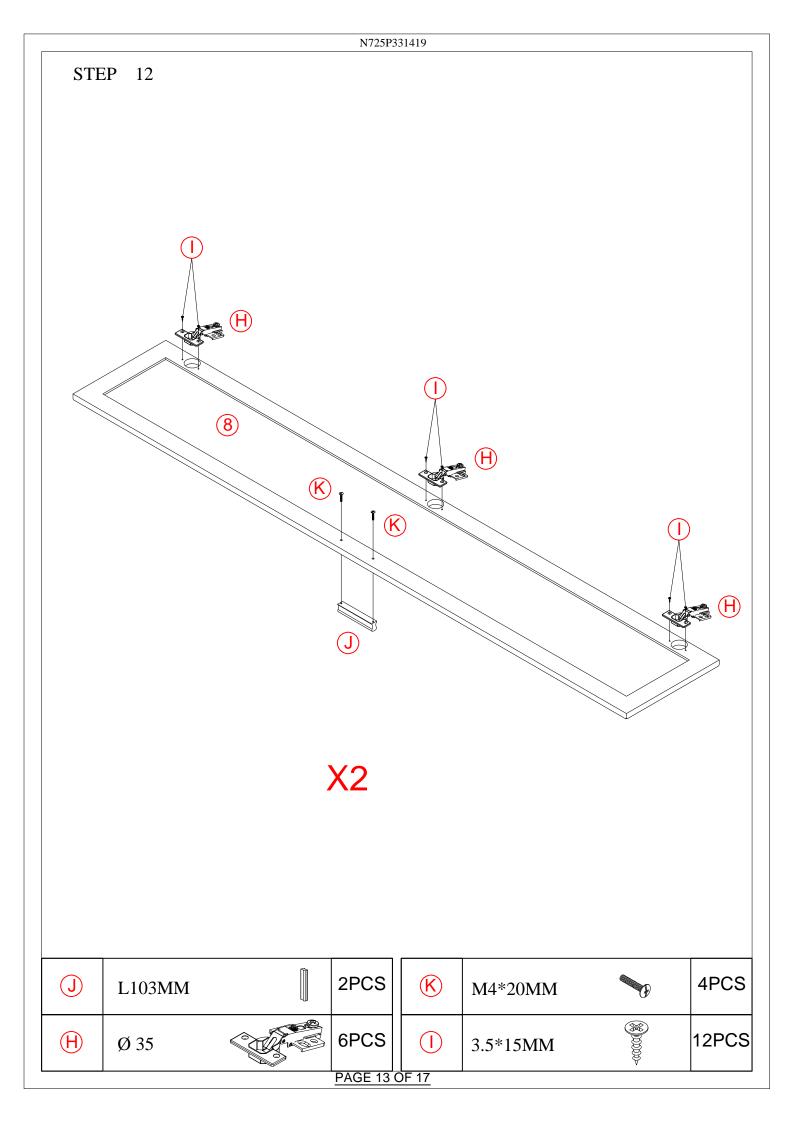


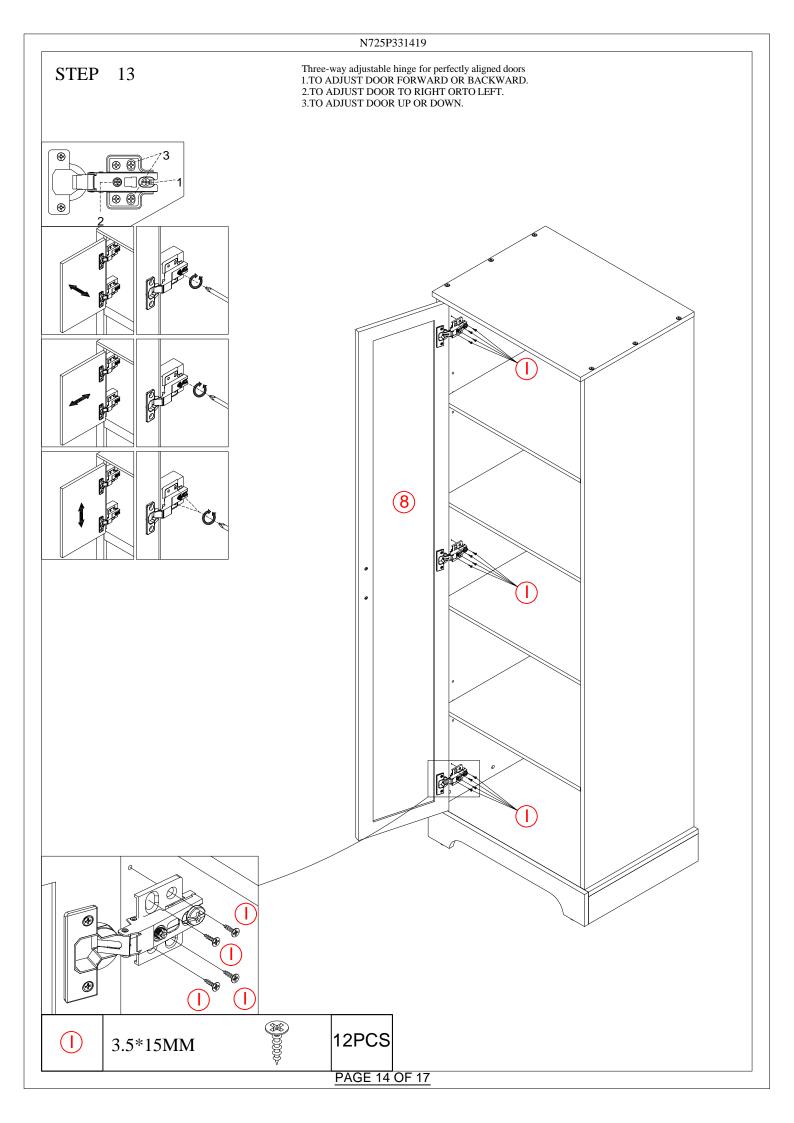

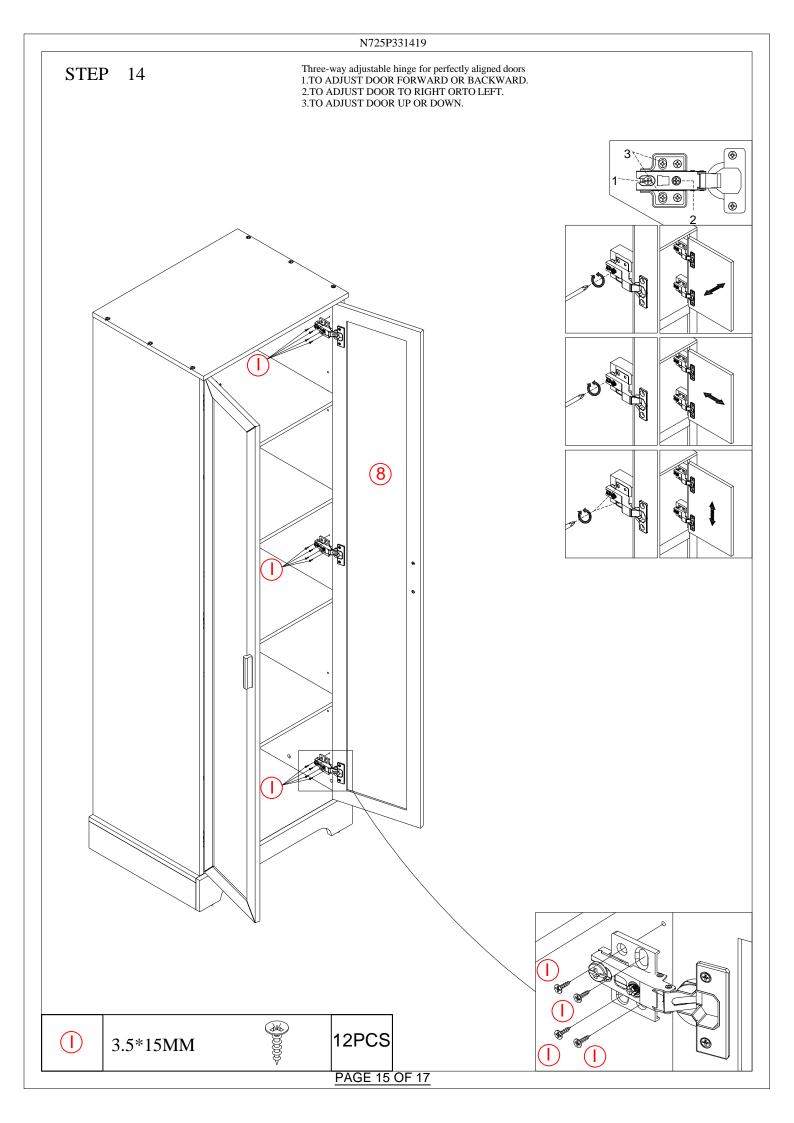

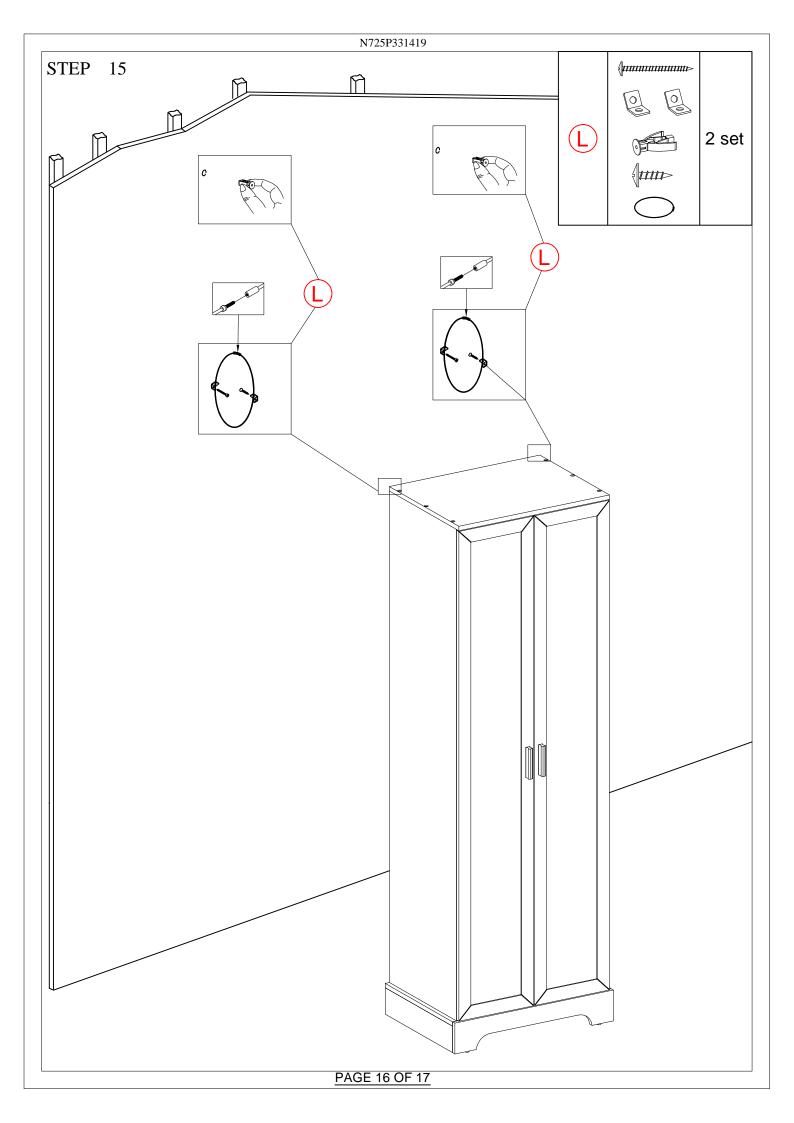


HINGE ADJUSTMENTS

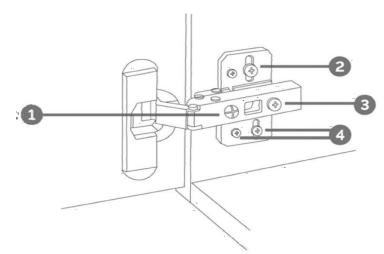

Sideways / Tilt adjustment


Turn the screw clockwise to move the door further away from the side of the cabinet anticlockwise to move the door closer to the side of the cabinet

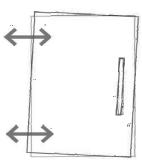

2 4 Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up
anticlockwise to move the door down

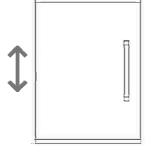

Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw

clockwise to decrease the gap between the door and the cabinet

anticlockwise to increase the gap between the

