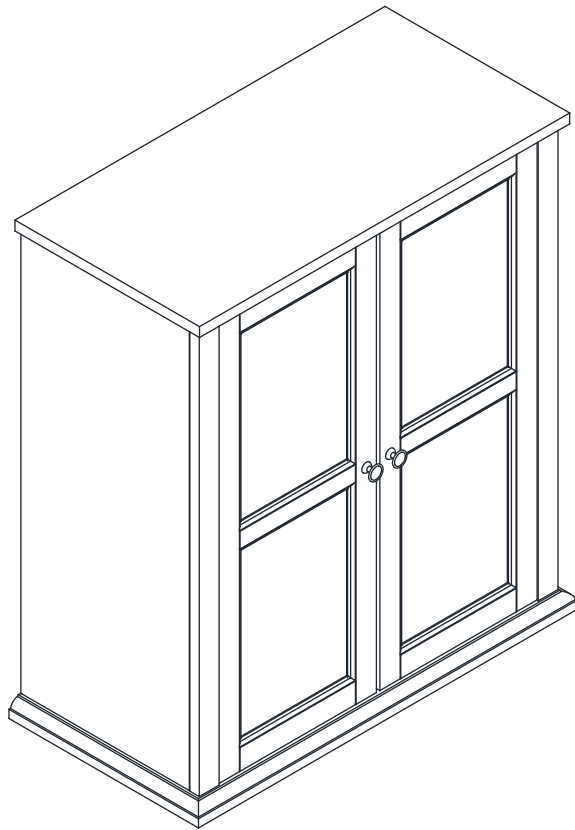 


# **CROSLEY**

 

 
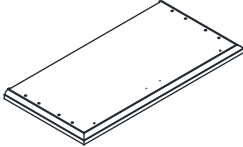 
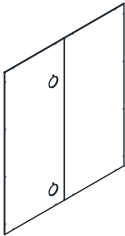 
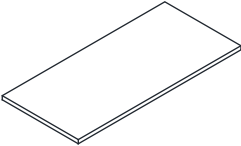 


---

FURNITURE

 

 
 



 


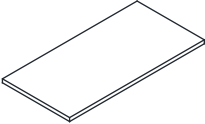
 
## Stackable Kitchen Storage Pantry CF3145



# PART LIST

 
<div>A</div> 	<div>B</div> 	<div>C</div> 	<div>D</div> 	<div>E</div> 
Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Bottom Panel 1 PC	Back Panel 1 PC
<div>F</div> 	<div>G</div> 	<div>H</div> 		
Adjustable Shelf 2 PCS	Door 2 PCS	Cover 2 PCS		

# HARDWARE LIST

<div>#1</div>  <div>Ø8mm*1-1/8"</div>	<div>#2</div>  <div>Ø1/4"*1-1/4"</div>	<div>#3</div> 	<div>#4</div>  <div>Ø5/32"*1"</div>	<div>#5</div>  <div>Ø3*16mm</div>
<div>Wood Dowel</div> <div>8 PCS (Extra 1)</div>	<div>Bolt</div> <div>8 PCS (Extra 1)</div>	<div>Knob</div> <div>2 PCS</div>	<div>Round Head Bolt</div> <div>2 PCS</div>	<div>Long Screw</div> <div>24 PCS (Extra 1)</div>
<div>#6</div> 	<div>#7</div> 	<div>#8</div> 	<div>#9</div>  <div>3*15mm</div>	<div>#10</div>  <div>4mm</div>
<div>Binding Post</div> <div>2 SETS</div>	<div>Shelf Holder</div> <div>8 PCS (Extra 1)</div>	<div>Double Magnet</div> <div>2 PCS</div>	<div>Short Screw</div> <div>4 PCS</div>	<div>Allen Wrench</div> <div>1 PC</div>
<div>#11</div> 	<div>#12</div> 			
<div>Connecting Bar</div> <div>2 PCS</div>	<div>Safety Strap Kit</div> <div>1 SET</div>			

## ADDITIONAL TOOLS (Not Provided)

Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver


Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

Step 1. Attach knobs (part #3) to doors (part G) using round head bolts (part #4) and phillips head screwdriver.

 Attach double magnets (part #8) to top panel (part A) and bottom panel (part D) using short screws (part #9) and phillips head screwdriver.

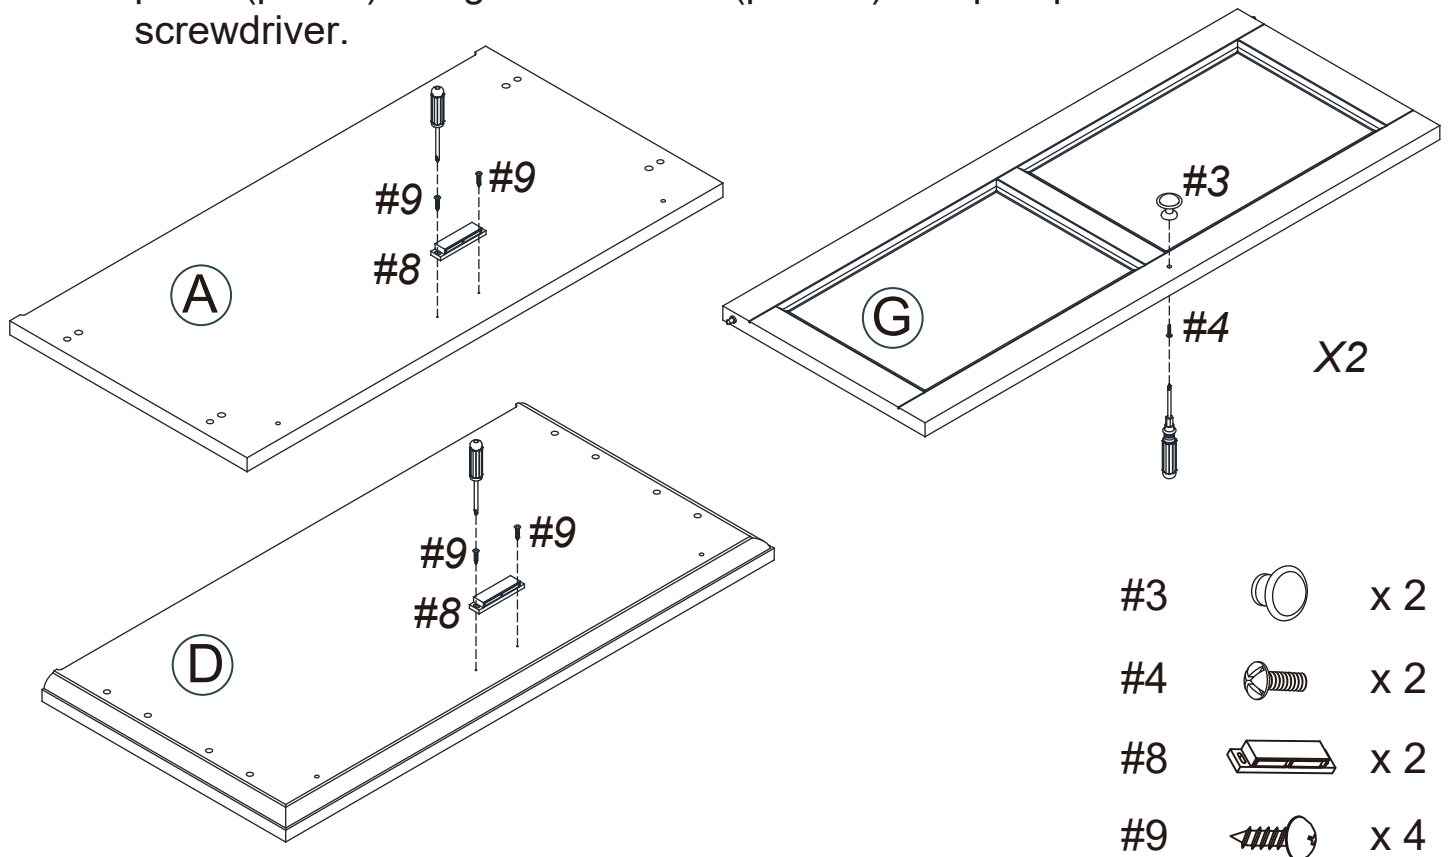

 Step 2. Attach left panel (part B) and right panel (part C) to bottom panel (part D) using wood dowels (part #1), bolts (part #2) and allen wrench (part #10).

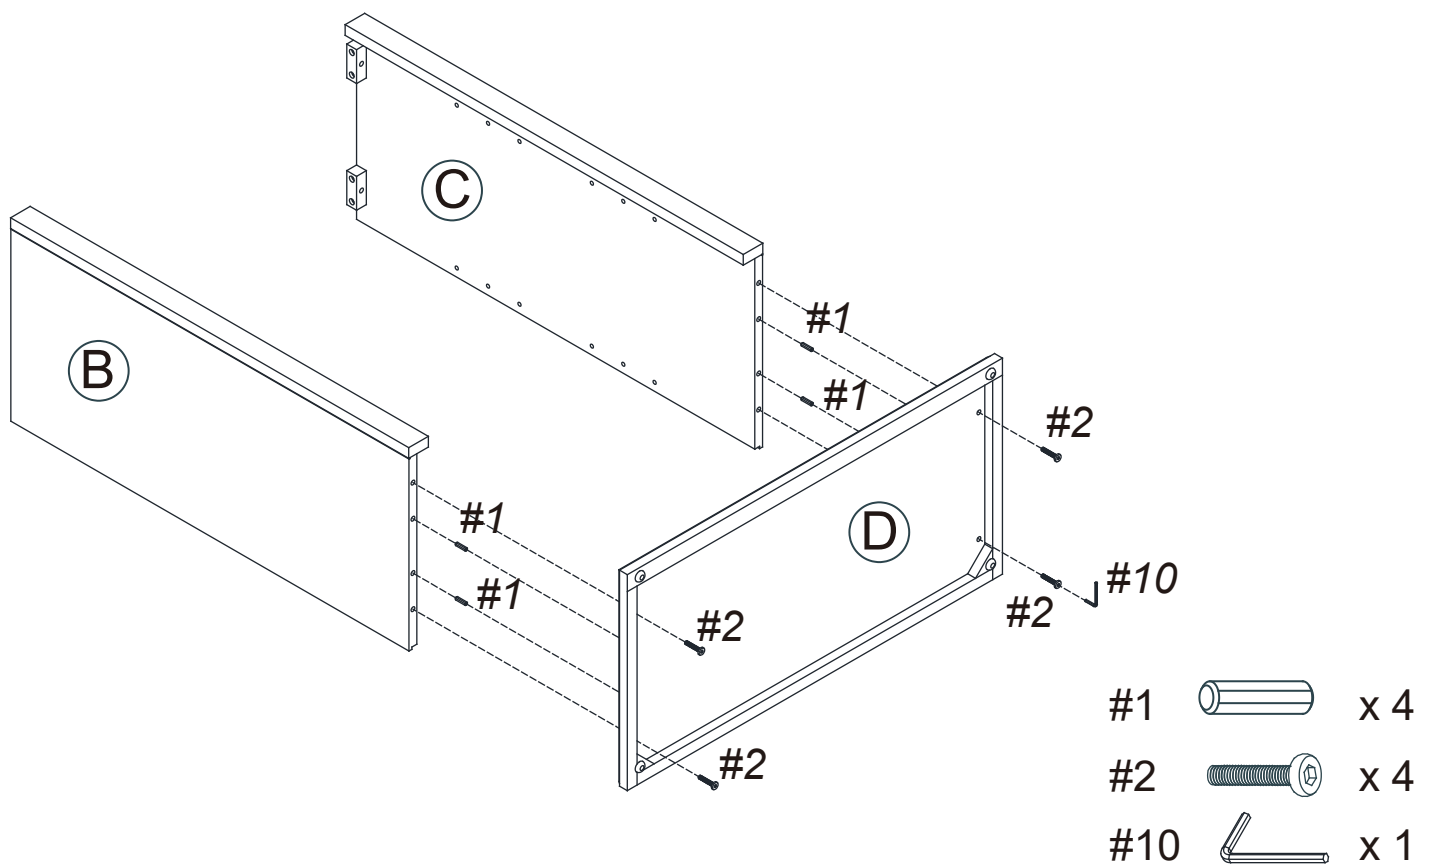

- Step 4. Attach covers (part H) to back panel (part E) using binding posts (part #6) and phillips head screwdriver.

 


Step 5. Carefully turn unit upright. There are two installation options for back panel (part E).


When used as a base, attach back panel (part E) to assembled unit (parts A, B, C & D) using long screws (part #5) and phillips head screwdriver.

When used as a top, turn back panel (part E) 180° and attach to assembled unit (parts A, B, C & D) using long screws (part #5) and phillips head screwdriver.


Base:

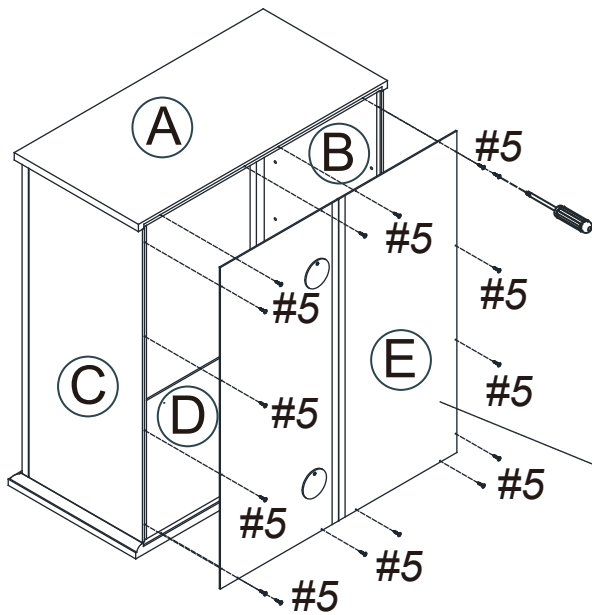

Top:

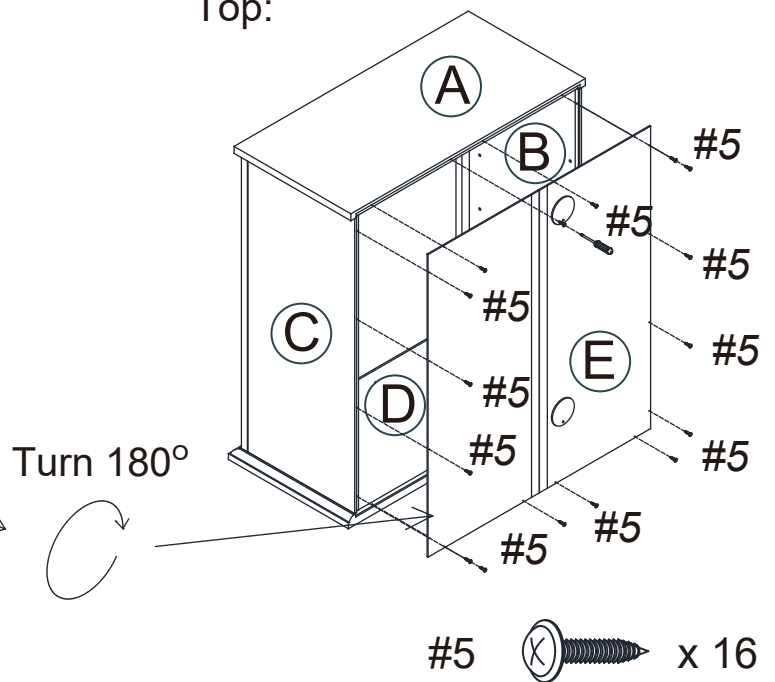 


 Step 6. Place shelf holders (part #7) into desired position and slide adjustable shelves (part F) into place.

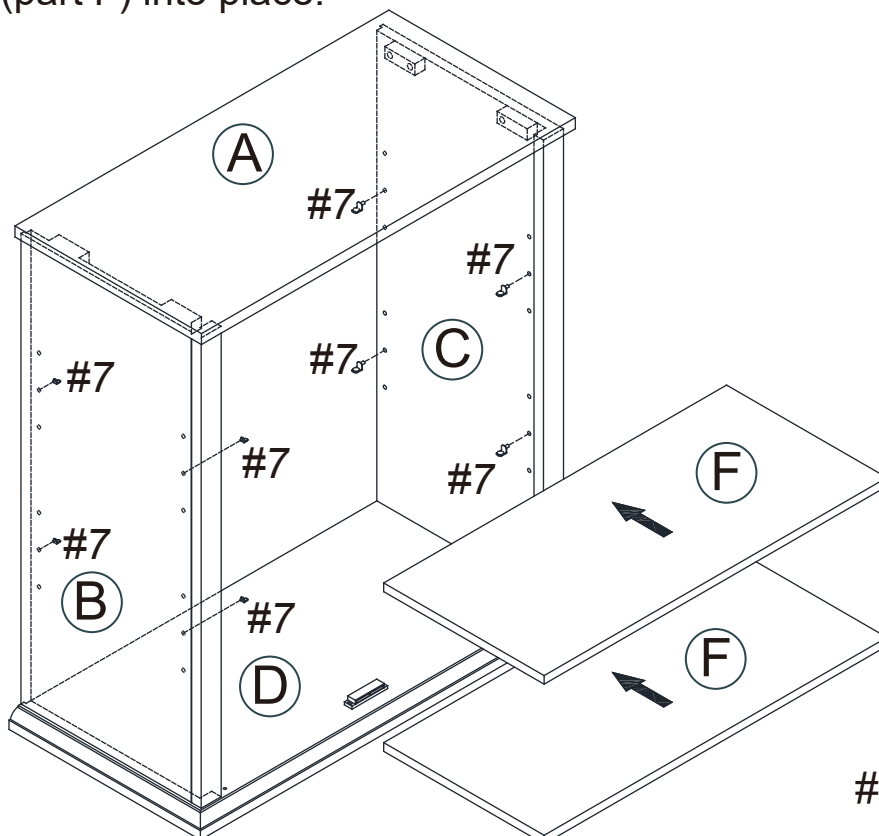


Step 7. Attach doors (part G) by placing pin hinges (preinstalled in door) in the pre-drilled hole of bottom panel (part D). Then depress the top spring-loaded pin hinges so it can be placed in the pre-drilled hole of top panel (part A).

 Note: Be sure top and bottom pin hinges are fully extended to secure doors in place.

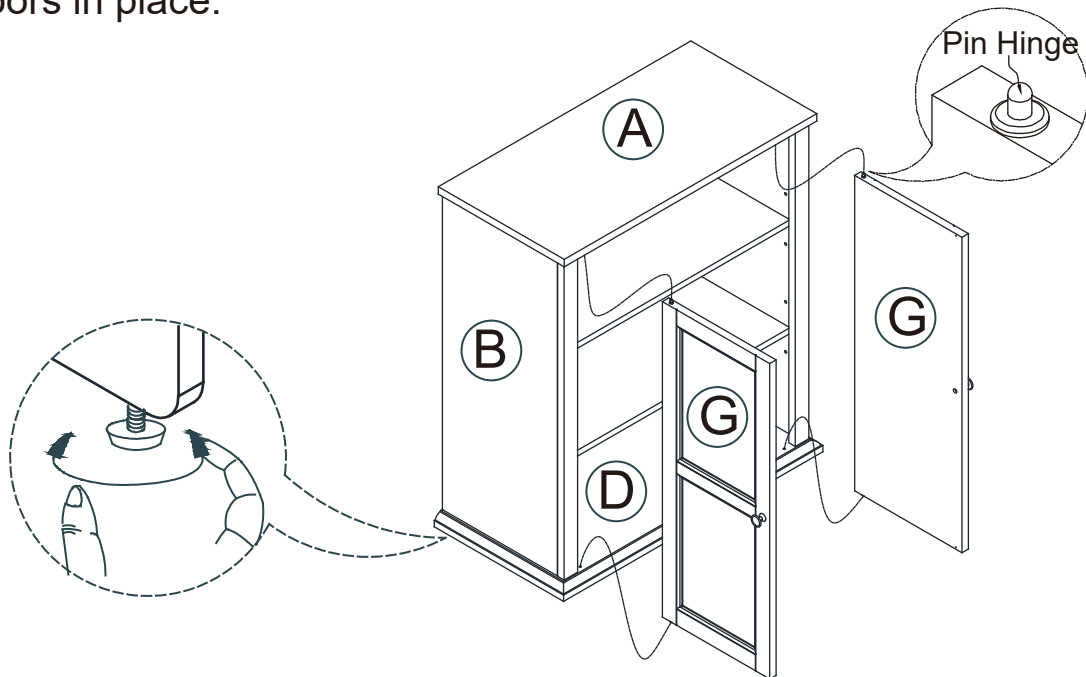


Note: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

  Step 8. Flip and place pantries together by lining up top panel (part A).

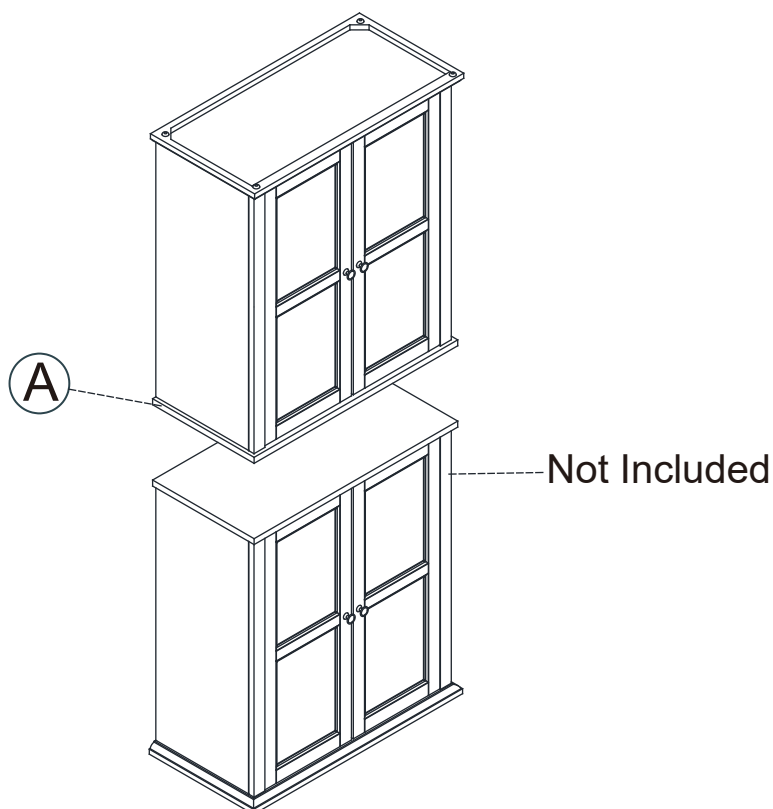



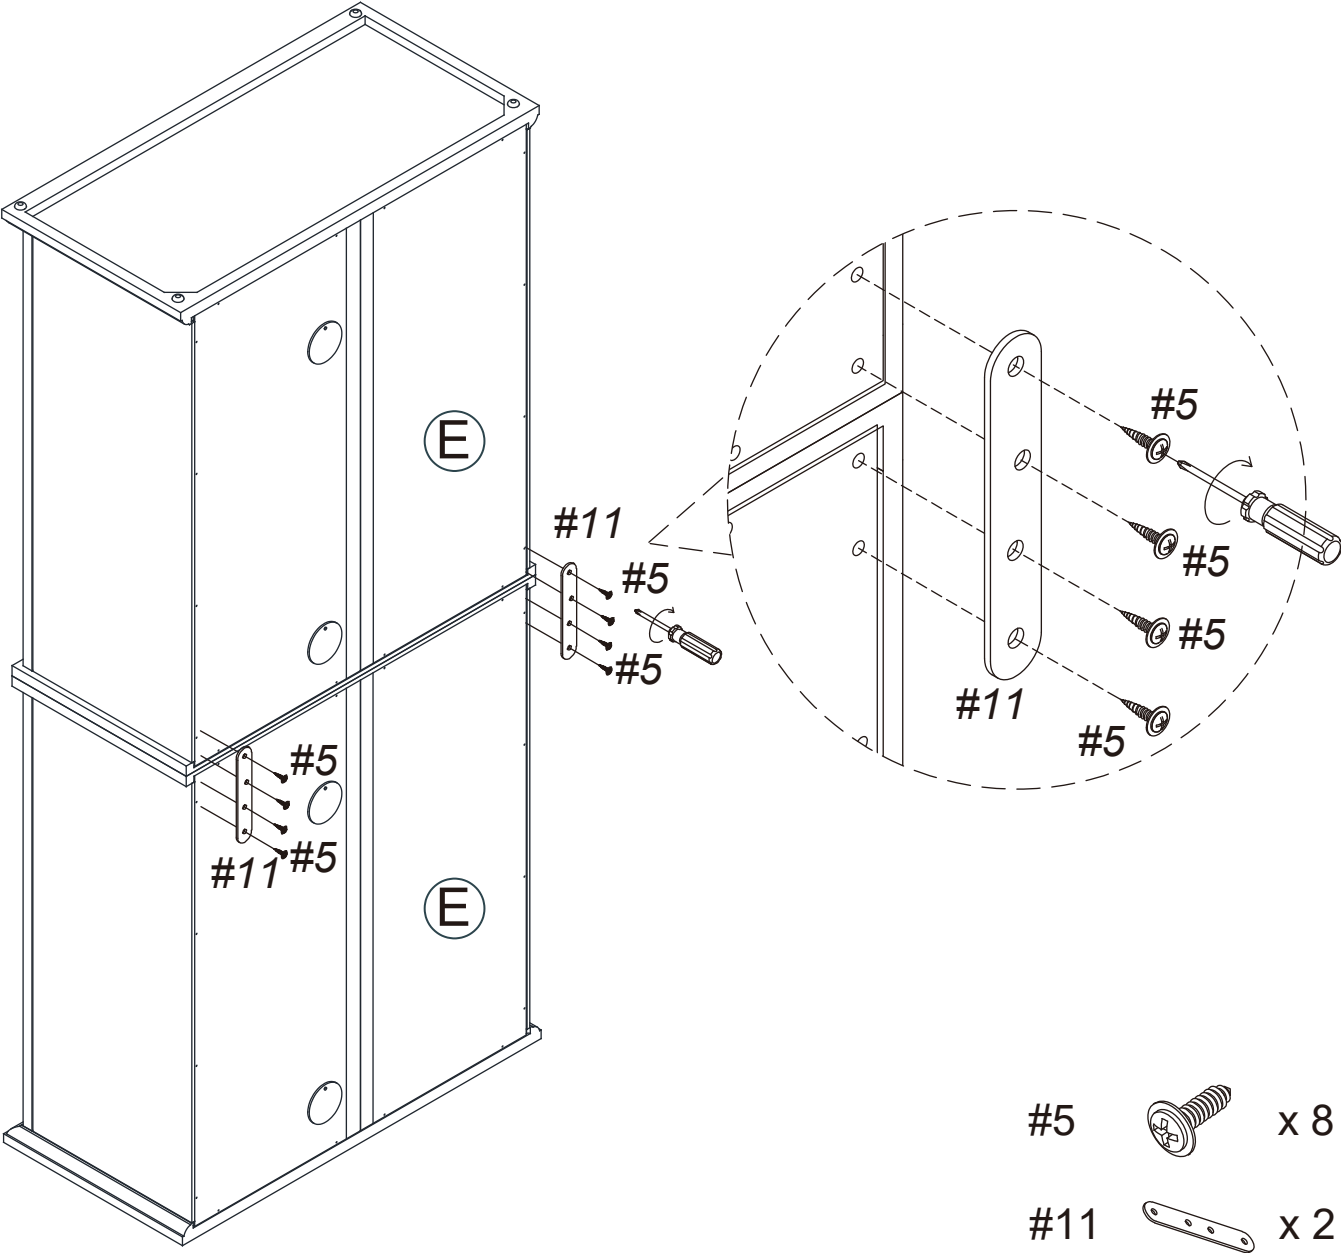



Step 9. Attach connecting bars (part #11) to back panels (part E) using long screws (part #5) and phillips head screwdriver.



Important: Safety strap kit (part #12) must be installed to prevent tipping damage and / or injury.




#12	A	B	C	D	E
					
			5/8"xØ3xD8	1-1/2"xØ4xD8	
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Bracket 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

## SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to top panel (part A) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drill hole will be at the same height as the hole in top panel (part A) where bracket (B) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

 Note: This item is not intended for clothing storage use.

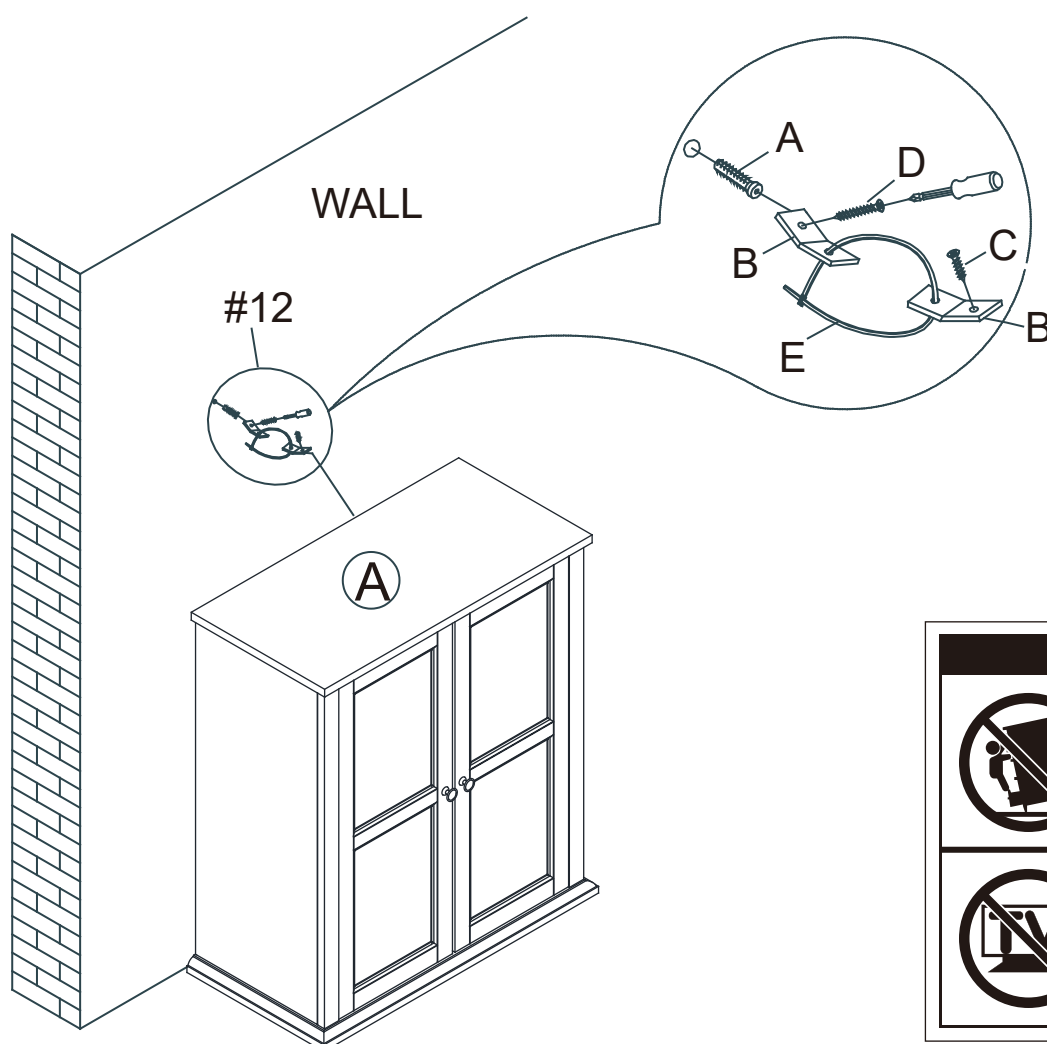

**⚠ WARNING**









Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.



*This is a permanent label. Do not remove!*

 
#12	A	B	C	D	E
					
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Bracket 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

## SAFETY WALL STRAP INSTALLATION


Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to bottom panel (part D) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drill hole will be at the same height as the hole in bottom panel (part D) where bracket (B) is attached. Tap wall anchor (A) into the hole. Tap wall anchor (A) into the hole.
3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

Note: This item is not intended for clothing storage use.

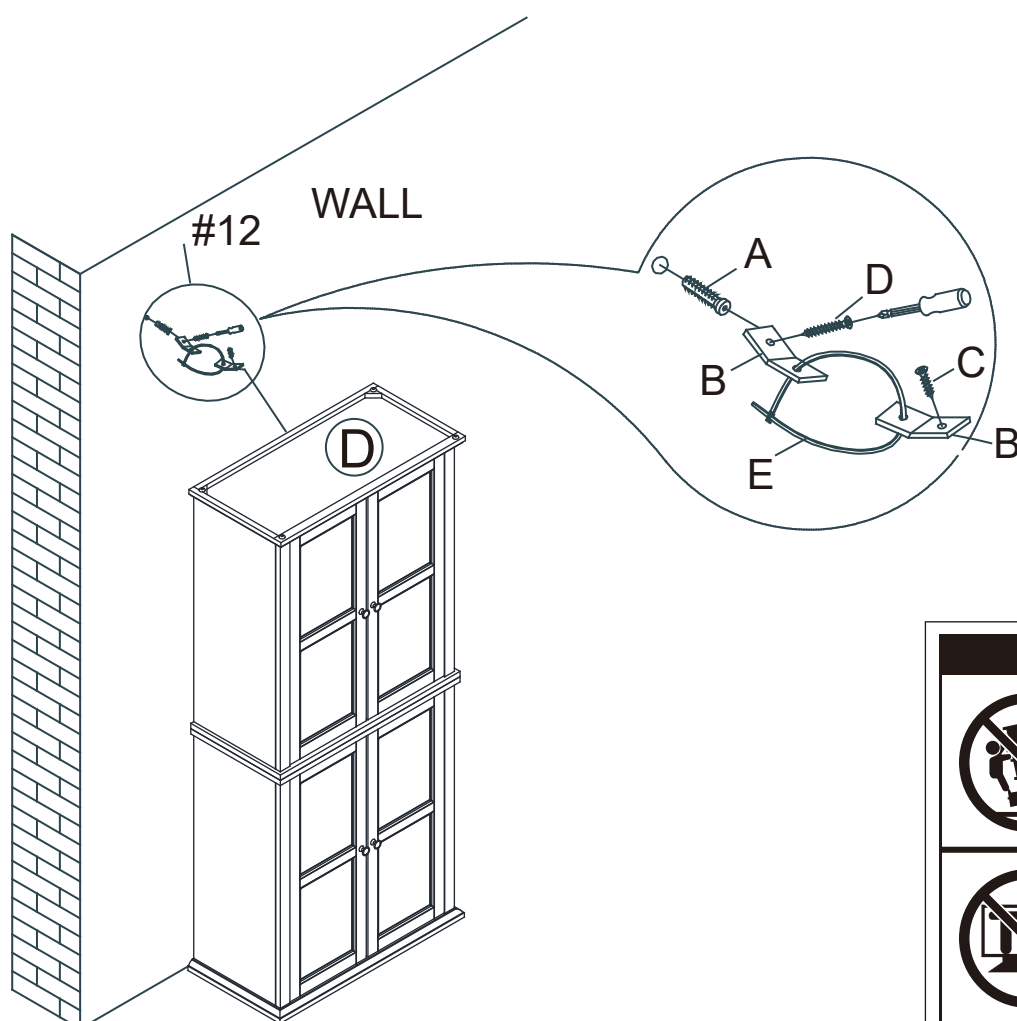

**⚠ WARNING**



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.



*This is a permanent label.  
Do not remove!*