
 
ASSEMBLY INSTRUCTIONS 30 INCH BATH VANITY (COMBO)

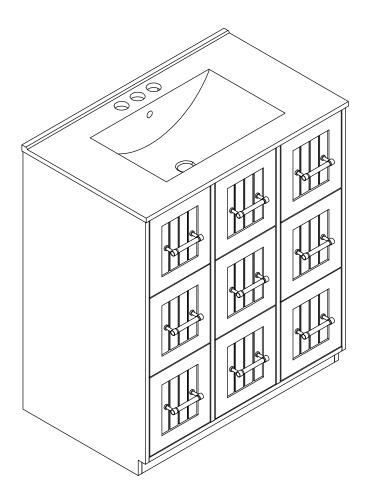

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"



- * Use of power tool to assemble this product will invalidate any claim and damage this product making upsafe!!
- damage this product making unsafe !!!

 * Please assemble on a clean soft surface to avoid damage.







Tools Required






IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE

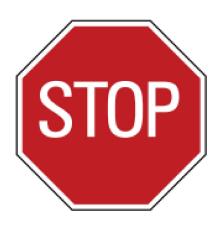

Please do not return this product to the retailer!!

We are able to assist you in ANY way

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Before Installation


Important - Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- . We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- . Please do not over tighten screws or bolts until the assembly is completed.
- . Keep children and animal away from the work area, small parts could choke if swallowed.
- . Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.


Cam Lock Assembly Instructions

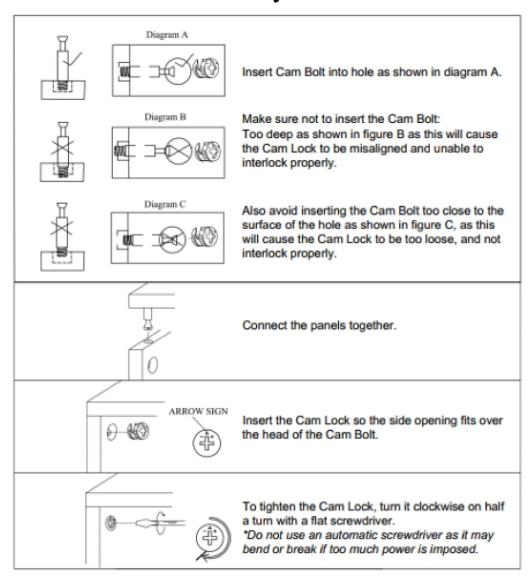

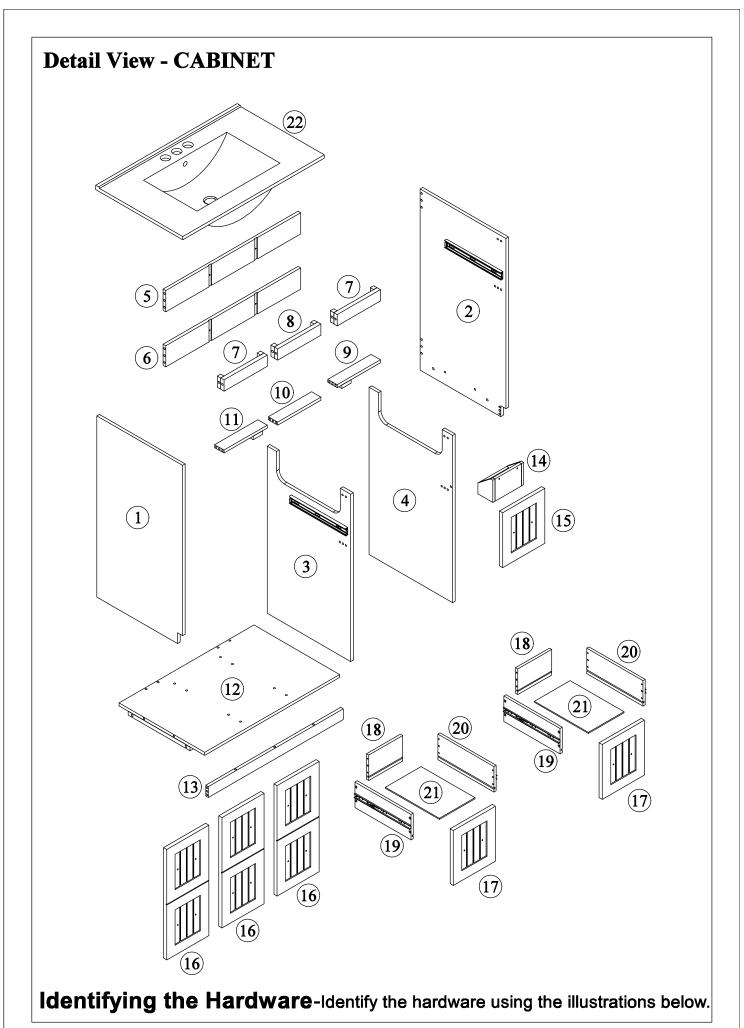


Part	List - N710P331580		
1		2	
	Side Panel (L) - 1pc		Side Panel (R) - 1pc
3		4	
	Mid Panel (L) - 1pc		Mid Panel (R) - 1pc
5		6	
	Top Rear Panel - 1pc		Bottom Rear Panel - 1pc
7		8	
	Top Bar Front (L+R) - 2pcs		Top Bar Front (M) - 1pc
9	, , ,	10	, , ,
	Mid Bar Front (R) - 1pc		Mid Bar Front (M) - 1pc
11		12	
	Mid Bar Front (L) - 1pc		Bottom Frame - 1pc
13		14	
	Bottom Bar Front - 1pc		Flip down Box - 1pc

Part List - N710P331580

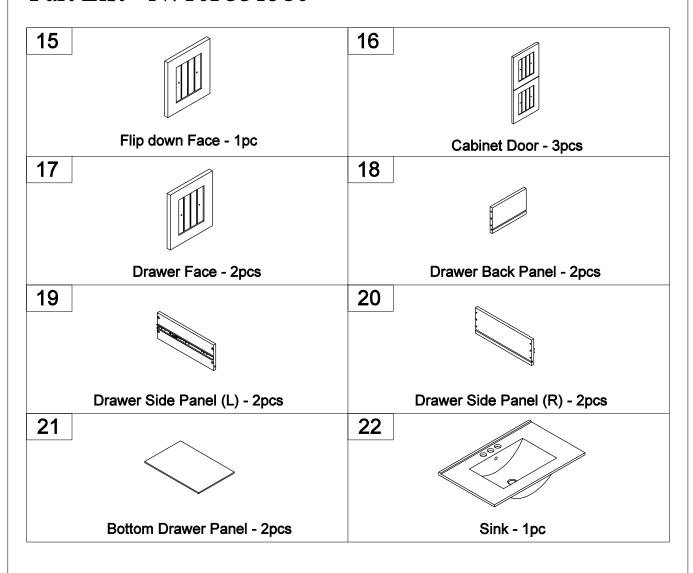



Hardware List - N710P331580

Α	B	C
		Q <i>Y/////</i>)
ø6x35mm	ø14.5x12mm	ø8x30mm
Three in one bolts (23pcs)	Three in one lock (23pcs)	Wood dowel (38pcs)
D	E	F
<i>SY/////D</i>)		{\bar{\bar{\bar{\bar{\bar{\bar{\bar
ø6x30mm		ø5/32"x15mm
Wood dowel (8pcs)	Handle (9pcs)	Handle screw (12pcs)
	H	
ø5/32"x30mm	·	
Handle screw (6pcs)	Rod Support hinge (1pc)	Swivel hinge (2pcs)
J	K	L
₽ 		(†)::::::::::::::::::::::::::::::::::::
ø6xø3x12mm		ø7xø3.5x15mm
Flat head screw (8pcs)	Damping hinge (6pcs)	Flat head screw (36pcs)
M	N	0
ø8xø4x25mm	ø8xø4x32mm	ø13x1/4"x45mm
Round head screw (4pcs)	Round head screw (16pcs)	Hex-Head bolts (2pcs)
Р	Q	R
<u> </u>		
ø13x1/4"x28mm	ø1/4"x16x1mm	
Hex-Head bolts (6pcs)	Washer (8pcs)	Split lock washer (8pcs)
S 4mm	T	
Allen key (1pc)	Anti fall hardware (2sets)	

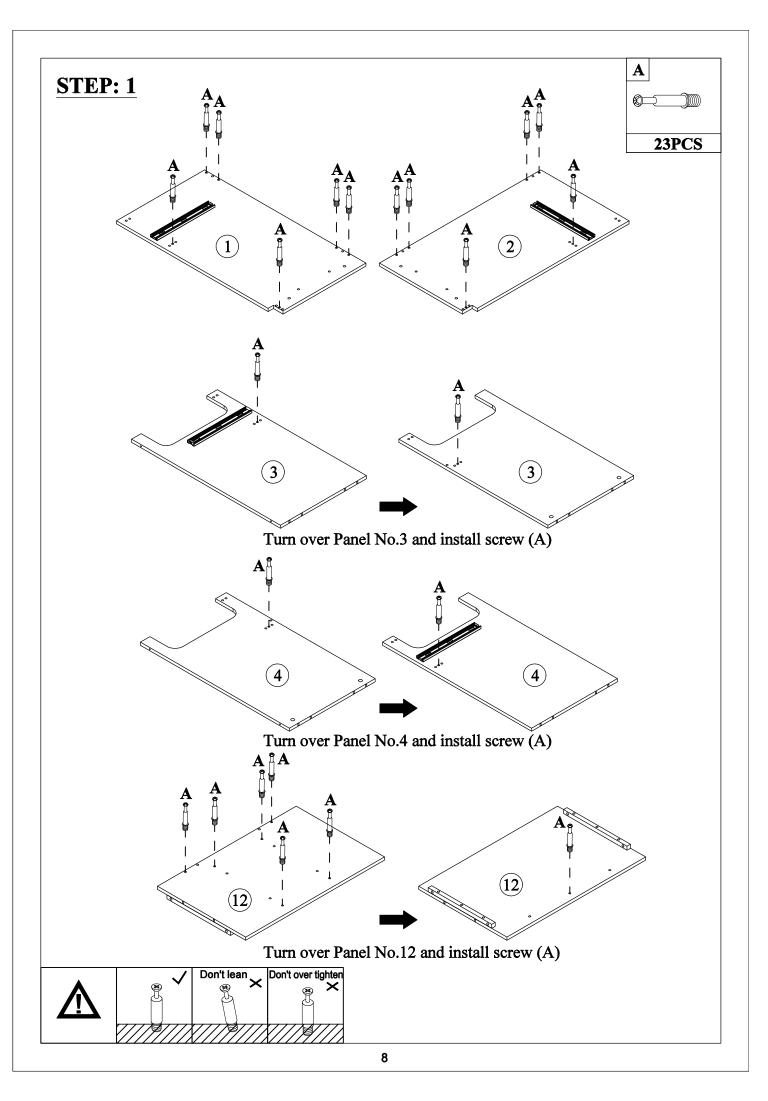





 


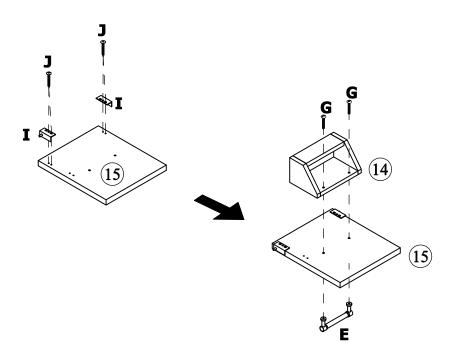



STEP: 3

 


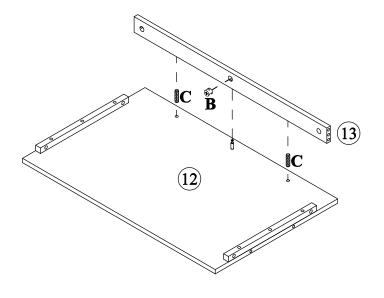


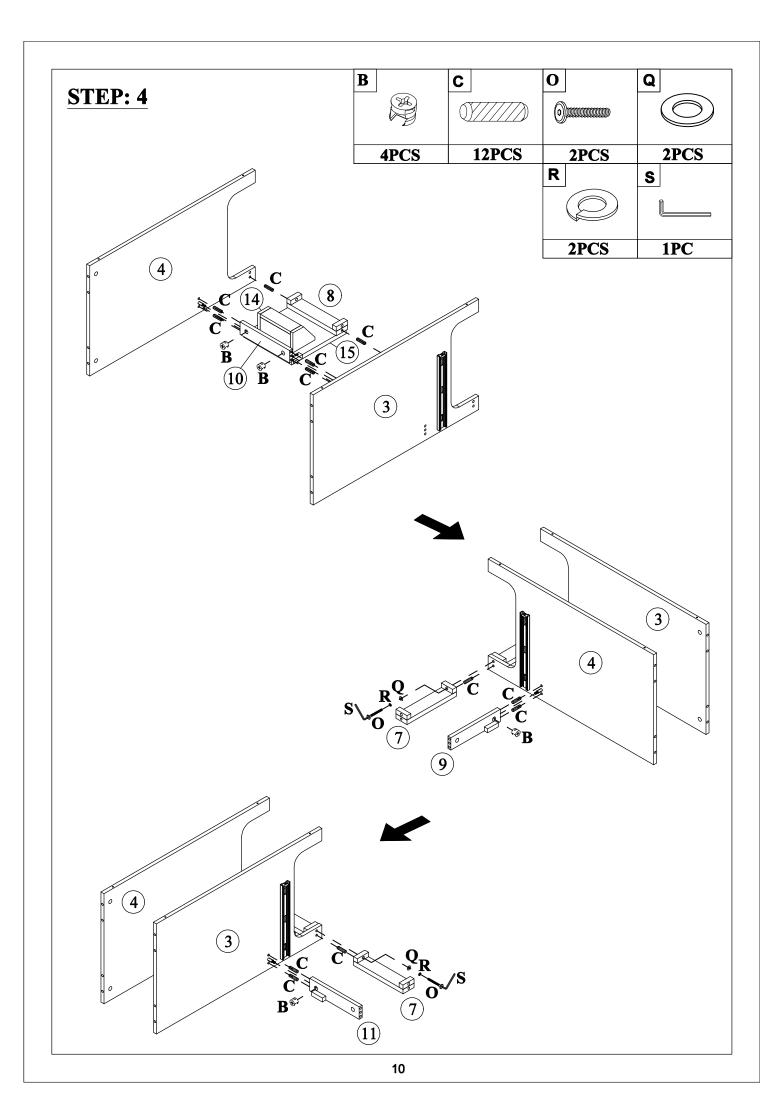


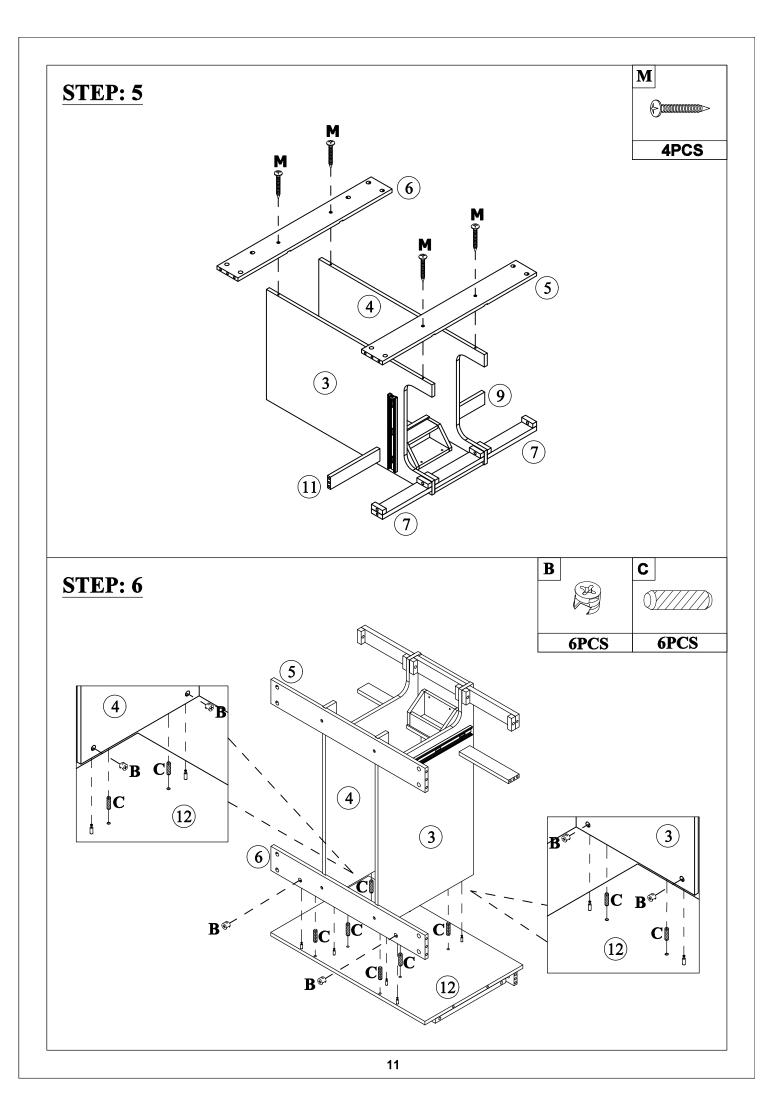


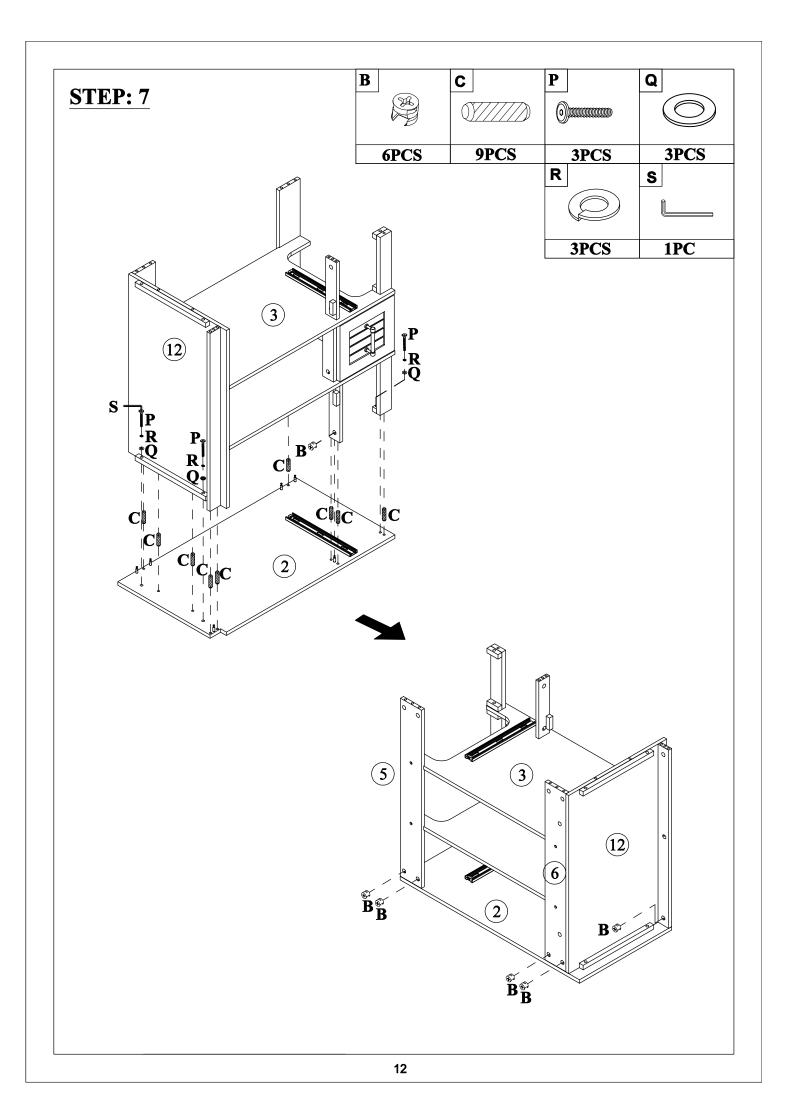


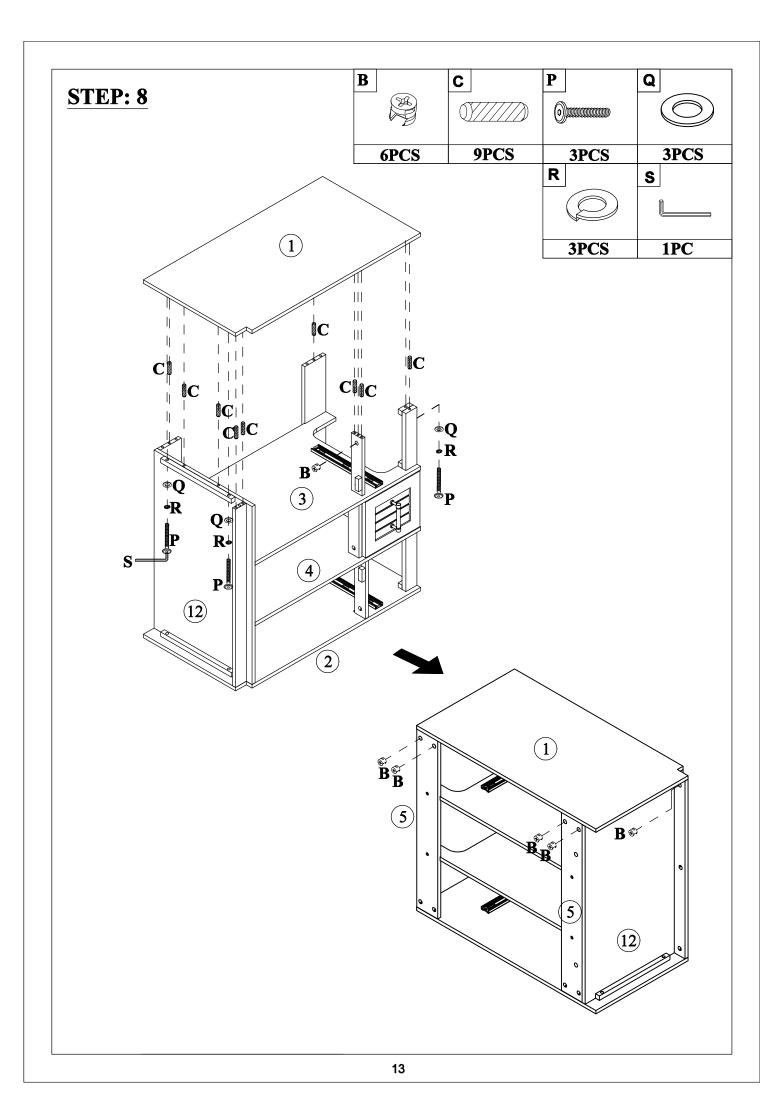

 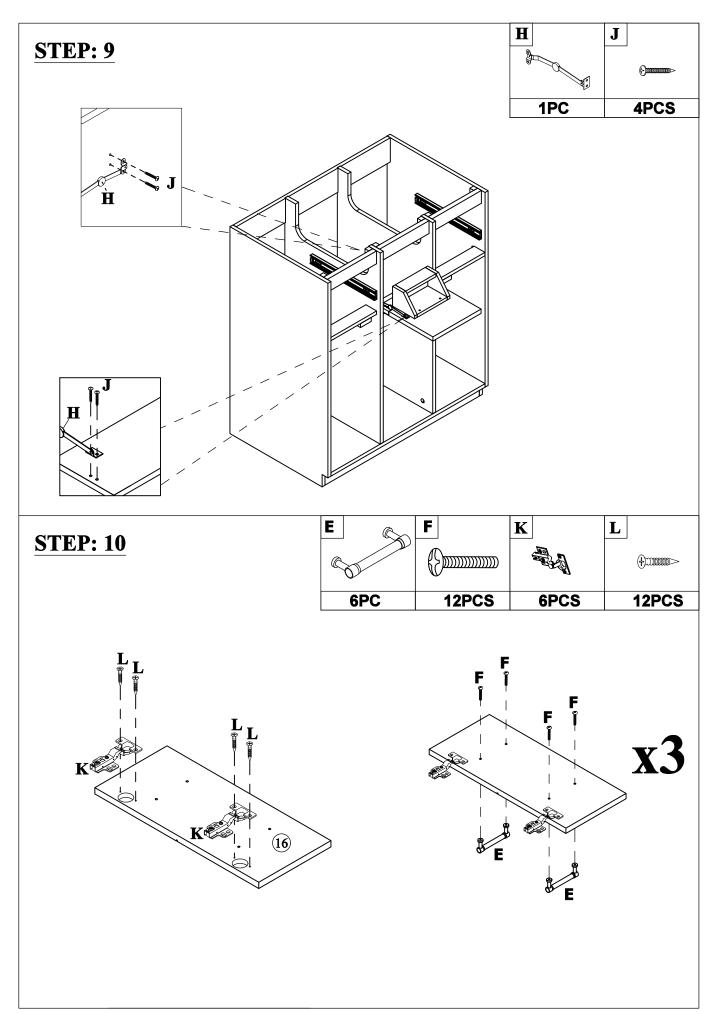


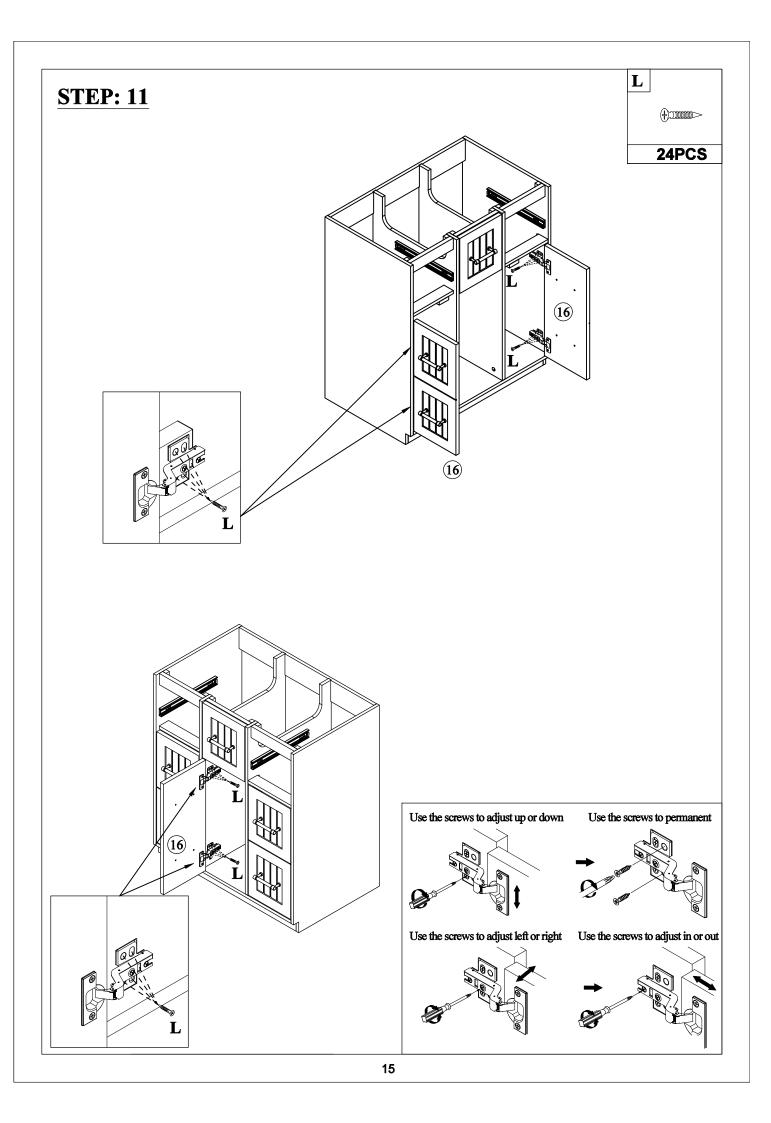


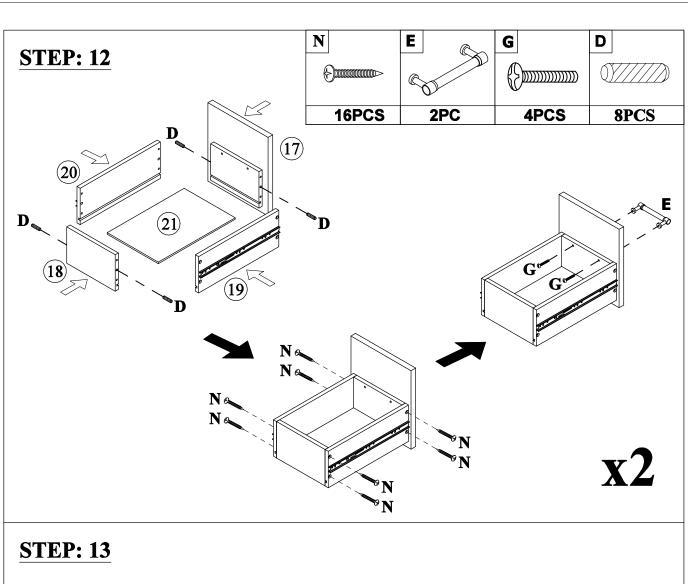

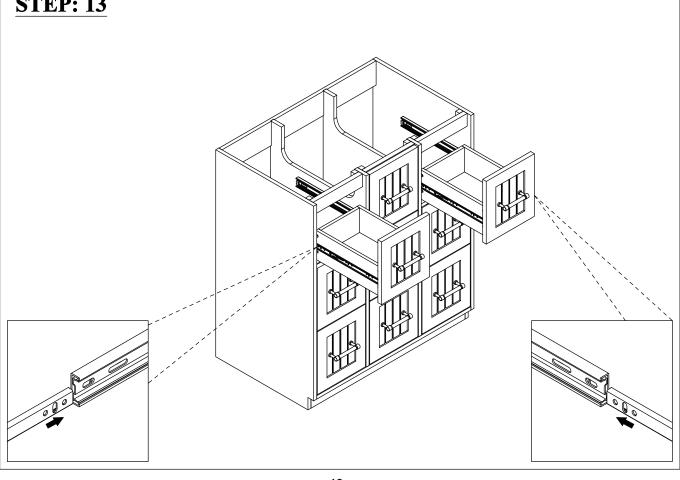







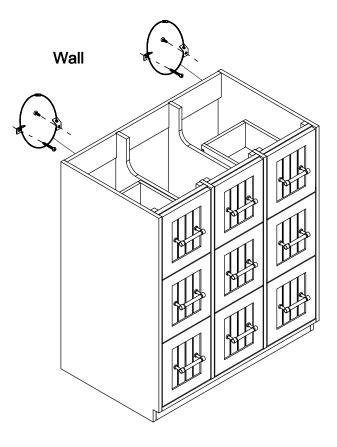

STEP: 15

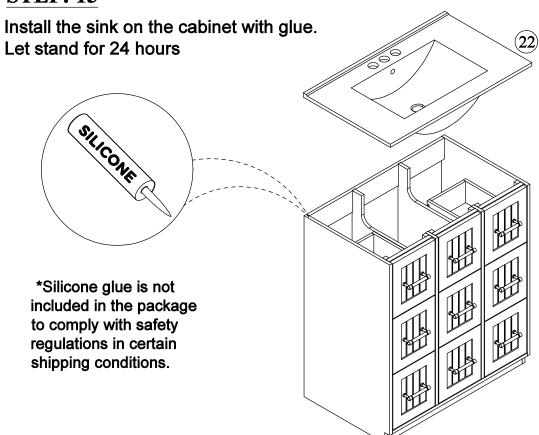


STEP: 16

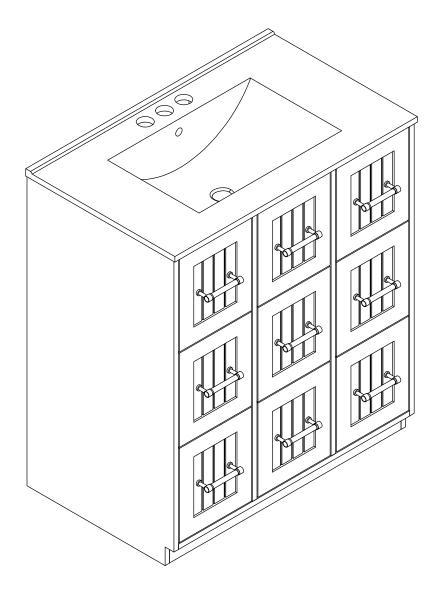




HINGE ADJUSTMENTS

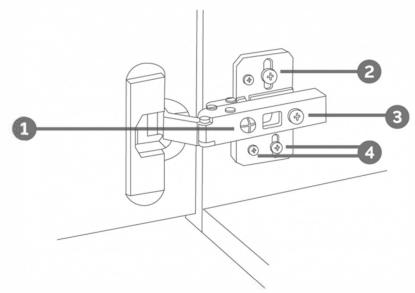

1 Sideways / Tilt adjustment


Turn the screw clockwise to move the door further away from the side of the cabinet anticlockwise to move the door closer to the side of the cabinet

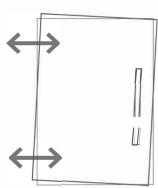

2 4 Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up anticlockwise to move the door down

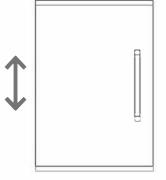

3 Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw

clockwise to decrease the gap between the door and the cabinet

anticlockwise to increase the gap between the door and the cabinet

