












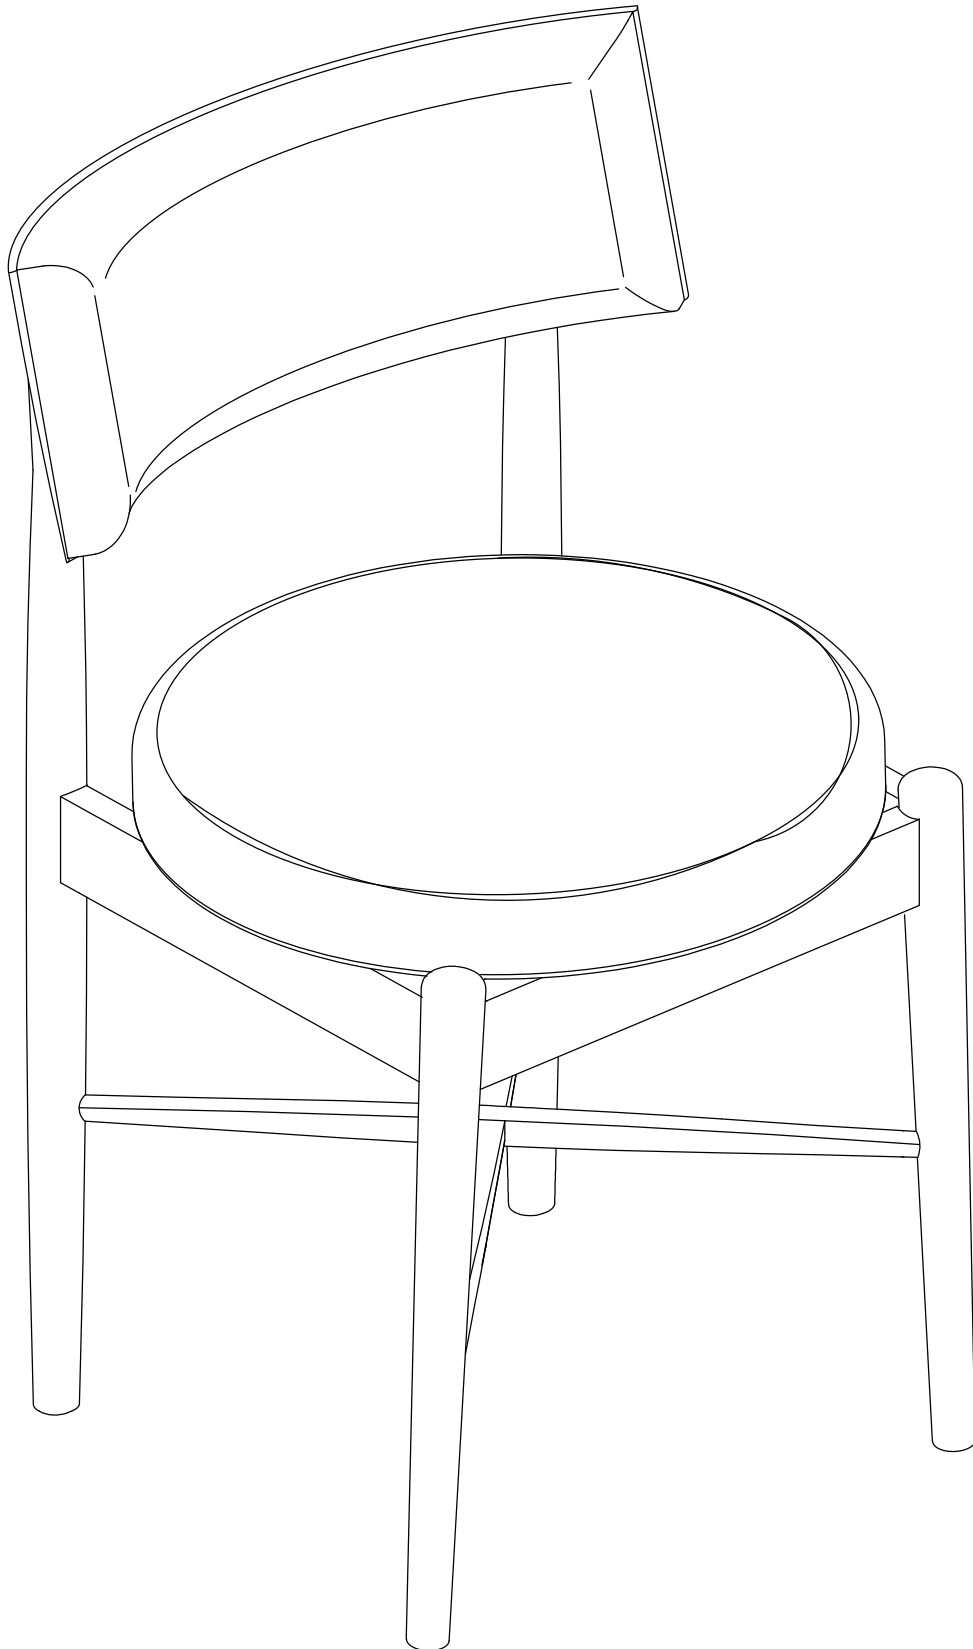 
Assembly Instruction

Caution : You must read this before you proceed

 
 
 
 


 
 
Care & Maintenance

- ⊘  • Not for commercial use. For residential use only.
- ✓  • Furniture may scratch floors. We recommend using furniture pads to protect your floors.
- ⊘  • Do not put hot items directly on furniture surface.
- ⊘  • Do not clean furniture with harsh cleansers or polish.
- ⊘  • Do not place furniture under direct sunlight.
- ⊘  • Do not place furniture near heating or cooling vents.
- ⊘  • Do not write on furniture without a padded barrier to protect the surface.
- ⊘  • Do not place furniture outside . For indoor use only.
- ⊘  • Stains may be removed with mild soap solution and damp cloth.
- ⊘  • Children should not climb or jump on the furniture.
- ✓  • Dust and pick-up spills using a clean, non-colored, lint-free cloth.

 
 

 



Dining Chair



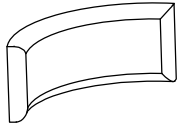Part List


| Label | Picture | Description | QTY |
|-------|-------------------------------------------------------------------------------------|------------------|-----|
| A |  | Side Leg - Left | 1 |
| B |  | Side Leg - Right | 1 |
| C |  | Front Rail | 1 |
| D |  | Back Rail | 1 |
| E |  | Stretcher E | 1 |
| F |  | Stretcher F | 1 |
| G |  | Back Cushion | 1 |
| H |  | Cushion Seat | 1 |

Hardware

| Label | Picture | Description | QTY |
|-------|-------------------------------------------------------------------------------------|----------------------|-----|
| ① |  | M6 X 25mm JCBC Screw | 4 |
| ② |  | M6 X 40mm JCBC Screw | 8 |
| ③ |  | M6 Spring Washer | 8 |
| ④ |  | M8 X 35mm Wood Dowel | 1 |
| ⑤ |  | M4 X 30mm CSK Screw | 8 |
| ⑥ |  | M4 Allen Key | 1 |
| ⑦ |  | White Nylon | 4 |

Assembly Preparation

 Before Beginning Assembly :

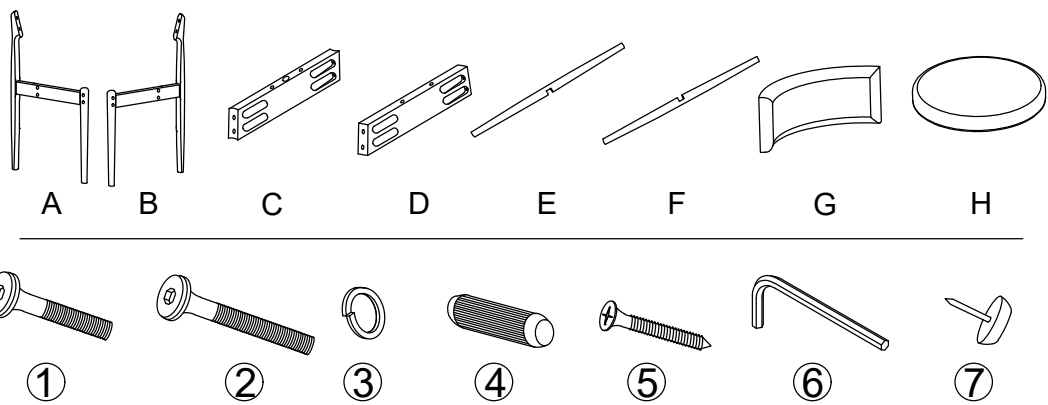

• Read instructions ,cover to cover-



• Have 2 adults on hand for assembly-



• Do not assembly on flooring or carpet-



 
• Assembly on a clean non-marring surface(packing foam)-



• Save all packaging until finished-


Assembly Steps

Overview

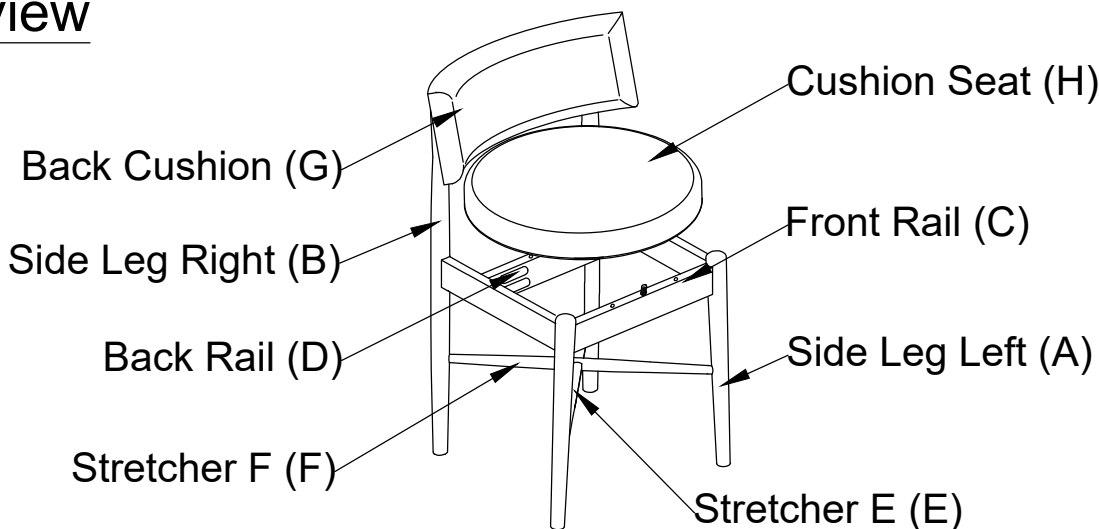


This Dining Chair has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Dining Chair parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly

 Step 1

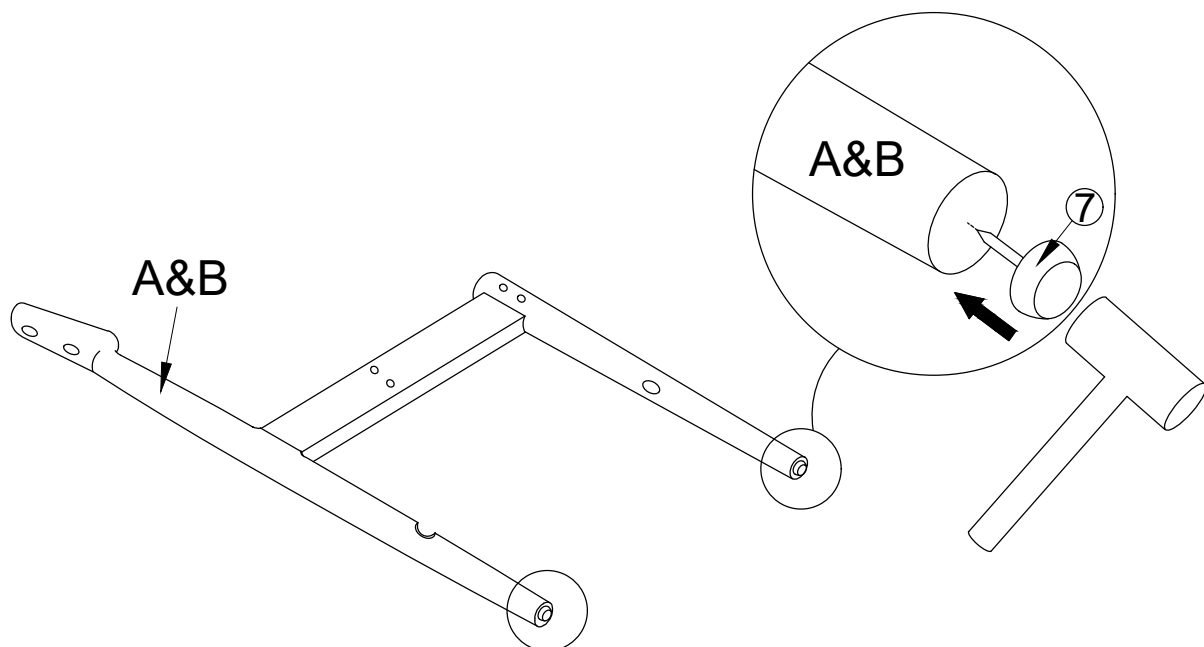


Fit the White Nylon (7) to Side Leg Left & Right (A&B).

 Step 2

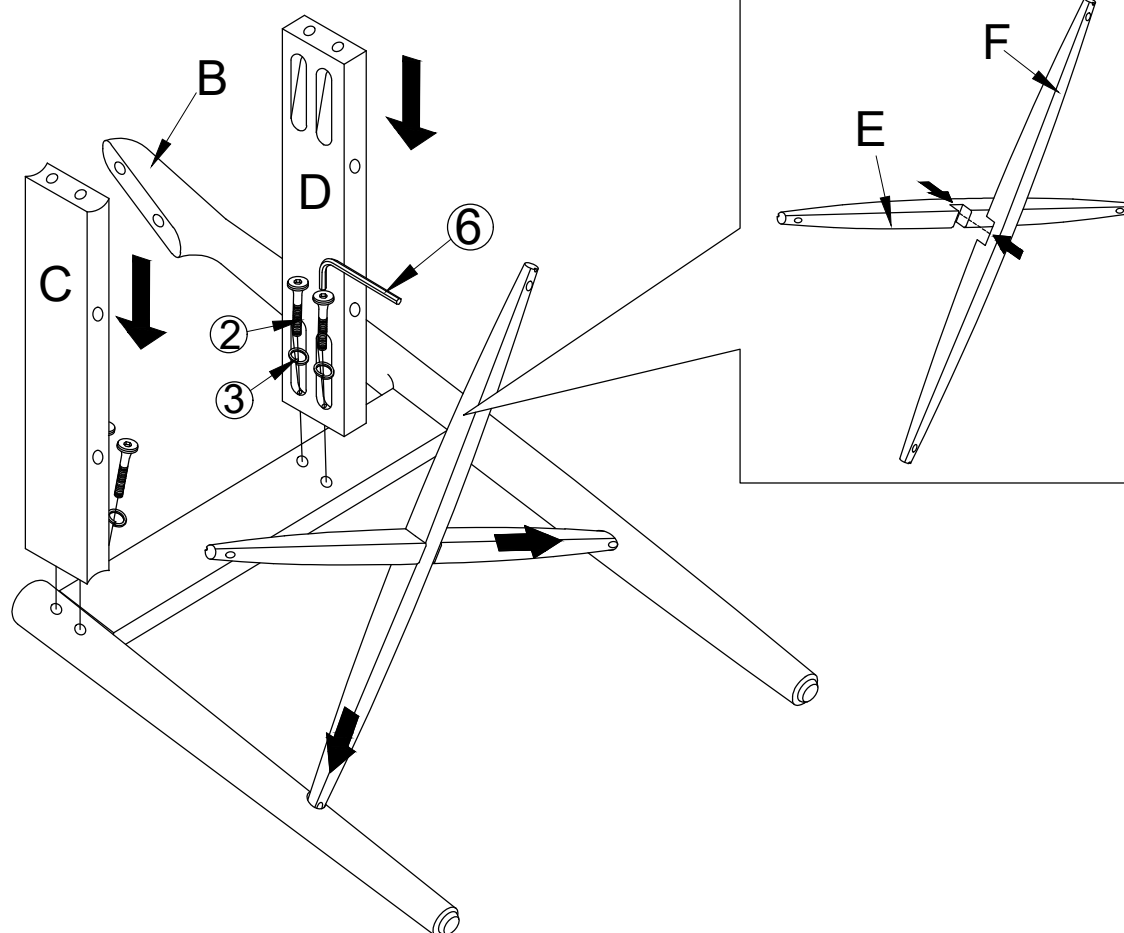


Place Front Rail (C) & Back Rail (D) to Side Leg-Right (B) With Hardware JCBC Screw (2) + Spring Washer (3) using the Allen Key (6). Put Stretcher (E&F) together as shown in picture and place it into the hole of Side Leg Right (B) . Rotate Stretcher (E&F) if the hole doesn't fit.

 Step 3

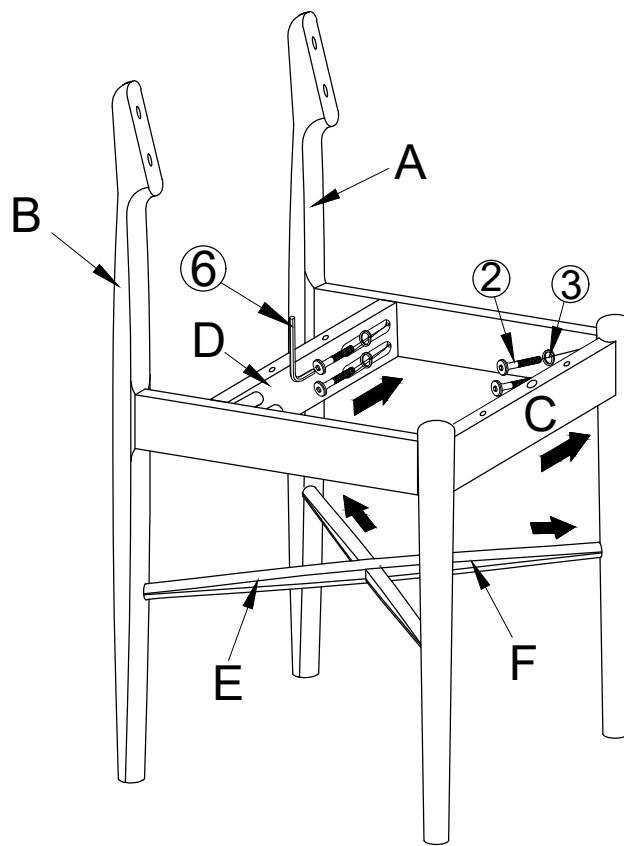


Place Front Rail (C) & Back Rail (D) to Side Leg-Left (A) With Hardware JCBC Screw (2) + Spring Washer (3). Using the Allen Key (6) .And place Stretcher (E&F) into the hole of Side Leg Left (A) as shown in picture.

 Step 4

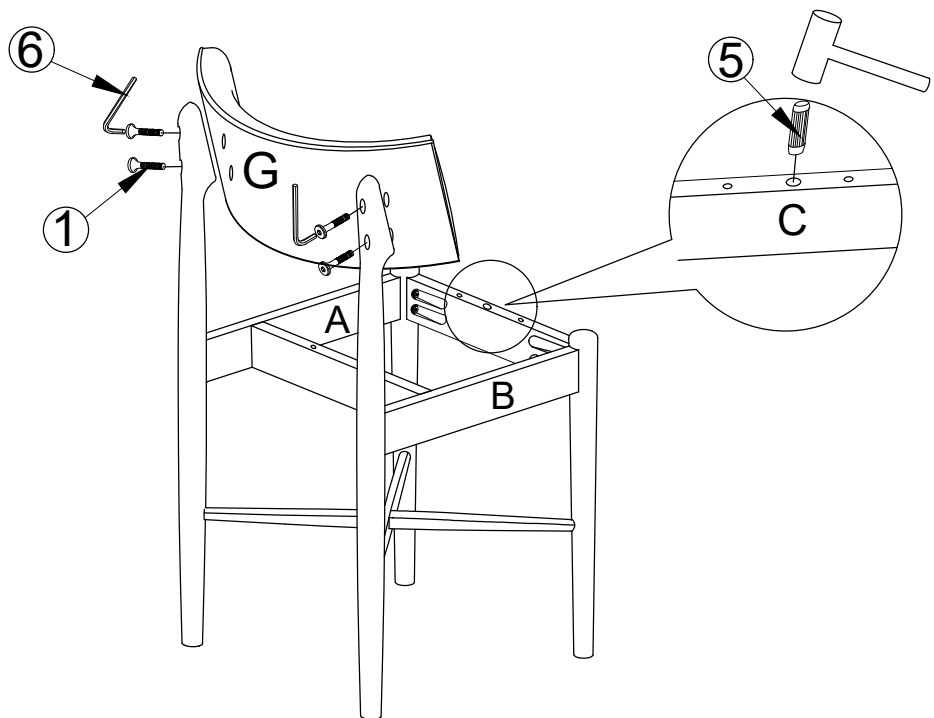


Place Back Cushion (G) to Side Leg (A&B) With Hardware JCBC Screw (1) using the Allen Key (6) and fit the Wood Dowel (5) into the Front Rail (C) as shown in picture.

 Step 5

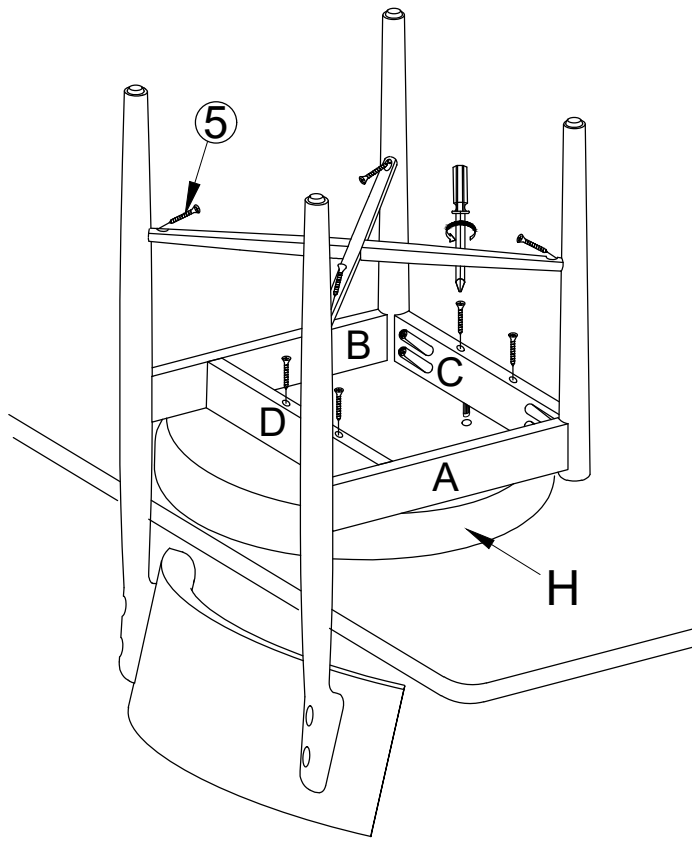

Fit the cushion seat (H) hole to wood dowel and fit cushion seat (H) & Stretcher (E&F) with CSK Screw (5) using the screwdriver as shown in picture.

 Step 6

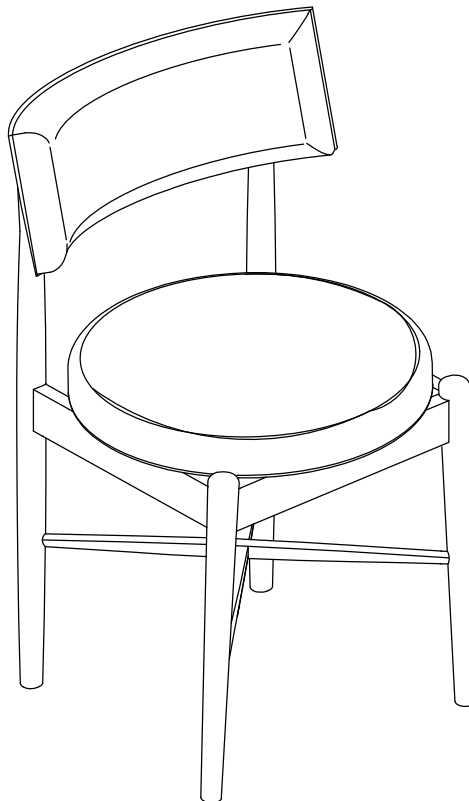

Your Chair is ready for use.