ASSEMBLY INSTRUCTIONS BATH VANITY-CABINET

 
SKU - N725P350821



Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.


DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED



IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE

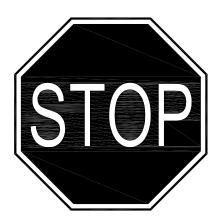

Please do not return this product to the retailer!! We are able to assist you in ANY way

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.


Before Installation


Important - Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.


- We recommend that you assemble this product with the assistance of another person; this will
 make the assembly easier, and will help eliminate damage to the product or injury to persons during
 assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions

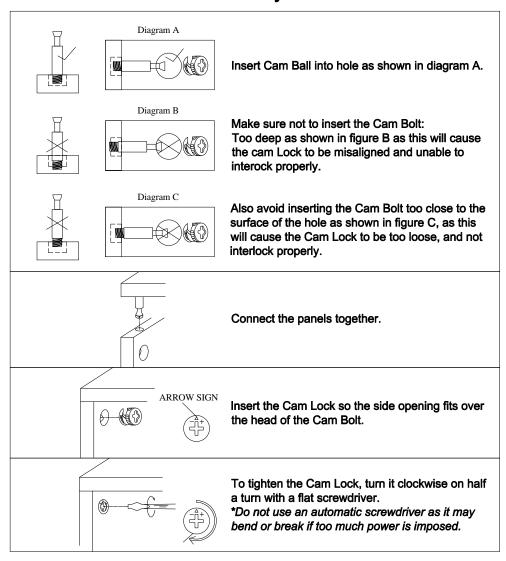


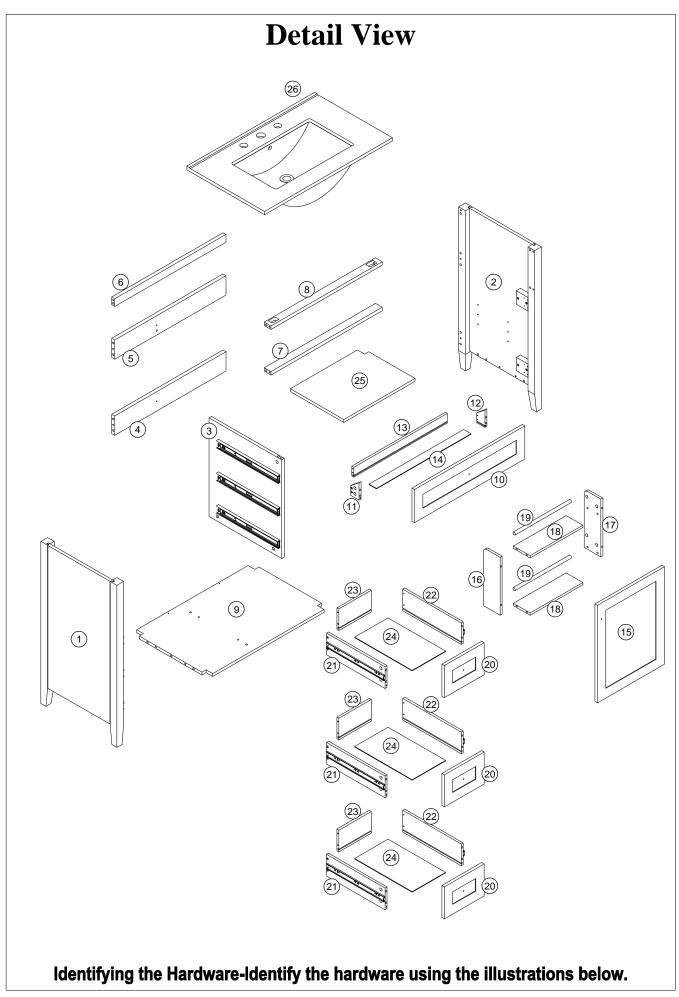


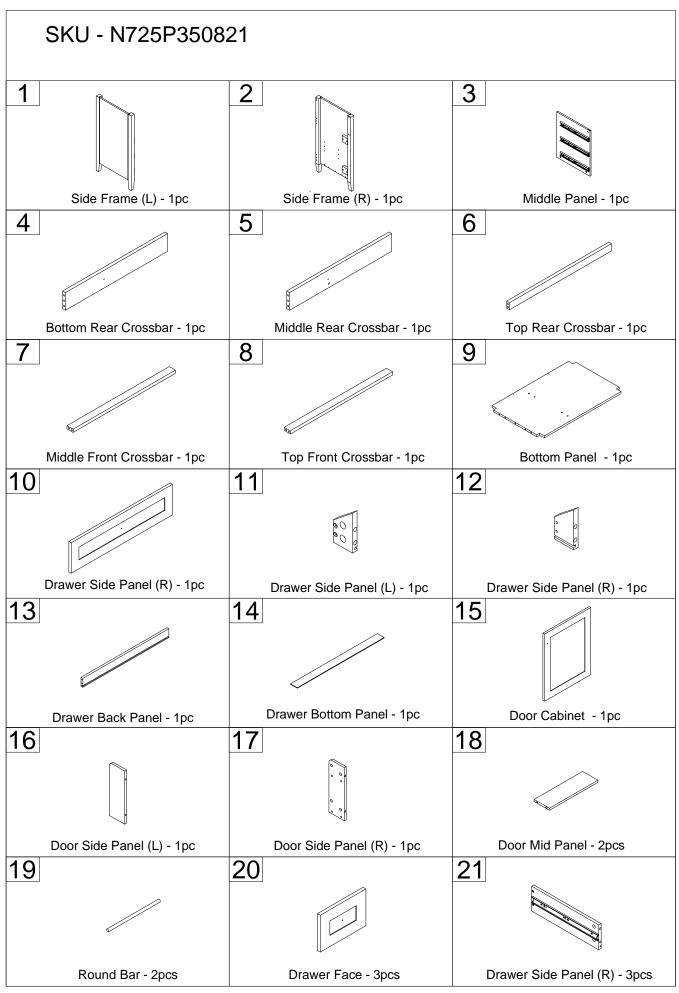

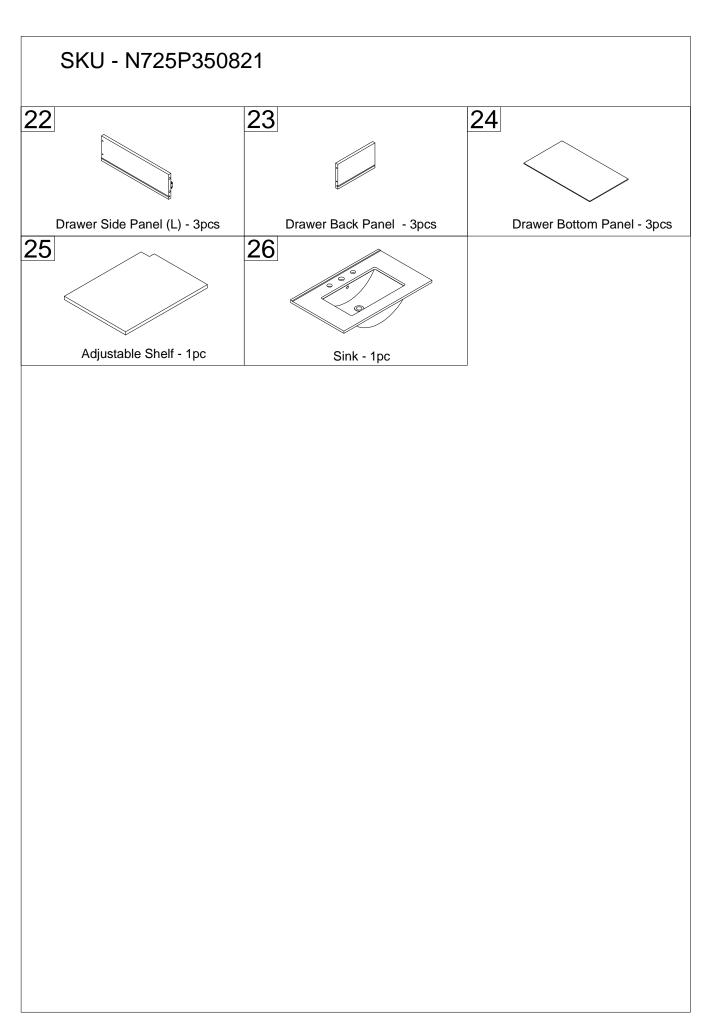



Hardware Lists N725P350821 C Α В Ø1/4 "x13x1mm M6x30mm Ø6*32mm Washer (4pcs)+1pc Hex-Head bolt (4pcs)+1pc Three in on bolts (47pcs)+1pc D E 45*17*14mm Ø14.5*9.5mm Ø3.5x12mm Plastic Door Magnet (2 set) Flat head screw (16pcs)+1Pc Three in one locks (47pcs)+1Pc Н G Ø8x30mm K4mm Wood dowel (18pcs)+1Pc Allen key (2pcs) Pin shelf (4pcs)+1pc J K Ø4x25mm Flat head screw (4pcs)+1pc Handle (5pcs) Damping hinge (2 sets) M Ν O (-) Ø3.5x15mm Round head screw (4pcs)+1pc Left elbow hinge (1pc) Rotary Hinge(1set) R Q ***** {>}DDDDDDDDDDDD>> M4x20mm Ø10x10mm M4x35mm Plastic Canopy (16pcs)+1pc Round head screw (16psc)+1pc Handle screw (5pcs)+1pc S Anti fall Hardware (2 sets)

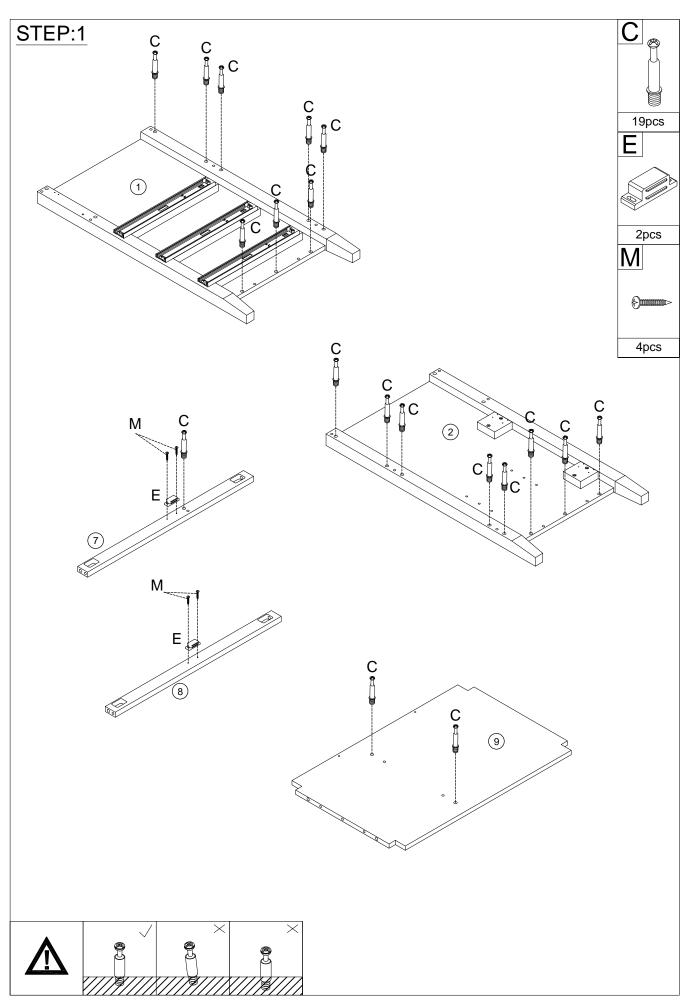


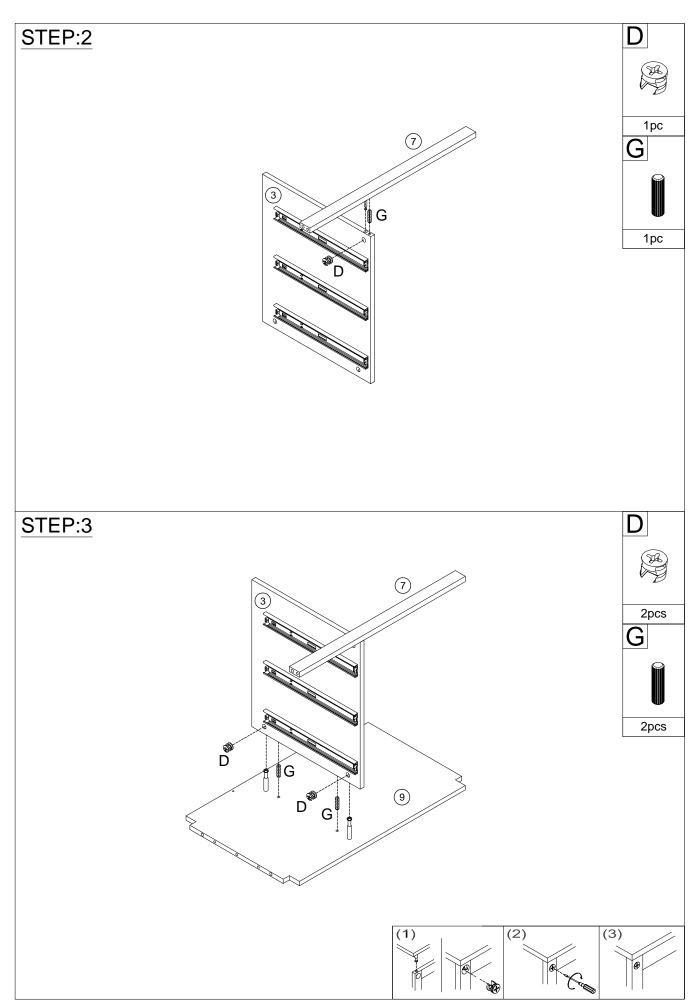



STEP:4

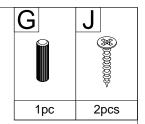


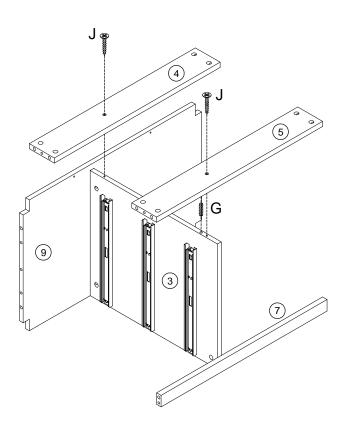


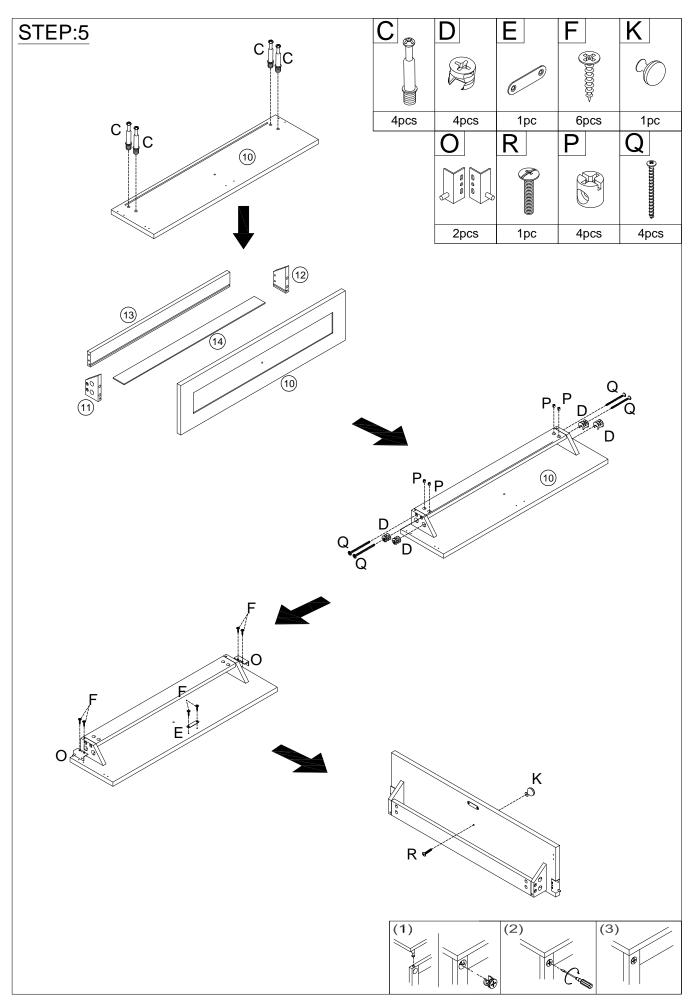


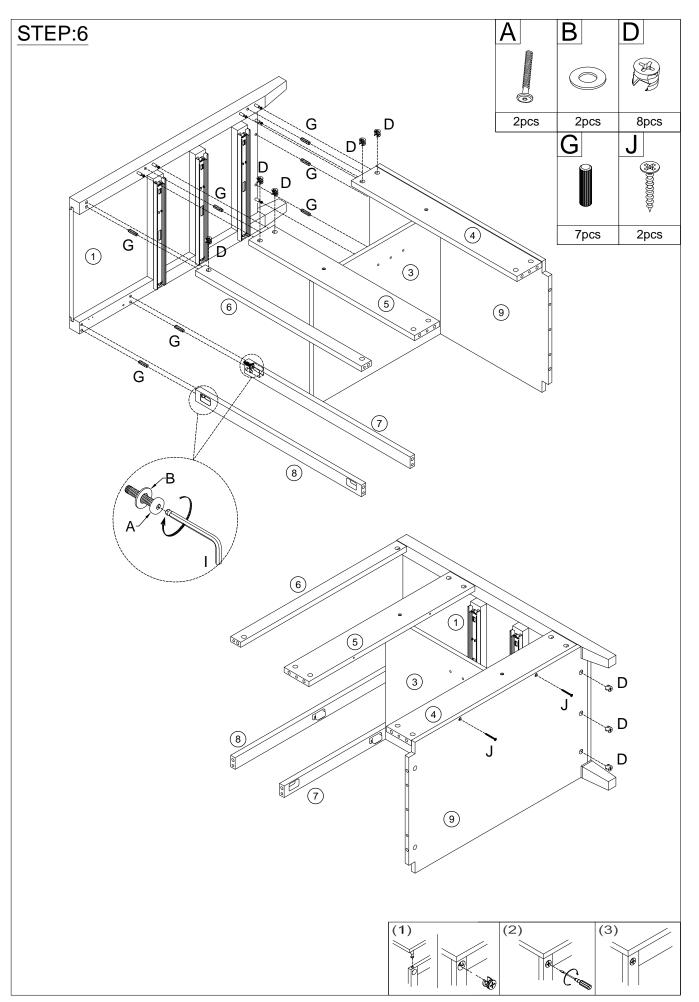


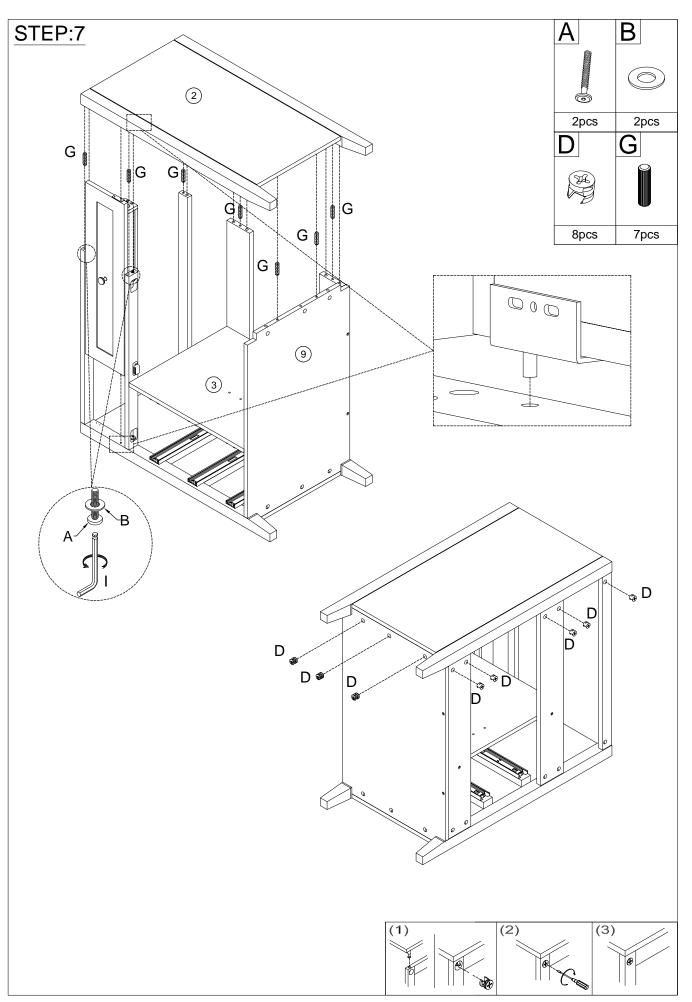


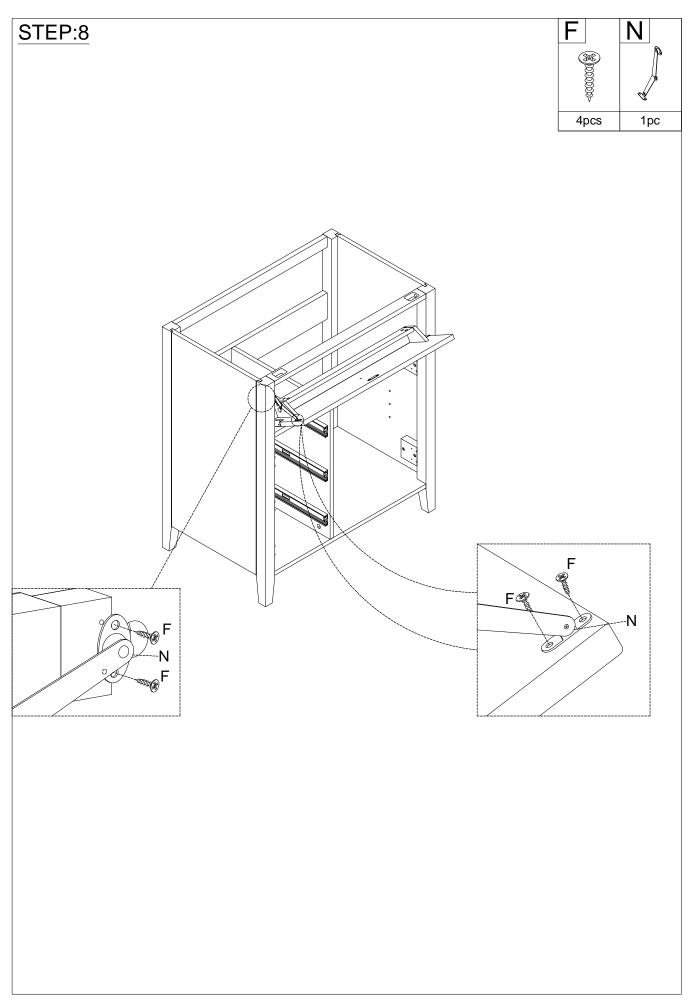


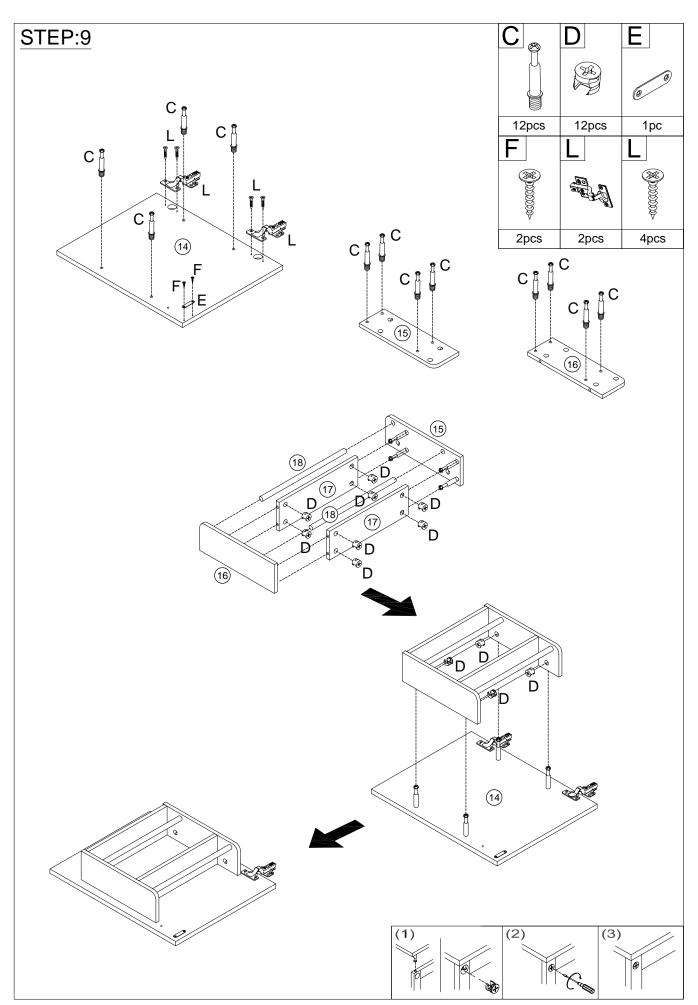

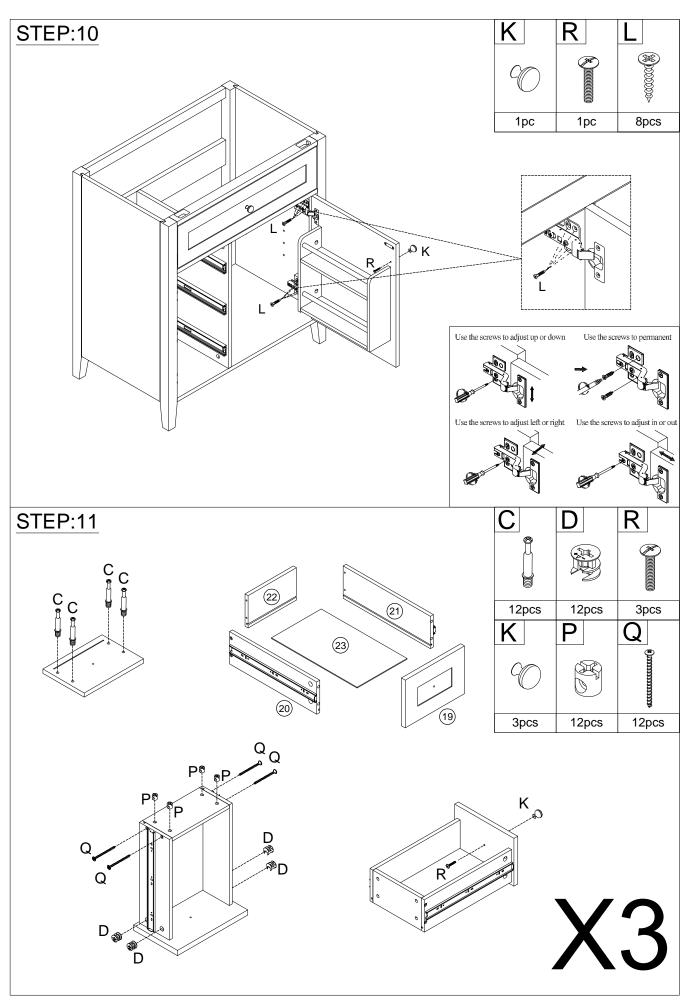

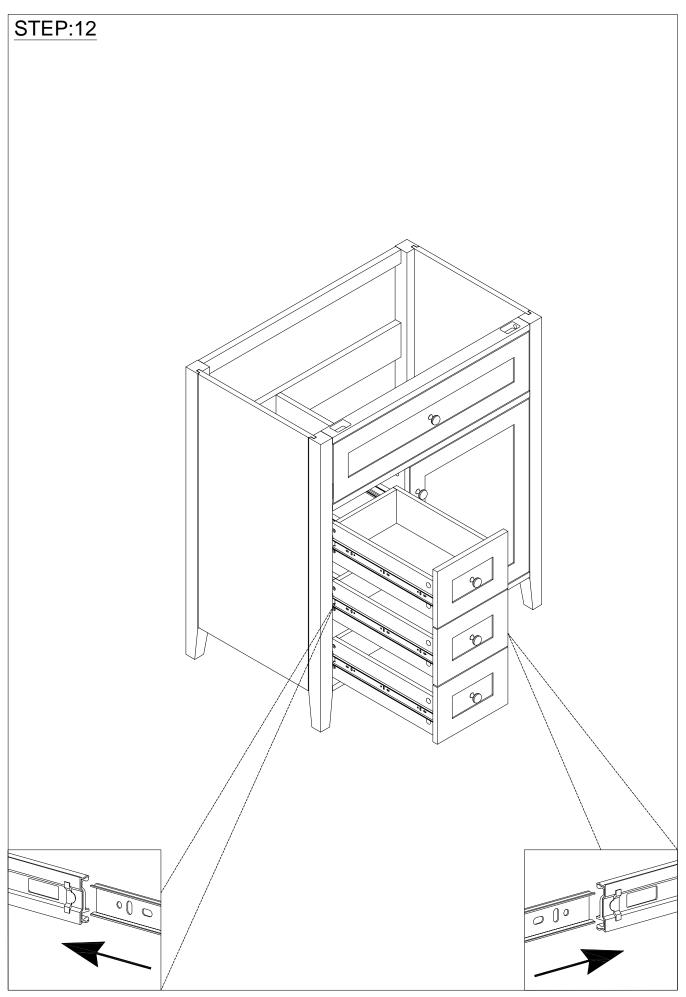


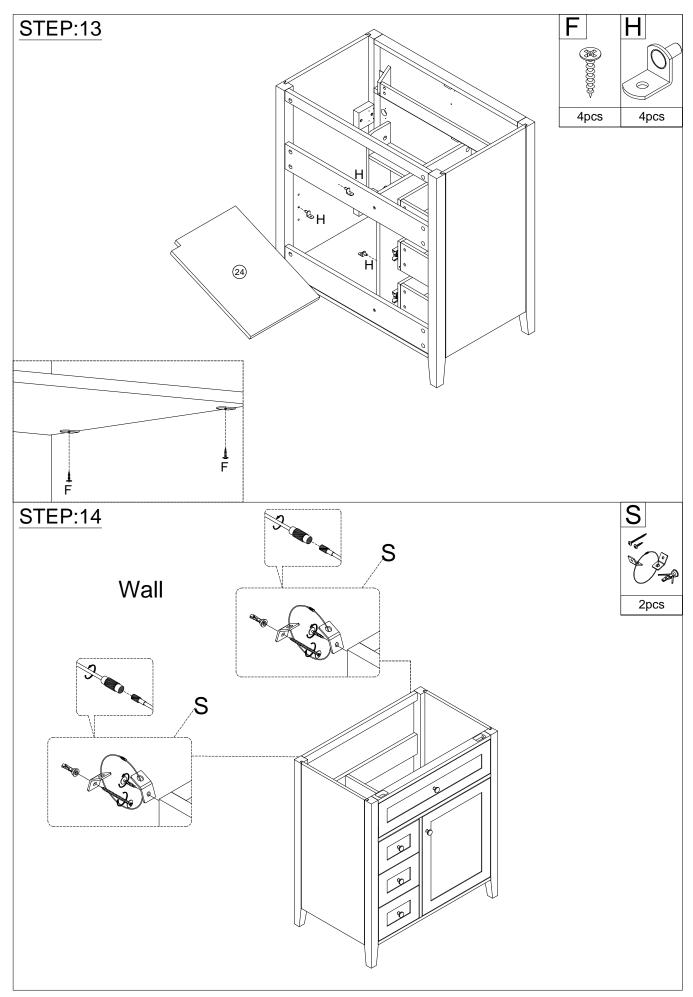

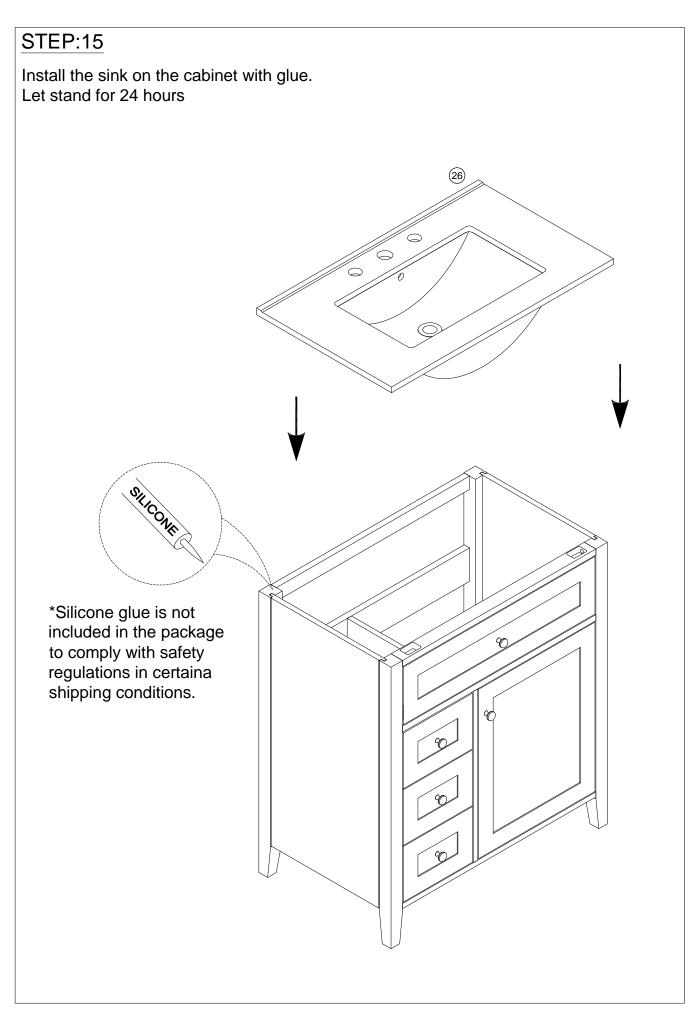



HINGE ADJUSTMENTS

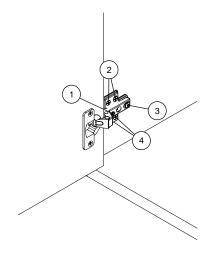

1 Sideways / Tilt adjustment

Turn the screw clockwise to move the door further away from the side of the cabinet anticlockwise to move the door closer to the side of the cabinet



While supporting the weight of the door, turn the screws clockwise to move the door up anticlockwise to move the door down

(3) Forward and back adjustment

