
# **ASSEMBLY INSTRUCTIONS**

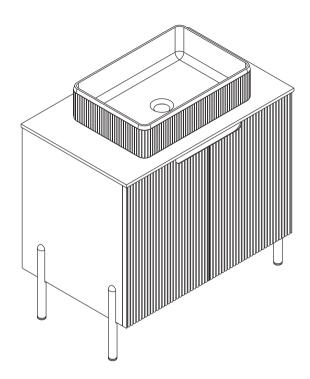


Your order will be shipped in multiple packages, and delivery times may vary. We appreciate your patience and understanding.

- ▲ Warning: Please read instructions fully before starting assembly. Check you have all the components and tools listed on pages.
- ▲ Warning: Please place all parts on a flat surface. Place a soft blanket or similar underneath to protect against scratches or stains. Avoid dragging or sliding components across the floor.
- ▲ Warning: Regularly check all fittings and fastenings to ensure they are secure and to prevent accidents. If any parts are missing, broken, damaged, or worn, discontinue use of the product until repairs have been made using factory authorized parts.
- ▲ Warning: Do not allow children to climb on the furniture as this may result in tipping and serious personal injury. Assemble the furniture away from the reach of children.
- ▲ Warning: Do not place furniture close to fire sources or high-temperature objects to avoid the risk of fire.
- ▲ Warning: Clean furniture with a damp cloth or alcohol, avoid using cleaning agents containing corrosive chemicals.

#### Notice:

- 1. Follow the installation instructions. Please confirm all accessories are preset before installation.
- 2. Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces which are correctly assembled.
- 3. If you encounter any problems during installation, please contact our customer service.
- 4. Please unbox the item from the side with an open-label and put a carpet on the foor to avoid scratching it.

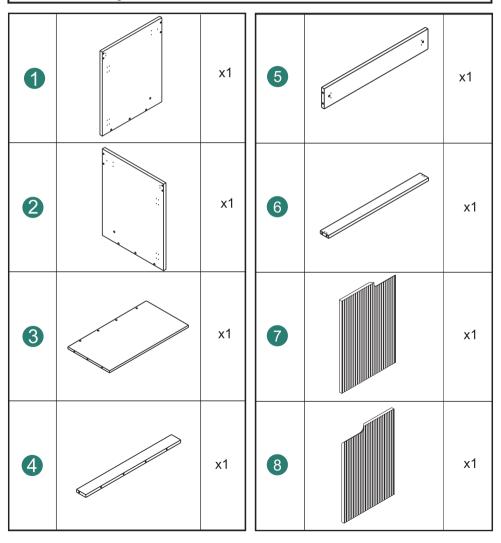

A	Ø6x26mm	x20			x4
B	Ø15x9mm	x20	J	00000	x2
©	Ø3.5x14mm	×58	K		x4
(D)		x2			
E		x2			
E	(a) July July	x2			
G		x2			
$\Theta$		х6			


# Use the Cam Lock and Eccentric Wheel
 
### **ECCENTRIC WHEEL**


Tighten the bolt until the shoulder is aligned with the panel. Be sure not to tighten too much or too little.









 The pre-inserted nut should align with the center of the cam lock when joining two panels. The cam lock should be inserted before the eccentric wheel.

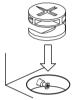



Turn the cam lock clockwise to tighten.

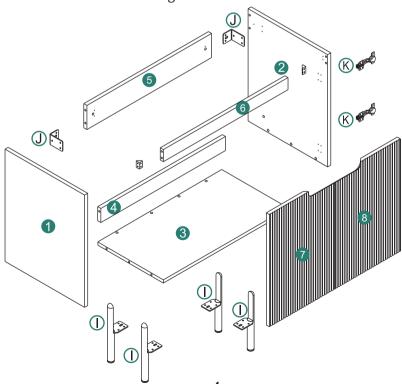








The floor needs to be covered with paper or carpet protective material before installation!

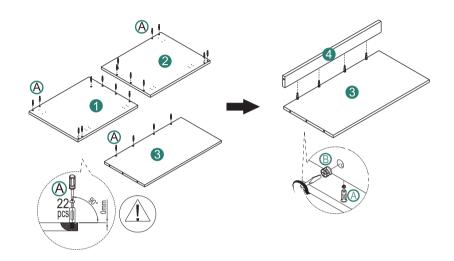


2













 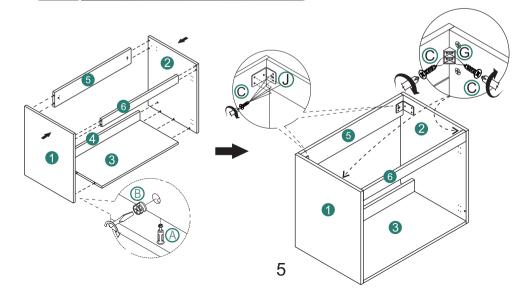



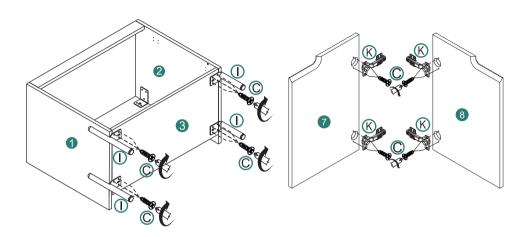

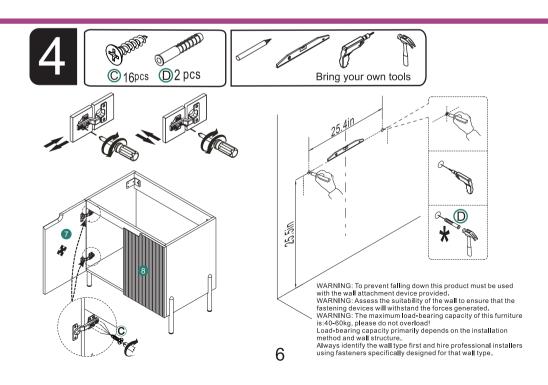

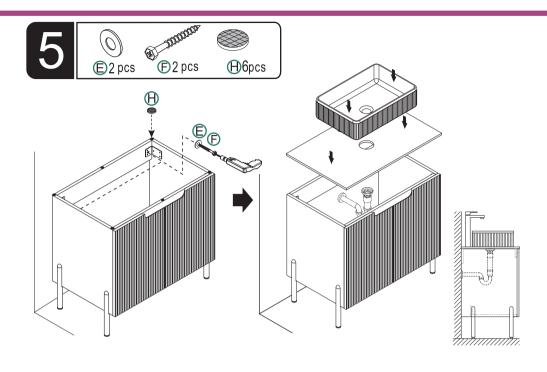

#### Always fully close the faucet after use!

Failure may cause:

#### Water Overflow

Continuous flow with blocked drainfloods cabinetry, floors, and ceilings below, causing property damage andliability for compensation.

#### Personal Injury

Water accumulationsignificantly increases slip/fall risks(especially for children/elderly).

#### Cabinetry Damage

Water infiltration leads toswelling, warping, hardware corrosion, and countertop cracks.


#### Hidden Hazards

Persistent leakageerodes wall structures, breeds mold, and incurs high repair costs.

#### We strongly recommend that you:


- Confirm faucet isfully closedafter each use;
- Regularly inspect faucet/hoses for leaks;
- Shut off angle valve immediately and seek repairif malfunction occurs;
- Cut off main water supplywhen leaving home long-term.

Disclaimer: Users bear full responsibility for damages caused by faucet left open or delayed repairs.

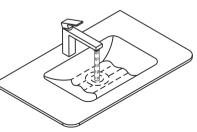


### **PIVOT-PRO** side adjustment

Side adjustment of the door is made by using the indicated screw.

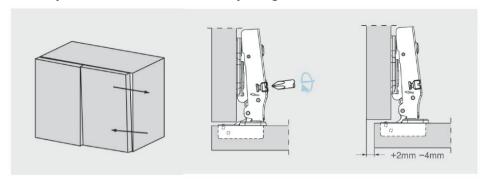

### **PIVOT-PRO Depth Adjustment**

Depth adjustment is made without loosening any screw. The door can be moved in or outby rotating the cam adjuster on the hinge arm.

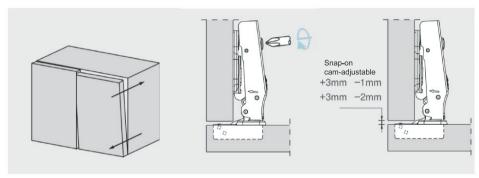

## **PIVOT-PRO Height Adjustment**

By loosening the two fixing screws to allow the mounting plate to slide up or down ,the door can be adjusted vertically by ±2mm. After retightening the screws, the Depth adjustment is done.

