 


#### Notice:

- 1. Follow the installation instructions. Please confirm all accessories are preset before installation.
- 2. Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces which are correctly assembled.
- 3. If you encounter any problems during installation, please contact our customer service.
- 4. Please unbox the item from the side with an open-label and put a carpet on the floor to avoid scratching it.



Recommended installers:2



Put a carpet on the floor before unpacking




Estimate installation time: 30minutes


# **PART LIST**


Item no.	Reference Image	Qty	Item no.	Reference Image	Qty
A		X1	E		X1
B		X2	F		X1
C		X1	G		X1
D		X1	H		X1


# HARDWARE LIST


Item no.	Reference Image	Qty	Item no.	Reference Image	Qty
0	Ø8*30mm	X15+1	7	Ø3*15mm	X22+2
2		X12+1	8	@MMMMM Ø1/4"*1/4"	X4
3		X12+1	9		X4
4	Ø3*12mm	X24+2	10		X4
5		X4	1		X1
6		X2			

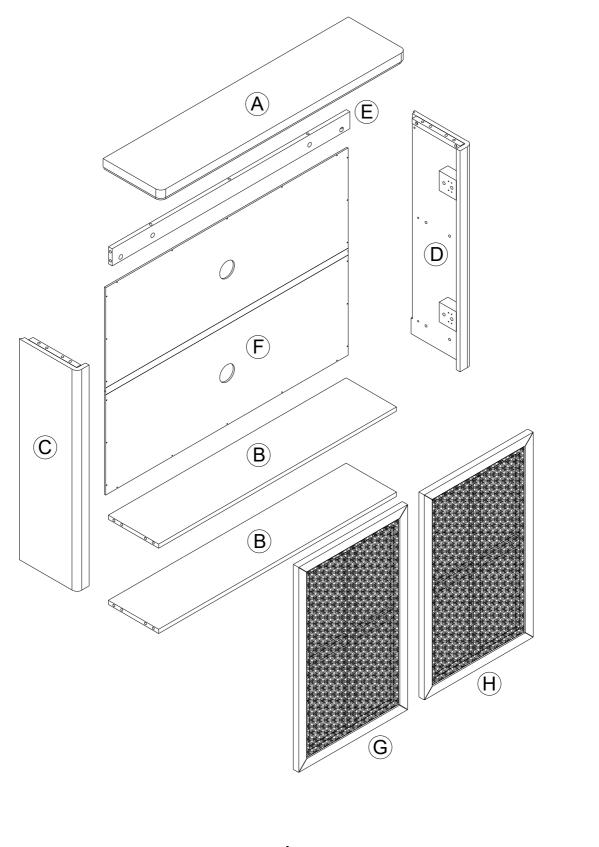

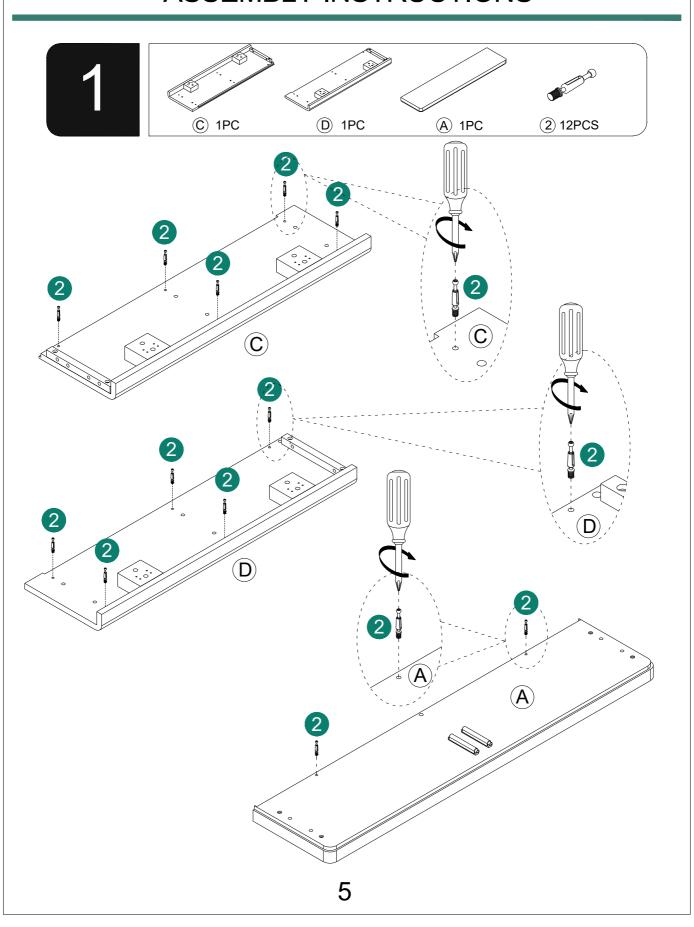


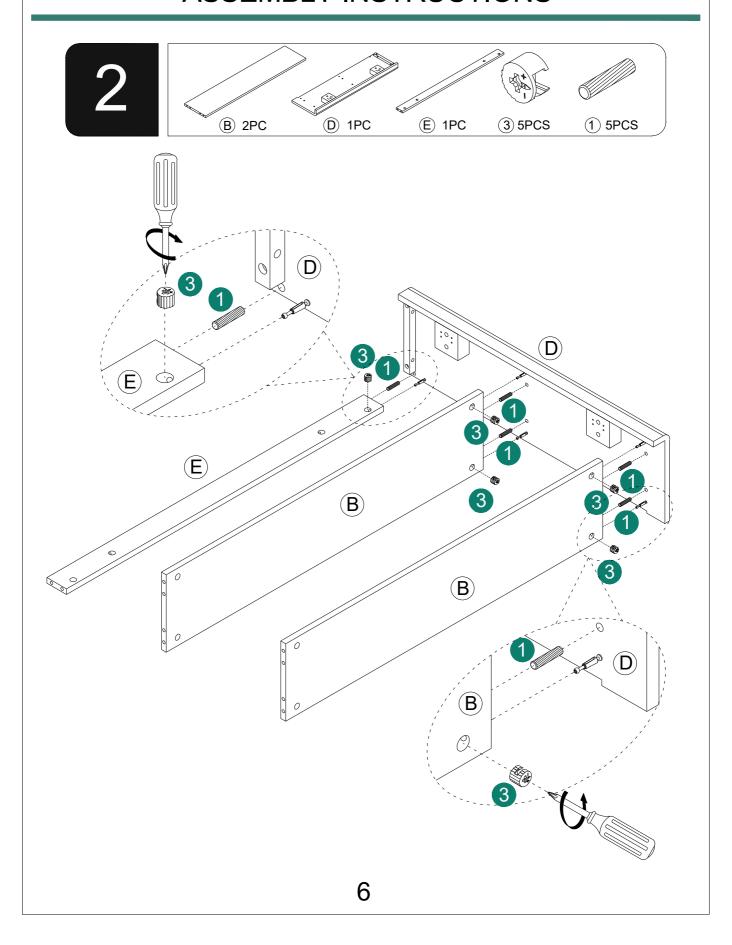


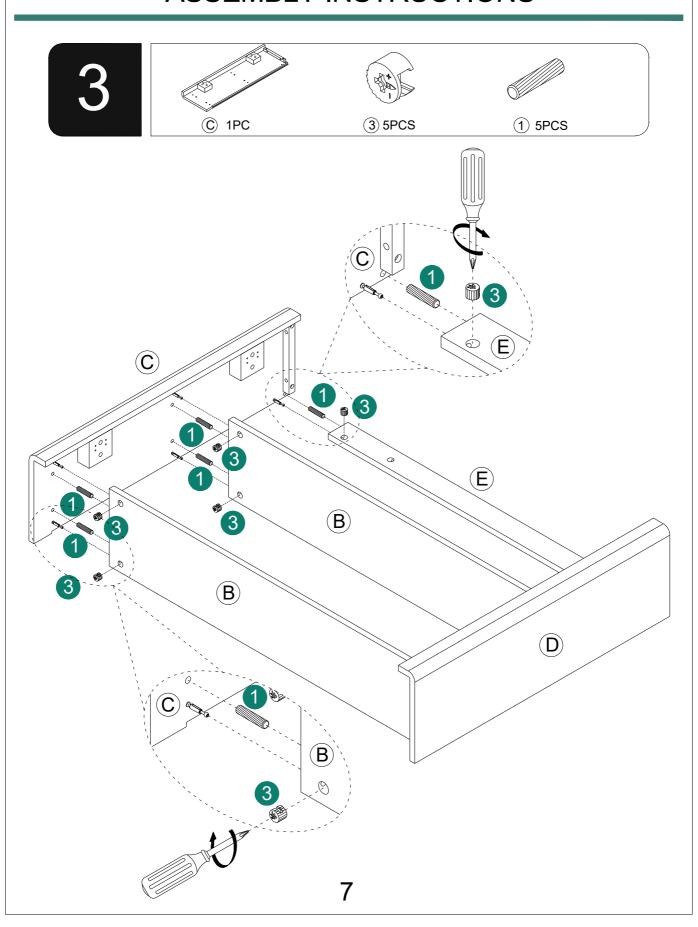

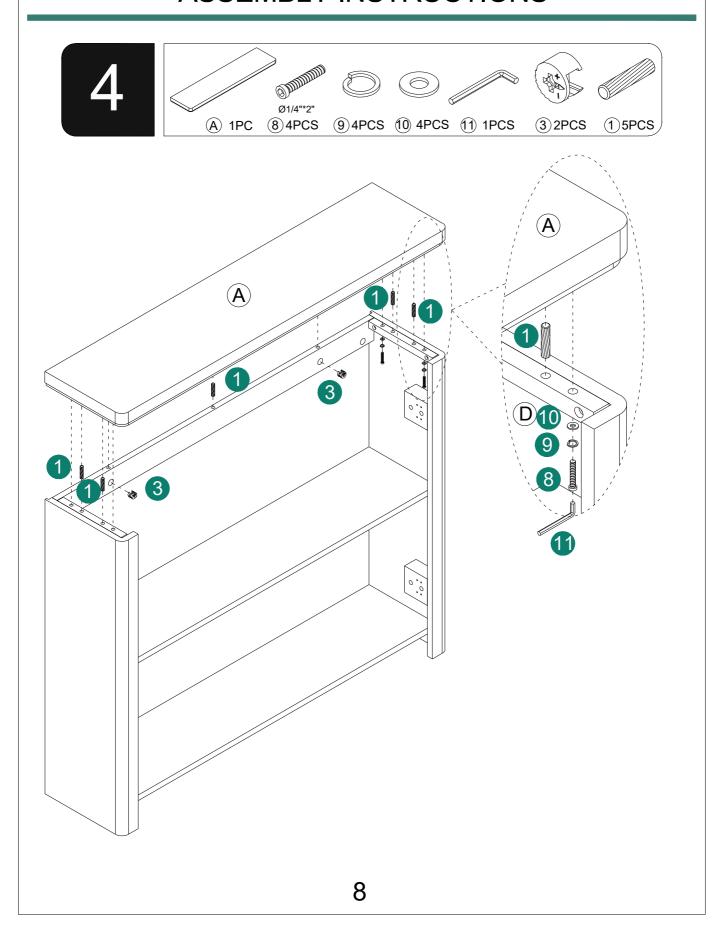




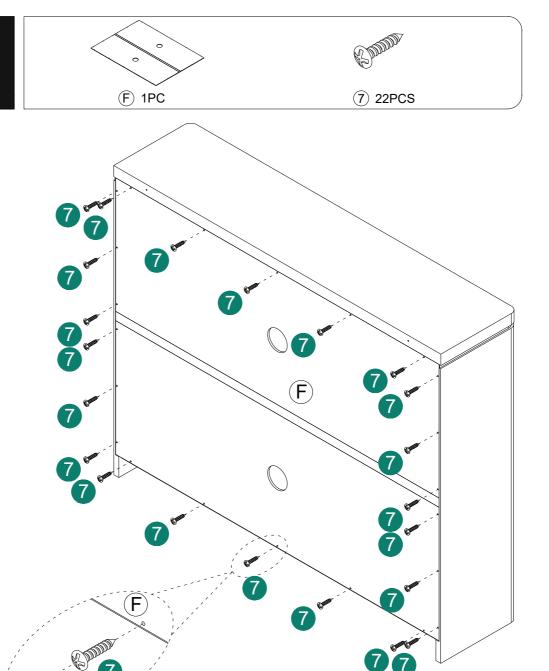


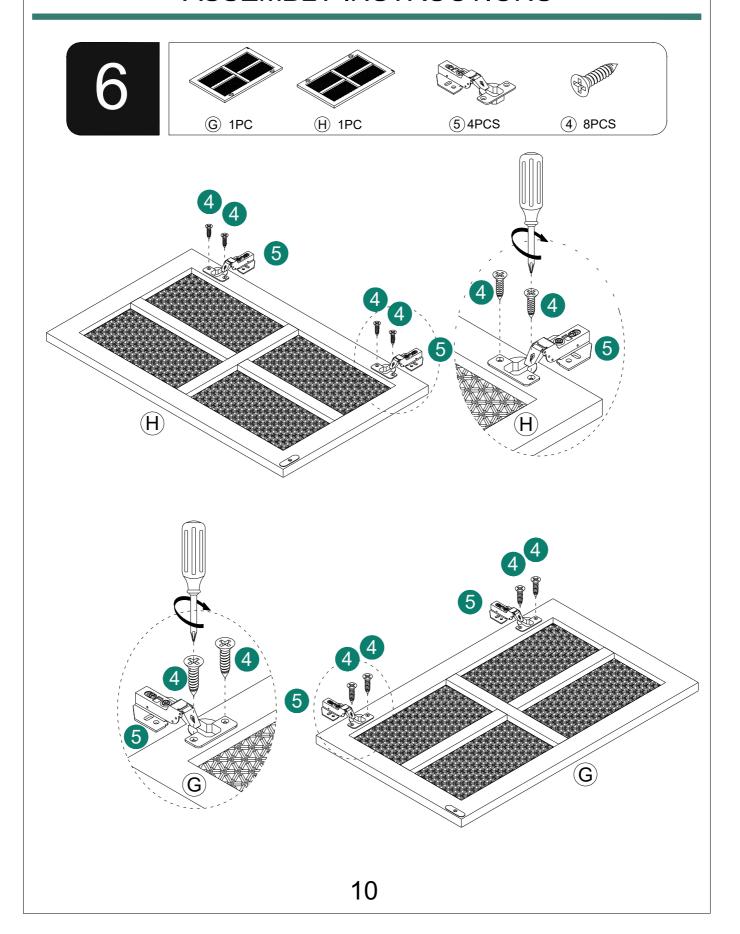





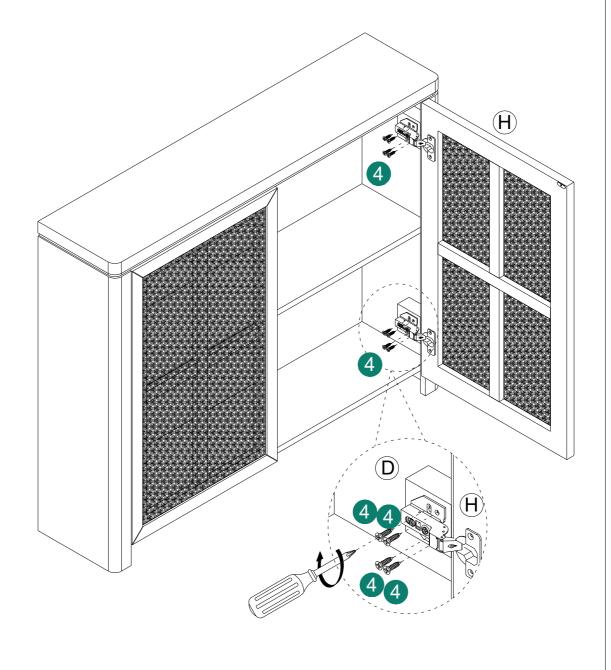

8

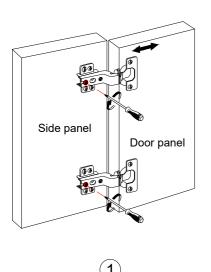

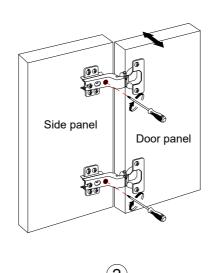

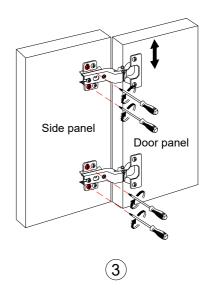

## Front-to-Back Direction Adjustment:

Rotate the screws on the door hinges shown in the image. The door panel can be moved front-back.

Adjustment range: 4mm

## Left-Right Direction Adjustment:

Rotate the screws on the door hinges shown in the image. The door panel can be moved left-right.

Adjustment range: 3mm


## Up-Down Direction Adjustment:

 
Rotate the screws on the door hinges shown in the image. The door panel can be moved up-down.


Adjustment range: 4mm



#### **Common Door Panel Issues:**

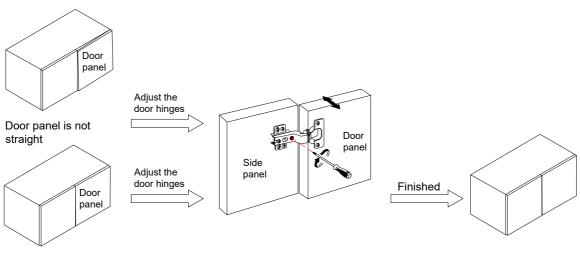



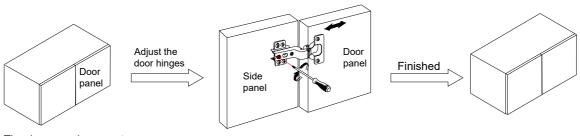

The door panels are not coplanar

