

PRE-ASSEMBLY TIPS

We get it - building furniture isn't always easy! But have no fear, helpful hints are here. Our assembly tips and tricks will have you enjoying that new furniture in no time. Let's get construction ready to rock!

 
 
TEAM ASSEMBLY

Have at least 2 people put the product together to prevent injury and damage.



ASSEMBLE IN PLACE

Put together near the intended location to avoid moving later.

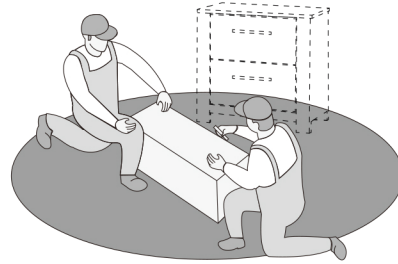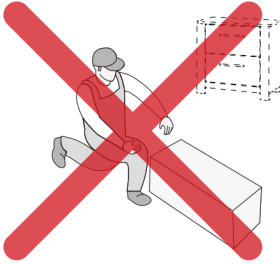

CLEAR WORKSPACE

Ensure ample room to maneuver during assembly.



AVOID SCRATCHES

Assemble on cardboard, blankets, or carpet to prevent scratches.



FLAT SURFACE

Place on a level surface with furniture legs evenly contacting the floor.

 


ASSEMBLY SAFETY STEPS



FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.


1

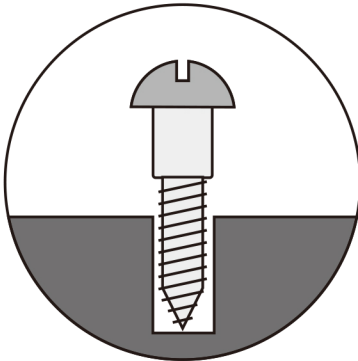

POSITIONING

Insert all hardware and parts in the correct holes.

 
2

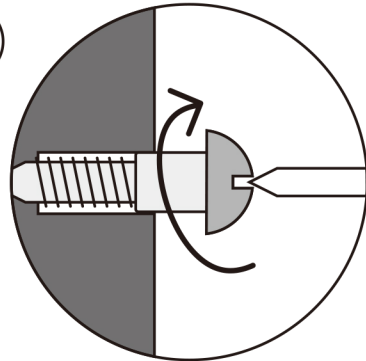

TIGHTENING

Only tighten bolts when the step is fully completed.

 
3

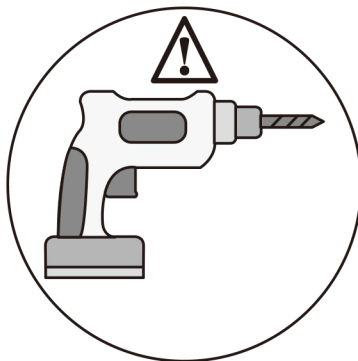

TOOLS

Use hand tools unless the manual specifies power tools.

 
4

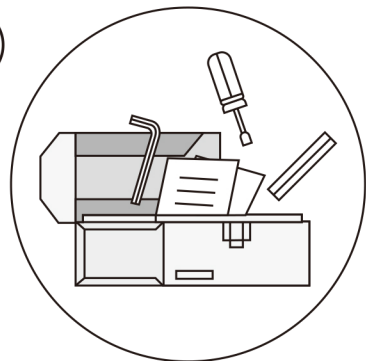

INSTRUCTIONS

Keep the manual and tools for future maintenance needs.

 5

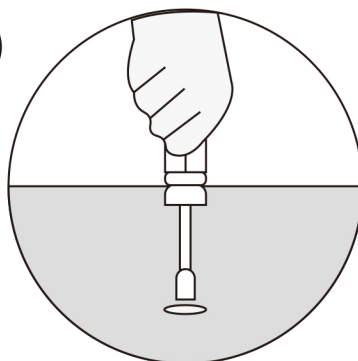

MAINTENANCE

Check for loose joints after 2 weeks and re-tighten every 6 months.

DISCLAIMER:

 
It is the user's responsibility to properly maintain the furniture over its lifetime. Hardware such as screws, bolts, and other fasteners may naturally loosen over time with normal use of the product. This can lead to instability if the furniture is unable to adequately support the intended weight capacity. To prevent injuries, following the maintenance instructions is key to ensuring product safety and longevity.

ASSEMBLY INSTRUCTIONS

Dimensions : 48"W x 36"D x 30"H

Item No : F2632


Description : DINING TABLE

No	LIST OF PARTS	Q'TY
1	Table Top 	1pc
2	Table Legs 	4pcs


No	LIST OF HARDWARE	Q'TY
A	Bolt 	Ø5/16" x 63.5 mm 8pcs
B	Lock Washer 	Ø5/16" x 10D x 1.1mm 8pcs
C	Flat Washer 	Ø5/16 " x 19D x 2mm 8pcs
D	Allen Wrench 	58 x 4mm 1pc

STEP 1

 Please remove wood block panel at each corner before assembly the leg

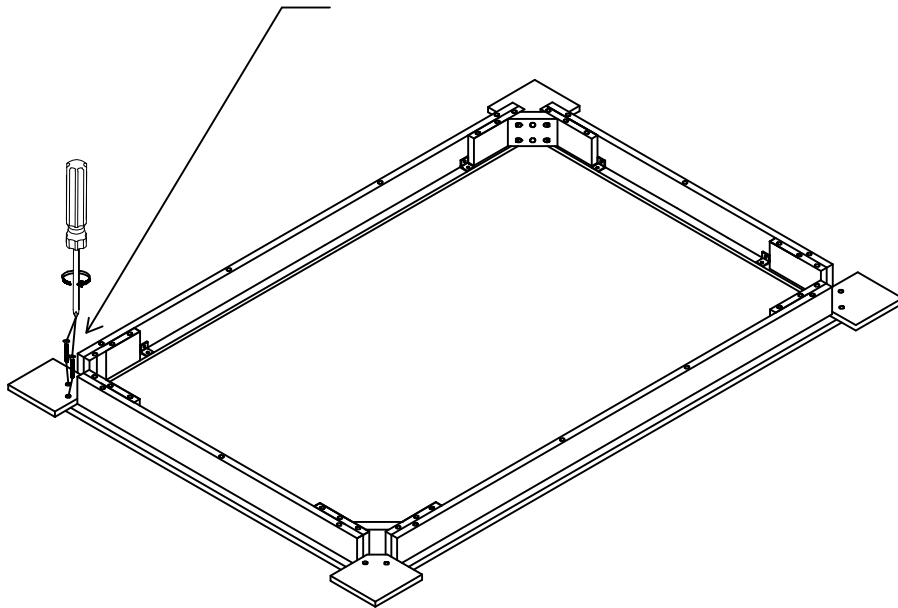

 STEP 2



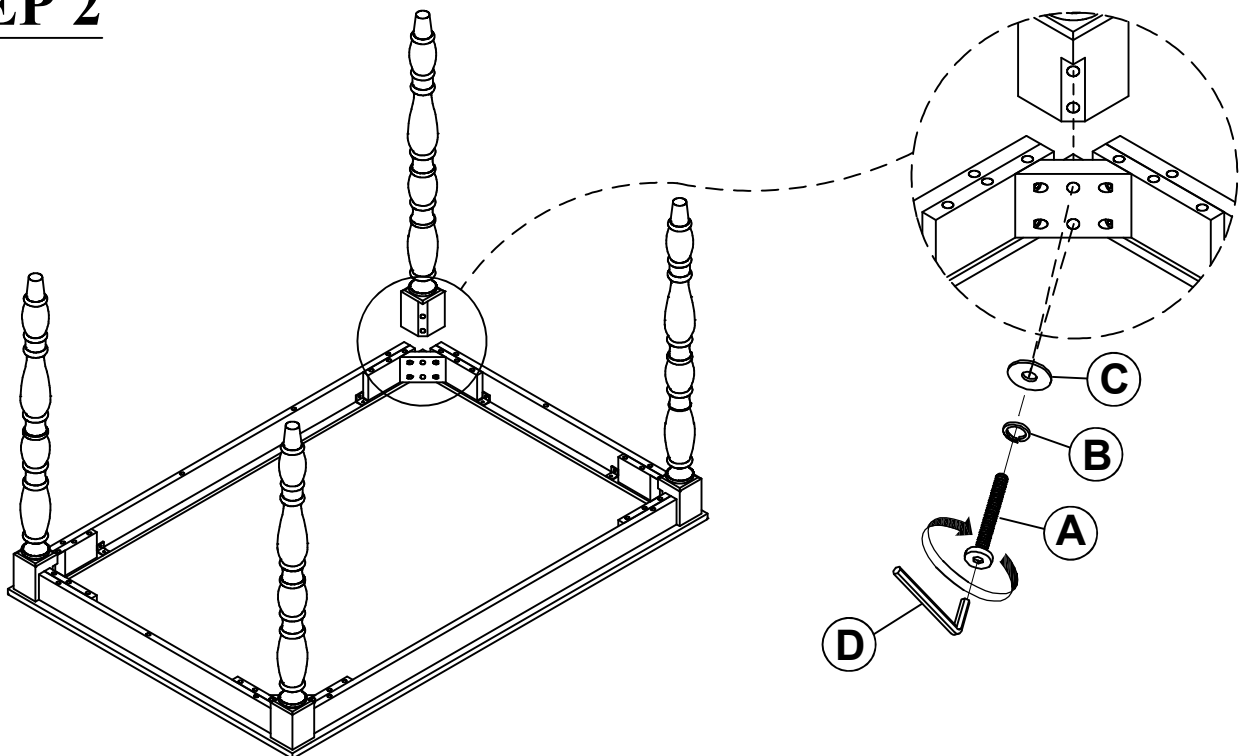


ASSEMBLY INSTRUCTIONS

Dimensions : 19"W x 21.5"D x 38"H


Item No : F2632

   Description : DINING CHAIR

No	LIST OF PARTS	Q'TY
1	Chair Back 	1pc x 4
2	Seat 	1pc x 4
3	Front Leg (L & R) 	2 pcs x 4
4	Side stretcher 	2 pcs x 4

No	LIST OF HARDWARE		Q'TY
A	Bolt	 Ø1/4" x 38 mm	2pcs x 4
B	Bolt	 Ø1/4" x 63.5 mm	4pcs x 4
C	Bolt	 Ø1/4" x 75 mm	4pcs x 4
D	Lock Washer	 Ø1/4" x 10D x 1.1mm	10pcs x 4
E	Flat Washer	 Ø1/4" x 19D x 2mm	10pcs x 4
F	Allen Wrench	 58 x 4mm	1pc x 4
G	Screw	 M4 x 38mm	4pcs x 4

 STEP 1

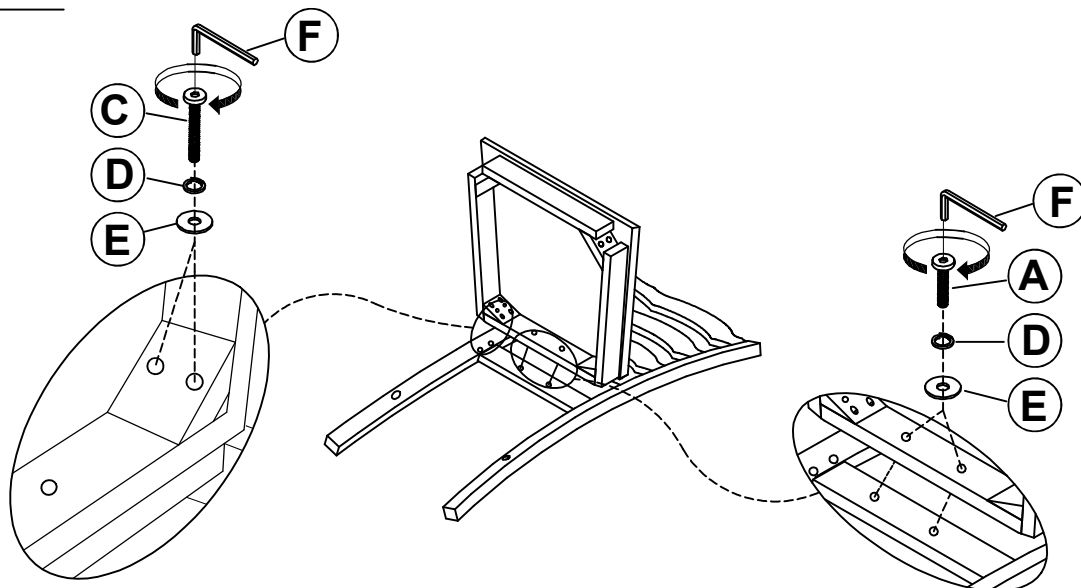

STEP 2

