


Installation Instruction

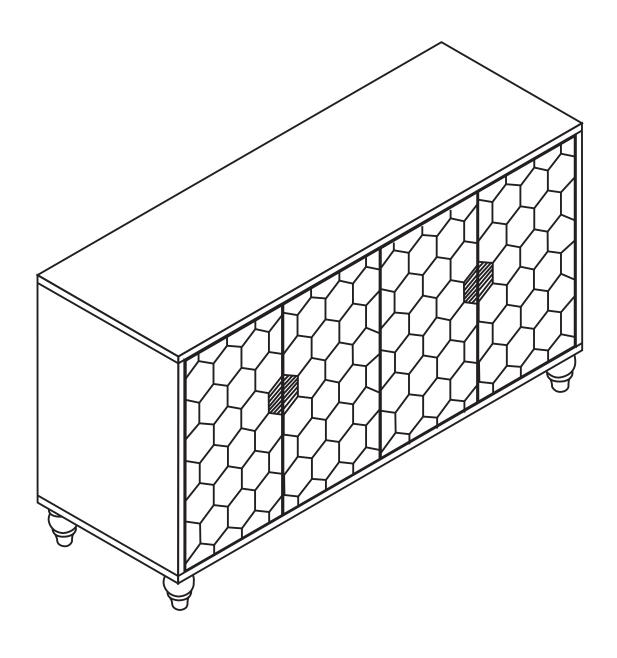


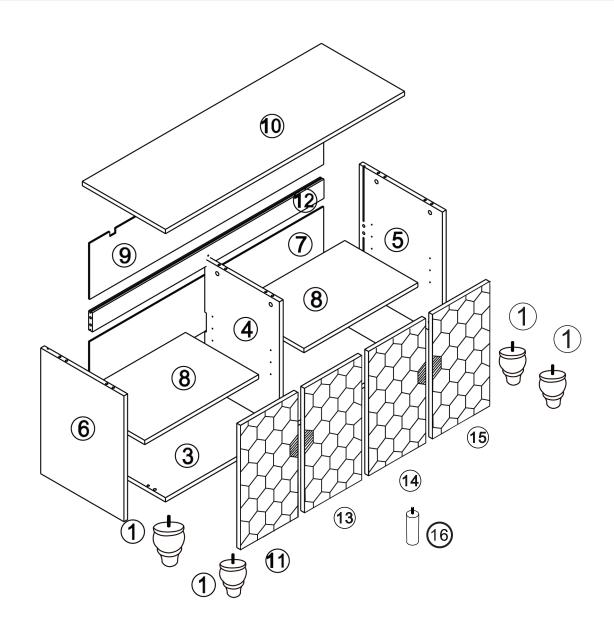

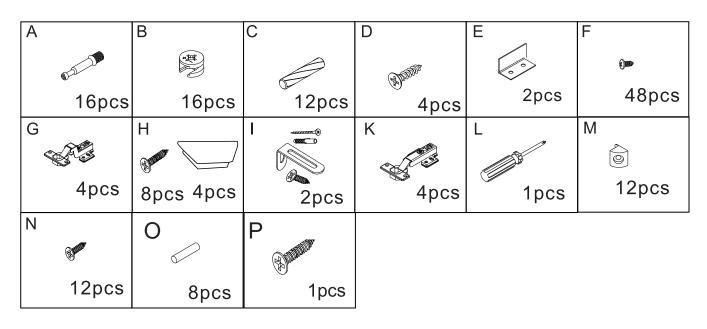





Step 1:

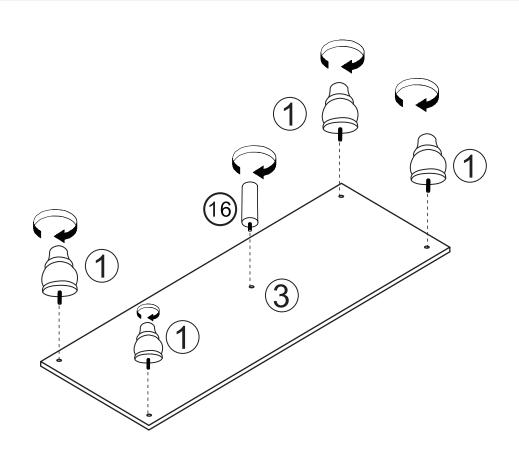


Step 2:

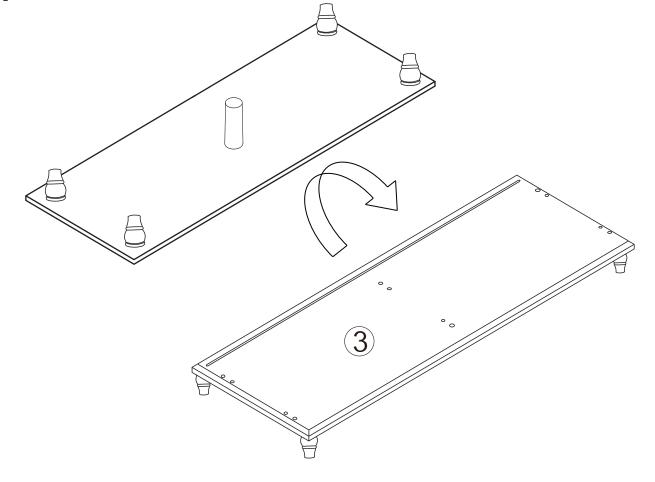


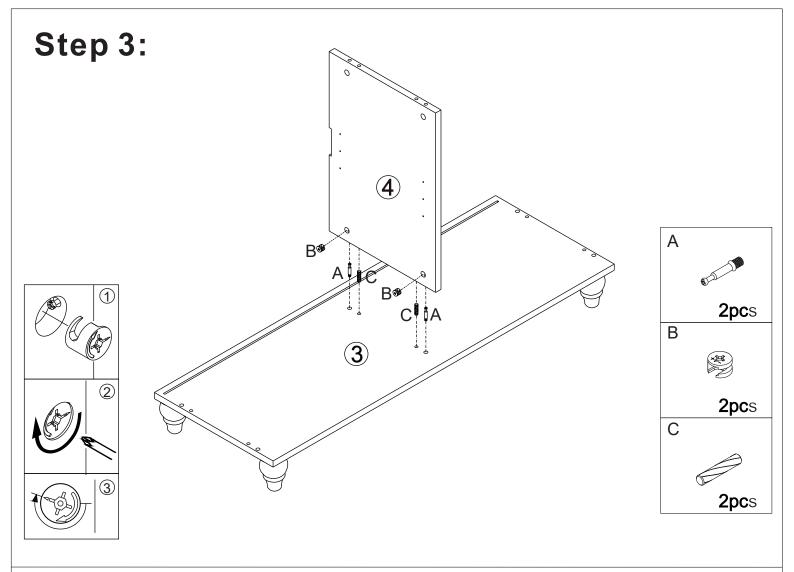


Step 4:

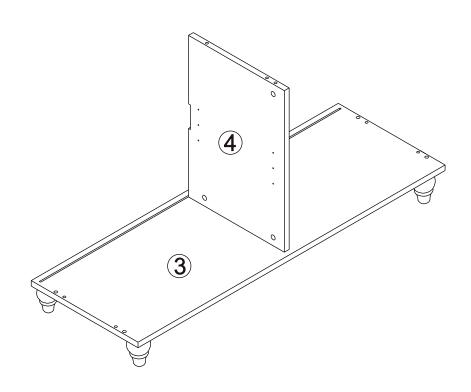



Step 5:

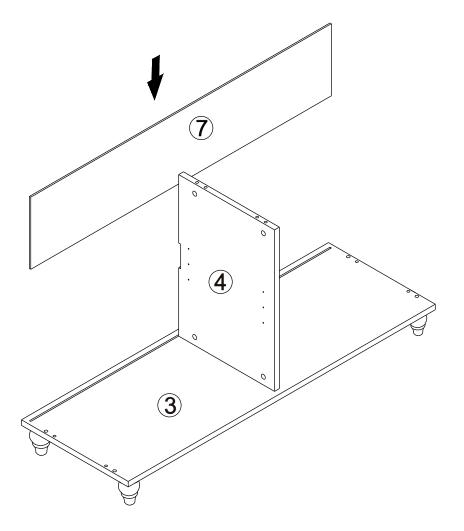


Step 6:

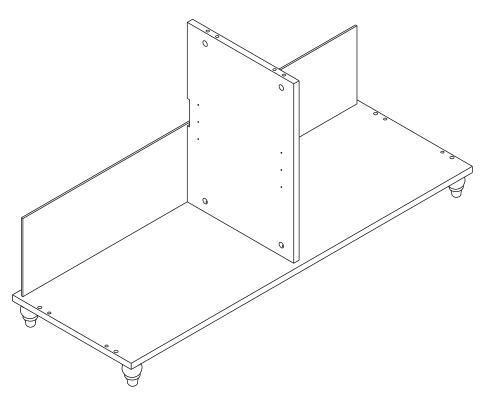

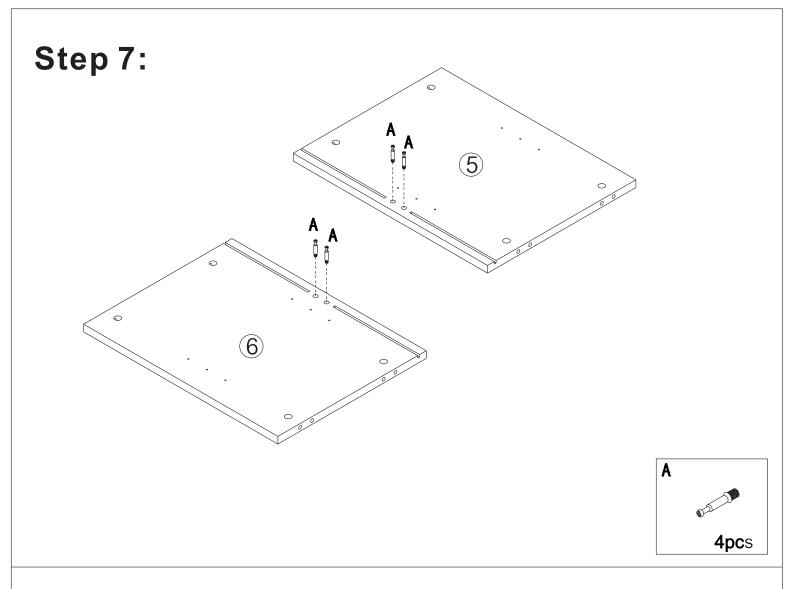


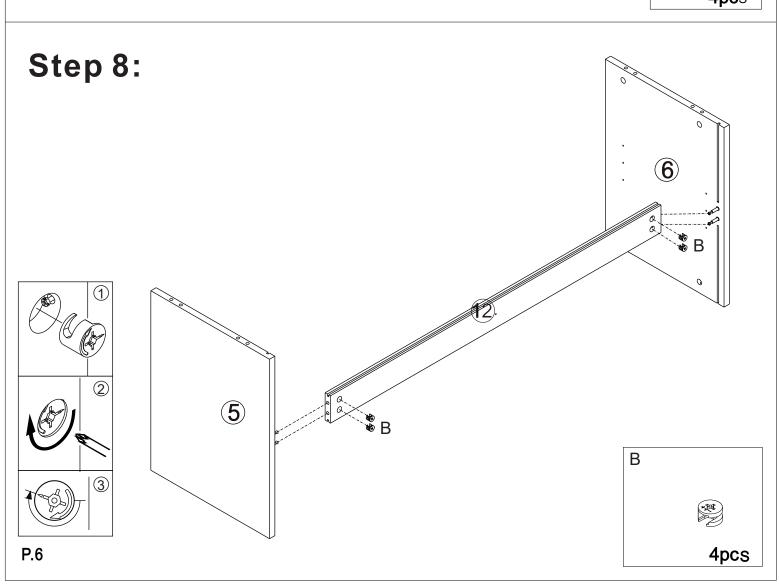



Step 9:

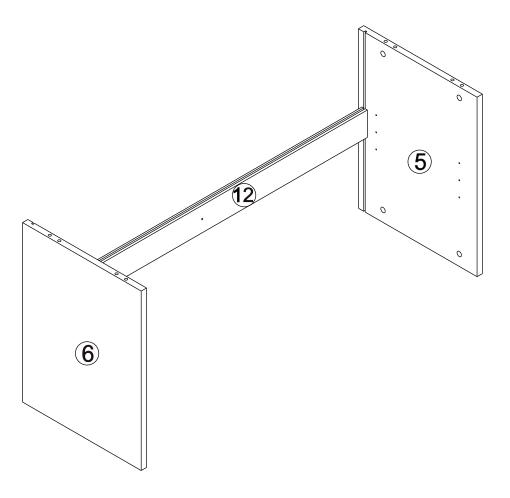



Step 10:

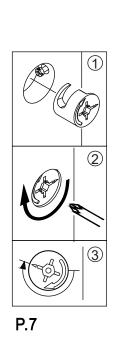

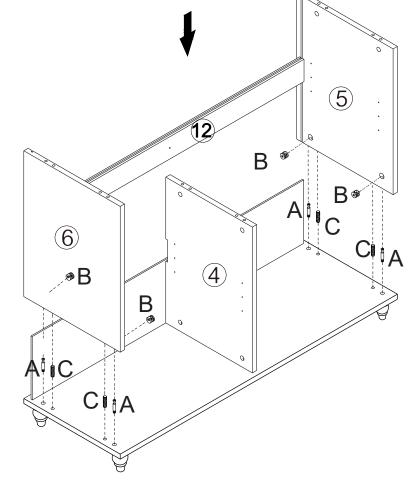

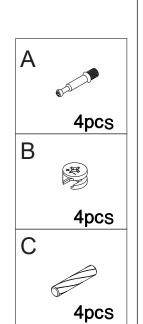


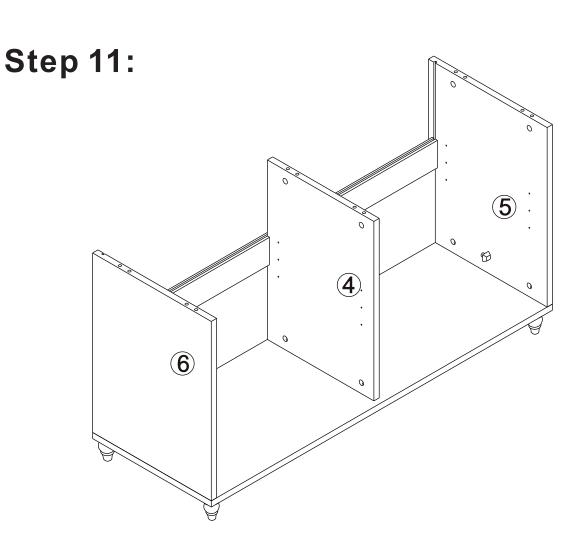


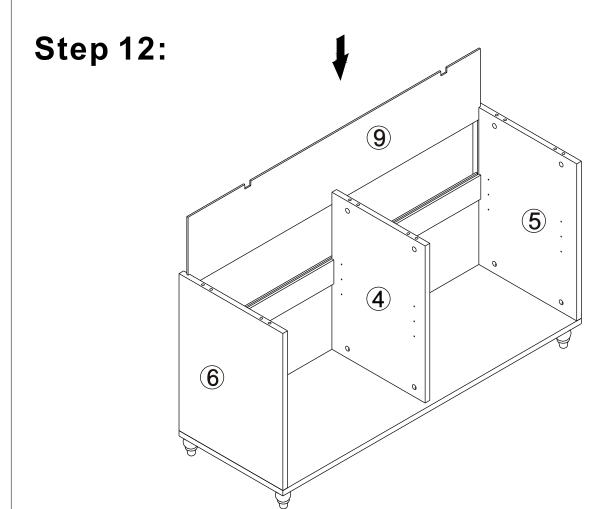


P.8


Step 13:

 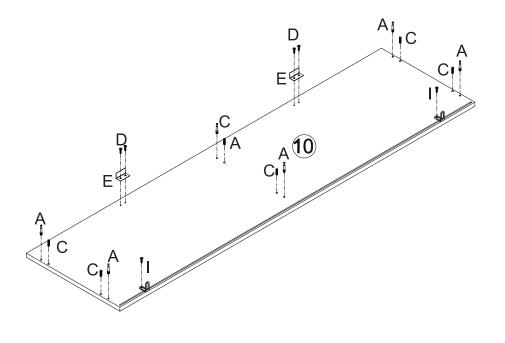


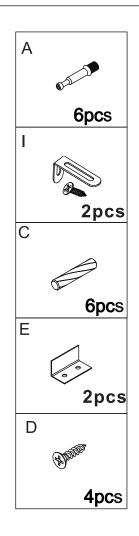





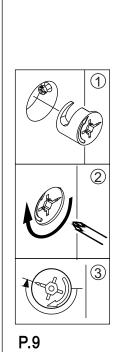

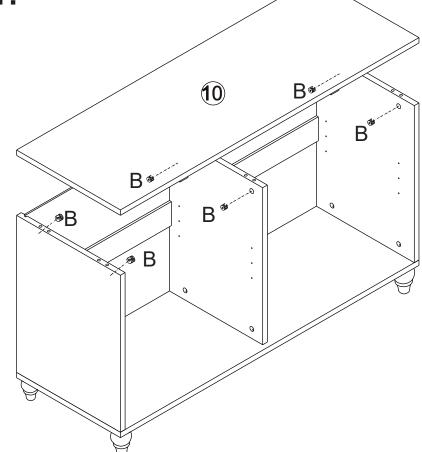





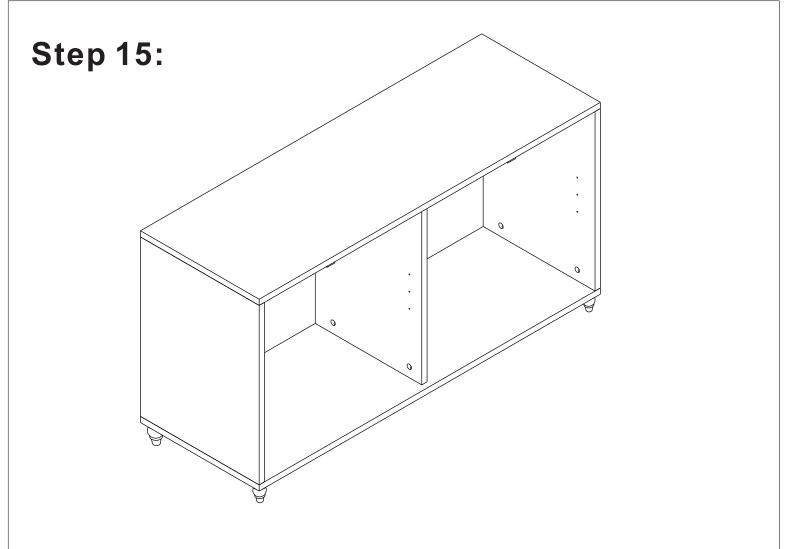


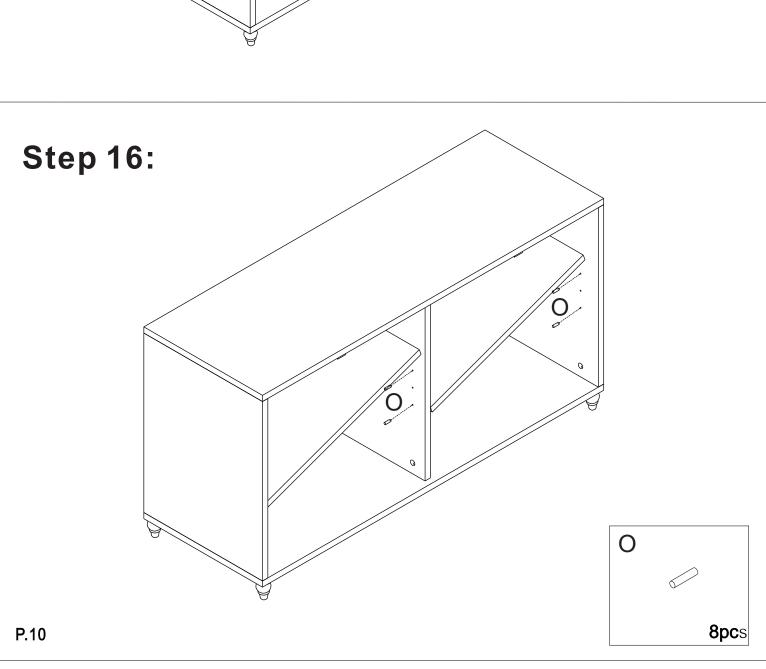


Step 17:

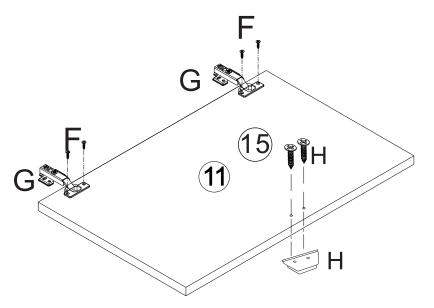


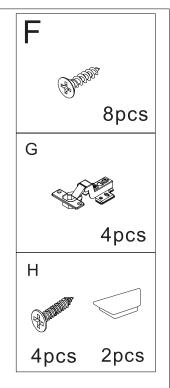

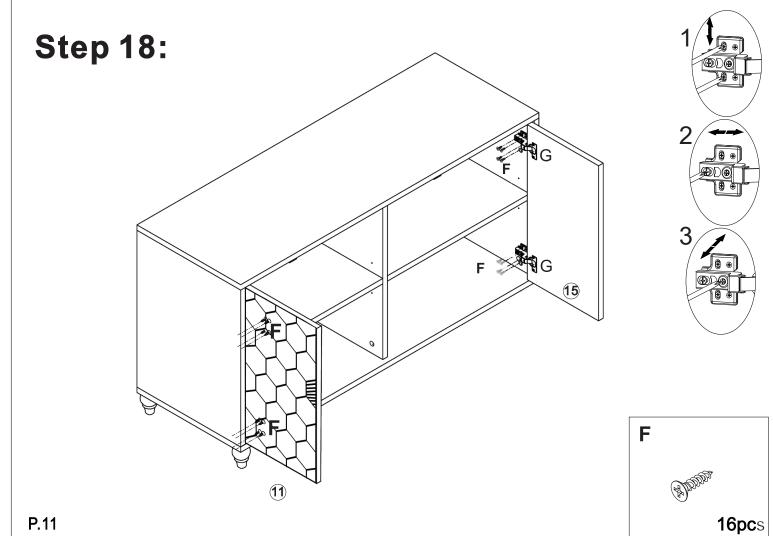


 
Step 19:

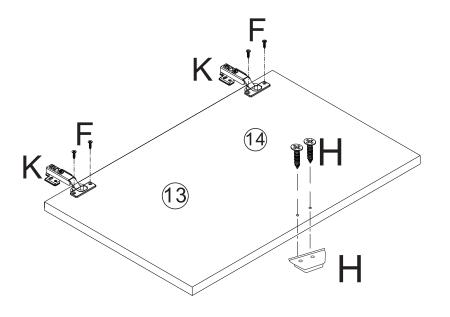


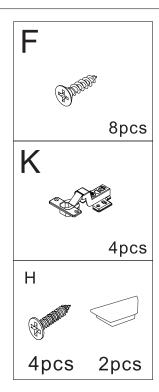





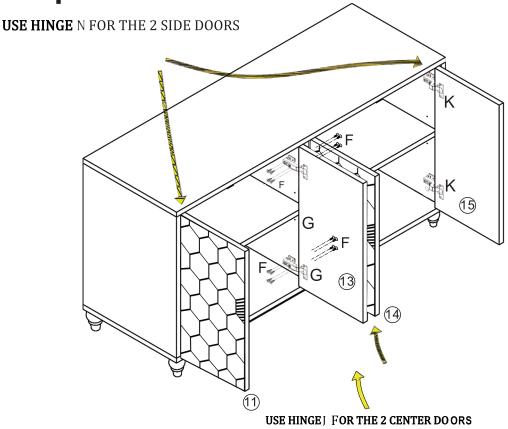



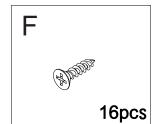


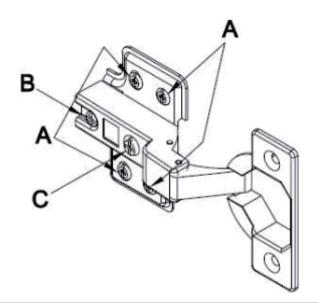

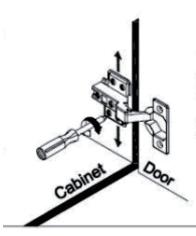


To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

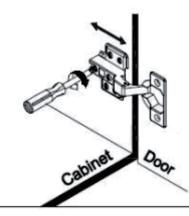


To adjust depth.

Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

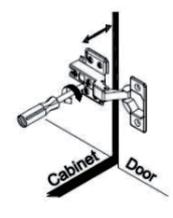

To adjust side ways.

Turning the screw "C" on BOTH hinges on each door.

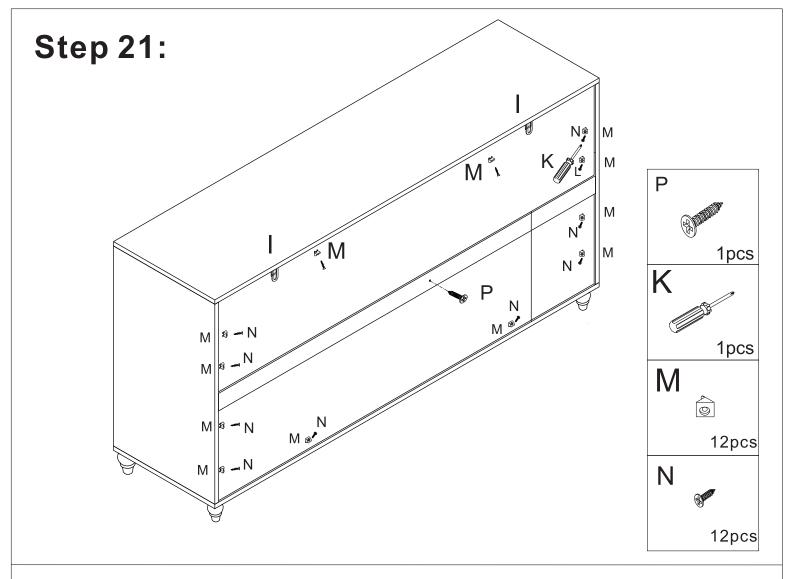



P.14

