

Packing list



WARNING:

CHOKING HAZARD—Small parts.

Not for children under 3 yrs.

Only use the battery specified by the manufacturer.

Only use the charger specified by the manufacturer.

To reduce the risk of injury, adult supervision is required. Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water; always wear shoes, and never allow more than one rider.

Children's electric tricycle

Instructions for use and installation

Please read this manual before use

Age: 3-8 years

Maximum weight: 30KG



※ the illustrations used in this manual are intended to illustrate the operation and distribution of products and product structure.

When there is a small difference between the installation drawing and the real object, please refer to the real object.

Please read this manual carefully before use

