 


ASSEMBLY INSTRUCTIONS

24 INCH BATH VANITY (COMBO)

 
 
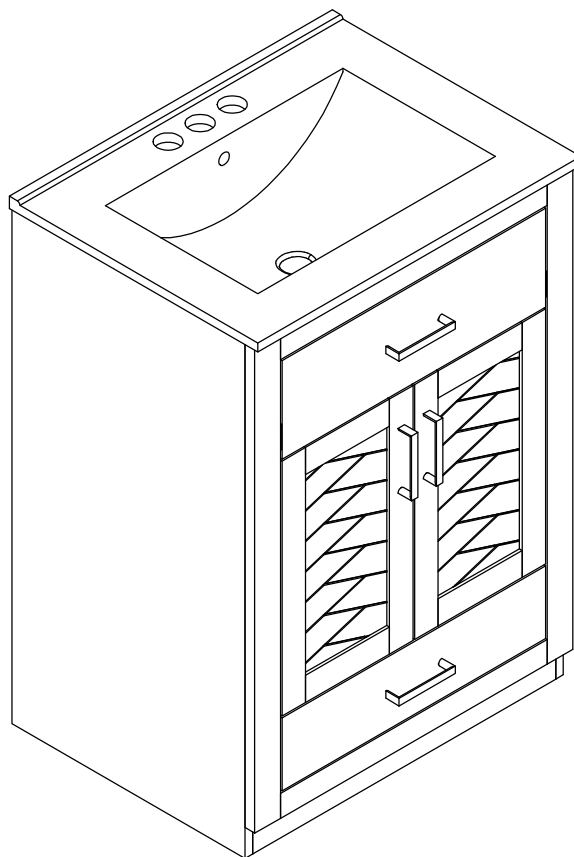 


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"


*** Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!**
*** Please assemble on a clean soft surface to avoid damage.**

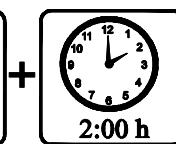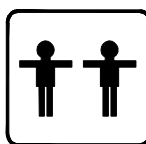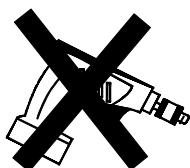

Tools Required

 

(Not included)

 

(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE



**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Before Installation








Important - Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.


- . We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- . Please do not over tighten screws or bolts until the assembly is completed.
- . Keep children and animal away from the work area, small parts could choke if swallowed.
- . Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Cam Lock Assembly Instructions








 
 
 
 
 
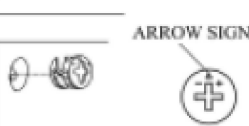 
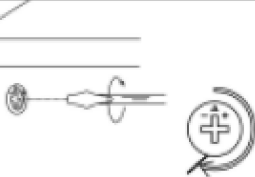 
		Diagram A Insert Cam Bolt into hole as shown in diagram A.	
		Diagram B Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.	
		Diagram C Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.	
			Connect the panels together.
			Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
			To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>

 Detail View - CABINET

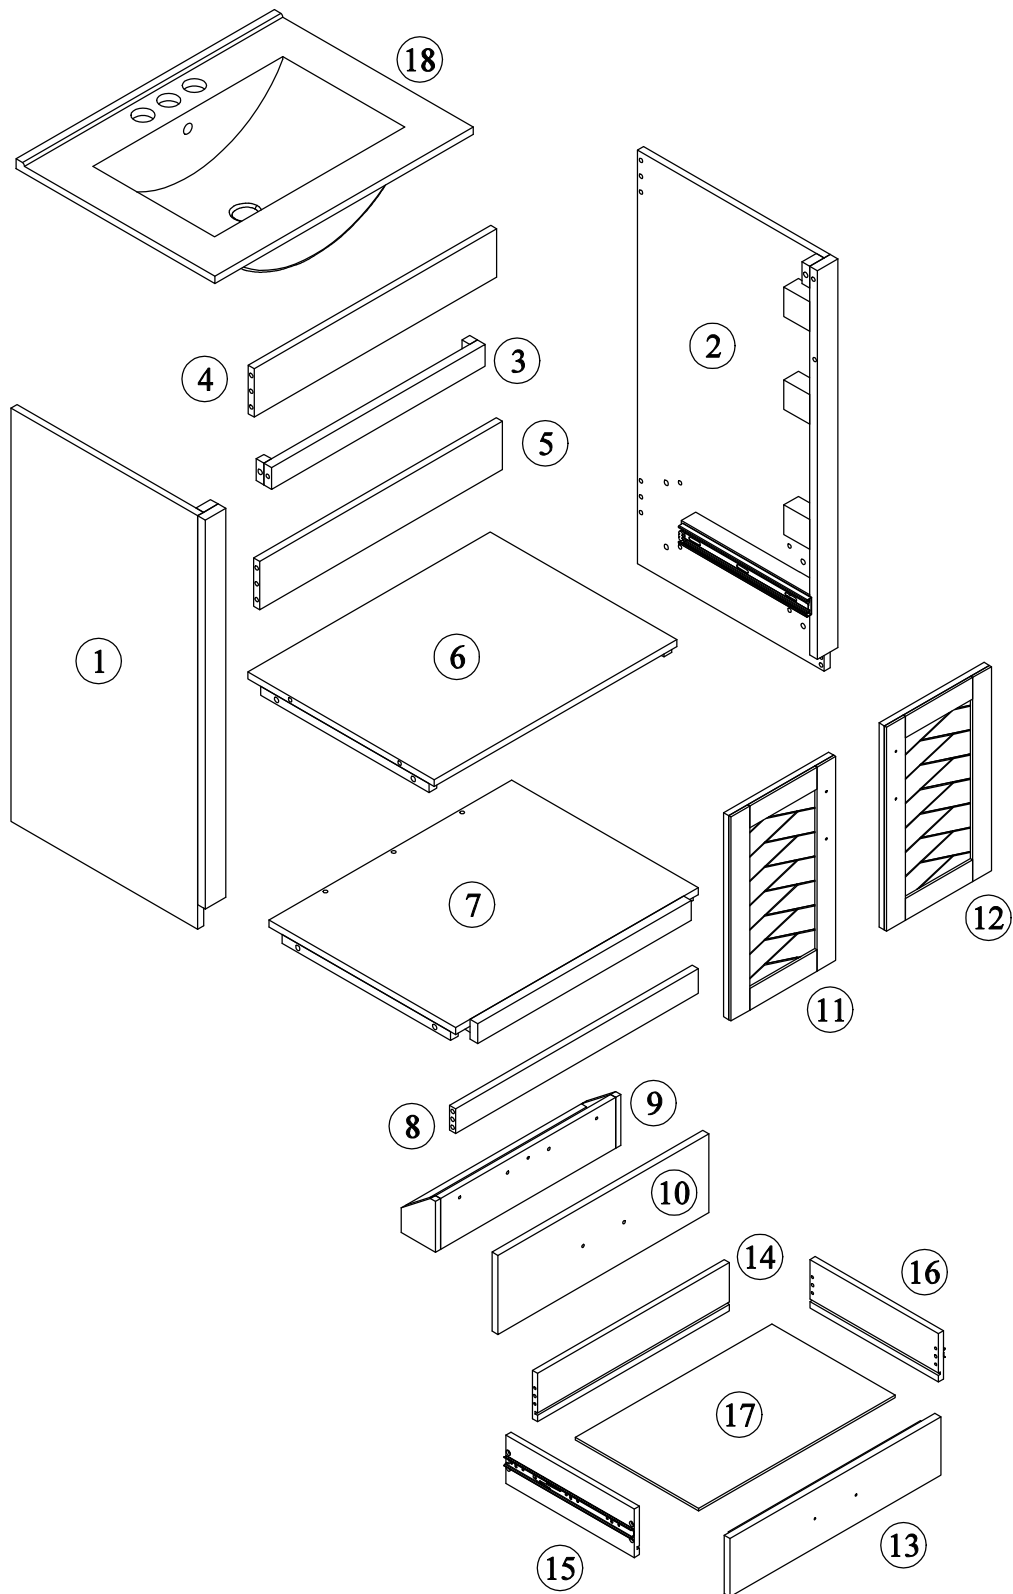


Identifying the Hardware-Identify the hardware using the illustrations below.

              Part List - N710P341037

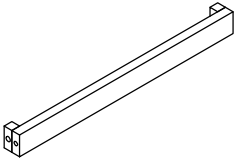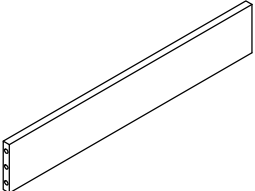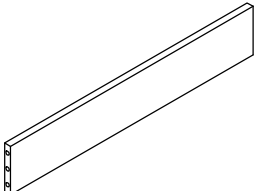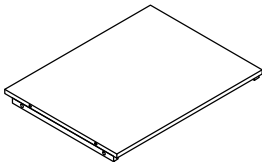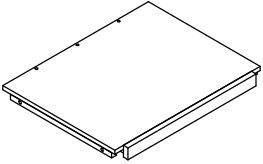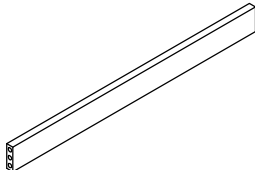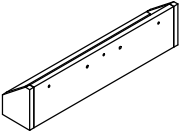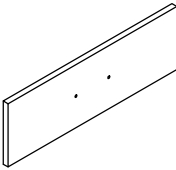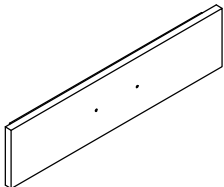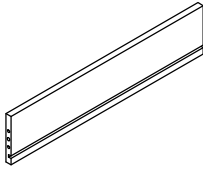1		2	
	Side Panel (L) - 1pc		Side Panel (R) - 1pc
3		4	
	Top Bar Front - 1pc		Top Rear Panel - 1pc
5		6	
	Bottom Rear Panel - 1pc		Mid Frame - 1pc
7		8	
	Bottom Frame - 1pc		Bottom Bar Front - 1pc
9		10	
	Flip down Box - 1pc		Flip down Face - 1pc
11		12	
	Cabinet Door (L) - 1pc		Cabinet Door (R) - 1pc
13		14	
	Drawer Face - 1pc		Drawer Back Panel - 1pc


Part List - N710P341037

 15

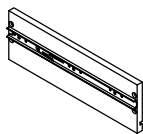


Drawer Side Panel (L) - 1pc

 16

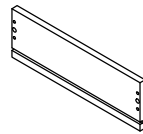


Drawer Side Panel (R) - 1pc

 17

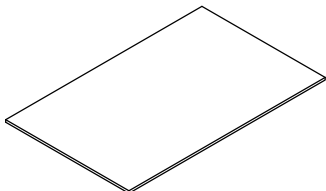









Bottom Drawer Panel - 1pc

 18

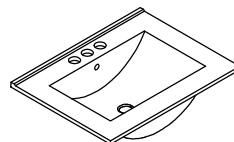

Sink - 1pc

       
 
Hardware List - N710P341037

A  ø13x1/4"x28mm Hex-Head bolts (10pcs)	B  ø1/4"x16x1mm Washer (10pcs)	C  ø6x35mm Three in one bolts (11pcs)
D  ø14.5x12mm Three in one lock (11pcs)	E  ø8xø4x20mm Round head screw (3pcs)	F  ø8xø4x32mm Round head screw (8pcs)
G  Handle (4pcs)	H  ø5/32"x25mm Handle screw (4pcs)	I  ø5/32"x32mm Handle screw (4pcs)
J  Damping hinge (4pcs)	K  ø7xø3.5x15mm Flat head screw (24pcs)	L  Rod Support hinge (1pc)
M  Swivel hinge (2pcs)	N  ø6xø3x12mm Flat head screw (8pcs)	O  ø8x30mm Wood dowel (20pcs)
P  4mm Allen key (1pc)	Q  Anti fall hardware (2sets)	R  ø6x30mm Wood dowel (4pcs)




STEP: 1



C

  11PCS

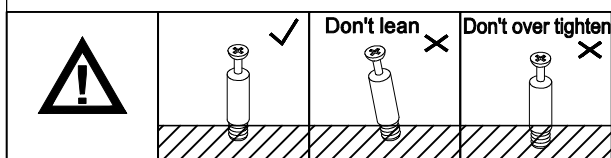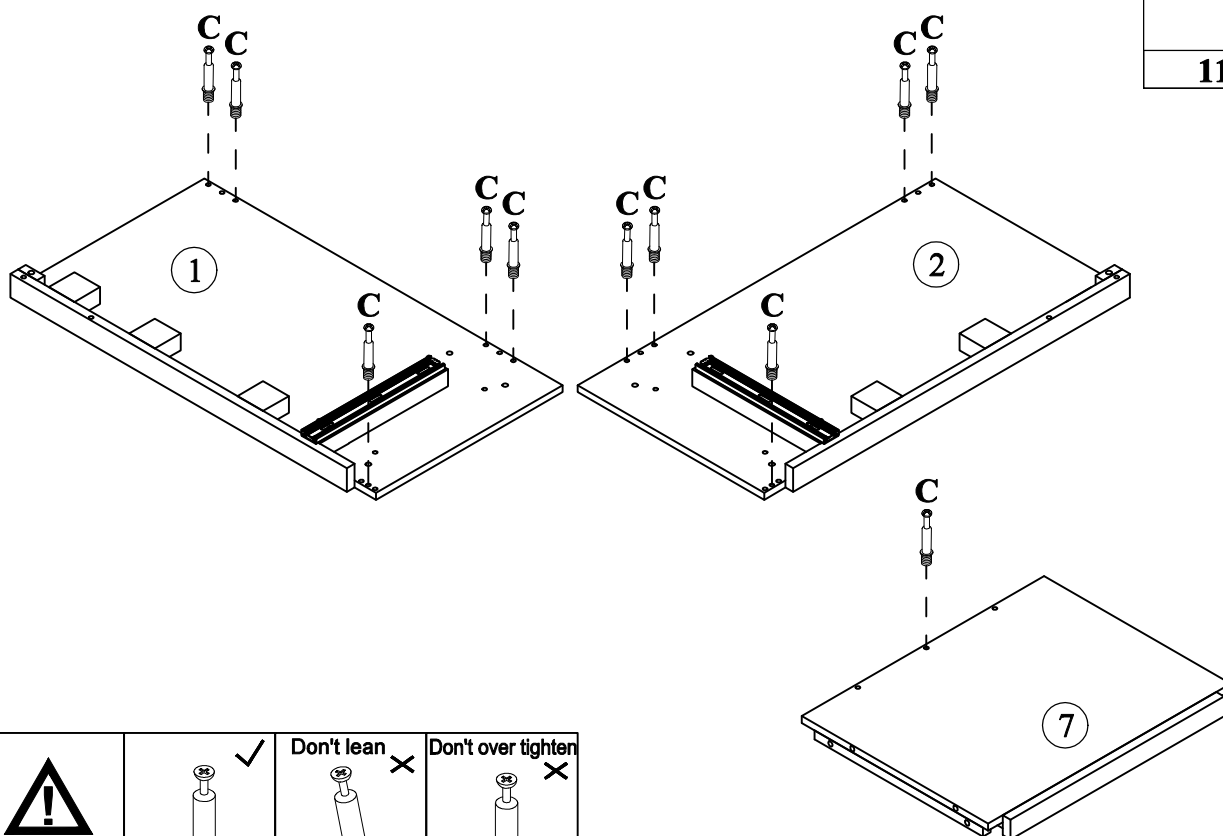


STEP: 2

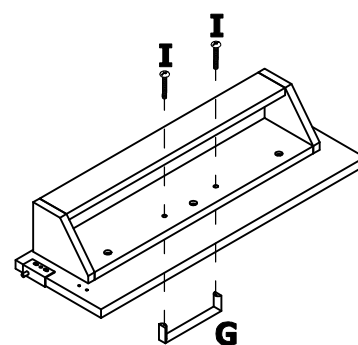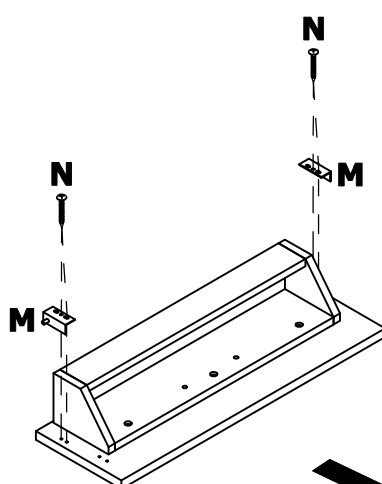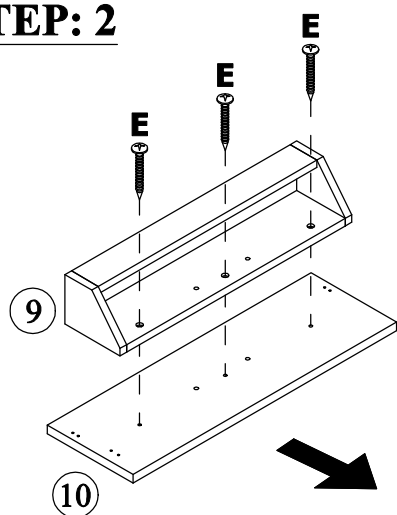   

  
E	G	I
		
3PCS	1PC	2PCS
	M	N
		
	2PCS	4PCS


STEP: 3

D		O	
1PC		2PCS	

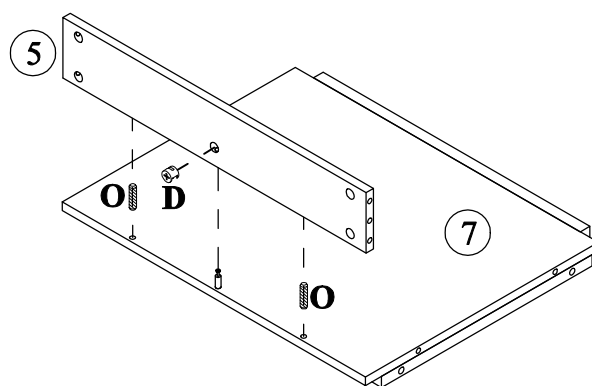 


STEP: 4

 A	B	D	O	P
				
5PCS	5PCS	5PCS	9PCS	1PC

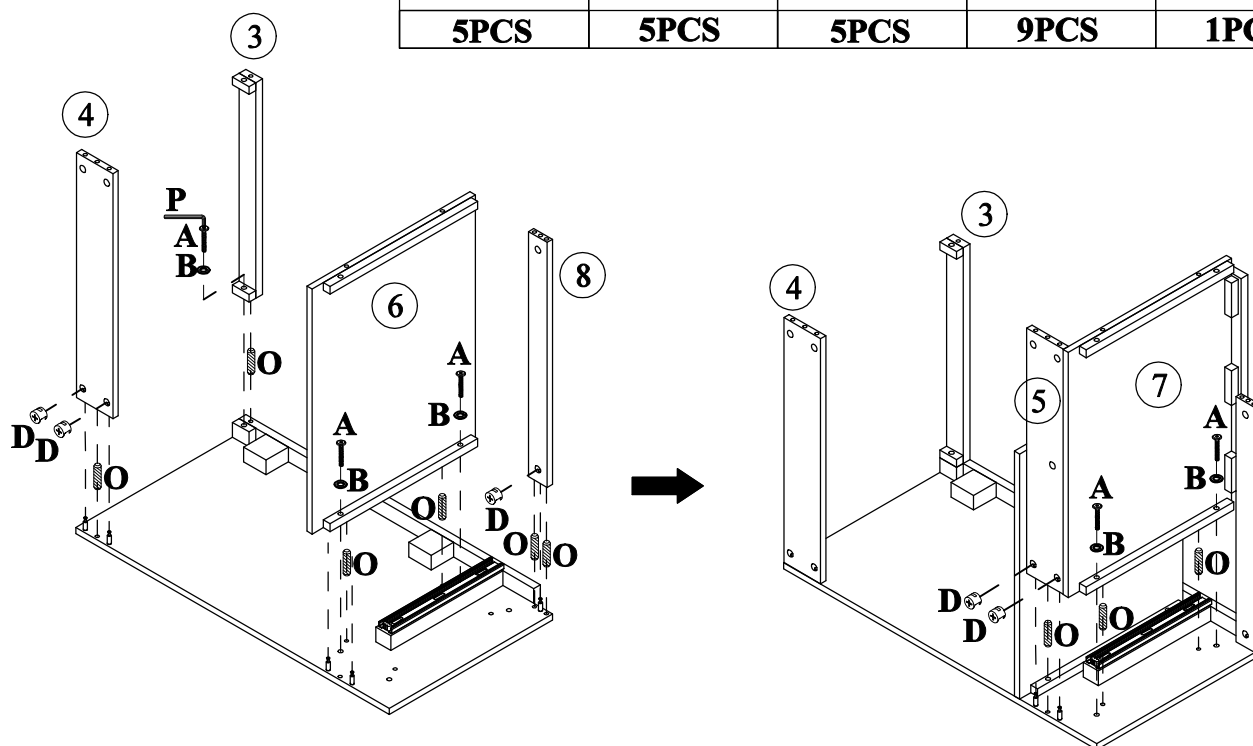 



STEP: 5

A	B	D	O	P
				
5PCS	5PCS	5PCS	9PCS	1PC

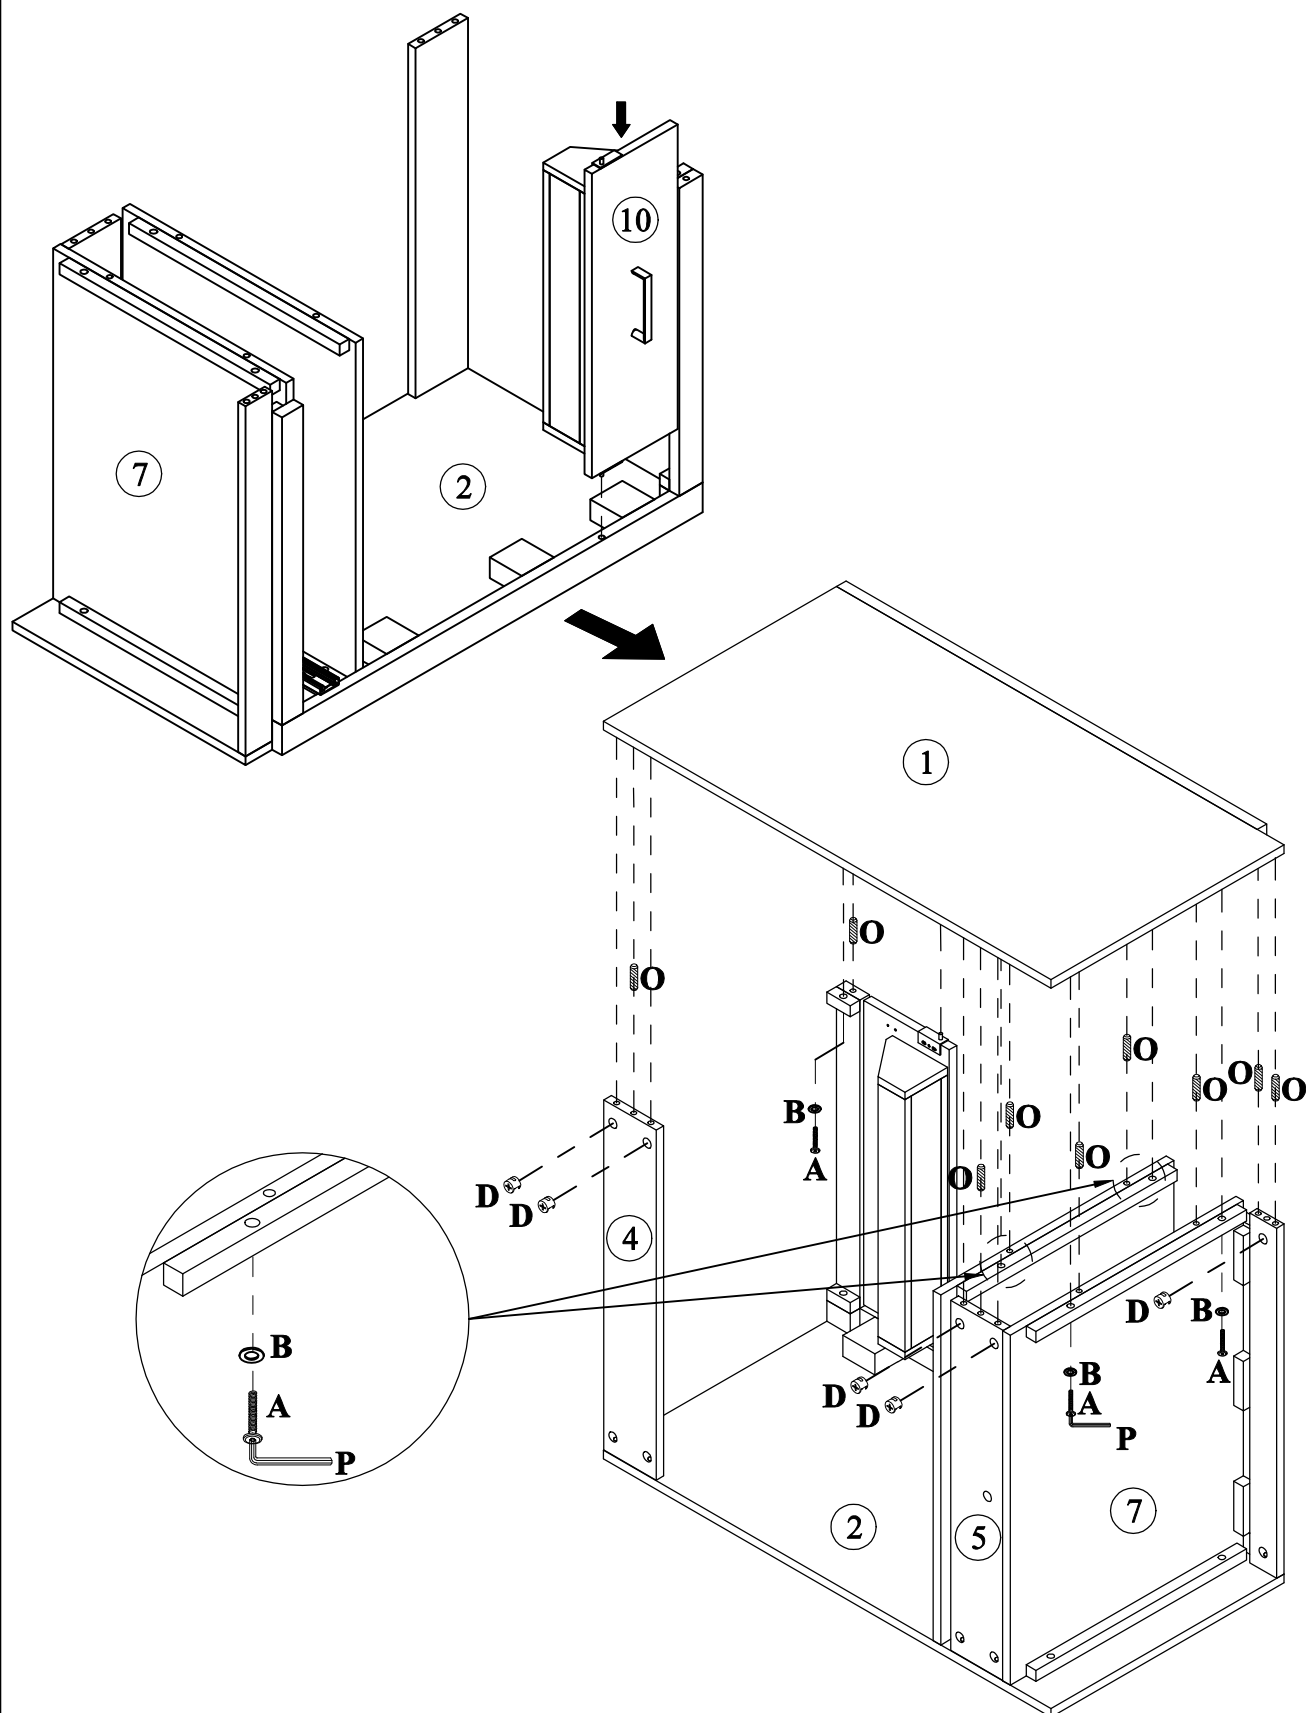 


STEP: 6

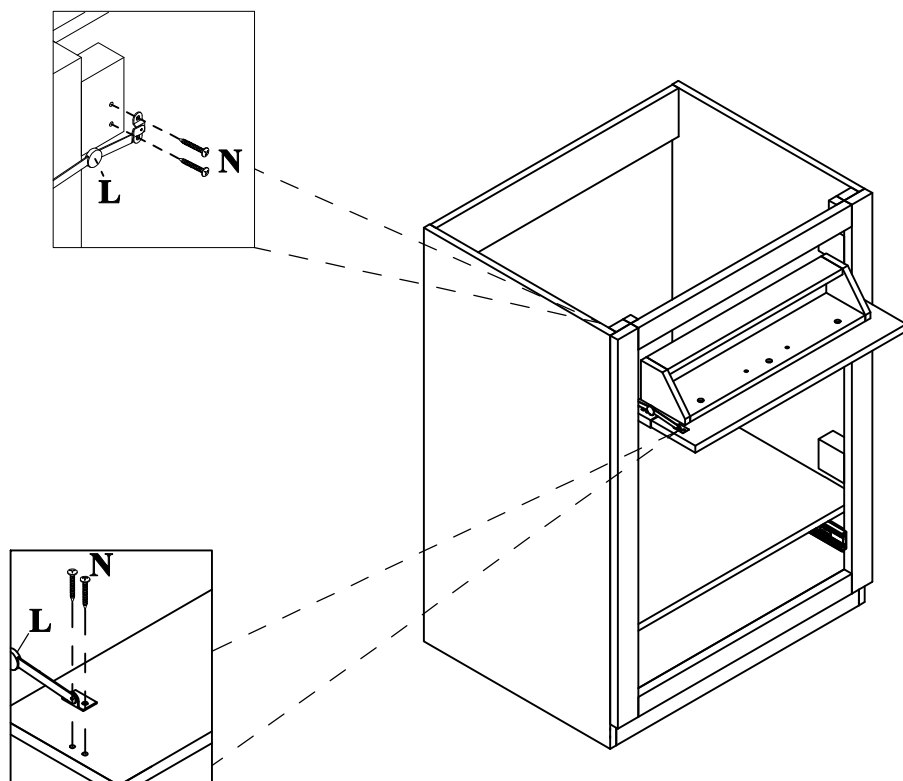 


 
L	N
	
1PC	4PCS


 
STEP: 7

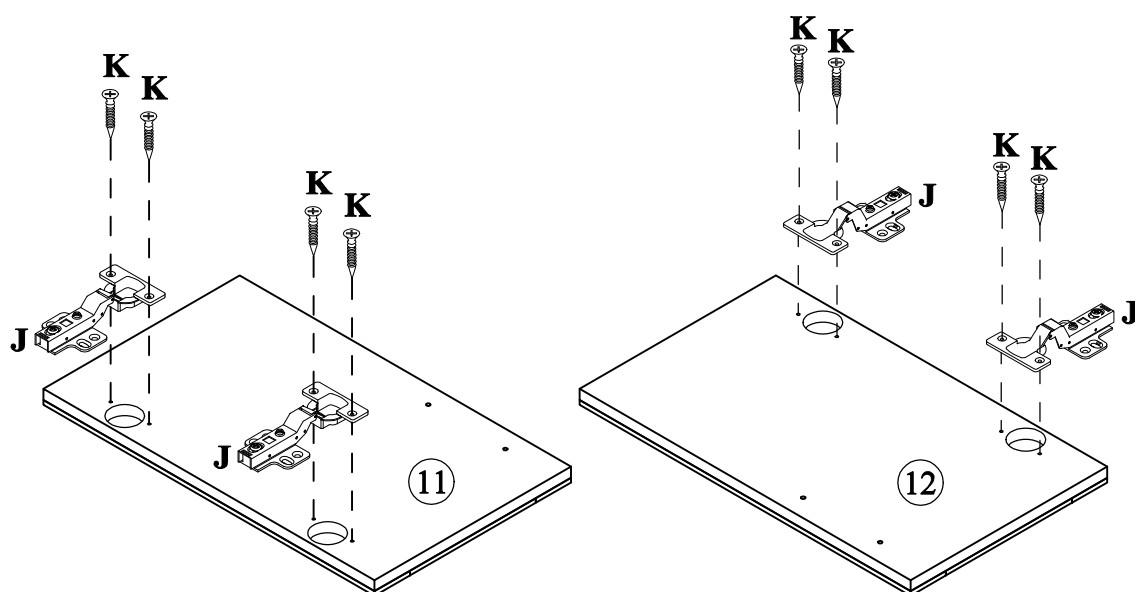


J	K
	
4PCS	8PCS

  STEP: 8


G	H	K
		
2PC	4PCS	16PCS

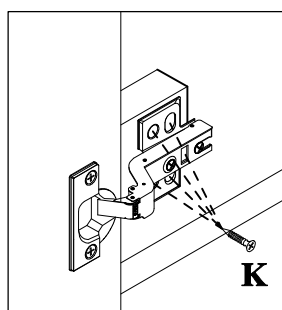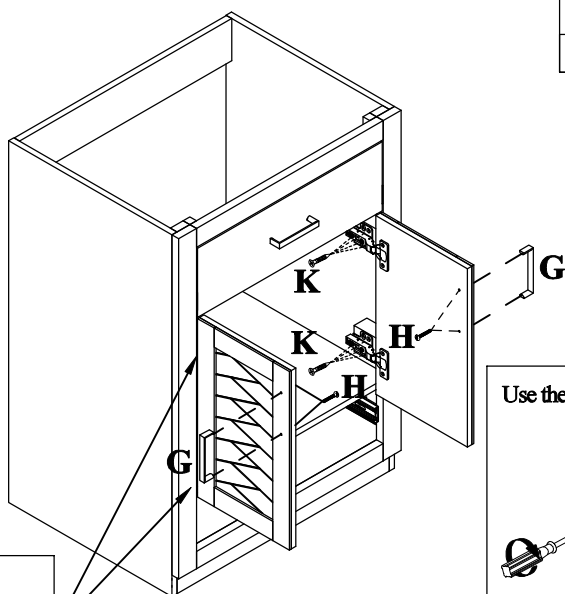  


Use the screws to adjust up or down

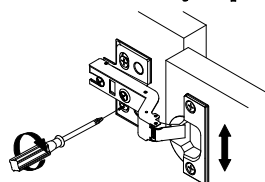 


Use the screws to permanent

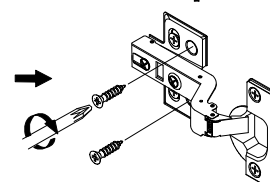 



Use the screws to adjust left or right



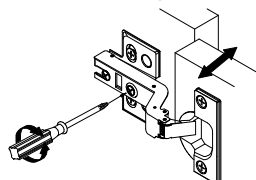 


Use the screws to adjust in or out

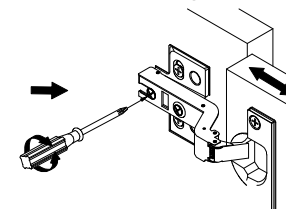 


STEP: 9

 
 
F	G	I	R
			
8PCS	1PC	2PCS	4PCS

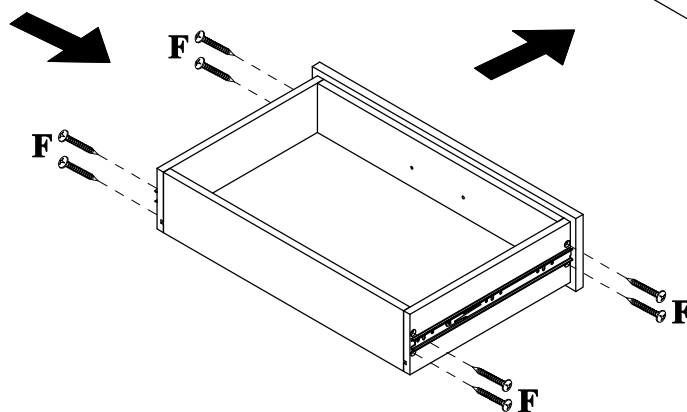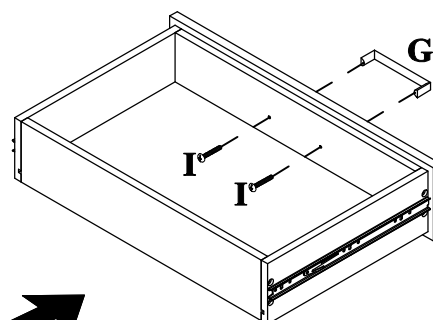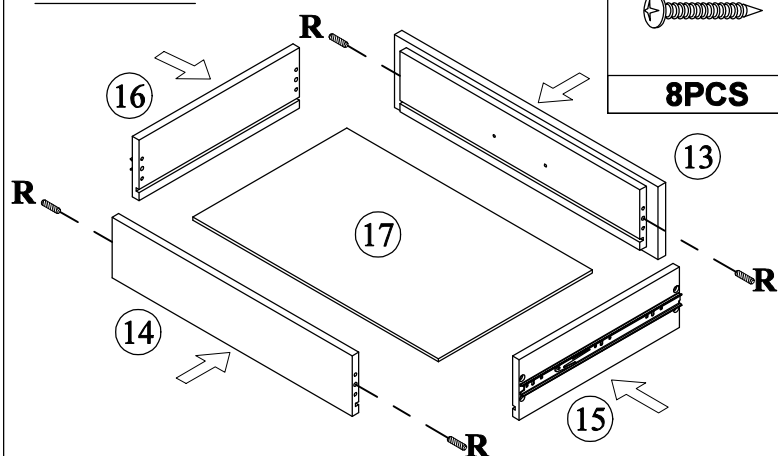   

STEP: 10

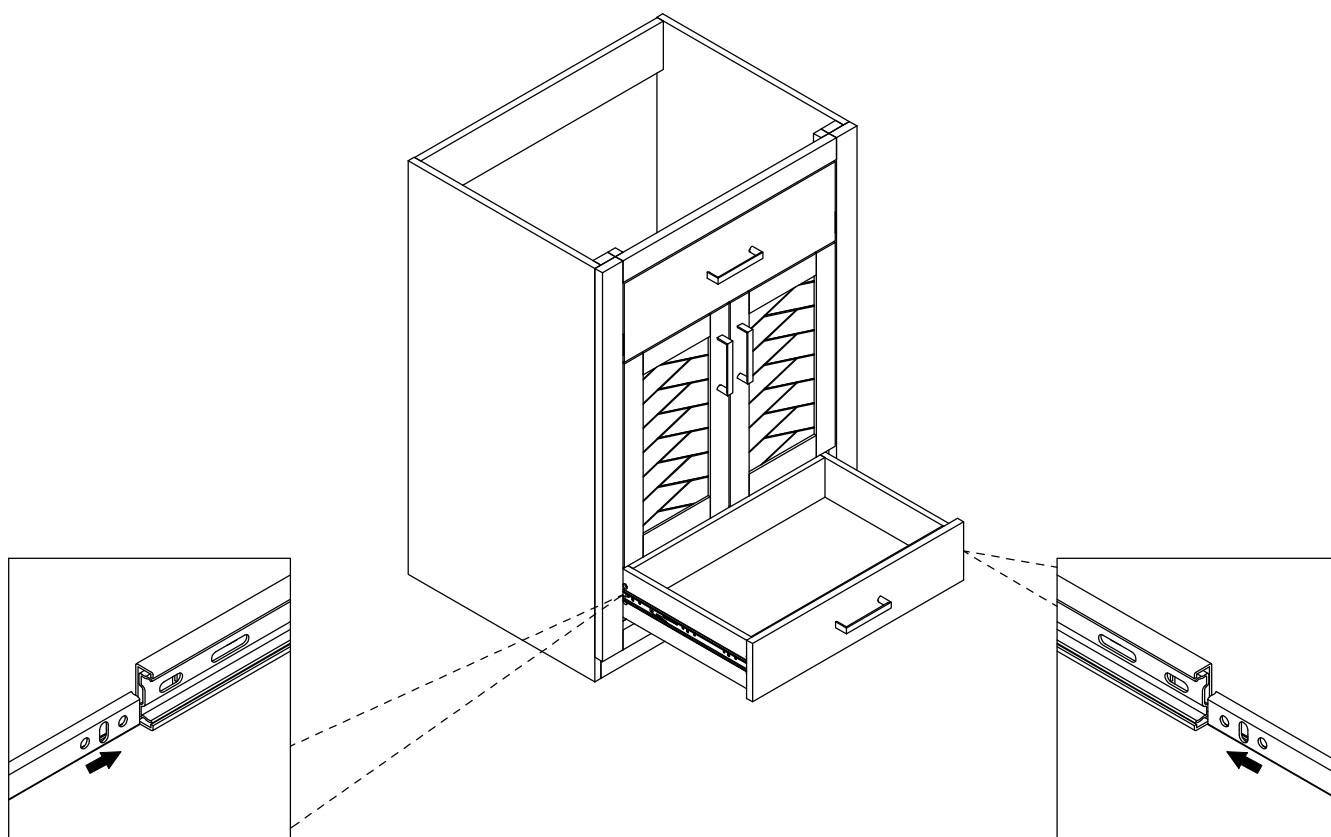 


STEP: 11

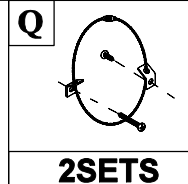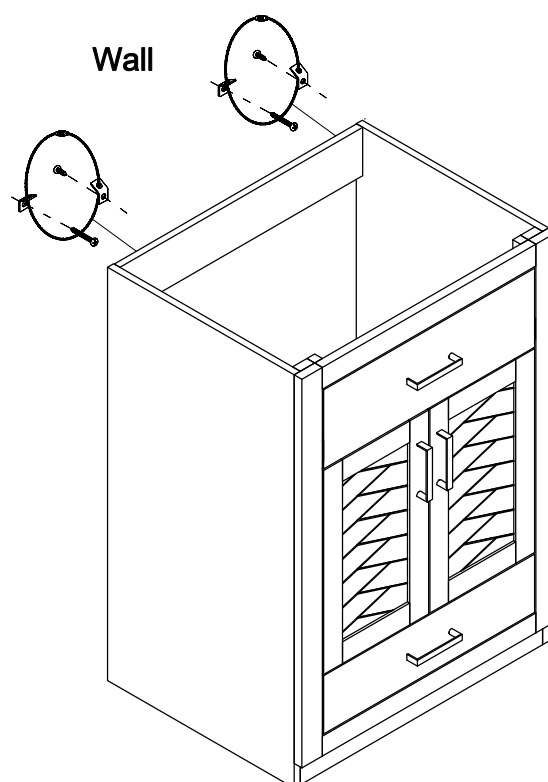  


STEP: 12

 **Install the sink on the cabinet with glue.
Let stand for 24 hours**

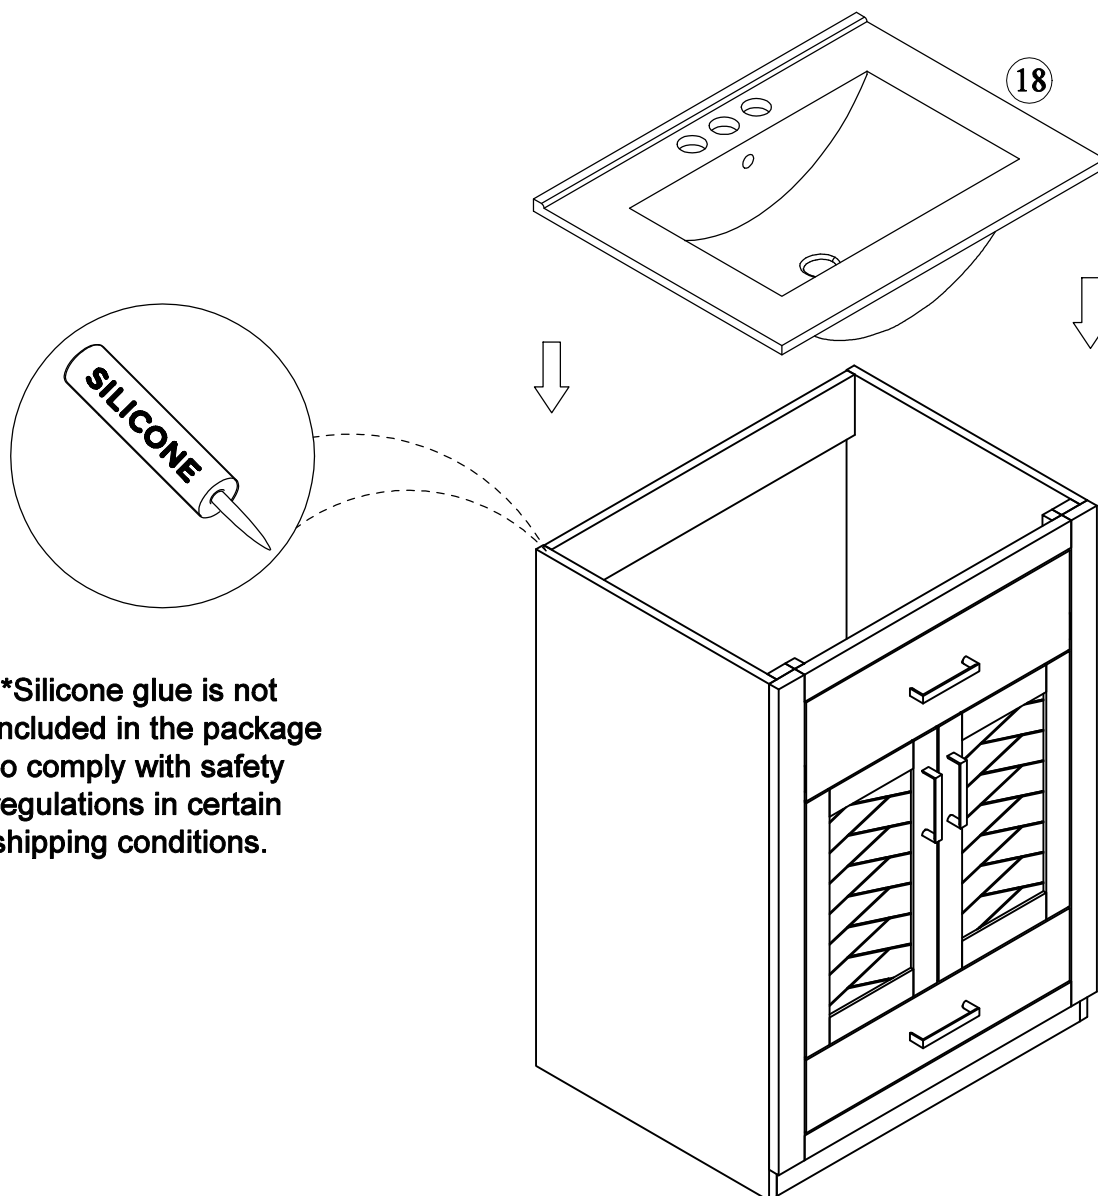


***Silicone glue is not included in the package to comply with safety regulations in certain shipping conditions.**

 STEP: 13

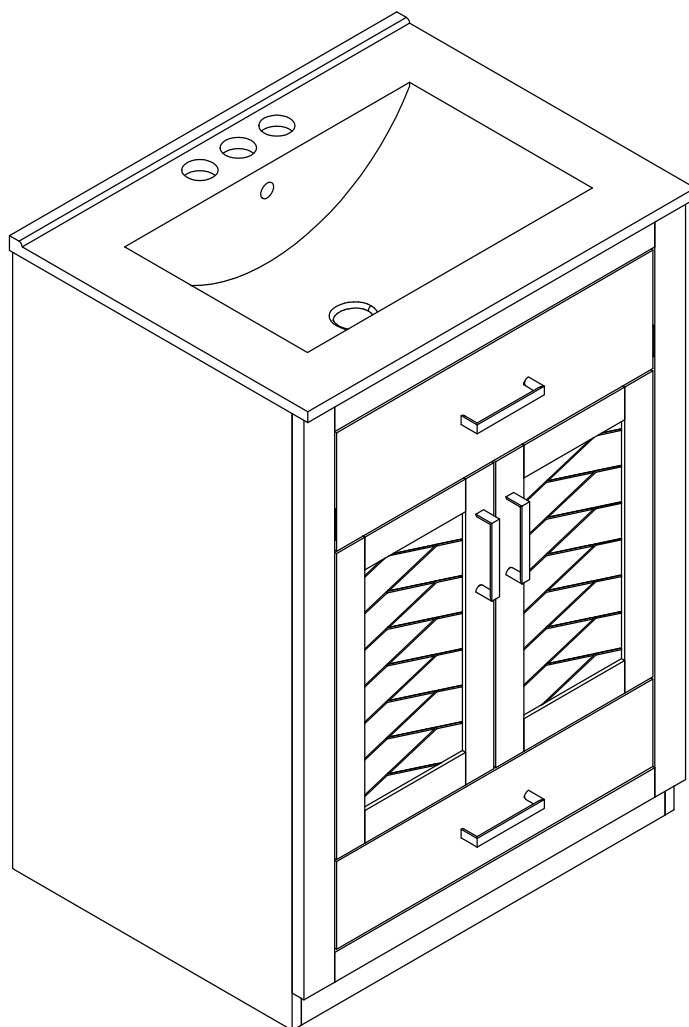

HINGE ADJUSTMENTS

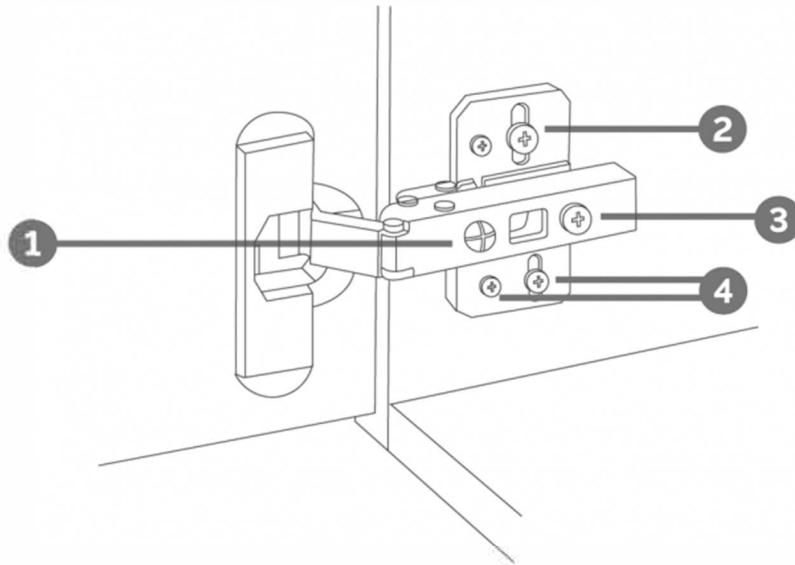 


① Sideways / Tilt adjustment

Turn the screw

clockwise to move the door further away from the side of the cabinet

 anticlockwise to move the door closer to the side of the cabinet

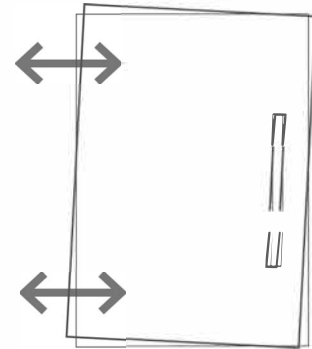


② ④ Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up

 anticlockwise to move the door down

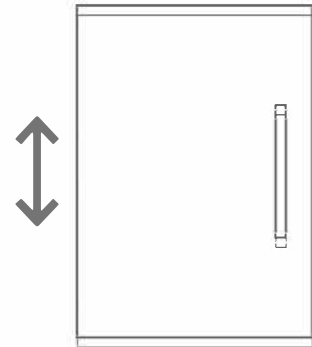

③ Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw

clockwise to decrease the gap between the door and the cabinet

anticlockwise to increase the gap between the door and the cabinet

