




ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE

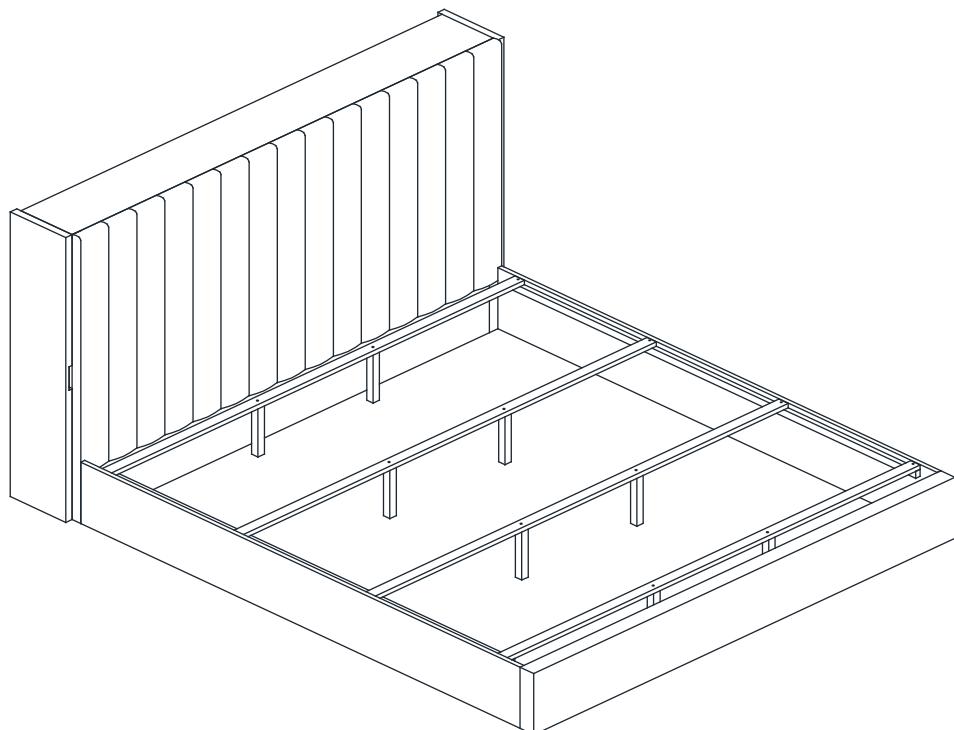

Fine Furniture for every stage of life

223111KE (B1&B2)
Eastern King Bed

ITEM: 223111KE (B1&B2)

COASTER
FINE FURNITURE

ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

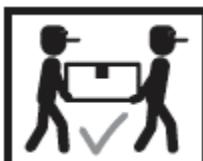

ASSEMBLY TIME

20 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

A	HEADBOARD PANEL		1PC	H	LEFT SHELF INSIDE PANEL		1PC
B	HEADBOARD SUPPORT		3PCS	I	SHELF BACK PANEL		2PCS
C	HEADBOARD TOP PANEL		1PC	J	SHELF FRONT PANEL		6PCS
D	DIVIDER PANEL		2PCS	K	SHELF TOP PANEL		4PCS
E	LEFT BOOK CASE SIDE PANEL		1PC	L	SHELF BOTTOM PANEL		2PCS
F	RIGHT SHELF INSIDE PANEL		1PC	M	CASTER WITH SCREW		8SETS
G	RIGHT BOOKCASE SIDE PANEL		1PC	N	FOOTBOARD		1PC

B2 (BOX 2)

O	BED RAIL		2PCS	Q	BED SLAT SUPPORT WITH LEVELER		8PCS
P	BED SLAT		4PCS				

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.

ITEM: 223111KE (B1&B2)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!



1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 223111KE (B1)

1	SHORT BOLT (M8 x 30MM - RBW)		8PCS	6	FLAT HEAD SCREW (M4 x 32MM - RBW)		8PCS
2	MEDIUM BOLT (M6 x 35MM - RBW)		56PCS	7	CAM BOLT (7MMx 24MM - RBW)		4PCS
3	LONG BOLT (M6 x 40MM - RBW)		26PCS	8	CAM LOCK (15MM x 9.5MM - RBW)		4PCS
4	LOCK WASHER (1/4" x 12 Ø - RBW)		74PCS	9	SMALL ALLEN WRENCH (M4 x 100MM - BLK)		1PC
5	FLAT WASHER (1/4" x 19 Ø - RBW)		74PCS	10	BIG ALLEN WRENCH (M5 x 65MM - BLK)		1PC

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.

ITEM: 223111KE (B1&B2)


COASTER
FINE FURNITURE

ASSEMBLY INSTRUCTIONS

STEP 1

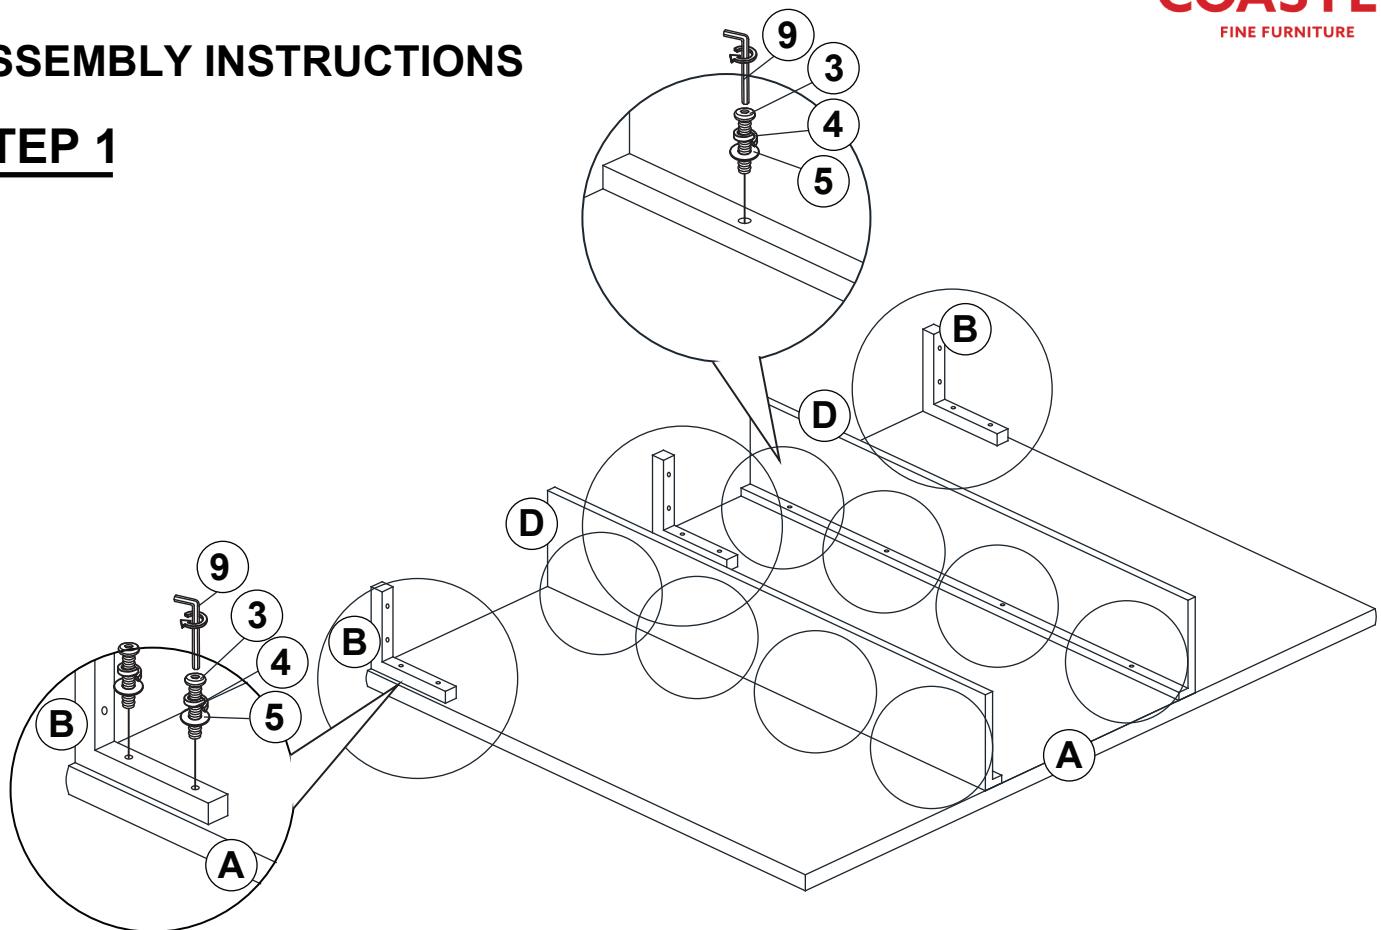

STEP 2

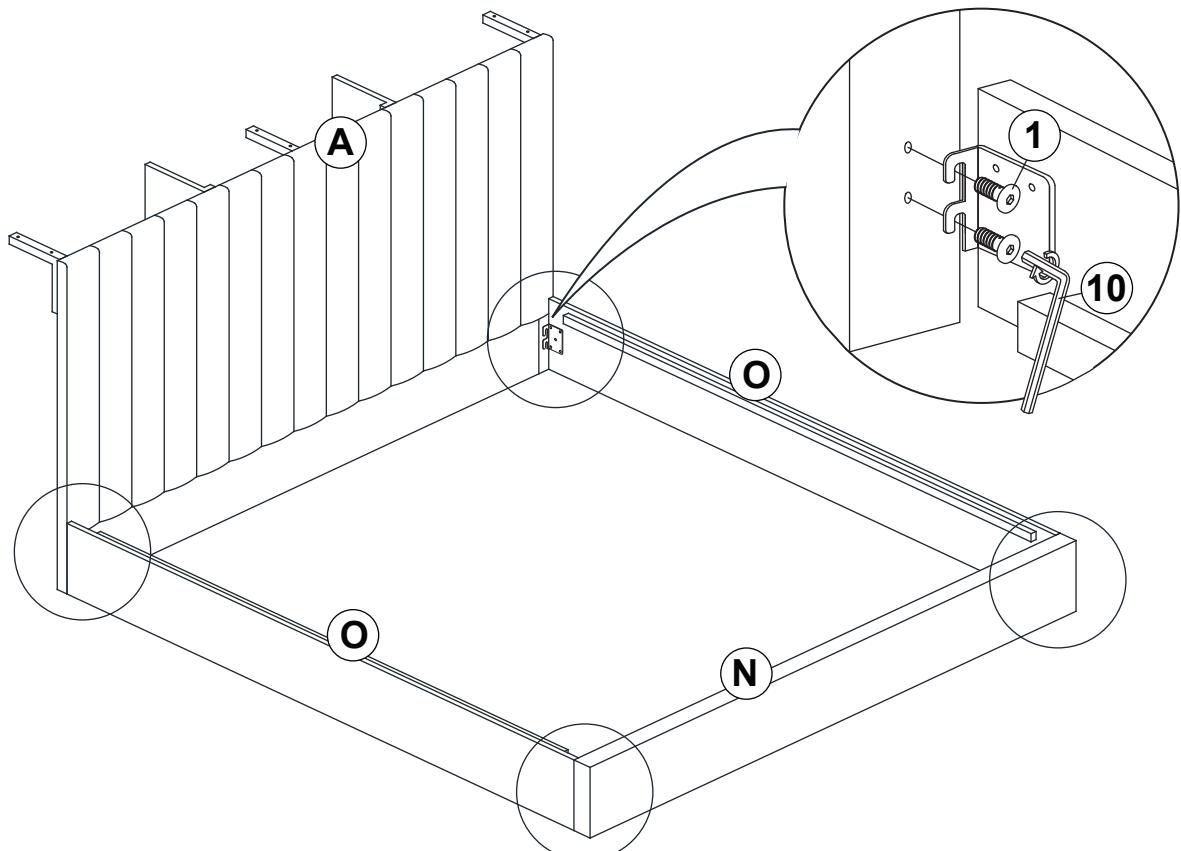


ITEM: 223111KE (B1&B2)


COASTER
FINE FURNITURE

ASSEMBLY INSTRUCTIONS

STEP 3

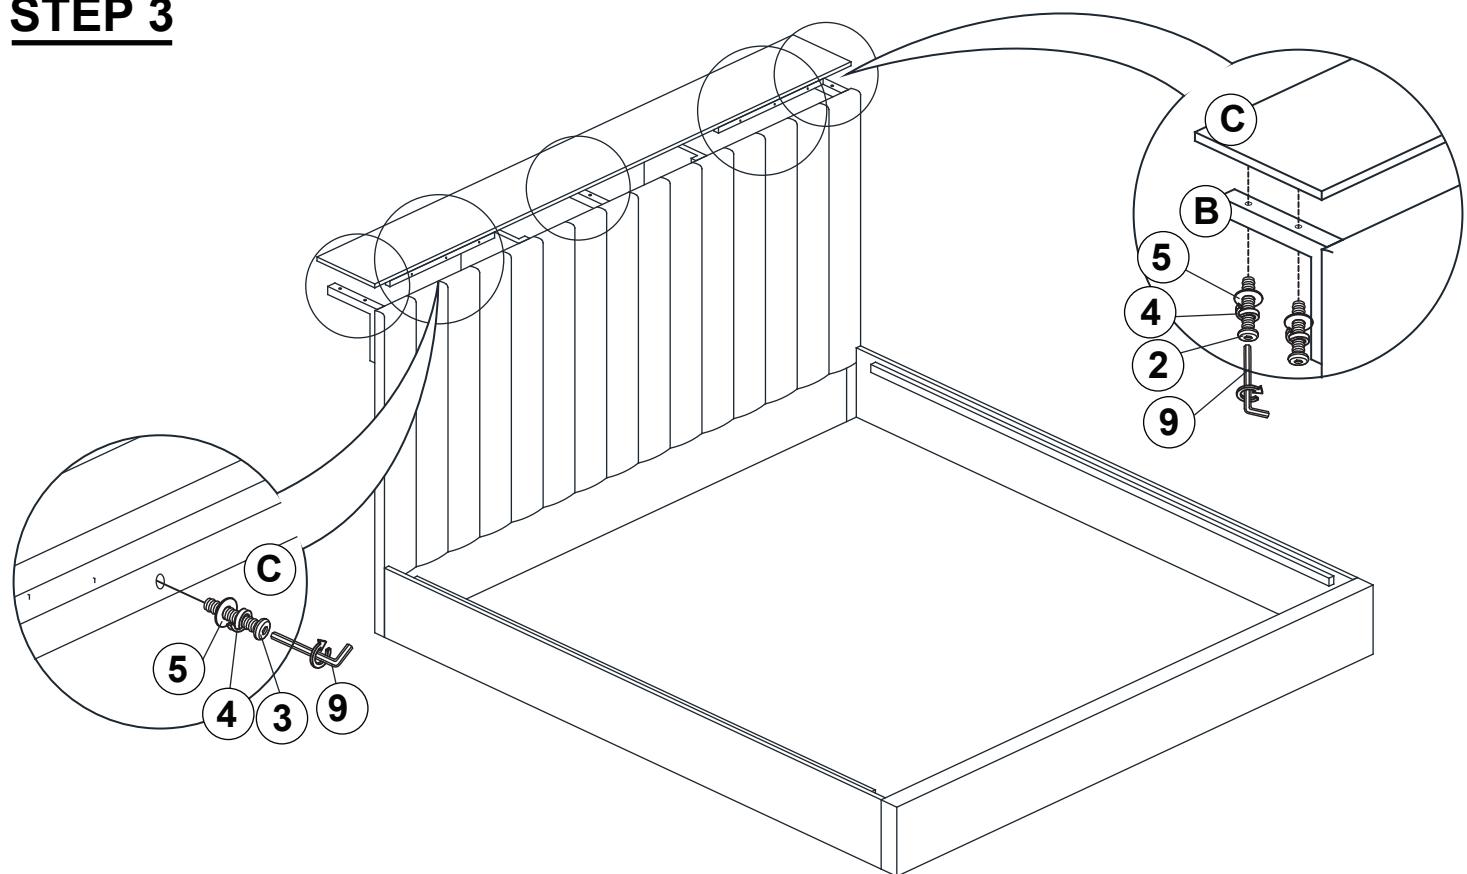

STEP 4

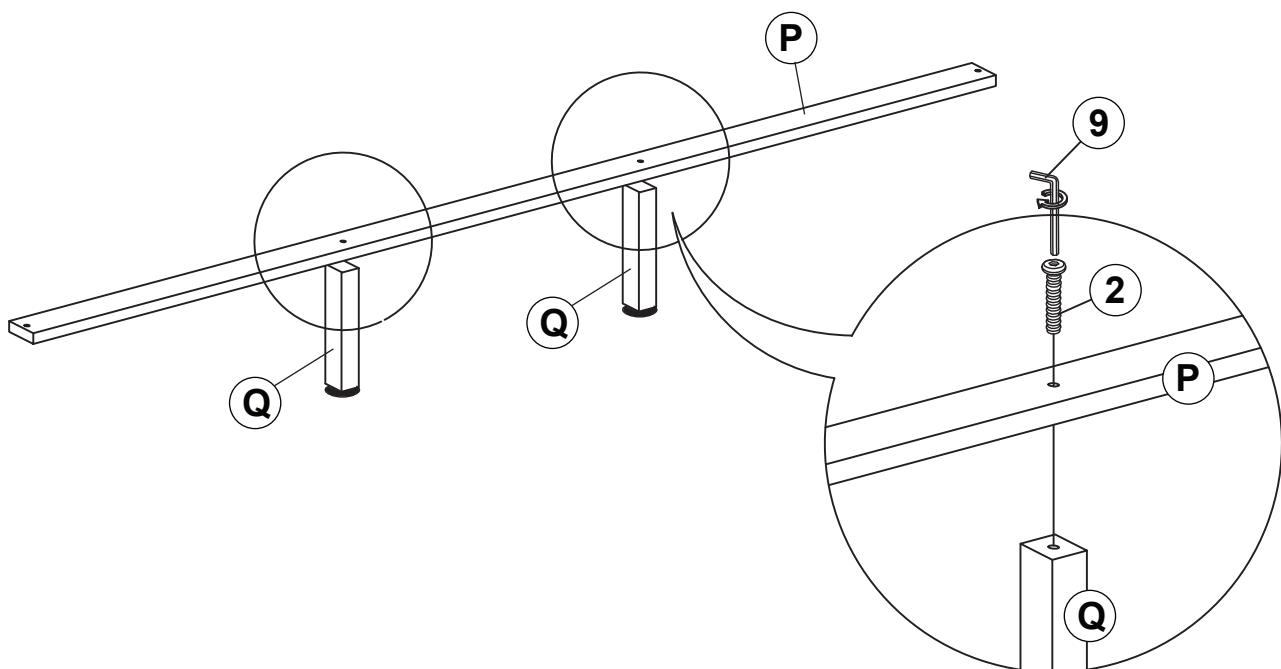


ITEM: 223111KE (B1&B2)


COASTER
FINE FURNITURE

ASSEMBLY INSTRUCTIONS

STEP 5

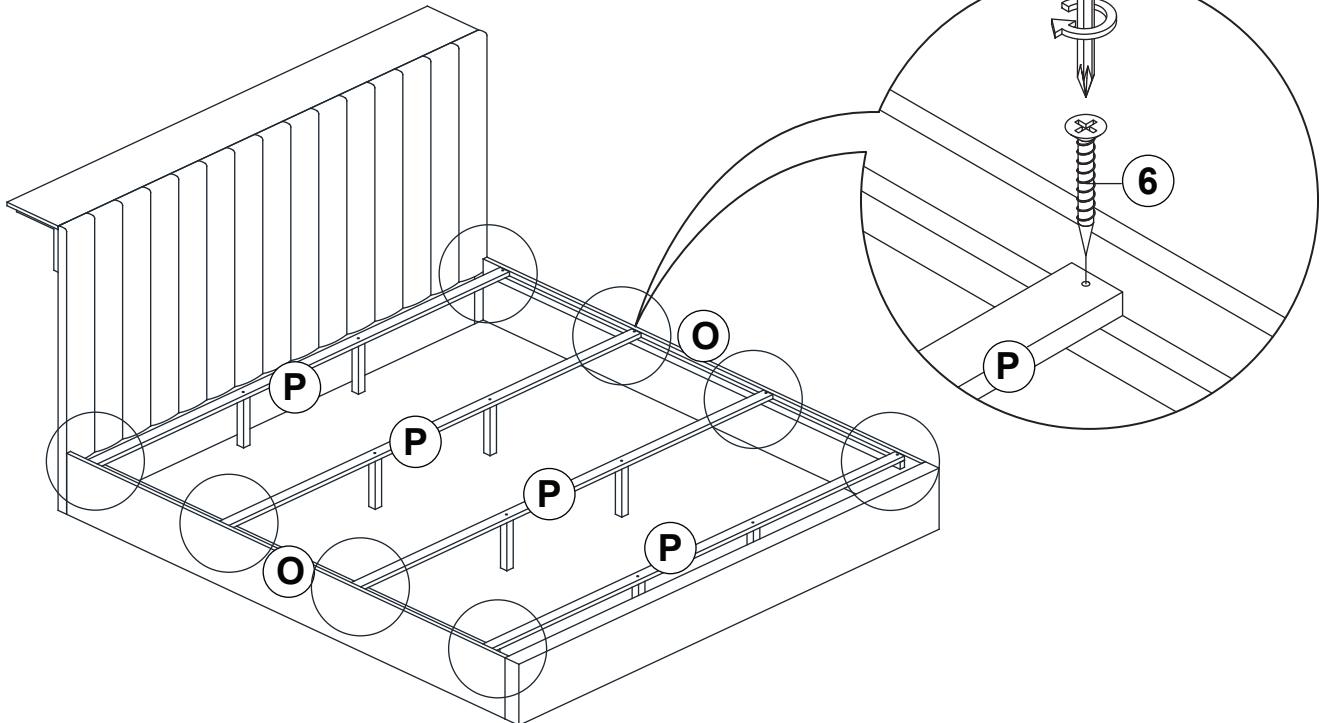

STEP 6

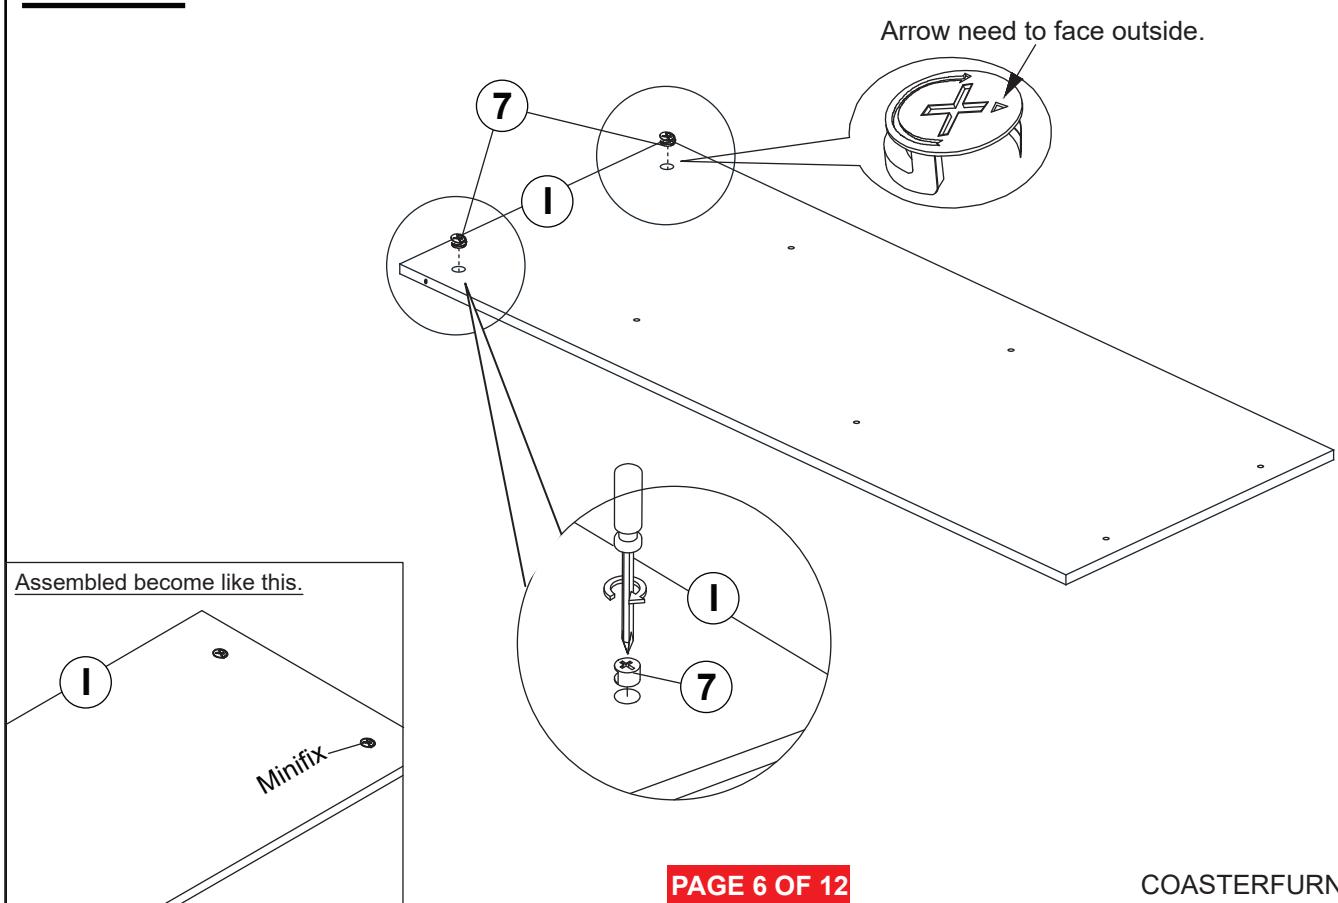


ITEM: 223111KE (B1&B2)

The logo for Coaster Fine Furniture. It features the word "COASTER" in a bold, red, sans-serif font, with a registered trademark symbol (®) at the top right. A thick red curved line arches over the top of the letters. Below "COASTER", the words "FINE FURNITURE" are written in a smaller, red, all-caps, sans-serif font.

ASSEMBLY INSTRUCTIONS


STEP 7

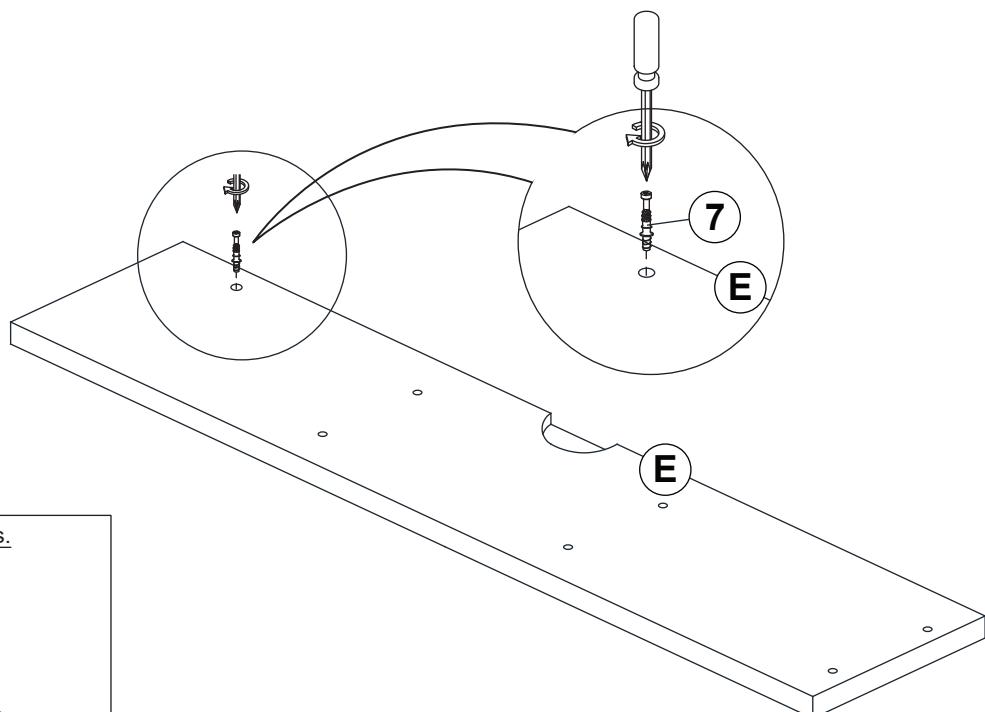


Assembled become like this.



STEP 8

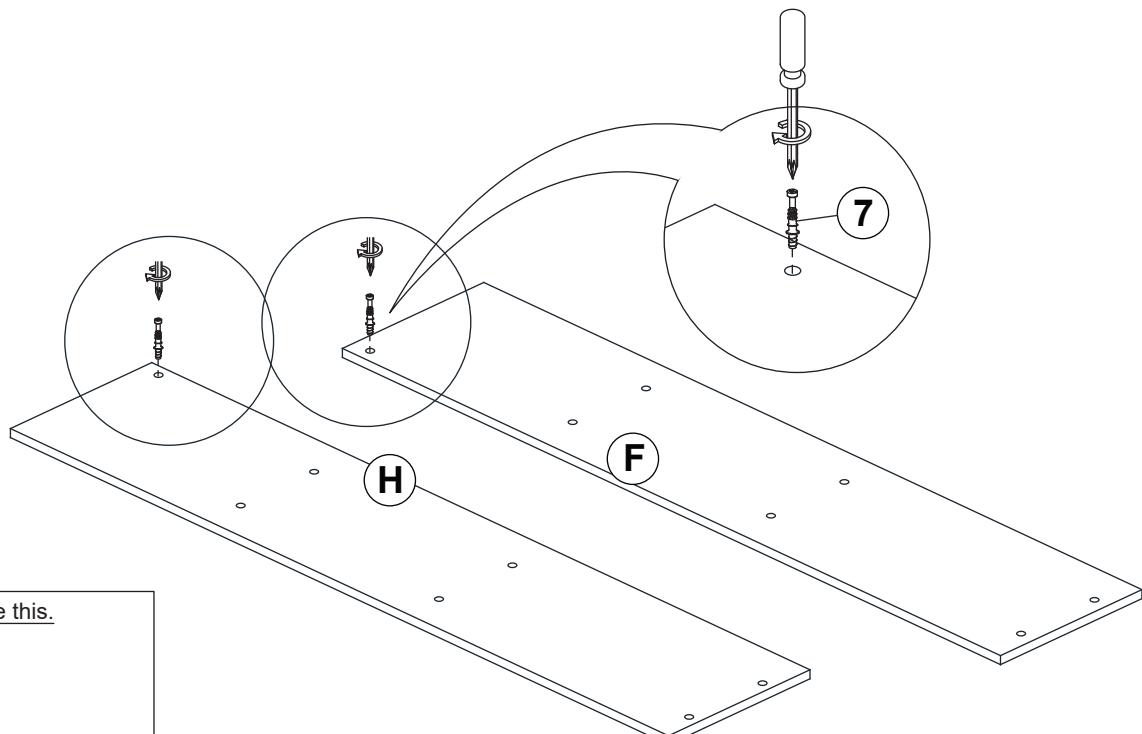


Assembled become like this.

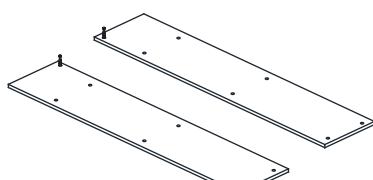


ASSEMBLY INSTRUCTIONS

STEP 9

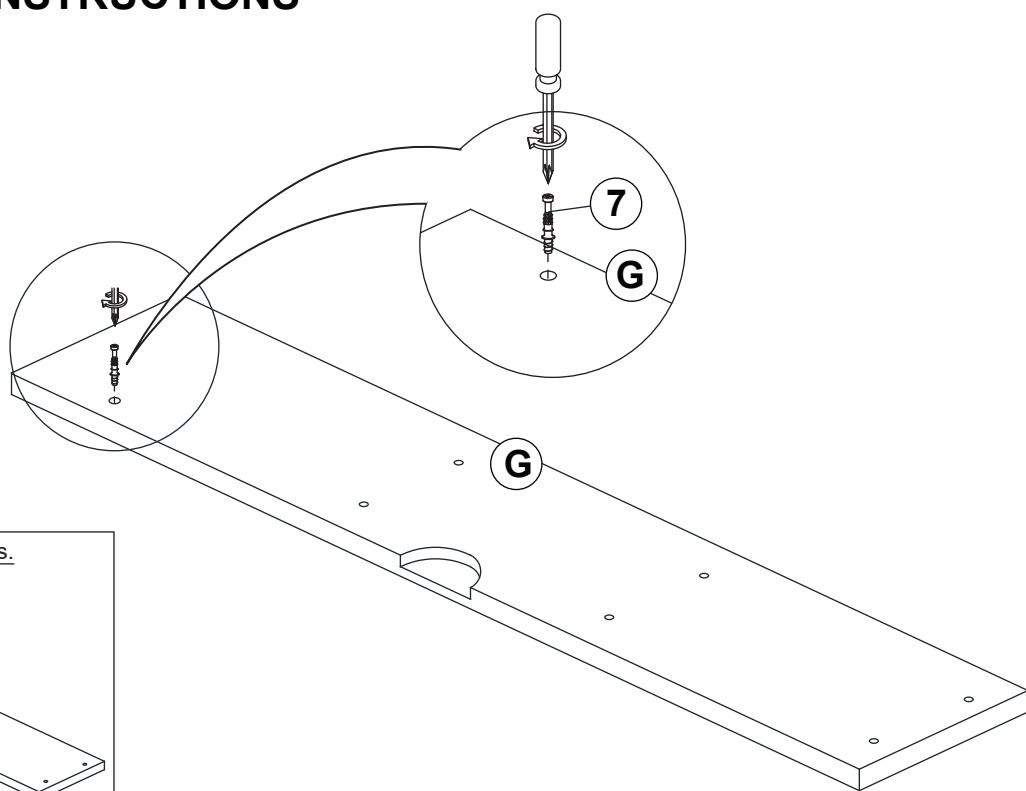

STEP 10

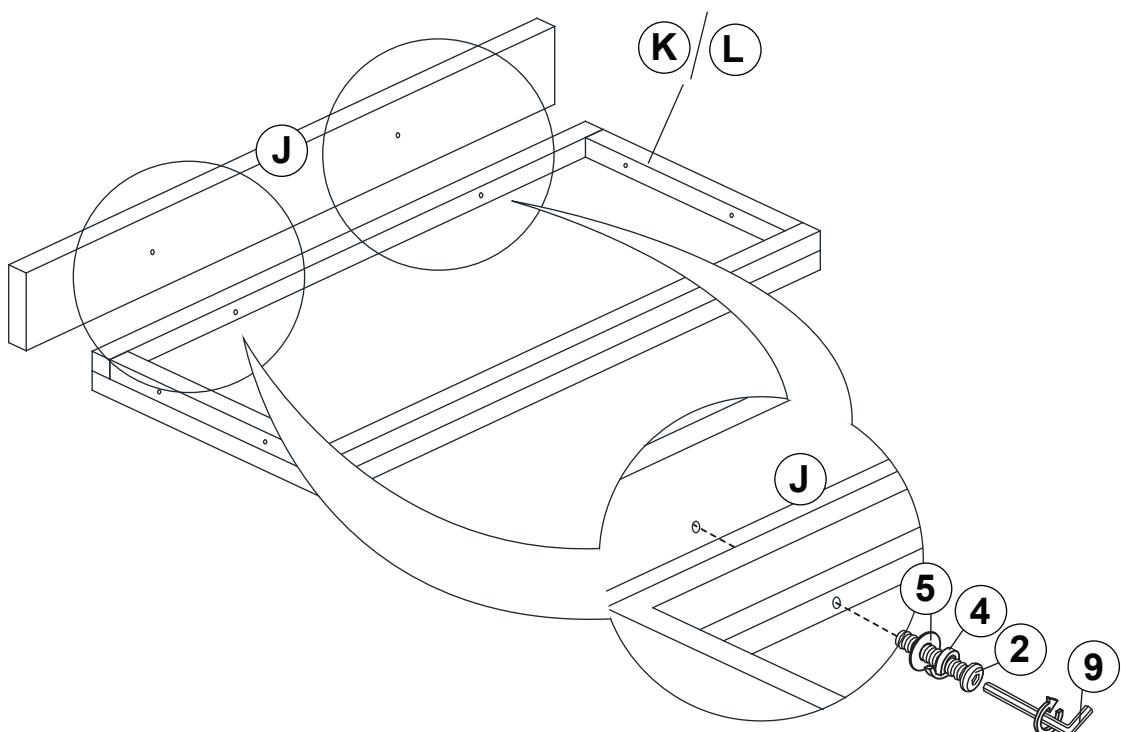


ITEM: 223111KE (B1&B2)


COASTER
FINE FURNITURE

ASSEMBLY INSTRUCTIONS

STEP 11

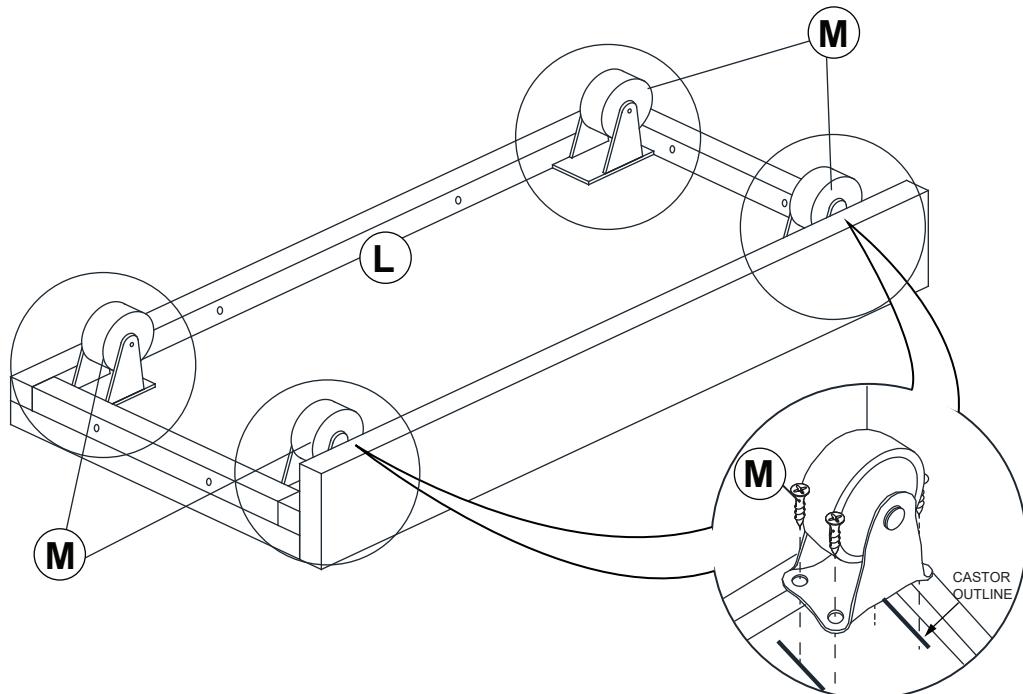

STEP 12

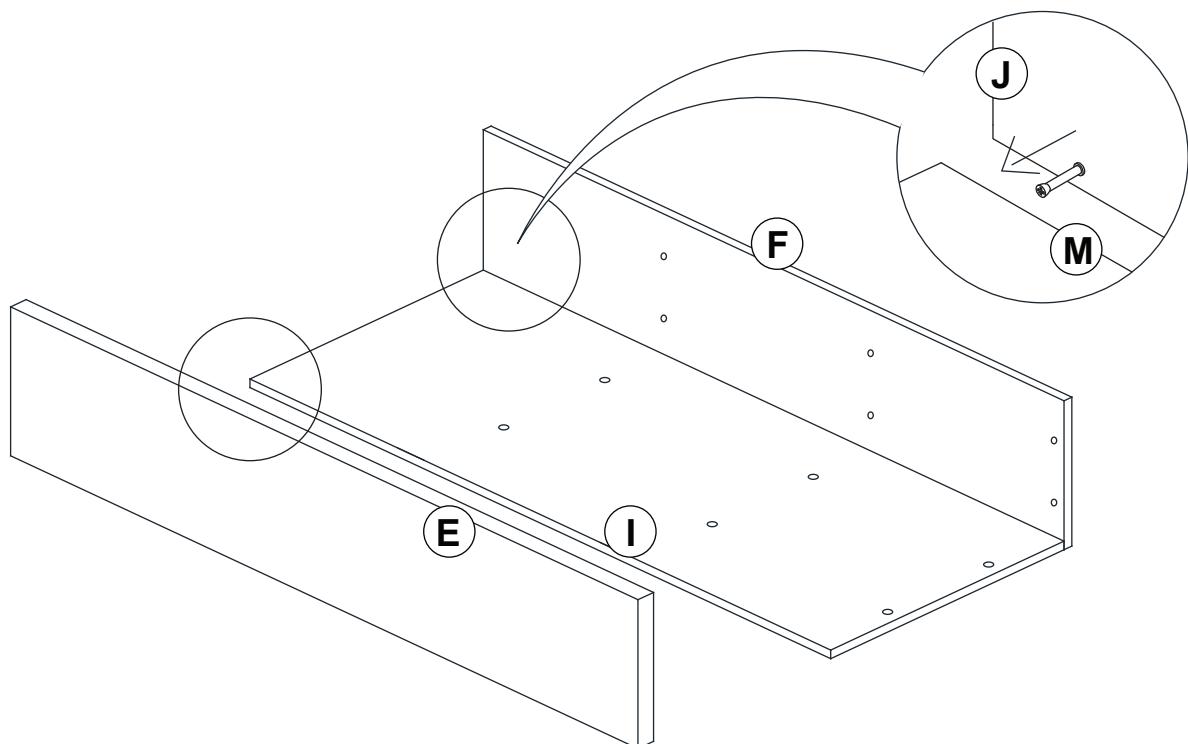


ITEM: 223111KE (B1&B2)


COASTER
FINE FURNITURE

ASSEMBLY INSTRUCTIONS

STEP 13

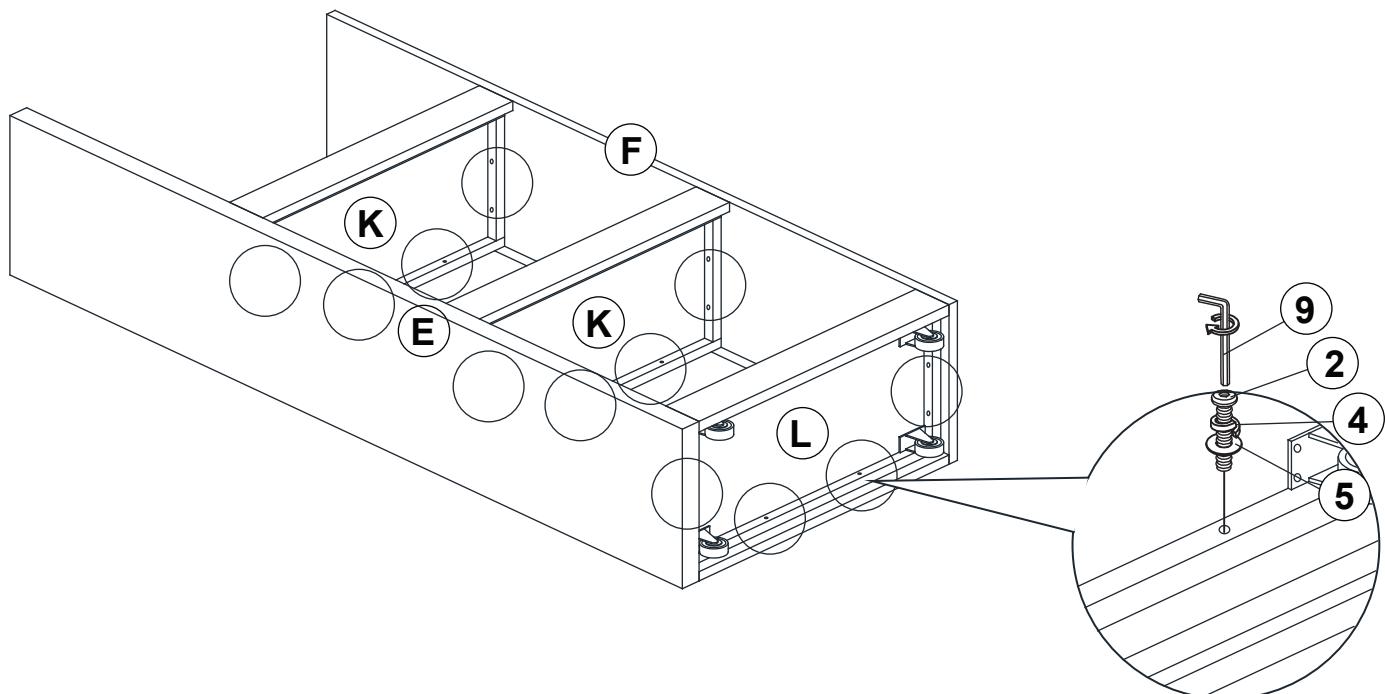

STEP 14

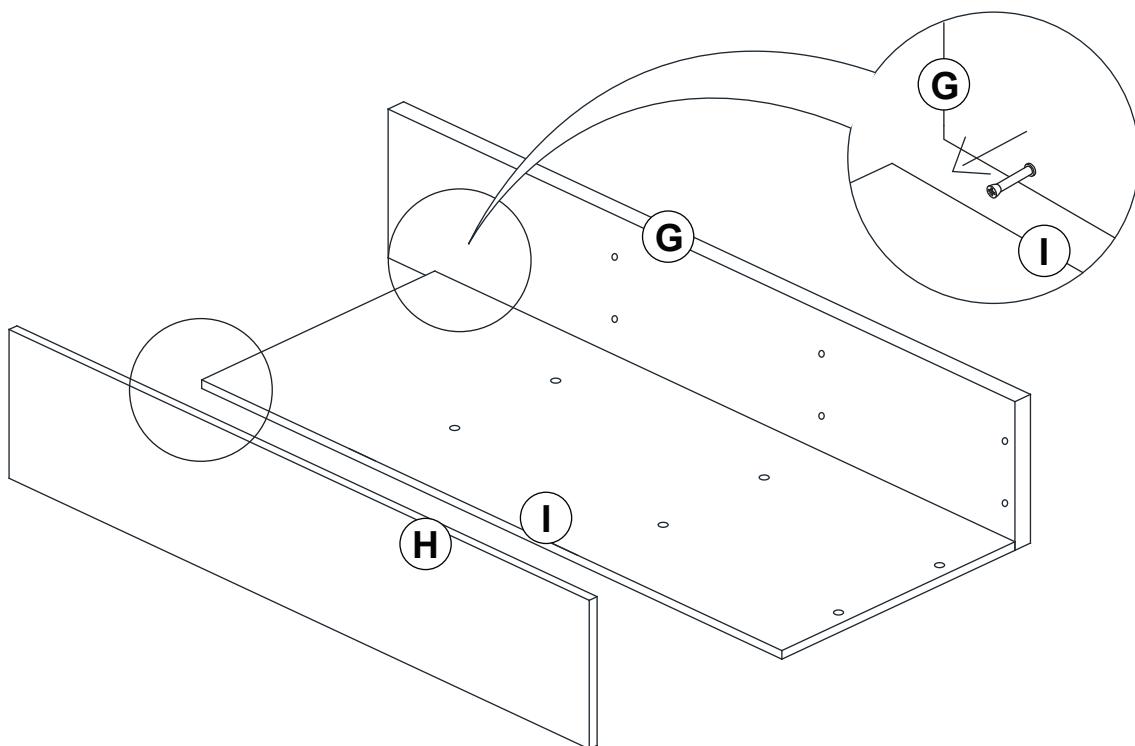


ITEM: 223111KE (B1&B2)


COASTER
FINE FURNITURE

ASSEMBLY INSTRUCTIONS

STEP 15

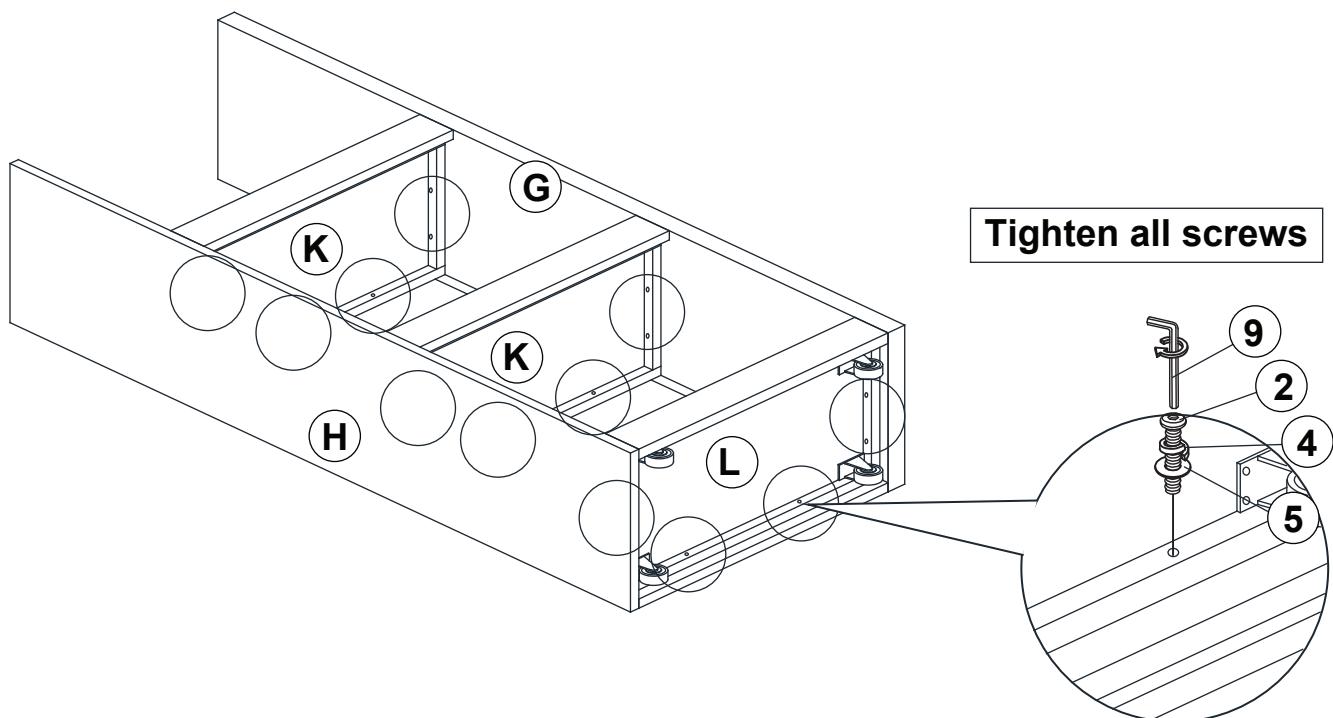

STEP 16

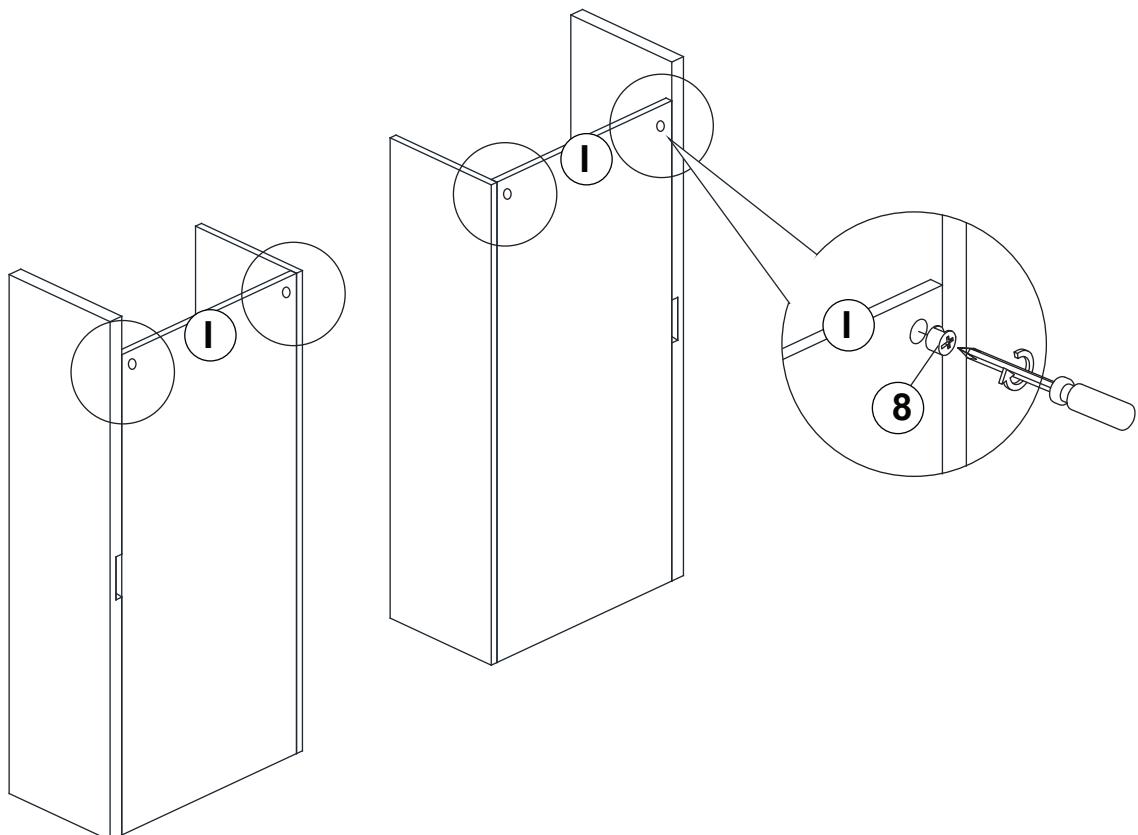



ITEM: 223111KE (B1&B2)

COASTER
FINE FURNITURE

ASSEMBLY INSTRUCTIONS

STEP 17


COMPLETE

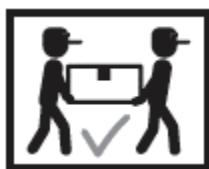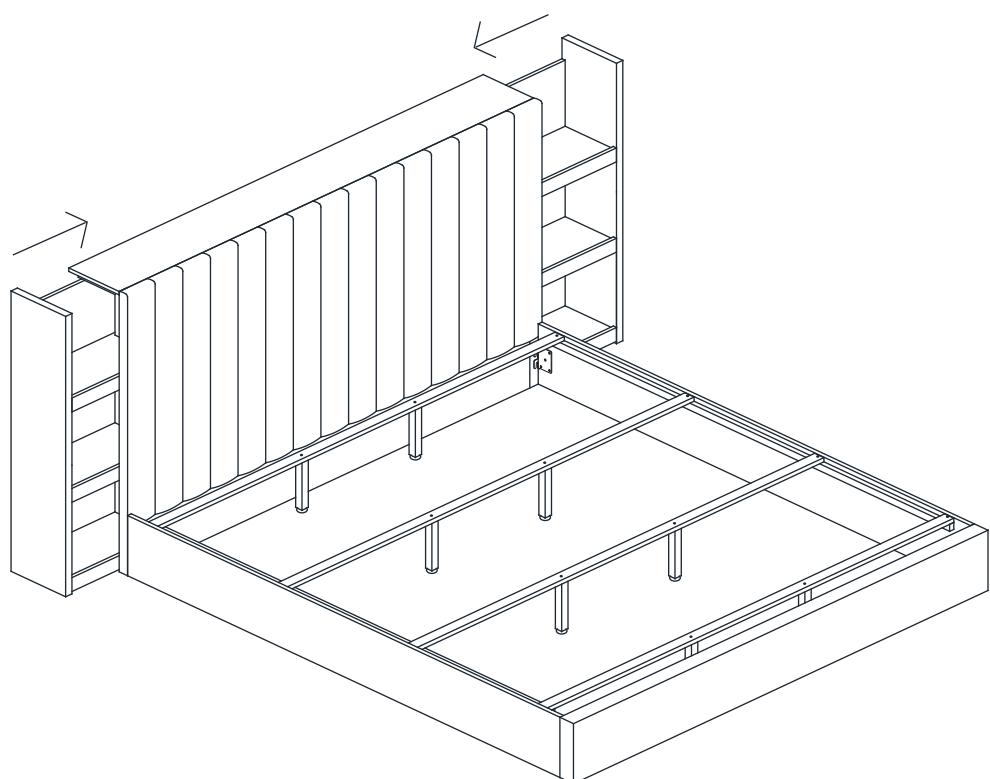

ITEM: 223111KE (B1&B2)

The logo for Coaster Fine Furniture. It features the word "COASTER" in a bold, red, sans-serif font, with a registered trademark symbol (®) at the top right. A thick red arch is positioned above the text. Below "COASTER", the words "FINE FURNITURE" are written in a smaller, red, sans-serif font.

Inner Size : 76.50"W x 80.00"D

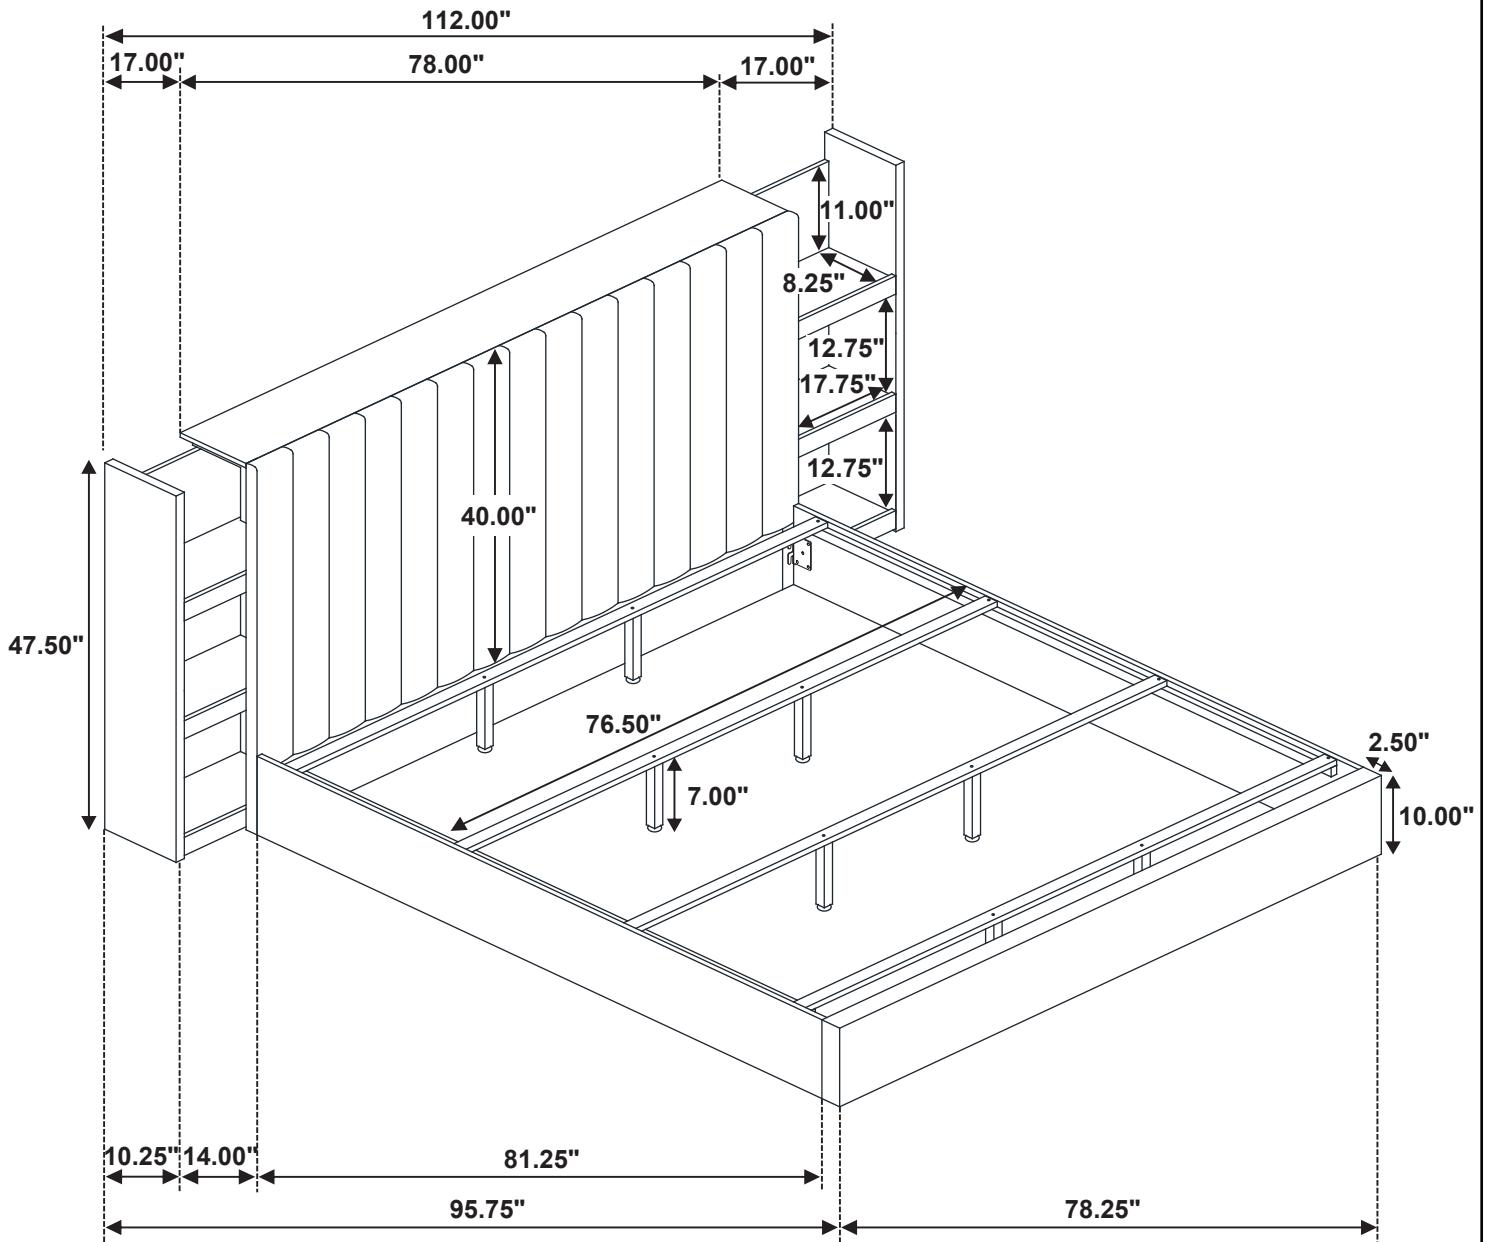

Note : Dimension tolerance $\pm 5\%$



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

223112
Nightstand

ITEM: 223112

COASTER
FINE FURNITURE

ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!



1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

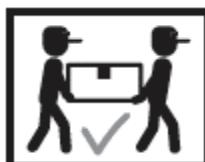


ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A NIGHTSTAND

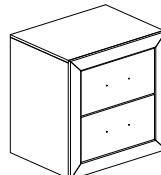

1PC

B LEG (WITH 'B' LABEL)



2PCS

C LEG (WITH 'C' LABEL)



2PCS

 
D CASTER WITH SCREW



4SETS

HARDWARE IDENTIFICATION

1 BOLT
(M6 x 40MM - RBW)



4PCS

2 LOCK WASHER
(1/4" x 13Ø - RBW)



4PCS

3 FLAT WASHER
(1/4" x 19Ø - RBW)



4PCS

4 WOOD DOWEL
(Ø8 x 30MM)



4PCS

5 ALLEN WRENCH
(M4 x 110MM - BLK)



1PC

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.

ITEM: 223112


ASSEMBLY INSTRUCTIONS

COASTER
FINE FURNITURE


STEP 1

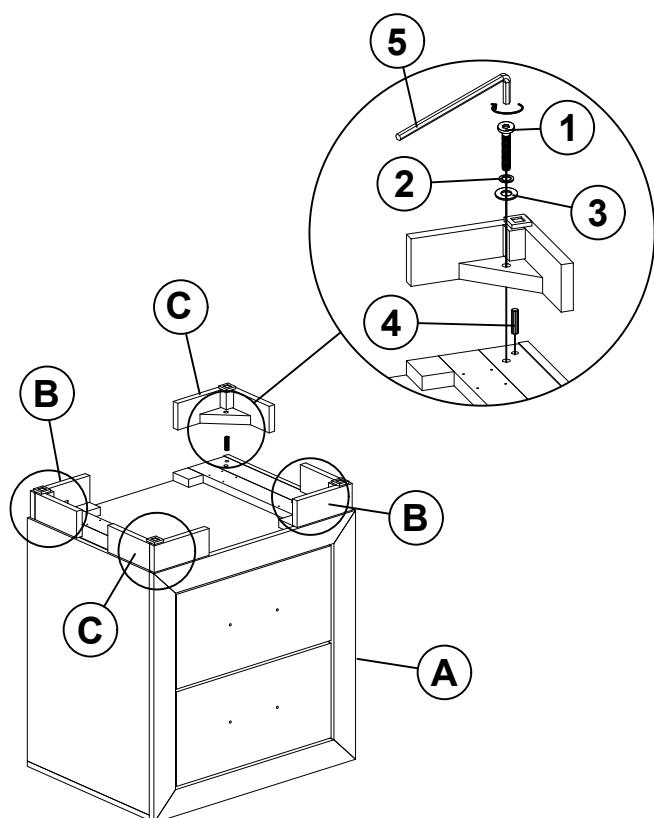



STEP 2

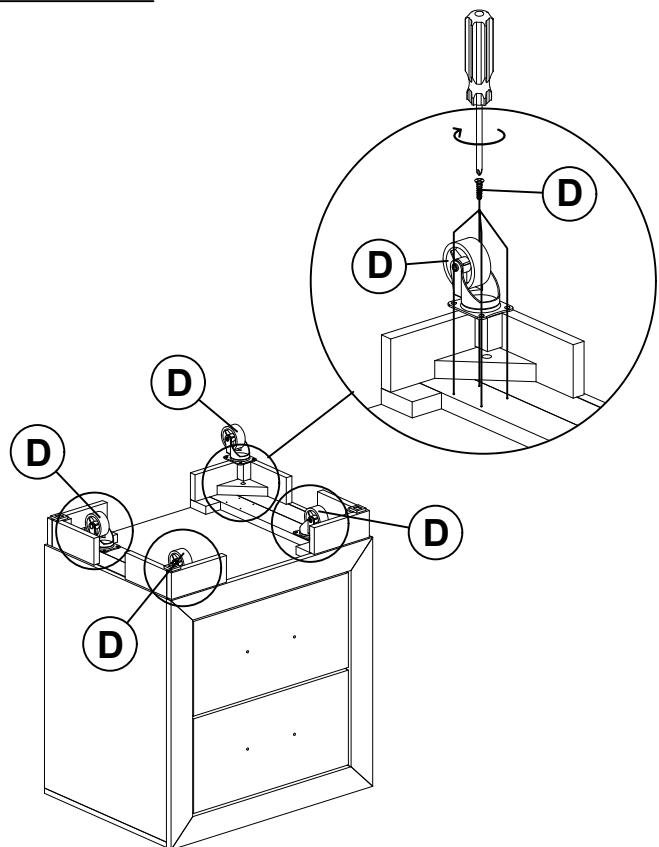

STEP 3

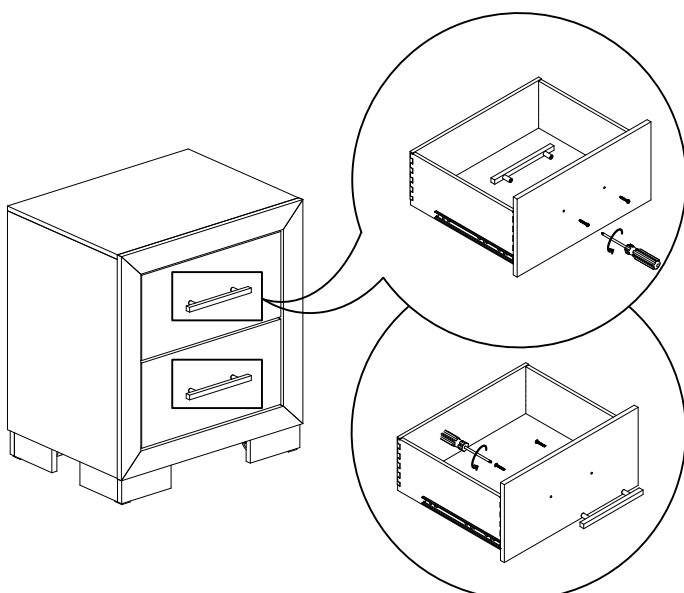


STEP 4 COMPLETE

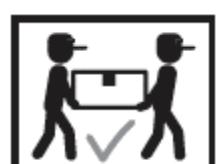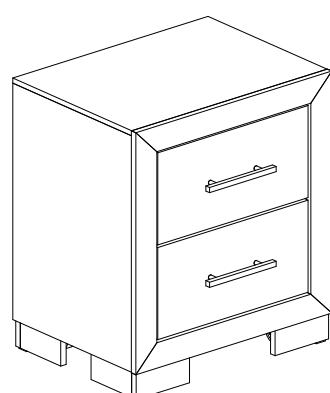

ITEM: 223112

COASTER
FINE FURNITURE

Inner Size of Drawer : 15.25"W X 12.25"D X 5.00"H X 0.50"T

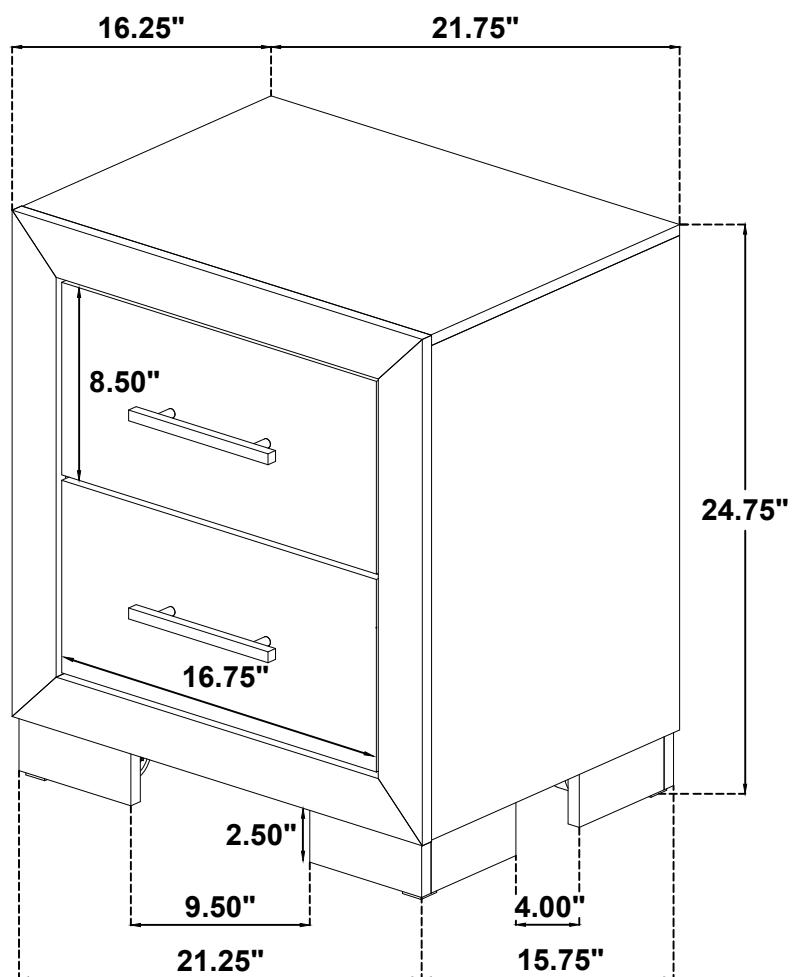

Note : Dimension tolerance $\pm 5\%$



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

223113
Dresser

ITEM: 223113

COASTER
FINE FURNITURE

ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

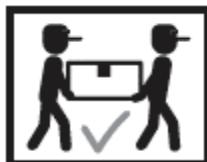


ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A DRESSER

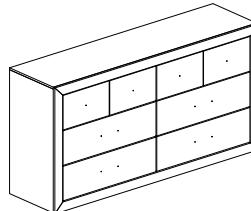

1PC

B LEG (WITH 'B' LABEL)



2PCS

C LEG (WITH 'C' LABEL)



2PCS

D CENTER LEG SUPPORT
WITH LEVELER



1PC

HARDWARE IDENTIFICATION

1	BOLT (M6 x 40MM - RBW)		4PCS
2	LOCK WASHER (1/4" x 13Ø - RBW)		4PCS
3	FLAT WASHER (1/4" x 19Ø - RBW)		4PCS
4	WOOD DOWEL (Ø8 x 30MM)		4PCS
5	ALLEN WRENCH (M4 x 110MM - BLK)		1PC

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.

ITEM: 223113


COASTER®
FINE FURNITURE

ASSEMBLY INSTRUCTIONS



STEP 1

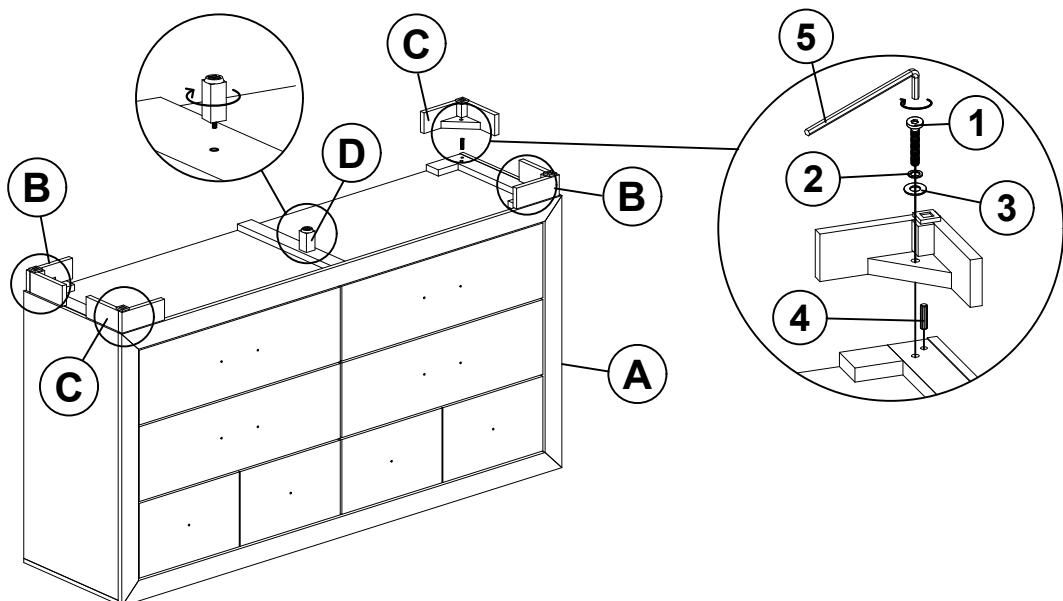

STEP 2

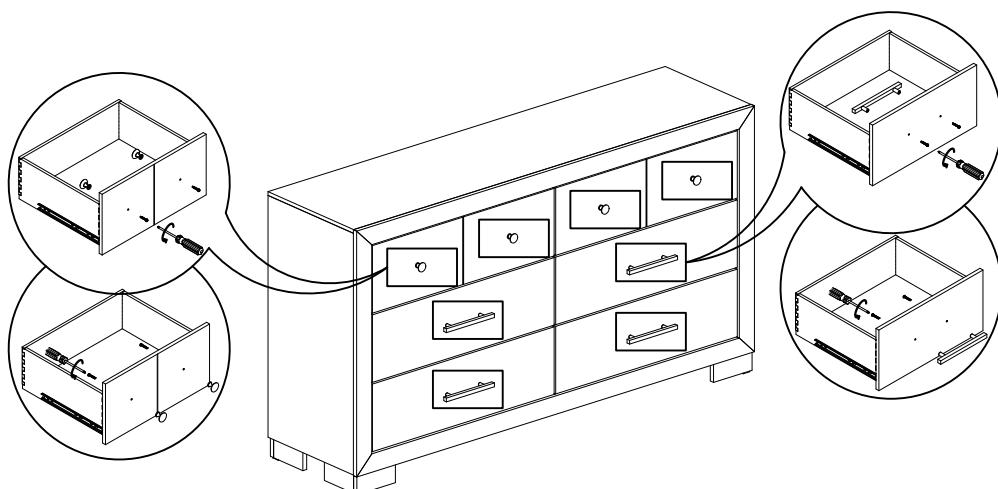

STEP 3 COMPLETE

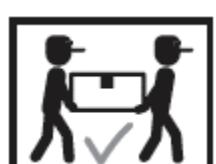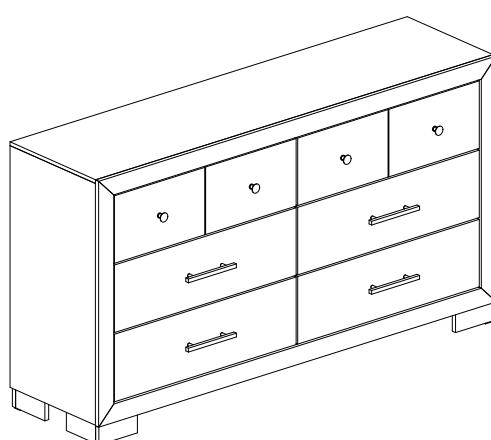

ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.



This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.


1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be placing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

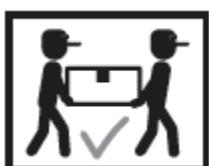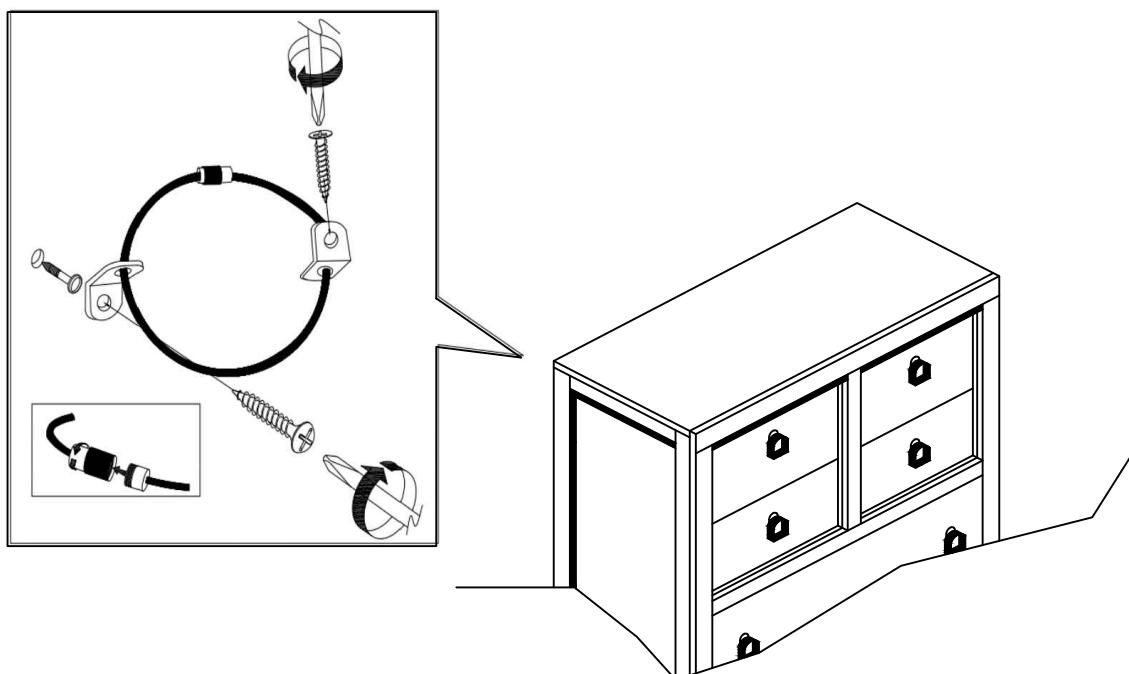

ITEM: 223113

COASTER
FINE FURNITURE

Inner Size of Drawer : 25.75"W X 12.25"D X 5.00"H X 0.50" T

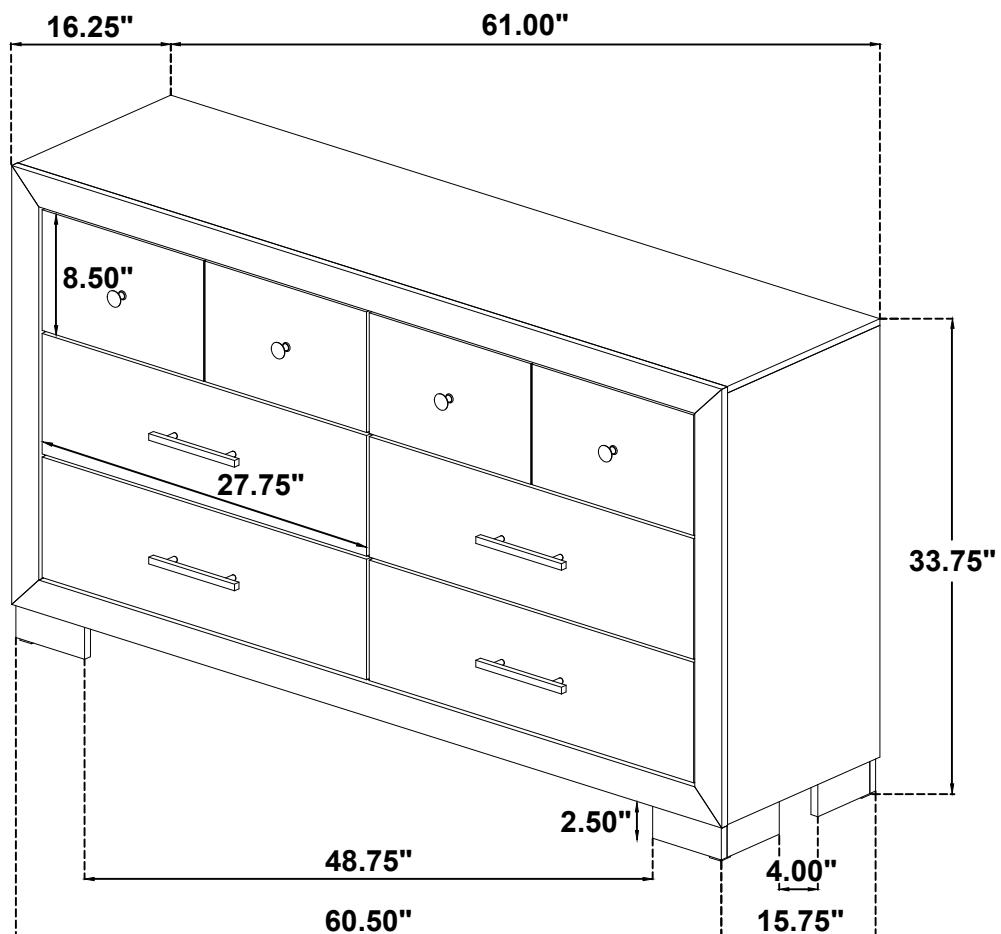

Note : Dimension tolerance $\pm 5\%$



ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE



Fine Furniture for every stage of life

223114
Mirror

ITEM: 223114

COASTER
FINE FURNITURE

ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

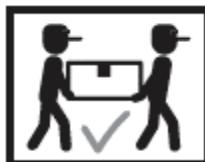


ASSEMBLY TIME

10 MINUTES


PARTS IDENTIFICATION

 A MIRROR




1PC

 B MIRROR SUPPORT
(PACKED WITH MIRROR)



2PCS


C DRESSER
*FROM BOX ITEM 223113

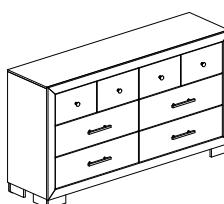

1PC

HARDWARE IDENTIFICATION

 1 BOLT
(M6 x 40MM - RBW)



8PCS

2 LOCK WASHER
(1/4" x 13Ø - RBW)



8PCS

3 FLAT WASHER
(1/4" x 19Ø - RBW)



8PCS

4 ALLEN WRENCH
(M4 x 110MM - BLK)



1PC

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.

ITEM: 223114

COASTER
FINE FURNITURE



ASSEMBLY INSTRUCTIONS

STEP 1

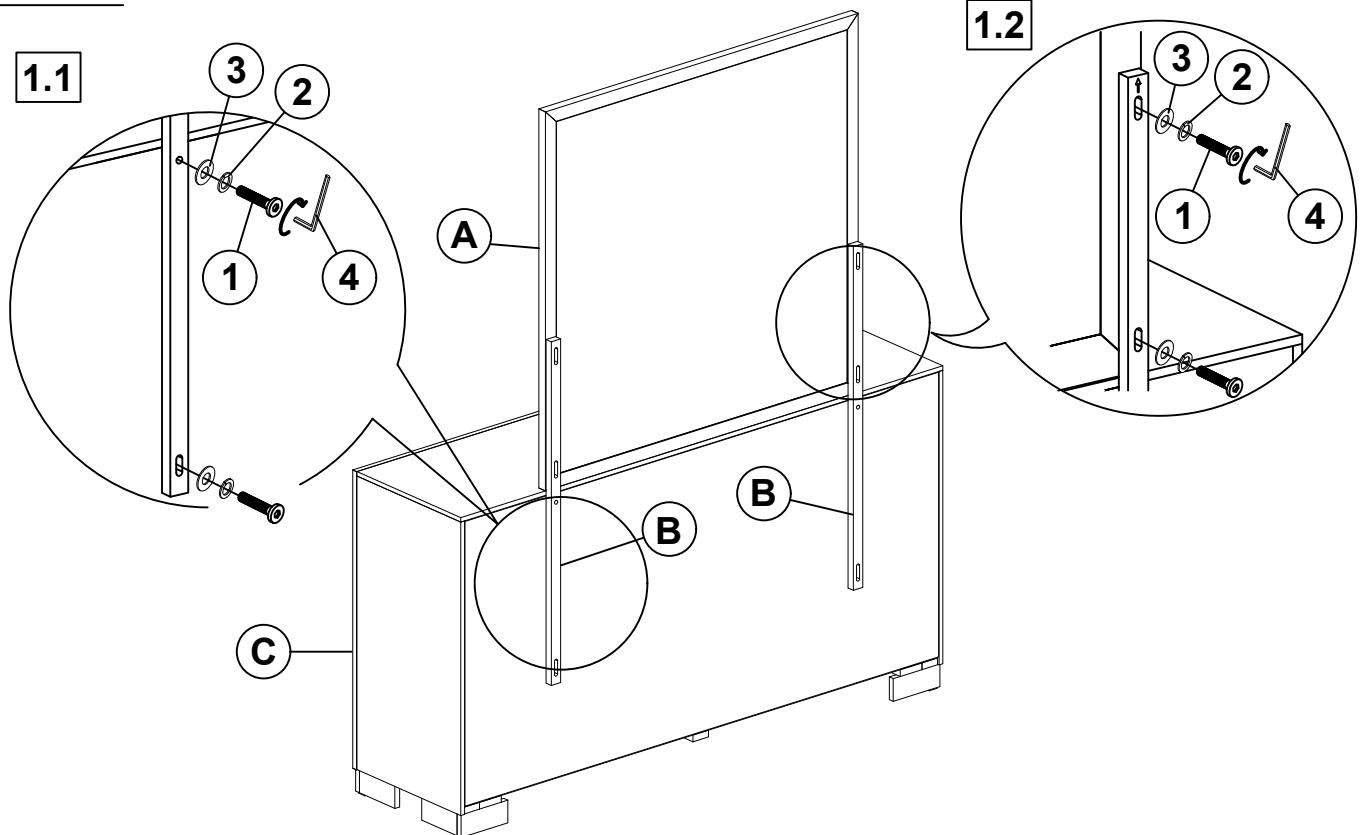


** BACK VIEW

STEP 2 COMPLETE

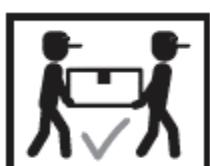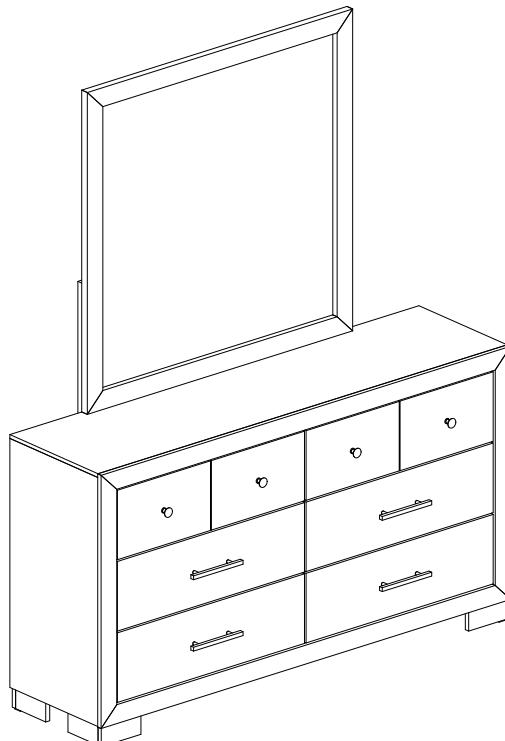

ITEM: 223114

COASTER
FINE FURNITURE

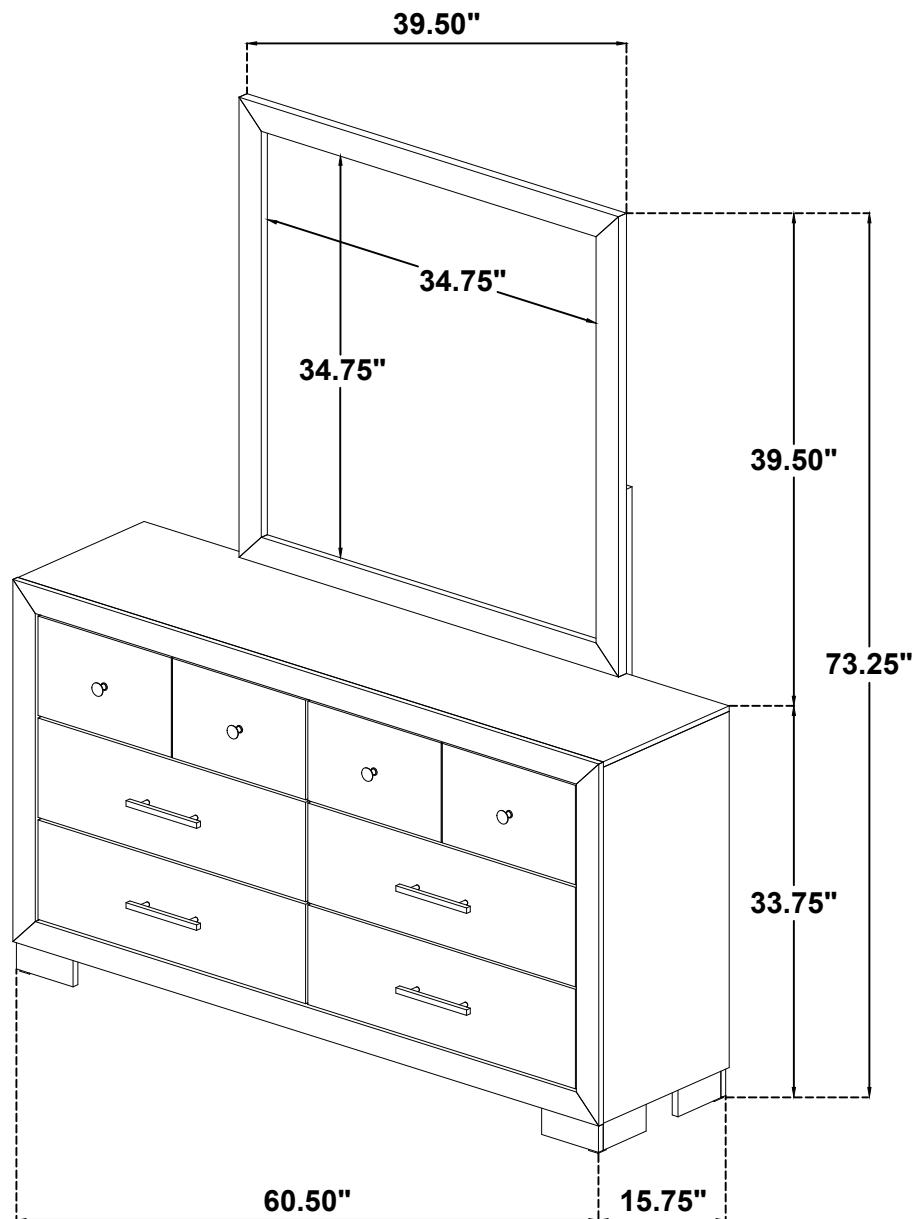

Note : Dimension tolerance $\pm 5\%$