

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

115391 <u>Dining Table</u>

REVISION 0: 07/30/2025

PAGE 1 OF 4

COASTERFURNITURE.COM

ITEM: 115391

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES


PARTS IDENTIFICATION

Α	ТОР	1PC	E	UPPER MOUNTING PLATE	2PCS
В	LEAF	1PC	F	LOWER MOUNTING PLATE	2PCS
С	LEG	2PCS	G	CROSSBAR	1PC
D	BASE	1PC			

HARDWARE IDENTIFICATION

ER 30PCS
1PC
ASHER 12PCS
ASHER 12PCS
) ()

ITEM: 115391 **ASSEMBLY INSTRUCTIONS** STEP 1 STEP 2 STEP 3 3.1 (E) 3.2 PAGE 3 OF 5 COASTERFURNITURE.COM

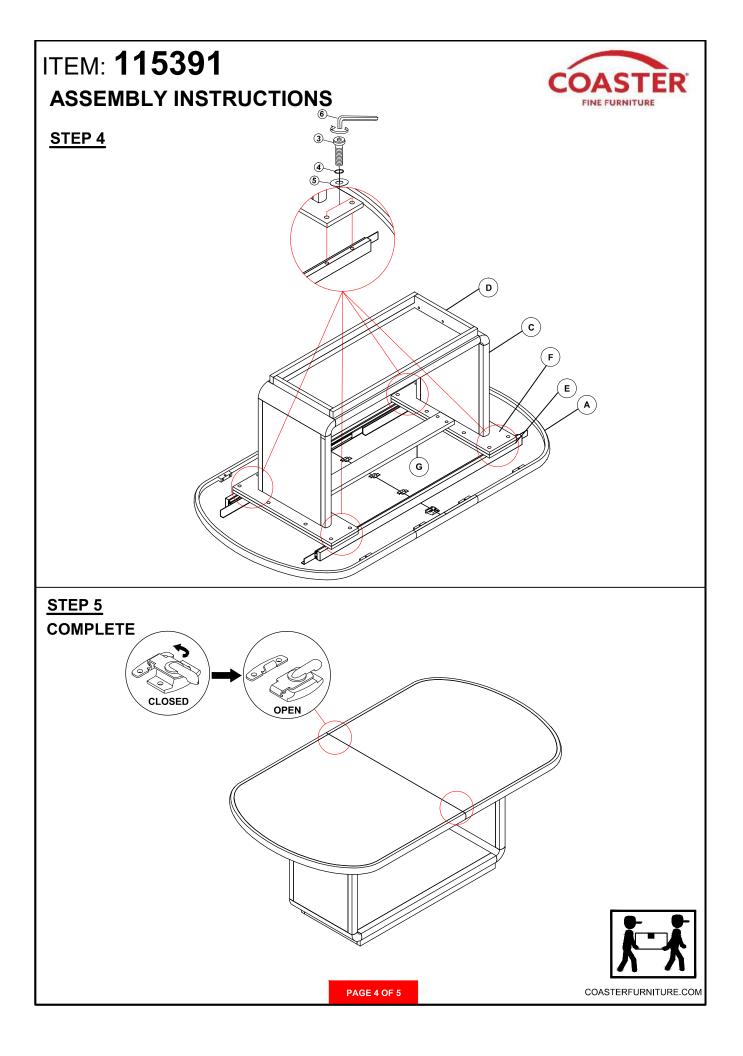


ITEM: 115391


ASSEMBLY INSTRUCTIONS



STEP 6

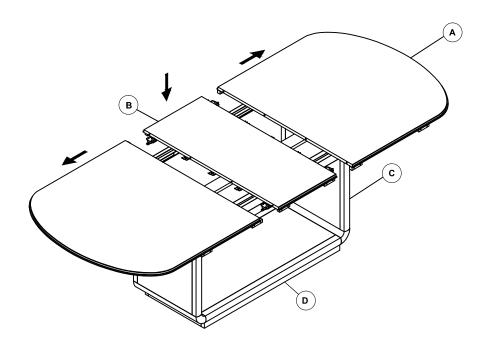


STEP 7 COMPLETE

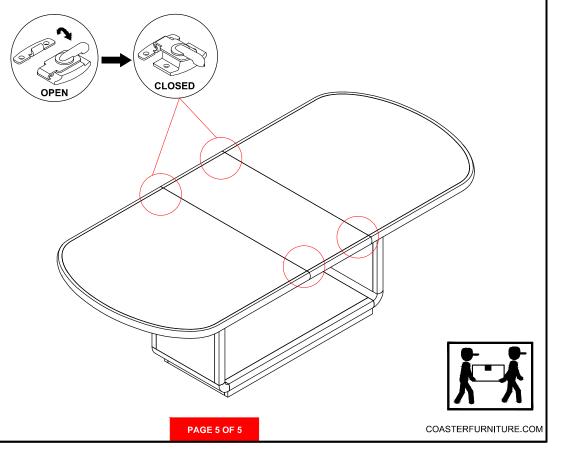

ITEM: 115391



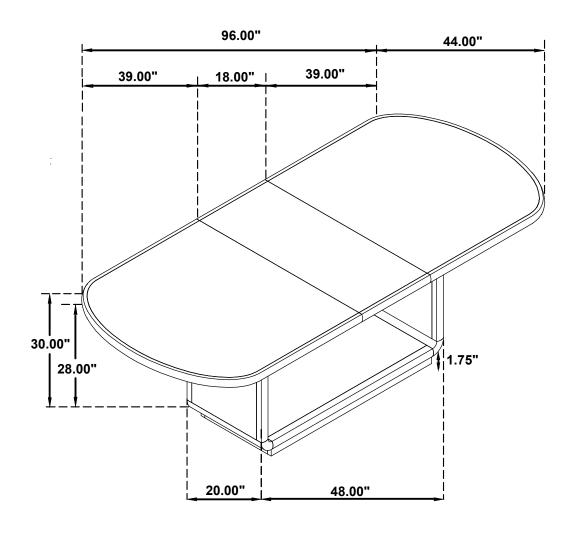

Note: Dimension tolerance ±5%