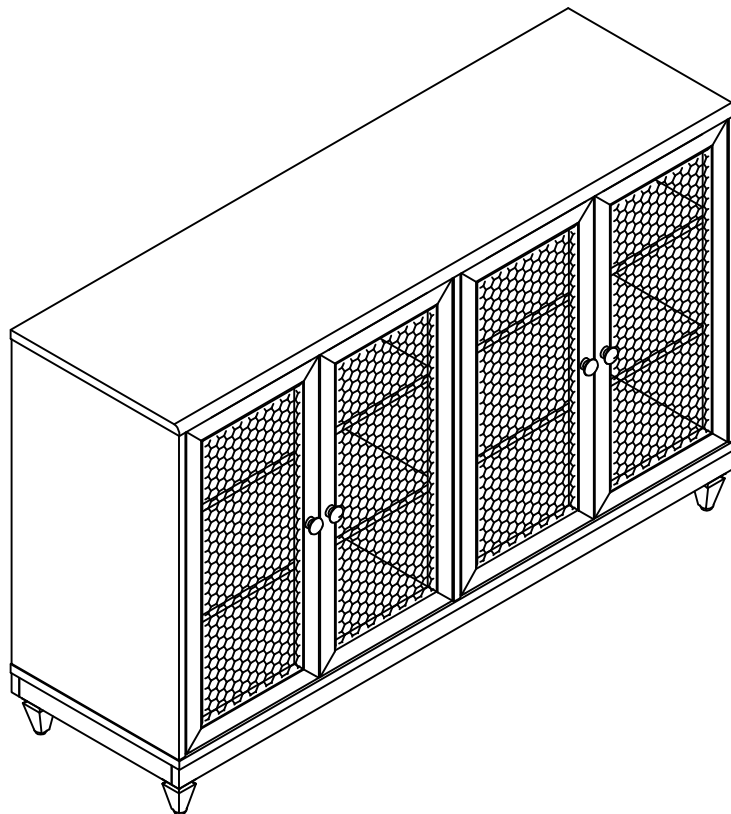


# **CROSLEY**



 
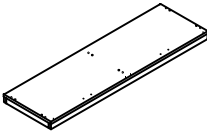
 
 
 
 



---

 FURNITURE


 
 




 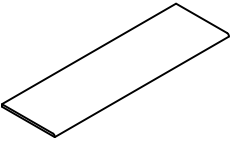









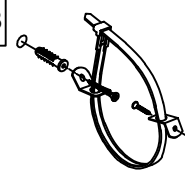
## Sideboard CF4234



PARTS LIST


<div>A</div> <div></div>	<div>B</div> <div></div>	<div>C</div> <div></div>	<div>D</div> <div></div>	<div>E</div> <div></div>
Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Bottom Panel 1 PC	Adjustable Shelf 4 PCS
<div>F</div> <div></div>	<div>G</div> <div></div>	<div>H</div> <div></div>	<div>I</div> <div></div>	<div>J</div> <div></div>
Door 4 PCS	Left Back Panel 1 PC	Right Back Panel 1 PC	Leg 4 PCS	Cover 2 PCS
<div>K</div> <div></div>				
Partition Panel 1 PC				

## HARDWARE LIST
 
#1		#2		#3		#4	 7*38mm	#5	 Ø1/4"*38mm
Knob 4 PCS		Double Magnet 4 PCS		Shelf Holder 16 PCS (Extra 1)		Tapping Bolt 6 PCS (Extra 1)		Bolt 4 PCS (Extra 1)	
#6	 1/4"*10mm	#7	 1/4"*13mm	#8	 8*30mm	#9		#10	
Spring Washer 4 PCS (Extra 1)		Flat Washer 4 PCS (Extra 1)		Wood Dowel 12 PCS (Extra 1)		Cam Bolt 6 PCS (Extra 1)		Cam Lock 6 PCS (Extra 1)	
#11	 5/32"*25mm	#12	 6*3*15mm	#13	 8*3*15mm	#14		#15	
Round Head Bolt 4 PCS (Extra 1)		Round Head Screw 8 PCS (Extra 1)		Screw 36 PCS (Extra 1)		Binding Post 2 SETS (Extra 1)		Cam Sticker 6 PCS (Extra 1)	
#16	 M2	#17	 M4	#18					
Small Allen Wrench 1 PC		Allen Wrench 1 PC		Safety Strap Kit 1 SET					

## ADDITIONAL TOOLS (Not Provided)

Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver


Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

Step 1. Attach double magnets (part #2) to top panel (part A) and bottom panel (part D) using round head screws (part #12) and phillips head screwdriver. Insert cam bolts (part #9) into pre-drilled holes of top panel (part A) using phillips head screwdriver.


Note: Do not overtighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.

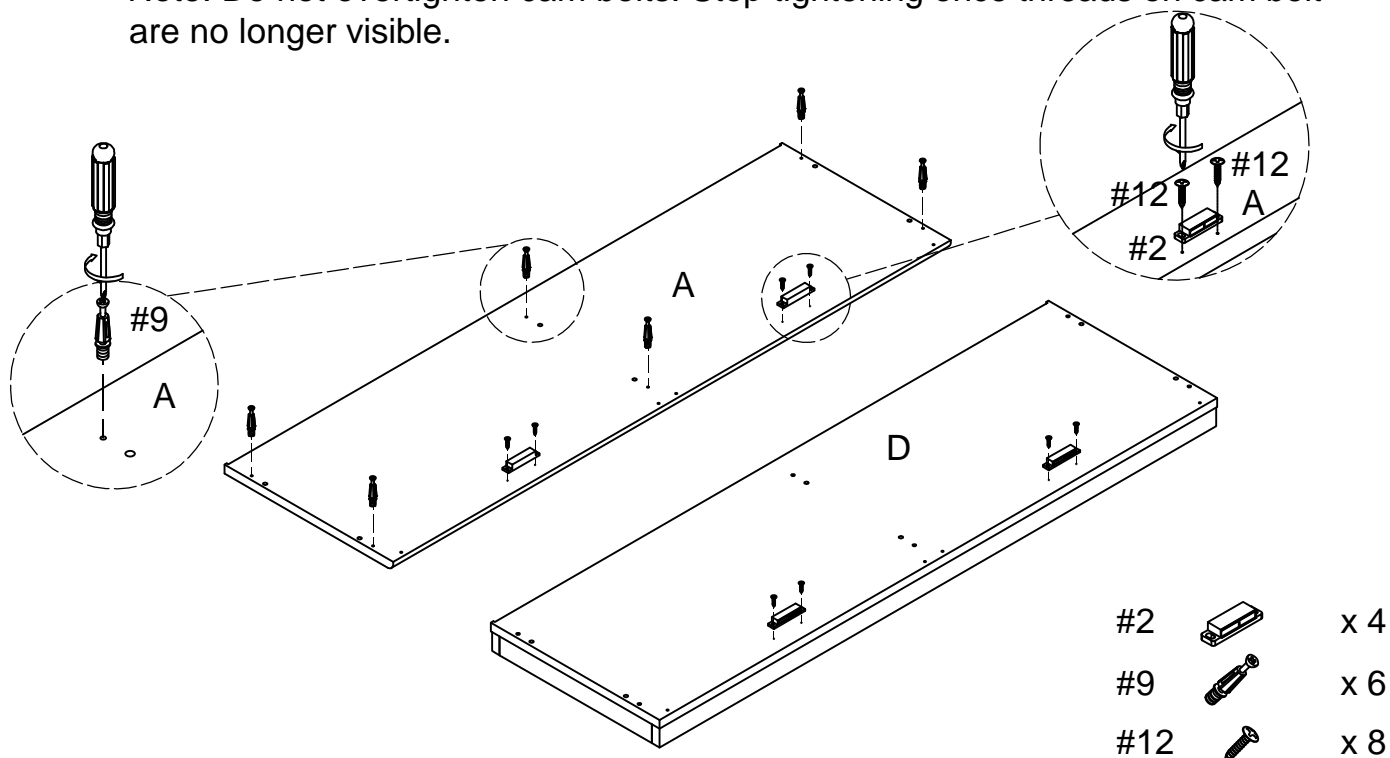

Step 2. Attach knobs (part #1) to doors (part F) using round head bolts (part #11) and phillips head screwdriver.

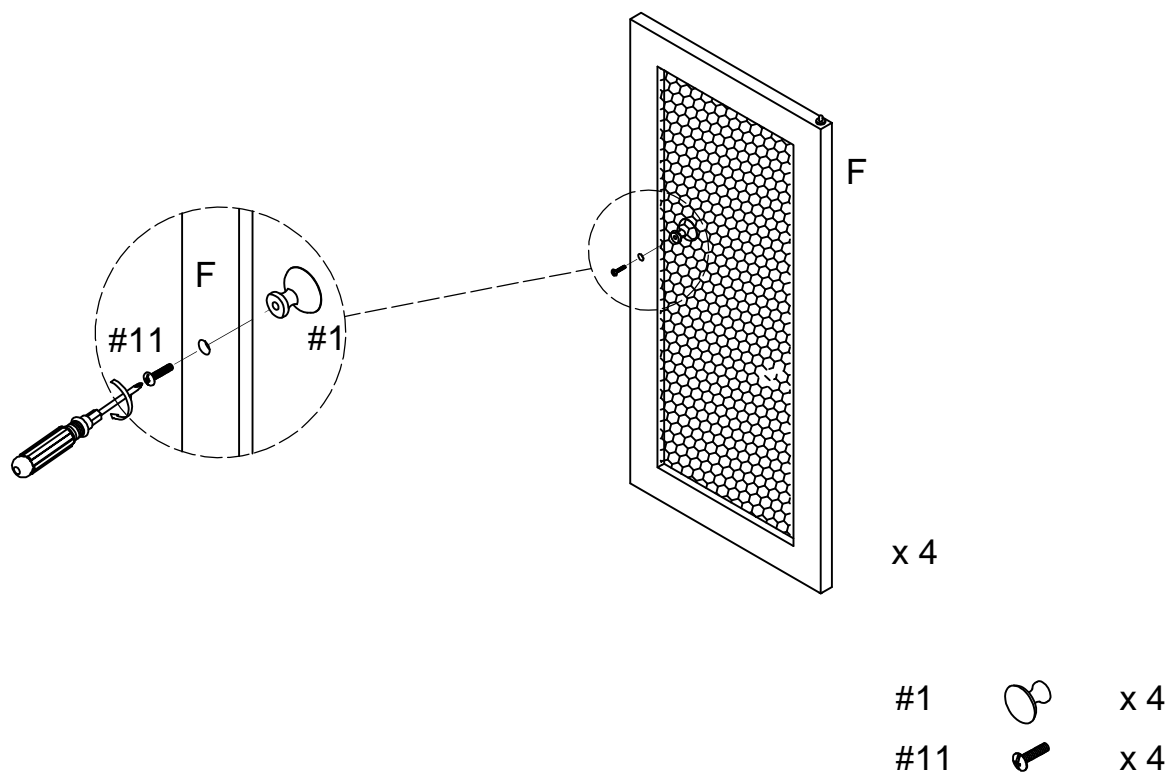

Step 3. Attach covers (part J) to back panels (parts G & H) using binding posts (part #14) and small allen wrench (part #16).


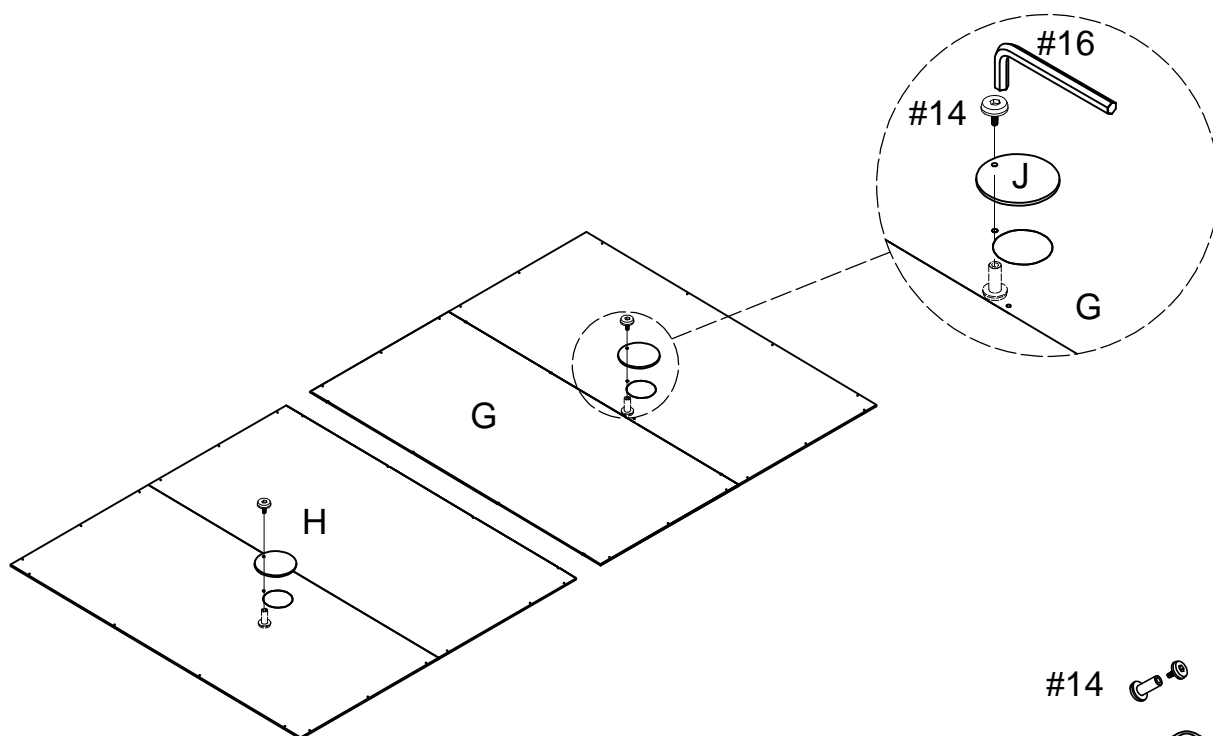


#14  x 2

#16  x 1

Step 4. Attach panels (parts B, C & K) to top panel (part A) using wood dowels (part #8), cam locks (part #10) and phillips head screwdriver.


Note: Cam locks must rotate a full 180°. See pictured insert.

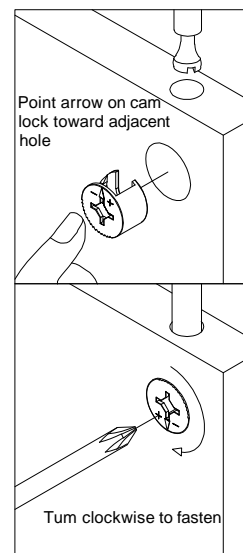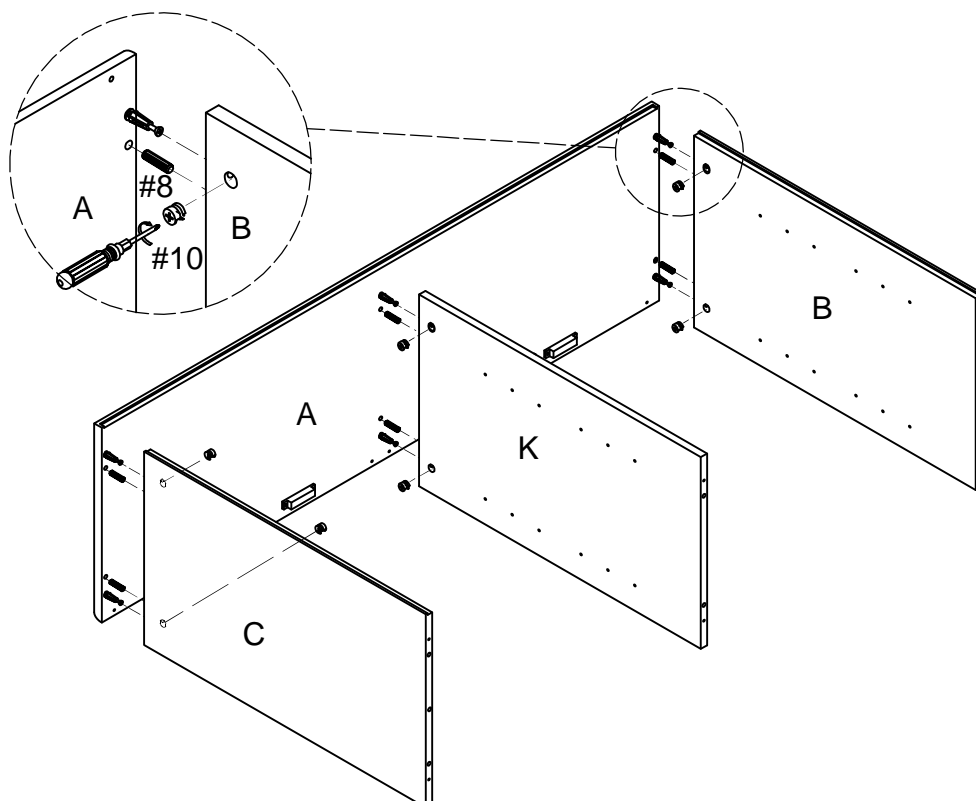


#8  x 6

#10  x 6


Step 5. Attach bottom panel (part D) to assembled unit (parts B, C & K) using tapping bolts (part #4), wood dowels (part #8) and allen wrench (part #17).

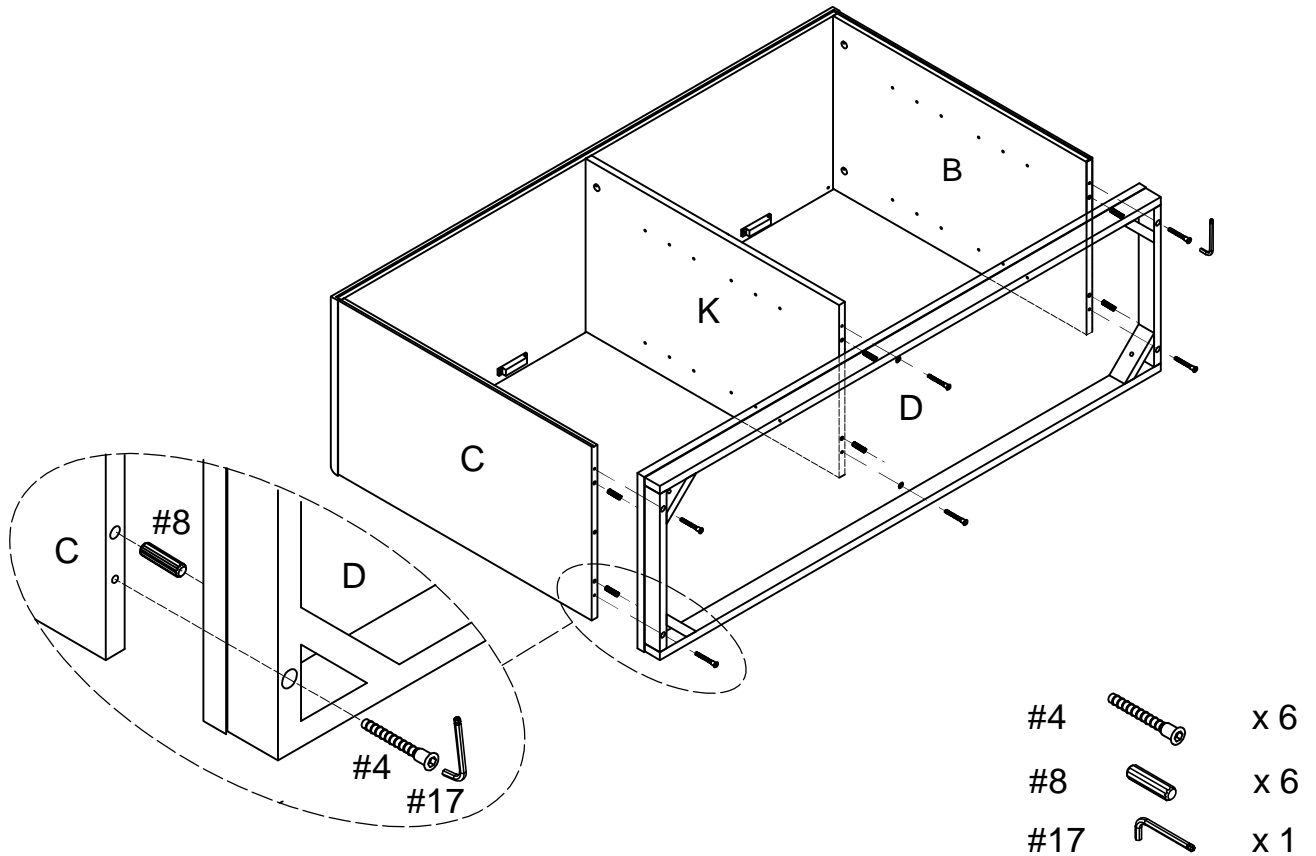


Step 6. Attach legs (part I) to bottom panel (part D) using bolts (part #5), spring washers (part #6), flat washers (part #7) and allen wrench (part #17).

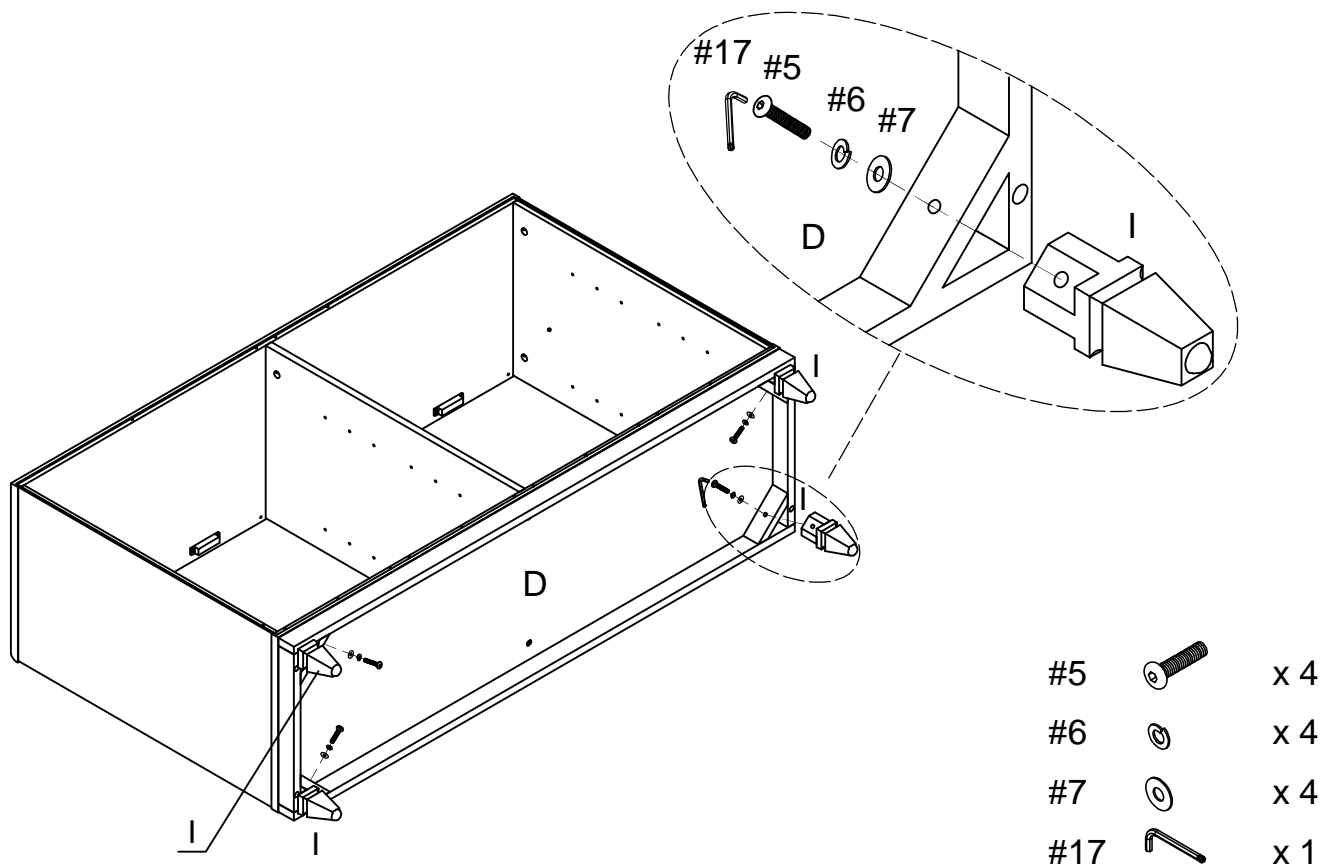


Step 7. Attach back panels (parts G & H) to assembled unit (parts A, B, C, D & K) using screws (part #13) and phillips head screwdriver.

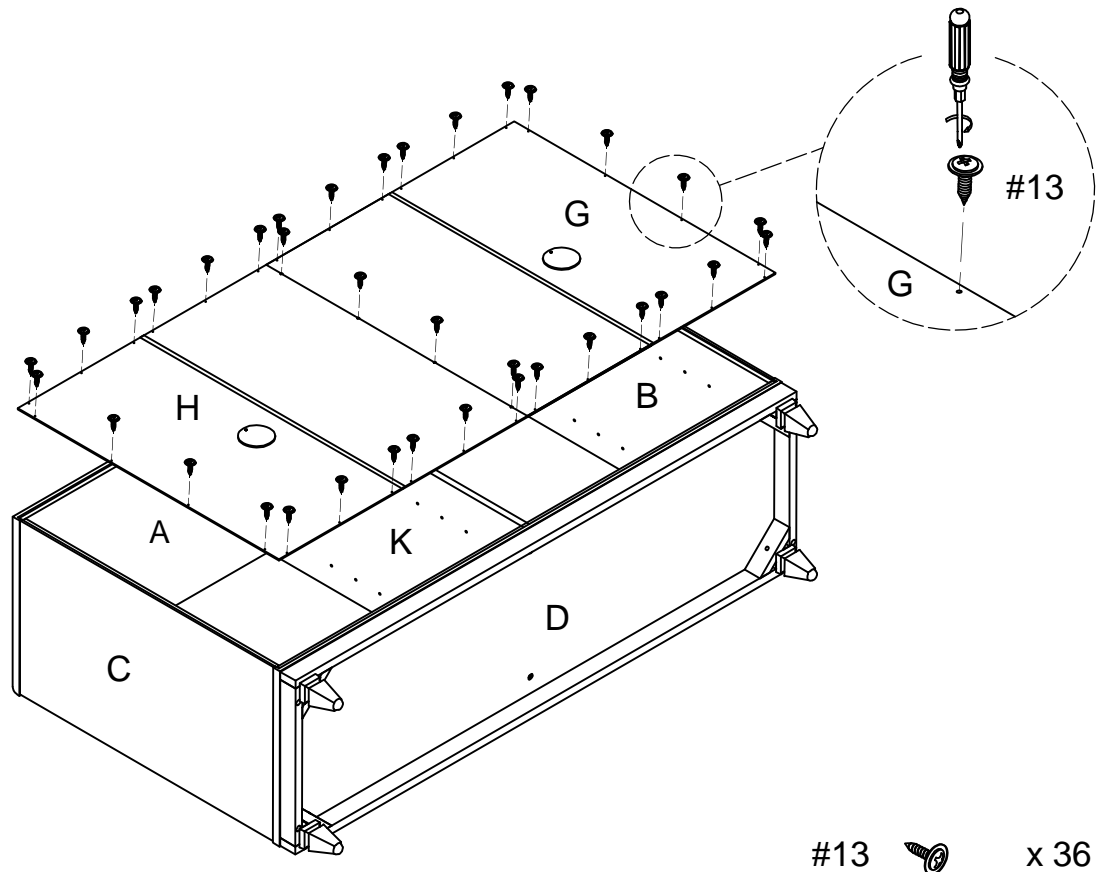

Step 8. Carefully turn unit upright. Attach doors (part F) by placing pin hinge (pre-installed in door) in the pre-drilled hole of bottom panel (part D). Then depress the top spring-loaded pin hinge in the pre-drilled hole of top panel (part A).

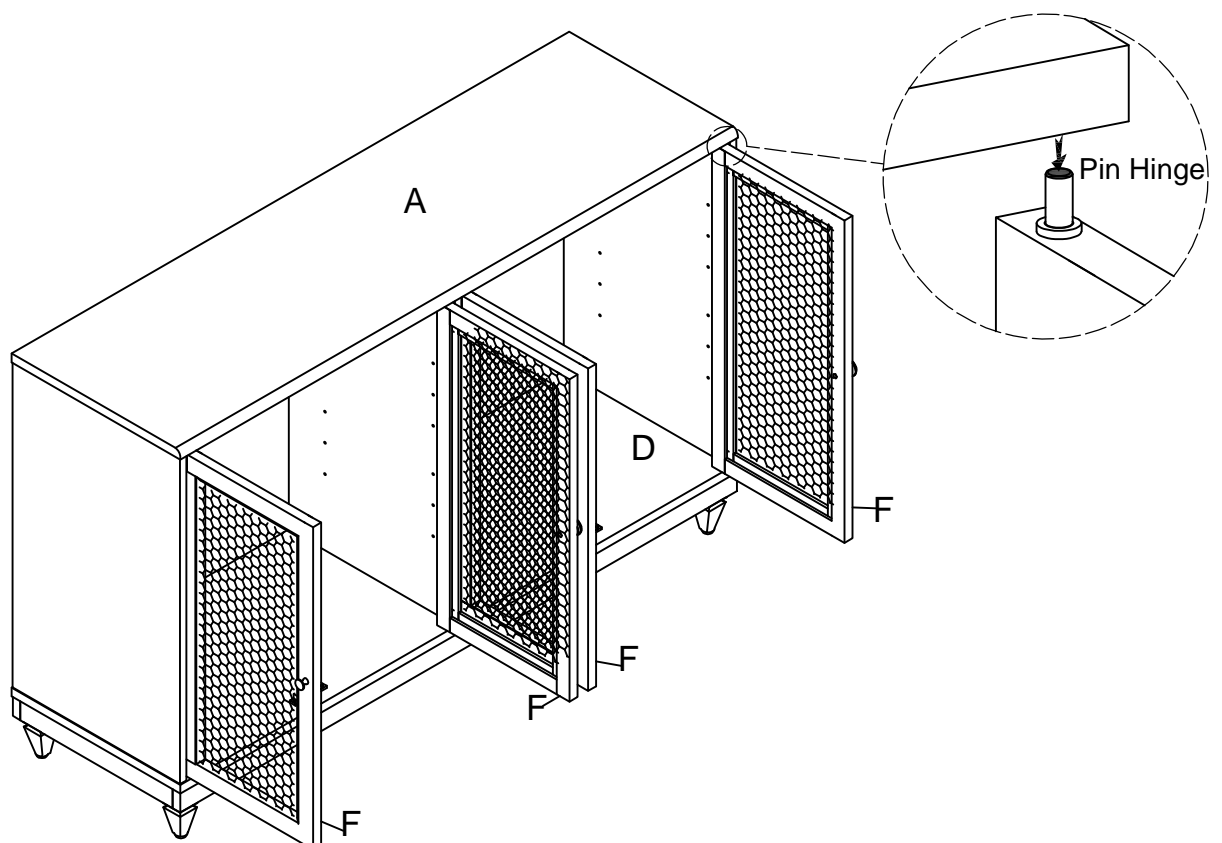

Step 9. Place shelf holders (part #3) into desired position and slide adjustable shelves (part E) into place.

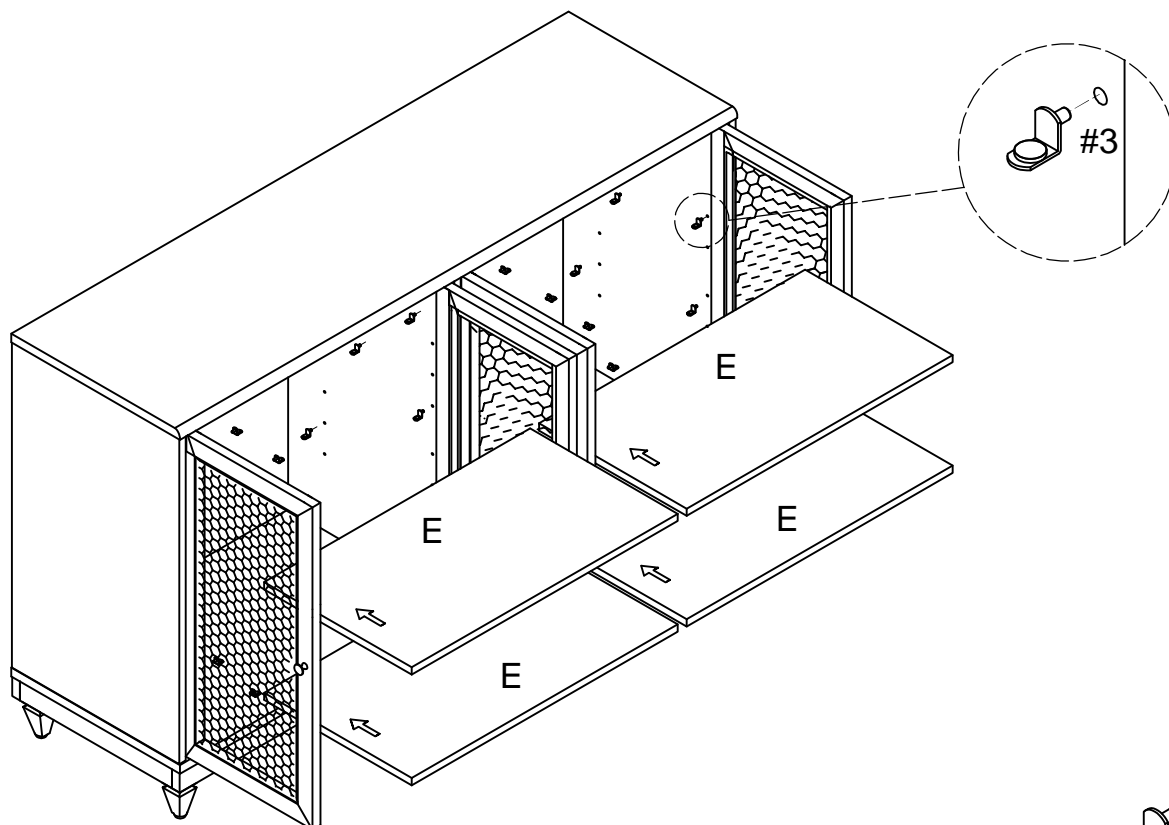


#3  x 16

Step 10. Using cam stickers (part #15) cover all cam locks (part #10).




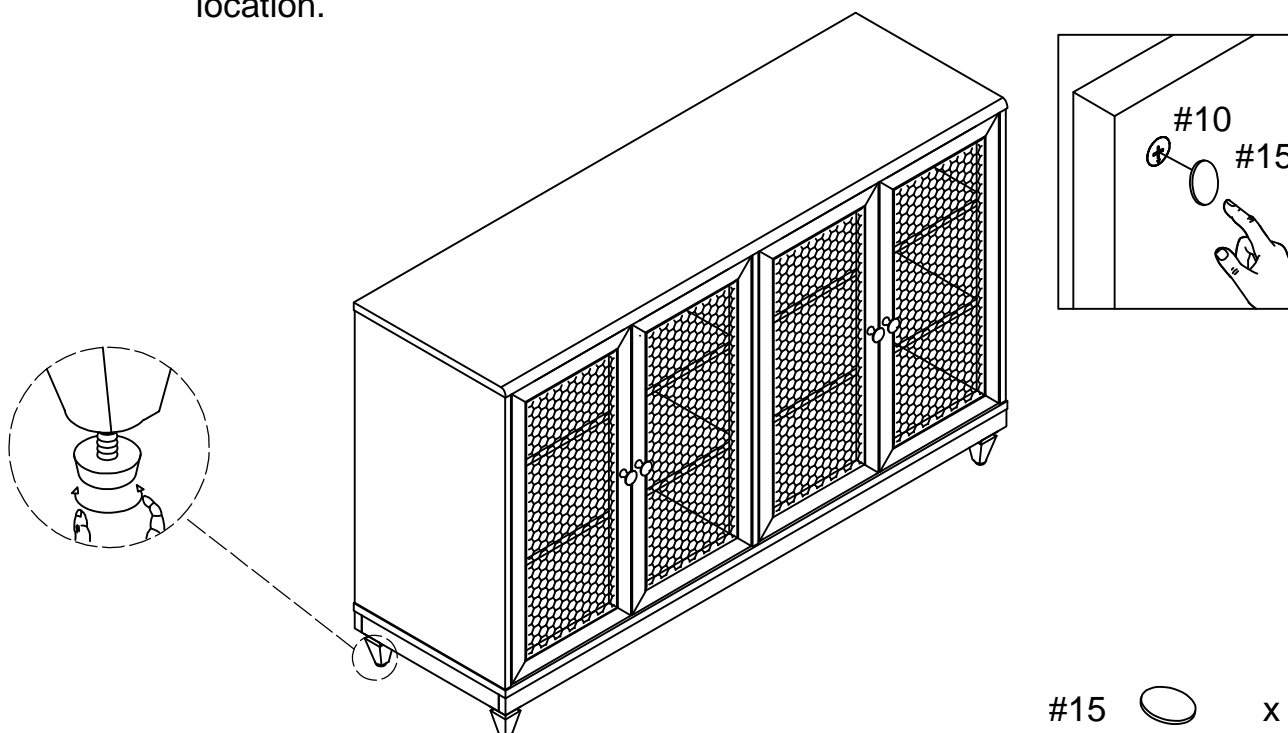


Important: Safety strap kit (part #18) must be installed to prevent tipping damage and / or injury.

NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

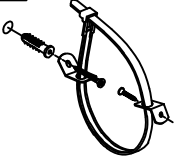

#15  x 6




#18	A	B	C	D	E
			 8*3*15mm	 8*4*35mm	
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Bracket 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

## SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to top panel (part A) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A) where bracket (B) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

Note: This item is not intended for clothing storage use.

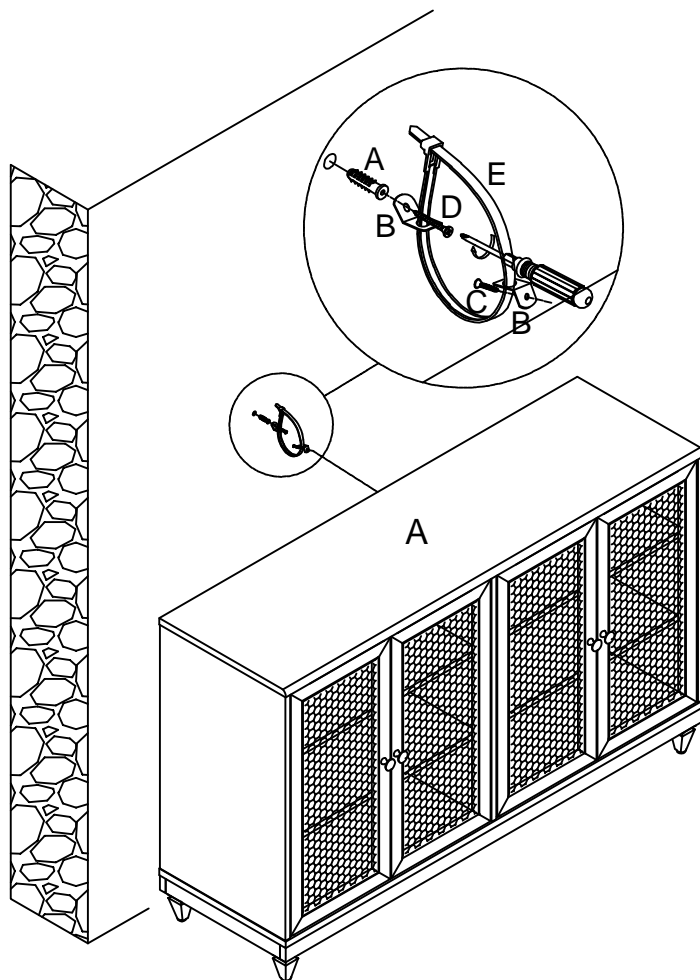

### ⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- For use with televisions weighing 50lbs(23kg) or less. Use with heavier televisions may result in instability causing tip-over resulting in death or serious injury.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

*This is a permanent label. Do not remove!*