

# ASSEMBLY AND INSTALLATION INSTRUCTIONS

#### W0542

## WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

- NOTE: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
  - 2. Read and save these instructions.

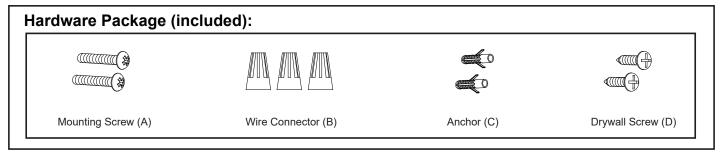

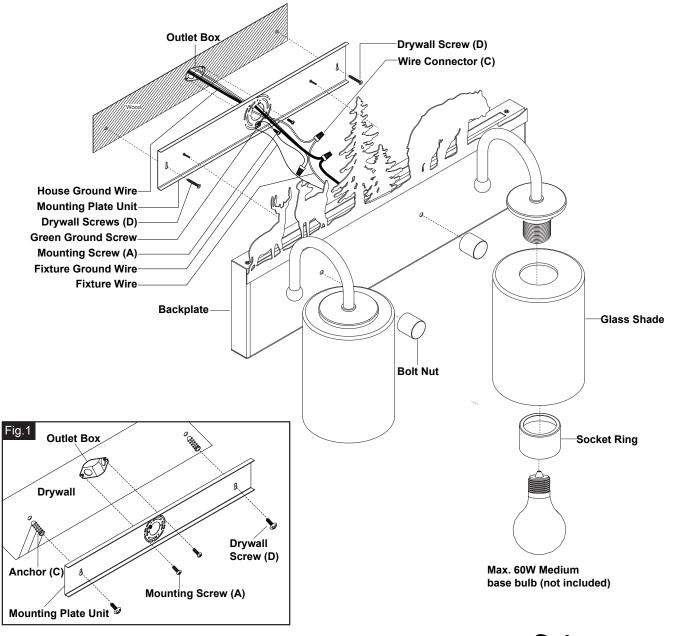



#### **Installation Steps**

#### Turn off the power at fuse or circuit box

- 1. Unscrew the two bolt nuts, remove the mounting plate unit from the backplate.
- 2. a. For Mounting to Wood:


Attach the mounting plate unit to the outlet box by using two mounting screws (A), then secure the drywall screws (D) through the set holes to the wall.

- b. For Mounting to Drywall (See Fig.1):
  - Place the mounting plate unit to the outlet box and mark the target on the wall from the set hole for drilling two holes, remove the mounting plate unit. Drill the holes and thread the anchors (C) into the holes, then attach the mounting plate unit to the outlet box by using two mounting screws (A). Secure the drywall screws (D) through the set holes into the anchors (C).
- 3. Pull out the source wires from the outlet box. Make wire connections using wire connectors (B) as follows:
  - ---Connect the black (hot) wire from the fixture to the black (hot) wire from the power source.
  - ---Connect the white (neutral) wire from the fixture to the white (neutral) wire from the power source.
  - ---Attach the fixture ground wire to the mounting plate unit with the green ground screw, then connect it to the house ground wire with a wire connector (B).
  - Carefully put the wires back into the outlet box.
- 4. Attach the backplate of the fixture to the mounting plate unit by inserting two fixture mounting screws, then secure it with two bolt nuts.
- 5. Attach the glass shades to fixture, then secure them with the socket rings.
- 6. Install 2 X 60W Max. medium base bulbs (not included).

  See relamping label at socket area or packaging for maximum wattage allowed.

Turn on the power at fuse or circuit box

### Selecting Main Light or Night Light Mode

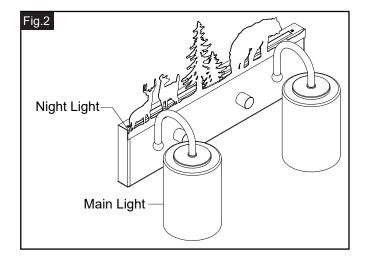



The fixture has three fixed sequential modes: Mode 1 (light bulbs only), Mode 2 (LED night light only) and Mode 3 (both light bulbs and the LED night light turn on simultaniously)

- a. Flip the wall switch ON after installation to enter Mode 1 (light bulbs only).
- b. Flip the wall switch OFF and back ON in less than 3 seconds to enter the Mode 2 (LED night light only).
- c. Flip the wall switch OFF and back ON again in less than 3 seconds to enter Mode 3(both light bulbs and LED night light)



#### The following parts are available for reorder if damaged or missing.

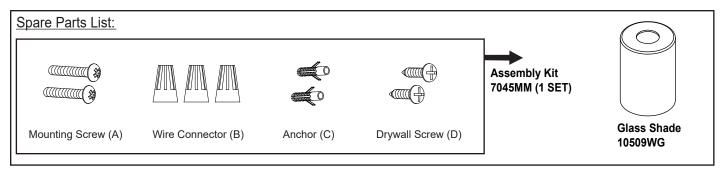

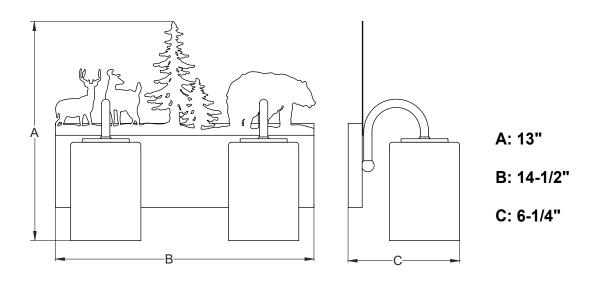

5 Year Limited Warranty

Vaxcel warrants all of our products against defects in workmanship and finishes for one year following the date of shipment.

#### In addition:

- Any product with an integrated motion sensor or dusk-to-dawn photocell is supported by a 5-year warranty for the functionality of the product.
- Any product with integrated LED modules is covered by a 5-year warranty on the LED functionality.

Exclusions: This warranty does not include the failure of products from extreme acts of nature; environmental conditions not suited for the products intended use; operation in temperatures outside of the range specified in the instruction manual; usage with improper power supply, power surges or dips. For coastal locations, some corrosion is considered normal for the environment.

Vaxcel reserves the right to repair, replace or issue a credit for any properly installed product, provided it is returned per RMA instruction. This warranty is limited to the cost of the product only and does not extend to transportation, installation or replacement costs.

How can warranty service be obtained? info@vaxcel.com 1-800-482-9235

