


ASSEMBLY AND INSTALLATION INSTRUCTIONS

H0317

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. Read and save this instructions.


Hardware Package (included):

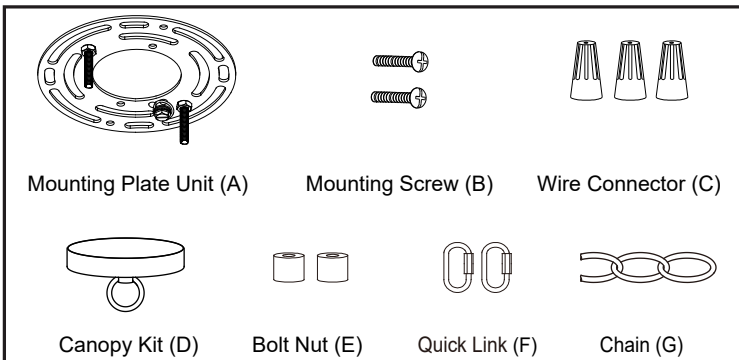

Installation Steps

Turn off the power at fuse or circuit box

1. Unscrew the two bolt nuts (E), remove the mounting plate unit (A) from the canopy kit (D).
2. Attach the mounting plate unit (A) to the outlet box by using two mounting screws (B).
3. Choose the length of the chain (G) you need, use pliers (not included) to open and remove links to shorten the chain (G), then weave the fixture wire and the fixture ground wire through the chain (G) and canopy kit (D).
4. Connect one end of the chain (G) to the loop by using a quick link (F).
5. Connect the other end of the chain (G) to the canopy kit (D) by using the other quick link (F).
6. Pull out the source wires from the outlet box. Make wire connections using wire connectors (C) as follows:
 - Connect the smooth-coated wire (marked) from the fixture to the black wire from the power source.
 - Connect the ribbed-coated wire (unmarked) from the fixture to the white wire from the power source.
 - Attach the fixture ground wire to the mounting plate unit (A) with the green ground screw, then connect it to the house ground wire with a wire connector (C).Carefully put the wires back into the outlet box.
7. Attach the canopy kit to the mounting plate unit (A) by inserting two fixture mounting screws, then secure it with the bolt nuts (E).
8. Attach glass shades to the sockets, then secure them with socket rings.
Warning: Do not overtighten the socket rings as glasses may crack or break.

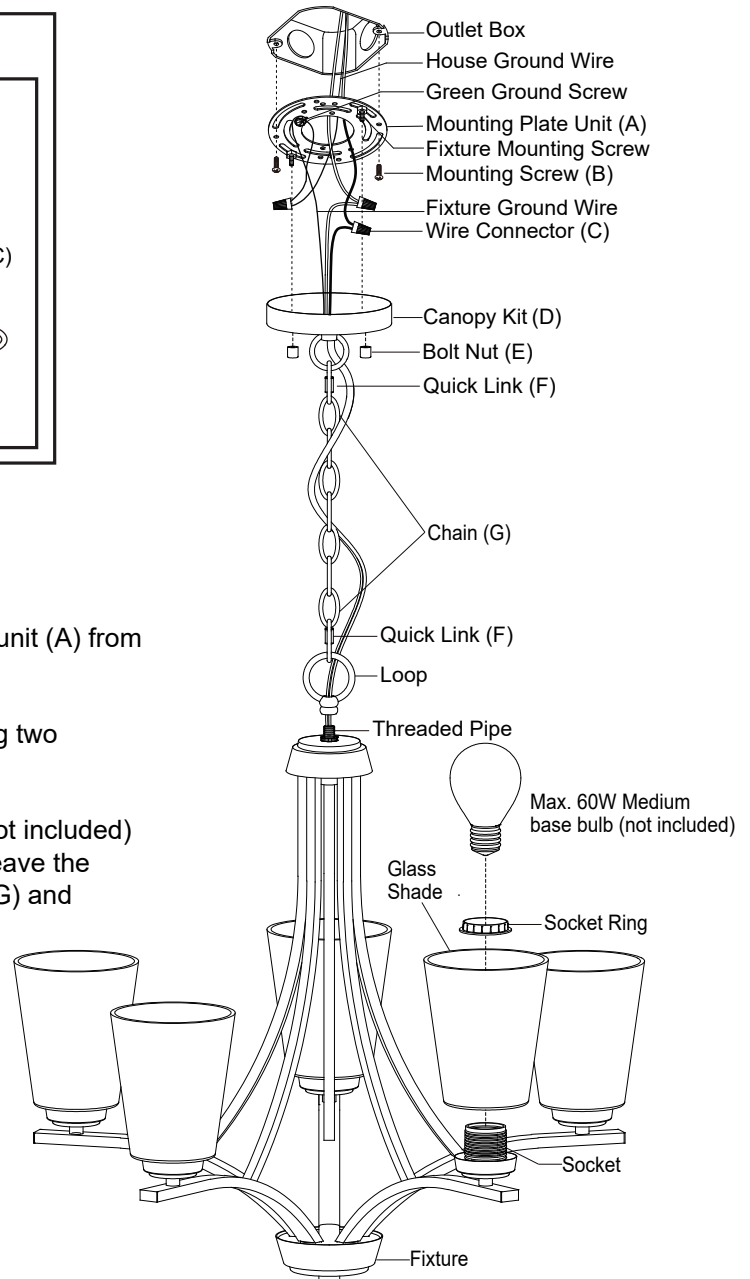


9. Install 5 x 60W Max. medium base bulbs (not included).

See relamping label at socket area or packaging for maximum wattage allowed.

Turn off the power at fuse or circuit box

The following parts are available for reorder if damaged or missing.

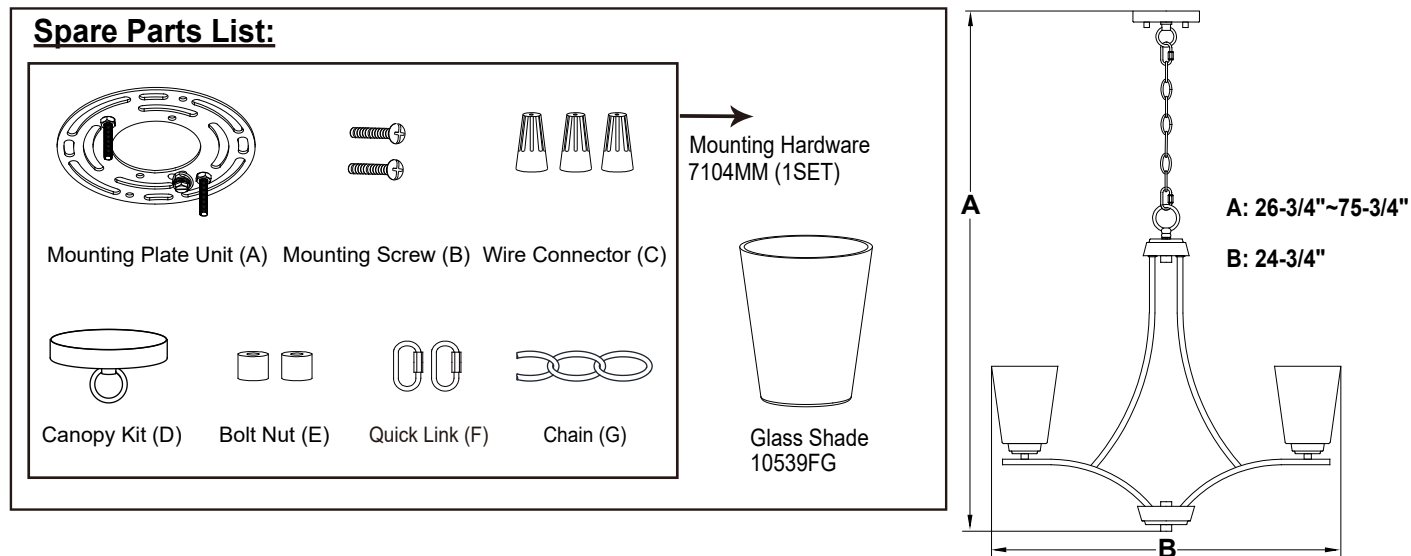

1 Year Warranty

Vaxcel warrants all of our products against defects in workmanship and finishes for one year following the date of shipment.

Exclusions: This warranty does not include the failure of products from extreme acts of nature; environmental conditions not suited for the products intended use; operation in temperatures outside of the range specified in the instruction manual; usage with improper power supply, power surges or dips. For coastal locations, some corrosion is considered normal for the environment.

Vaxcel reserves the right to repair, replace or issue a credit for any properly installed product, provided it is returned per RMA instruction. This warranty is limited to the cost of the product only and does not extend to transportation, installation or replacement costs.

How can warranty service be obtained?

info@vaxcel.com
1-800-482-9235