

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

710545 Lift Top Coffee Table

ASSEMBLY INSTRUCTIONS

COASTER

ASSEMBLY TIPS:

 
- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.








PARTS IDENTIFICATION

 A TOP



1PC

B LEG



4PCS

C BOTTOM SHELF



1PC

D CASTER



4PCS

HARDWARE IDENTIFICATION

1 LONG BOLT (Ø1/4" x 2" - BLK)



12PCS

2 SHORT BOLT (Ø1/4" x 1 1/4" - BLK)



8PCS

3 LOCK WASHER (Ø1/4" x 16mm - BLK)



20PCS

FLAT WASHER (Ø1/4" - BLK)



20PCS

5 ALLEN WRENCH (4mm x 60mm - BLK)



1PC


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE

STEP 1

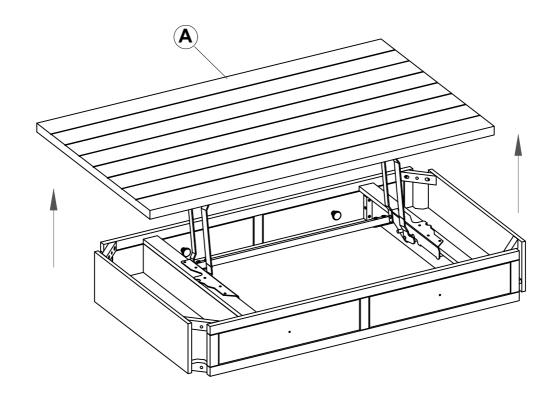


STEP 2

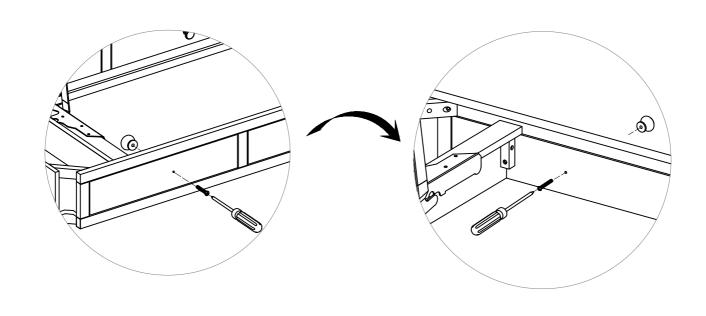


ASSEMBLY INSTRUCTIONS

STEP 3



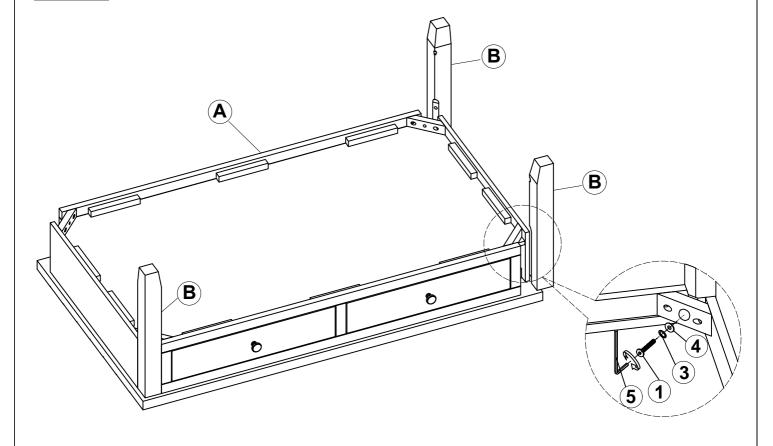


STEP 4

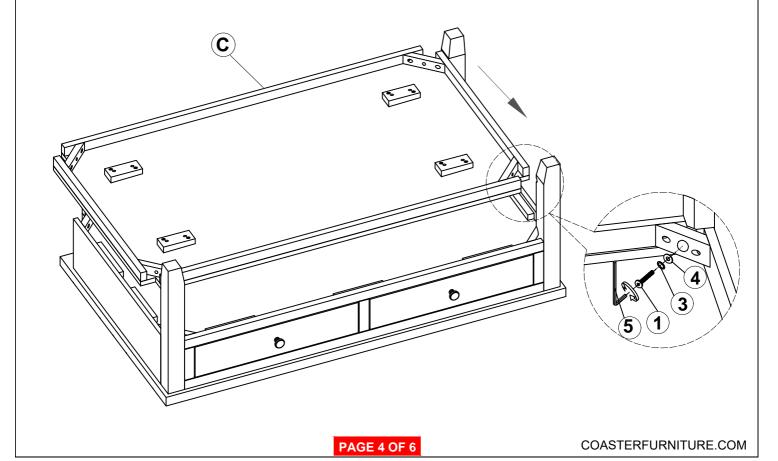


ASSEMBLY INSTRUCTIONS

COASTER

STEP 5

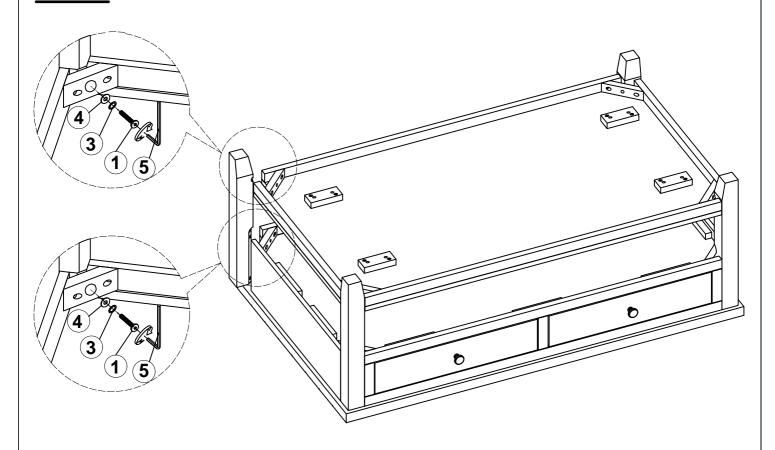


STEP 6

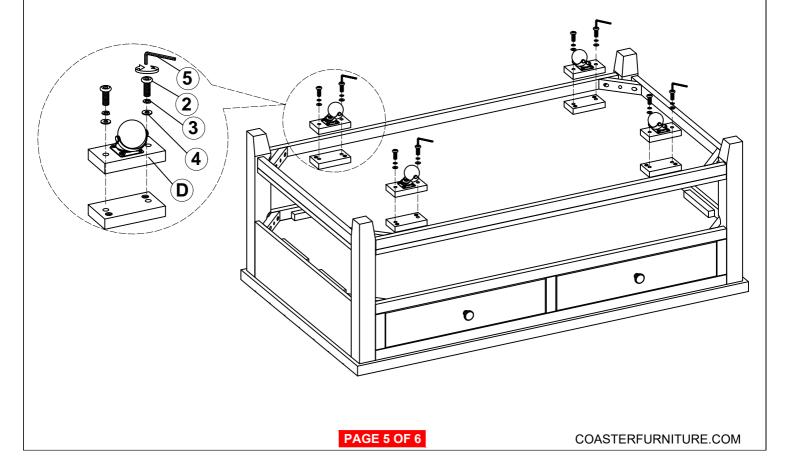


ASSEMBLY INSTRUCTIONS



STEP 7

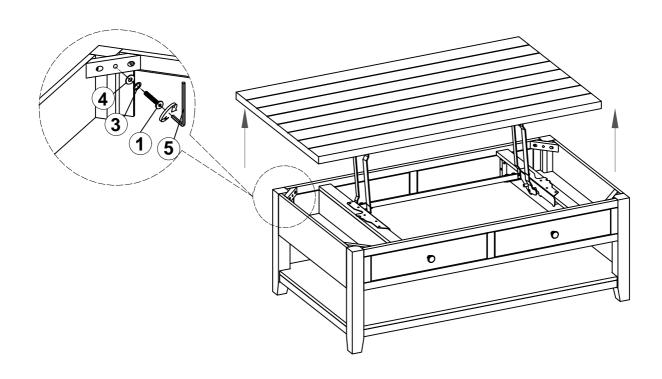


STEP 8 COMPLETE

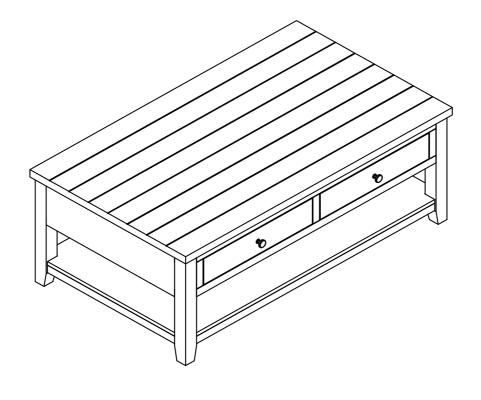






Inner Size of Drawer : 7.00"W x 25.50"D X 5.00"H X 0.50"T

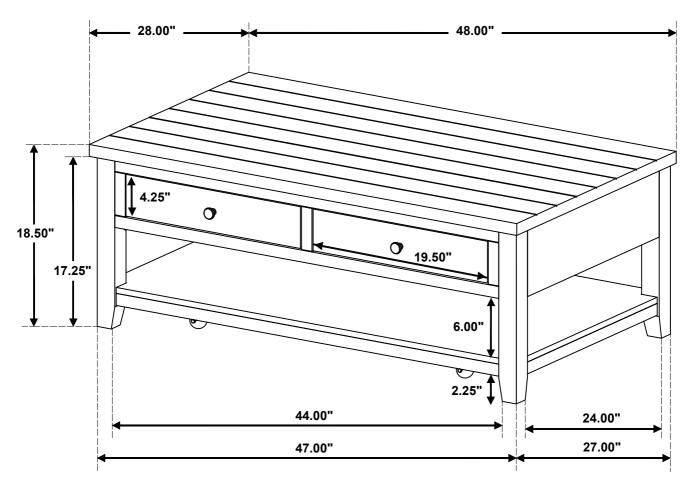

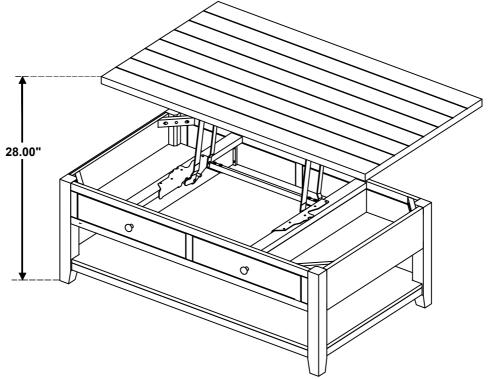

Note: Dimension tolerance ± 5%